

**Somebody is waiting for  
you to call!**

**USER GUIDE**

**XELIBRI™**

THIS IS YOUR GUIDE TO THE COMMUNICATION OF THE FUTURE!  
好明天啊! THAT'S SO TOMORROW! (SINCE 2002)

*Issued by  
Information and Communication mobile  
Haidenauplatz 1, D-81667 Munich, Germany  
Ref. No: A31008-H9230-A1-3-7619*

**© SIEMENS AG 2003**  
*All rights reserved. Subject to availability.  
Rights of modification reserved.*  
**WWW.XELIBRI.COM**

**Contains all you need to know  
to get the best from your XELIBRI!**

**CALL ME BABY!**

**XELIBRI™**

THIS IS YOUR GUIDE TO THE COMMUNICATION OF THE FUTURE!  
好明天啊! THAT'S SO TOMORROW! (SINCE 2002)

**USER GUIDE**




<b>Overview</b> .....	2	Saving Phonebook entries .....	9	<b>Menus</b> .....	19
<b>Getting Started</b> .....	3	Typing in the Phonebook .....	9	Display Symbols .....	19
Inserting SIM card.....	3	Phonebook tips .....	9	Menu commands .....	19
Charging .....	3	Updating Phonebook entries.....	10	<b>What if</b> .....	23
Switching on .....	4	Voice dialling.....	10	<b>Precautions/Maintenance</b> .....	25
Setting the time and date .....	4	<b>Text Messages</b> .....	11	<b>Xelibri Service/Accessories</b> .....	26
Standby display.....	4	Receiving a text message.....	11	<b>Specifications</b> .....	27
Switching off.....	4	Deleting messages .....	11	<b>Guarantee certificate</b> .....	28
Mobile phone precautions .....	4	Writing a text message .....	11	<b>Index</b> .....	29
<b>Making and Taking Calls</b> .....	5	Writing other characters .....	12		
Making a call.....	5	Sending a message .....	13		
Adjusting call volume.....	5	Sending messages to a group.....	13		
Ending a call .....	5	Ready messages .....	13		
Taking a call .....	5	Managing messages .....	13		
<b>More Ways to Call</b> .....	6	Telephone numbers.....	14		
Dialling internationally .....	6	<b>Multimedia (EMS) messages</b> .....	15		
Phonebook .....	6	Cards .....	15		
Voice dialling .....	6	Inserting media.....	15		
Redialling numbers.....	6	Saving media .....	15		
Retrying a busy number .....	6	Longer messages .....	15		
<b>Call Features</b> .....	7	<b>Features and Settings</b> .....	16		
Voice mail.....	7	Key lock.....	16		
Using the phone hands-free .....	7	Ring tones .....	16		
Noting a telephone number.....	7	Using the alarm clock .....	16		
Talking privately.....	7	Using the calendar.....	17		
Making/handling more calls.....	7	Using a screensaver.....	17		
Receiving a second call.....	8	Setting up voice mail .....	17		
<b>Phonebook</b> .....	9	Divert (call forwarding) .....	17		
About the Phonebook .....	9	Setting up favourites .....	18		

# Overview

**Reception strength/battery** – the whiter the better

**Network name** – indicates your phone is ready to make and receive calls (**standby**)

**Back key**  – current function is displayed above, except:

- Hold down to switch on or off.

In most cases it offers “clear” or “back” (a long press goes back to standby).

Click (in standby) to set up or use favourite function.


**Announcements** – Your favourite key may be temporarily labelled with an event, e.g.:

 – New text message

Press for details. See p 19 for symbols.



Additionally, your time and date display may temporarily be replaced by network announcements.


**Reminder symbols** – Symbols here confirm settings you have made, e.g.:


 – Silent: all tones off  
See p 19.

**Go key**  – current function is displayed above.

Click to open menu, select and confirm. Double-click for most common function, e.g., call when a number is displayed.

**Down key**  – in standby, click to open your Phonebook. Use to scroll forward through displays and lists, whenever  is displayed.

**Up key**  – in standby, click to see last dialled number. Hold down to use voice dialling. Use to scroll backwards through displays and lists.

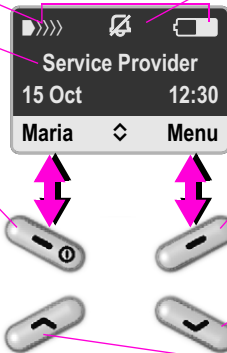

## Special keys


- 1** – hold down to call your voice mailbox
- \*** – hold down to switch all tones off
- #** – hold down to lock keypad

# Getting Started


## Inserting SIM card

Your service provider provides you with a SIM card. If it is delivered credit card size, snap out the smaller segment and remove any rough edges.


1. Simultaneously squeeze opposite sides of the phone firmly at points shown whilst lifting top end of cover slightly.

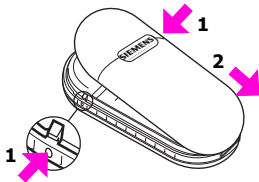

2. Slide cover towards bottom of phone and remove.
3. If battery is fitted, remove by lifting tab at bottom.

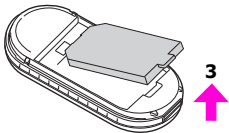

4. Insert your SIM card, securing its bottom edge in the slot. Ensure cut-off corner is positioned as shown.

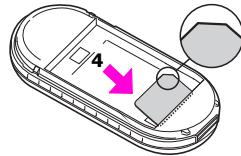


To replace the battery and cover, reverse the previous steps, ensuring bottom of cover is engaged before swinging top into place.

## Charging

When delivered, your battery will not be fully charged. Allow 2-3 hours for a full charge.

Insert the charger in a suitable mains socket and plug into the base of phone with the metal plate to the rear.

While it charges, you'll see this symbol: 

If you don't see the symbol, see **What if ...** on p 23.

# Getting Started

## Switching on


### To switch on your phone


Hold down .

Enter your PIN number (if required).

### Entering a PIN

A PIN number protects your phone against unauthorised use. Most service providers supply a new SIM card with PIN protection switched on; see your documentation for the number.

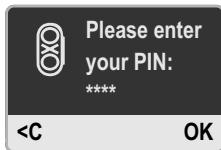

Type the PIN number on the keypad. Click  to correct, if necessary.

Click  to confirm.

You have three tries at entering the right PIN. If there's a problem, see **What if ...** on p 23.

You may be able to switch off PIN control. See **Security** on p 21.

## Setting the time and date

When you first use your phone, you are prompted to set the time and date.

Type the time (using 24 hour clock) and date (using day.month.year digits: *dd.mm.yy*), preceding a number with a zero if it is less than 10.


Click  to set.

## Standby display

Once your network has been found and its name displayed, your phone is said to be in **standby**.

If you can't see the network name, please see **What if ...** on p 23.

## Switching off

From standby, hold down .

## Mobile phone precautions

All mobile phones are radio transmitters; switch off in prohibited areas, e.g. aircraft.


To ensure legal, secure and efficient use, please read **Precautions/Maintenance** on p 25.


# Making and Taking Calls

## Making a call


### To make a call


From standby (network name displayed), type the telephone number, always including area code.

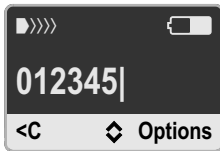

Double-click .

### To correct a number

Click  to delete the previous digit. Hold down to delete all preceding digits.


Click  to move back and forward in the telephone number. Hold to go to the start or end.

## Adjusting call volume

During a call, click .

## Ending a call

### To end a call

Click  to choose **End**.

Always end a call this way, even if you think the other person has hung up.

Your phone tells you how long the call lasted.

## Taking a call

### Who's calling?

When you receive a call, your phone may show:


- the caller's telephone number (if available), or
- their name (if their number is in your Phonebook).

You can use a special ring tone for callers you recognise. See **Ring tones** on p 16.

### To answer a call

Click  to choose **Answer**.

### To reject a call

Click  to choose either:

- **Reject** to hang up the call immediately
- **Divert** (offered if divert is switched on – see p 17) to divert the call to your voice mail or alternative number.

# More Ways to Call

## Dialling internationally

For an international prefix that works from any country, hold down the **0** key to enter “+” and either:

- type the country code on the keypad, or
- choose **+List** and select the country from those shown.

Type the telephone number and double-click .


In many countries you omit the first digit (e.g., “0”) of the area code when calling from abroad.

## Phonebook

To save numbers in the Phonebook, see p 9.

### To call someone in your Phonebook

From standby, click  to show the first entry.

Type the first letter of the name (press the corresponding number key the correct number of times) and/or click  to see previous/next name.

Double-click  to dial the number shown.

## Voice dialling

To save voice dial entries, see p 10.




### To call someone by speaking their name

From standby, hold . Speak the name at the tone.



**Note that a noisy environment may affect the phone’s ability to recognise what you said.**

## Redialling numbers

### To redial a number you called earlier


From standby, click  to display the last number called. Click  to see previous/next number, if required. Double-click  to call the number shown.


### Returning received or missed calls

Choose **Menu**, **Recent calls** and select the list you want. Click  to display the correct number and double-click .

## Retrying a busy number

### If a number is busy

Click  to choose **Auto dial**. Your phone redials at increasing intervals for 15 minutes.



Your phone alerts you when the call succeeds. Click  to make the call.

## Voice mail



Your network answering service may be preset, or you may need to set it – see p 17.

### To listen to voice mails

Service providers have different ways of alerting you when a new voice mail is received:

-  – click  to read message
- a recorded announcement.

Hold down the **1** key to hear your messages.

Alternatively, you may see . Click  to hear your messages.

## Using the phone hands-free

During a call, choose **Options** and **Handsfree**. Click  to adjust volume.

**Caution: the loudspeaker may damage hearing if you hold the phone to your ear.**

## Noting a telephone number

To take down a telephone number during a call, type it on the keypad. After the call, choose **Options** and **Call** or **Save** (to put the number in your Phonebook). Your caller will hear the key tones as you type.


**Tip:** use the phone hands-free (above) so you can hear a dictated telephone number with the phone away from your ear.

## Talking privately

Choose **Options** and **Mute** so that you can talk privately to a companion. Repeat to return to the call.

## Making/handling more calls

During a call, choose **Options** and **Additional call**. Dial a number (or choose **Options, Phonebook**) and call as usual. When connected, you have the following options:

- **Swap** – switch between calls. Ending one call enables you to return to the other.
- **Transfer** – connect the calls and exit (limited availability).
- **Join** – connect the calls. You can add up to five additional calls to a conference by repeating the steps above. Clicking  concludes the call for all parties.




# Call Features

## Receiving a second call


If you subscribe to your service provider's call waiting service, you may be alerted to an incoming call while you are using the phone. To set call waiting, see p 21.

### To accept an additional call

Click  to choose **Swap**. This holds your current call and answers the new one. Choose **Options** and **Swap** to switch between calls.

Ending one call enables you to return to the other.

### To end your current call and accept a new one

Click  to end your current call and answer the new call as normal.


If you ignore a new call, it will be diverted if answering/forwarding is switched on (p 17).


## About the Phonebook

The Phonebook makes it simple to dial your most frequently-used numbers.

### To select a Phonebook entry

From standby, click  to show the first entry.

Type the first letter of the name (press the corresponding number key the correct number of times) and/or click  to see previous/name.

Double-click  to dial the number shown.

## Saving Phonebook entries

### To save a new entry in your Phonebook

From standby, type the number on the keypad.

Choose **Options** and **Save**. Type the name (see below) and choose **OK**.

## Typing in the Phonebook


### To type a name in the Phonebook


Press the number key that shows the letter you want the correct number of times. For example, press **2** once for "a" and twice for "b".

Keep pressing for characters with accents.



Leave a short pause between letters that appear on the same key.

### To correct a name

Click  to delete the previous letter. Hold down to delete all preceding text.

Click  to move back and forward in a name. Hold down to go to the start or end.

### To include spaces/punctuation

- For a space, press **1**.
- For punctuation, press \* and click  or  to highlight the mark you want. After a short pause, your phone writes the character on the display.

## Phonebook tips

You may save numbers from your list of calls dialled, received or missed (**Call Records** menu), or from text messages. With a number on your display, choose **Options, Save**.

Include the international prefix before a telephone number (**Dialling internationally**, p 6) so you can use it from any country.

Enter more than one number for a person by adding a letter at the end of their name: "H" for a home number, "M" for a mobile number, etc.

# Phonebook


## Further Phonebook features

Depending on your SIM, the following may be offered:

**Own number** – display or record your own phone number. You may also record other useful personal numbers.

**Service/Information numbers** – provides lists of useful phone numbers.

## Updating Phonebook entries

From standby, click  to open the Phonebook. Select the entry to change. From the **Options** menu, you can choose **Edit**, **Delete**, etc.

## Voice dialling


You can call people in your Phonebook by saying their name (**Voice dialling**, p 6).

When you voice dial, your phone matches your words with a recording. You may save recordings for up to 10 Phonebook entries.


## To make a voice dial recording

Open the Phonebook and select the entry that you want to record.

Choose **Options** and **Voicedial**. Choose **Record new** and, at the tone, say the name. Repeat the name at the second tone.

This is also available when you choose **Add**  having just saved a new Phonebook entry.

## To update a voice dial recording

Open the Phonebook and select the entry. Entries with recordings display the  icon.

From the **Options** menu you can play, re-record or remove the recording. Choose **Options**, **Check all** to play or remove every recording.

# Text Messages

## Receiving a text message


Your phone can send and receive multimedia messages (EMS) including text, pictures and sound.

### To view/play a message

When you receive a message, your phone displays the ☒ symbol or 🗣️ if it contains a sound.

Click 🗑️.

Click ⬆️ to move up and down in a text message.

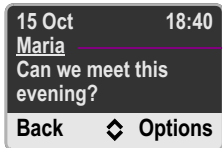

sender's name or number

### To reply to a message

Choose **Options** and **Reply** and select a reply as follows:

- **New reply** – start a new message.
- **Edit reply** – start a new message based on the one you're looking at.
- **Answer is YES/NO, Please call back, I'll be late, Thank you** – send the selected phrase in reply.

## Deleting messages

Your phone automatically saves incoming messages on your SIM card, which has limited capacity. ☒ will flash on the display when it is full, and you can receive no new messages.


Make a habit of deleting messages: choose **Options** and **Delete**.

## Writing a text message

### Starting a new message

From **Menu, Messages**, choose **Write new**.

You can also choose **Options, Send SMS** whenever you have a phone number or Phonebook entry on your display.

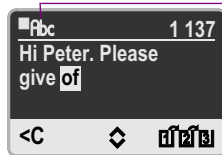

text format

"1" - number of SMS messages used (p 15)  
"137" - characters remaining in current message

# Text Messages



## Using “T9” to type

T9 enables you to write text messages by pressing each number key just once (e.g., **4, 6, 8, 3, 5** for “hotel”).

To type, press the number key that shows the letter you want **once** then repeat for next letter, **ignoring incorrectly displayed letters**.

At the end of the word, check it is correct and press the **1** key for a space.

## T9 Suggestions


If you reach the end of a word and it’s not correct, then click  to choose  and repeat until you reach the right suggestion or your phone asks you to spell the word.

## To spell a word


Press the number key that shows the letter you want the correct number of times as in the Phonebook. For example, press **2** once for “a” and twice for “b”.


Keep pressing for characters with accents.

Leave a short pause between letters that appear on the same key.


When the word is correct, click  to choose **Save**.

## To correct a message

Click  to delete the previous letter. Hold down to delete all preceding text.



Click  to move back and forward in a message. Hold down to go to the start or end.

## To insert a telephone number

Following a space, choose **Options** and **Insert from** . Select the entry to insert and choose **Select**.

## Writing other characters

### For spaces, punctuation and numbers

<b>space</b>	press <b>1</b>
<b>full stop</b>	press <b>0</b>
<b>punctuation</b>	press <b>*</b> . Click  or  to highlight the required mark.
<b>new line</b>	press <b>1</b> twice
<b>number</b>	hold down the correct key

### To switch T9 on or off, or type in capitals or lower case letters


For an unfamiliar word or a name, you may want to switch T9 off. You may also want to type capitals, lower case letters or a long number.


Click the **#** key repeatedly to select the option you want.

Without T9 you must press each number key the correct number of times for the letter you want.

## Sending a message

Choose **Options** and **Send** and then, unless replying, either:

- type the number, or
- choose  to select a name.


Choose **Send** (or hold  to cancel).

Your message is sent to your service provider's SMS service centre for onward transmission. They may be able to provide confirmation of receipt. Consult your documentation.

## Sending messages to a group

### To prepare your group

Choose **Options** and **Send to group**.

Choose **Options**, **Insert from**  to select someone from your Phonebook (or type a number), choosing **Send** each time.

Your phone saves the names to which you last sent a message, so you can send a later message to the same people. When you choose **Send to group** the next time:

- choose **Send** to send the message to the number shown
  - choose **Skip** to omit the number
- add any new numbers after sending to the current list.

## Ready messages

From the **Messages** menu, you can send a variety of quick messages. Choose **Ready messages** and select as required.

Your first ready message is the last one you wrote. You may edit and send this as usual.

## Managing messages

Use the **Messages** menu to manage messages you have:

- received (**Inbox**)
- sent (**Outbox**).

each message gives you the option to **View** or **Delete**. To edit a message, choose **View** and then **Edit**.



### Service centre

If your service provider's SMS service centre is not preset, then you'll be prompted for it the first time you send a message. Use the **Service center** menu option to update the number when necessary.

# Text Messages

## Telephone numbers

### To save (or dial) a telephone number in a message

Numbers that you can call are underlined. Click  to highlight one. Choose **Options** and **Save in**  (Phonebook) or **Call**.



T9® Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5, 818, 437, 5, 953, 541, 5, 187, 480, 5, 945, 928, and 6, 011, 554; Canadian Pat. No. 1,331,057; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463 (96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.


# Multimedia (EMS) messages

## Cards

On special occasions, you can send your friends greetings cards that include a picture and melody, and in which you can add a personal message.

These can be received on the latest models from most prestige phone manufacturers.

From the **Messages** menu, choose **Cards** and click  to preview the different cards. Click  to select.



Click  to choose **Edit**. You may add a personal message and/or choose **Send**.




## Inserting media

### To insert an icon, a sound or animation

Choose **Options** and **Insert** and select the type of media to insert.

Click  to highlight the item you want (your phone will preview it) and click  to insert it.

A symbol represents the item in a message. You can remove it by clicking .

## Saving media

### To save a ringer melody

Choose **Options**, **Set ringer** to save the melody and use it as a ring tone. See **Ring tones** on p 16 for more details.

Choose **Options**, **Save** to use the melody later.

### To save a picture or sound

Choose **Options**, **Save media**. Each item is shown in turn. Choose **Save** (or **Skip**).

Use the **Multimedia** menu to manage melodies, pictures or sounds (p 20).

## Longer messages

Your phone enables you to send a message up to 760 characters long, but your service provider may charge you for each standard SMS (160 characters) that this involves.

When writing a message, the numbers at the top right of the display (p 11) show how many standard SMS messages you have used, followed by the number of characters remaining per standard message.



# Features and Settings

## Key lock

Prevent accidental calls by locking the keypad.

In standby, hold down the **#** key to lock.

From the **Keys** menu, choose **Auto key lock** to have your phone automatically lock the keypad when it is idle.

With the key lock on, you can still answer calls and if necessary dial the emergency services.

## Ring tones

### To switch off ring tones

In standby, hold down the **\*** key.

Ring tones will be switched off until you:

- hold down the **\*** key to switch them back on, or
- switch your phone off.

Switching off ring tones won't affect the vibrating alarm (p 20) or alarm clock (below).

### To change ring tones

You can use different ring tones for callers you recognise and for messages.

From the **Audio** menu, choose **Ringer melodies**.

Choose the type of call you want to modify:

- **General calls** – new or unknown numbers
- **Phonebook callers** – numbers that appear in your Phonebook

- **Individual callers** – choose a ring tone for a specific person in your Phonebook. Select the required name.

- **Messages** – incoming text messages.

Click  to choose the melody and choose **Select**.

You can also save ringer melodies from EMS messages (p 15).

Modify ringer volume using the **Audio** menu (p 20).



## Using the alarm clock

Your phone provides a daily alarm that works even with the phone switched off.


### To set the alarm

From the **Clock** menu, choose **Alarm clock**.


Choose **Change** and either:

- confirm the time (if shown) by clicking ,
- enter the time (24 hour clock) at which you want to be alerted. Click  to delete a digit. Choose **OK** to set the alarm.

To switch off the alarm, choose **Change** again.

When the alarm's set, you'll see  next to the time.


### When you hear the alarm...

Click  to cancel. The alarm will sound at the same time tomorrow unless you switch it off (above).

Switching off ring tones won't affect the alarm.

# Features and Settings

## Using the calendar

As an aid to planning, your phone provides a calendar. Choose the **Calendar** menu and click  to see different months.

## Using a screensaver

Your phone displays an image (e.g., a clock) when it has been idle for a couple of minutes. To change the image, from the **Display** menu choose **Screensaver** and select the image you want.

this icon on the screensaver display indicates you have a new message, missed call, etc.



## Setting up voice mail

### Voice mail

If you subscribe to your service provider's answering service (voice mail), they will usually have set it up automatically. If not, you may need to enter your voice mailbox number.

Your phone prompts you for your mailbox number the first time you hold down the **1** key to retrieve your voice

mail. Alternatively, from the **Setup** menu, choose **Voice mailbox**.

You may additionally need to switch on divert (see below).

## Divert (call forwarding)

Divert must be switched on to use Voice Mail, but you can also divert calls to other numbers.

From the **Setup** menu, choose **Divert** and select:

- **Unanswered** – forward calls when your phone is off or out of coverage or when you're busy or don't answer. This is the usual setting.
- **All calls** – forward every call (useful if you're abroad and don't want to be charged for incoming calls).
- **Off** – don't forward any calls.

If you elect to forward calls, then enter (or confirm) the telephone number to which you want calls redirected. This is either your service provider voice mail **divert** number or an alternative number of your choice.



# Features and Settings

## Setting up favourites

To set up your Display key




You can program the  key with your favourite number or feature.

From standby, click . Choose **Change** and select the feature you want, or **Phone number** (in which case, choose the required Phonebook entry). Click  to set.

### To program the 2 to 9 keys

You can program keys 2 to 9 so that holding down the key in standby makes a call or offers a feature.

From standby, hold down the required number key and then click .

Select a feature or number as above.





 


### Changing favourites

From the **Keys** menu, choose **Favourites, Change**. Select a key, then a feature or number as above.






## Display Symbols

Your phone may display the following information:

### Reminders

-  Alarm clock on (p 16)
-  Ringer off: hold \* to switch on
-  All calls diverted (p 17)
-  Autoanswer on (with headset)
-  \*!\* Ciphering off (privacy risk in some networks)
-  Home zone (special tariff in some networks)
-  Calls not possible

### Back key

-  New text message (p 11)
-  New voice mail (depending on network, p 7)
-  Missed call (p 6)
-  Missed announcement (when screensaver on)
-  Text message with ring tone

### Go key

-  Click  to unlock keypad

## Menu commands

This section of the manual summarises the menu options on your phone.

### Messages

See p 11.

### Recent calls

View, redial, delete or save telephone numbers from calls you have missed, received or dialled.

### Clock

**Alarm clock** Set the alarm (p 16).

**Time** Set the time.


**Date** Set the date.

### Calendar

See p 17.

# Menus


## Audio

- Ringer melodies** Select ringer melodies (p 16).
- Ringer setting** Switch ringer tones on or off.
- Volume** Set ringer volume (click .
- Info tones** Switch non-ringer sounds (network events, etc.) on or off.
- Silent alert** Switch your phone's vibrate alert on or off, independently of the ringer.
- All quiet** Switch info tones off and set ringer to quietest volume.
- All loud** Play all sounds at highest volume.

If either **All quiet** or **All loud** are on, you are prompted to switch them off before modifying any other setting.

## Display

- Language** Choose the language in which to display your phone's menus and options.  
If you can't understand the language on your phone's display, call **\*#0000#** to reset to your network's language.

- Screensaver** Choose an image to display when your phone has been idle for a time (p 17).
- Welcome text** Write a message to display when you switch your phone on.
- Contrast** Adjust the contrast of your display (click .

## Keys

- Favourites** Program favourite keys (p 18).
- Key sound** Change or turn off the sound that accompanies a key press.
- Auto key lock** Automatically disable the keypad (p 16).

## Multimedia

- Icons** View/delete icons, or use an icon as a screensaver.
- Pictures** View/delete pictures, or use a picture as a screensaver.
- Animations** View/delete animations.
- Ringer melodies** Listen to/delete ringer melodies, or use a melody as a ring tone.
- Sounds** Listen to/delete sounds.

## Setup

### Voice mailbox

Enter the number you call to retrieve voice messages (p 17).

### Divert

Turn call forwarding/voice mail on or off (p 17).


### Hide ID

Enables you to withhold your telephone number when you make a call.

## Security


**PIN control** – Enable or disable PIN number checking when you switch on the phone (if possible: your service provider may require you to use a PIN).

**Change PIN** – to choose a different PIN number.

**Phone identity** – to view your phone's unique identifier (IMEI) – useful for customer service. Click  to choose **Info**, giving further technical details.

Alternatively, call **\*#06#**.

## Network

**Choose network** – You can change from your current network by choosing manually from a list of networks that are in range. Networks marked  are not allowed by your home service provider (or SIM).

**Auto network search** – Normally the network selection is automatic. If you switch this off, you must choose from the list of available networks when you move outside coverage of your current network.

**Call waiting** – Switch on or off the service that alerts you when you receive a second call. You may need to register to use this service. To use call waiting, see p 8.

## Car kit

Set auto-answering: your phone answers calls automatically after a few rings.

## Headset

Set auto-answering: your phone answers calls automatically after a few rings.

## Cell

### Broadcast

Limited availability – please contact your service provider.

**Receive** – switch receipt of local information on or off. Cell broadcasts reduce the standby time of your phone.

**Set channel** – type the number of a channel you wish to receive, or remove existing channels.

# Menus

## Phonebook

See p 9.

## SIM Toolkit

This submenu will be offered if supported by your SIM card. The content will be defined by your service provider.


If you have any questions about using your phone, visit us at [www.xelibri.com](http://www.xelibri.com) anytime. In addition we have listed some frequently asked questions and answers below.

Problem	Possible Causes	Possible Solution
Phone cannot be switched on.	On/Off key not pressed long enough.	Press On/Off key for 2 to 5 seconds.
	Flat battery.	Charge battery. Check charging indicator in the display.
	Battery contacts dirty.	Clean contacts.
	See also below under: "Charging error".	
Charging error (charge icon not displayed).	Extreme temperature (outside 5 to 40 °C)	Make sure the ambient temperature is right, wait a while, then recharge.
	Contact problem.	Check power supply and connection to the phone. Check battery and phone contacts, clean them if necessary, then insert battery again.
No mains voltage.		Use different mains power socket, check mains voltage.
Wrong charger.		Only use original Siemens accessories.

Problem	Possible Causes	Possible Solution
SIM error.	Battery faulty.	Replace battery.
	SIM card not correctly inserted.	Check (p 3).
	SIM card contacts dirty.	Clean the SIM card with a dry cloth.
	SIM card with wrong voltage.	Use 1.8/ 3 V SIM cards only.
No connection to network.	SIM card damaged (e.g. broken).	Inspect the damage. Return the SIM card to service provider.
	Signal weak.	Move higher, to a window or open space.
	Outside GSM range.	Check service provider coverage map.
	SIM card not valid.	Contact the service provider.
Phone loses network.	New network not authorised.	Try manual selection or select a different network (p 21).
	Network barring is set.	Contact the service provider.
	Signal too weak.	Switching the phone off and on may speed up reconnection.
Calls not possible.	New SIM card inserted.	Check for new restrictions.
	Credit used up.	Load credit.




# What if ...

Problem	Possible Causes	Possible Solution
Poor sound quality	Signal too weak.	Avoid covering the internal antenna (top rear of phone) with your hand.
No entries possible in Phonebook.	Phonebook is full.	Delete entries in Phonebook (p 6).
Phonebook entries missing	Changing SIM from another phone.	Entries may be in phone memory
Voice mail does not work	Call divert to the mailbox not set.	Set call divert to the mailbox (p 17).
Call waiting does not work	Not set up in network.	Set Call waiting (p 21)
SMS (message)  flashes.	SMS memory full.	Delete messages, (p 13).
Function cannot be set.	Not supported by service provider or registration required.	Contact your service provider.
Message cannot be sent.	Some service providers do not support this service.	Check with your service provider.
	Phone number of the service centre is not set or is wrong.	Set service centre (p 13).
	Service centre overloaded.	Repeat message.

Problem	Possible Causes	Possible Solution
	Recipient does not have a compatible phone.	Check.
EMS pictures and sounds are not displayed at the destination phone	The destination phone does not support the EMS standard.	
PIN error	Three wrong entries.	Enter the PUK (master PIN) provided with the SIM card according to the instructions. If you have lost the PUK, contact your service provider.

## Damage

Severe shock.	Remove battery and SIM and insert them again. Do not dismantle phone!
Phone became wet.	Remove battery and SIM card. Dry immediately with cloth, do not heat. Dry connector contacts thoroughly. Stand unit upright in an air current. Do not dismantle phone!

To reset your phone to the factory settings, dial **\*#9999#** and press . **Note** that this will delete any downloaded files.

# Precautions/Maintenance

## Precautions

### Interference

Like any radio transmitter, a mobile phone can interfere with electrical equipment. You must always **switch off** your phone:

- in **hospitals** and near medical equipment. If you have a heart pacemaker, keep the phone a minimum of 20 cm from it and hold it to the ear furthest away.
- on **aircraft**.

### For safety

**Switch off** your phone near petrol stations, fuel or chemical plants or blasting operations.

### Driving

**Driving** while holding a mobile phone is **dangerous** and **illegal** in many countries. Please use headset or car kit accessory and then only when it is safe to do so.

### Heat and moisture

Avoid **moisture**, **shock** or **extreme heat** (for instance, leaving the phone in a car in hot sun).

### Other precautions

Take care, particularly overseas, that you **charge** the phone using the **correct voltage**.

**Do not open the phone**, except to change the SIM card or replace the battery. Tampering with the phone or battery invalidates your warranty and may result in your network refusing service.

To ensure that you don't damage your phone, use only accessories – particularly chargers and batteries – supplied by Xelibri or Siemens.

The battery is 100% mercury free, but take care to **dispose of batteries legally**. Check with your retailer.

For optimum performance, avoid covering the antenna (top rear of phone) whilst using it.

## Maintenance

The SIM card should be treated with the same care as a cheque guarantee card. Do not bend or scratch it or expose it to static electricity.

Clean the card with a damp cloth or an antistatic wipe without chemical cleaning agents.

Remove the battery if you are not going to use the phone for extended periods of time (more than one month)

### Lost phone

If you lose your phone or SIM card contact your service provider immediately to prevent misuse.

# Xelibri Service/Accessories

## Service

Please refer to section "What if ..." on page 23, or our web site at

**www.xelibri.com**. If repair work is necessary please contact:

+800 4 9354274  
(+800 4 XELIBRI)

**Note** When calling customer service, please have ready your receipt and the phone identity number (IMEI, visible beneath the battery). To display the IMEI, press **\*#06#**. When displayed, choose **Info** for further service information.

## Approved accessories

The following Xelibri and Siemens accessories will enhance use of your phone. Use of other non-approved accessories, especially batteries and chargers, may damage it.

## Basics

### Li-Ion Battery (630 mAh)

EBA-580  
Spare battery.

### Travel Charger

ETC-500 (Euro)  
ETC-510 (UK)  
Travel charger with an extended input voltage rate of 100-240V.

## In your car

### Basic Car Pack

HKB-500  
Allows hands-free talking and simultaneously charges your phone in the car. Features a car charger and headset with special connector.

## Car Charger

ECC-500  
Charger for the cigarette lighter socket in your car.

## Car Kit Portable

HKP-500  
Handsfree kit with integrated loudspeaker and microphone and auto answer feature. Also charges your phone: simply plug into the cigarette lighter socket. Ideal for mobility between vehicles.

## Headset

### Headset PTT

HHS-510  
Enables convenient and safe hands-free use. It includes a button in the microphone for handling calls.  
Products can be obtained in specialist shops. Visit our online shop under:



## Declaration of conformity

Siemens Information and Communication mobile hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE).

The declaration of conformity (DoC) concerned has been signed. Please call the company hotline if you require a copy of the original.

**CE 0889**

## Technical data

GSM class	4 (2 Watt)
Frequency range:	880-960 MHz
GSM class:	1 (1 Watt)
Frequency range:	1,710-1,880 MHz
Weight:	73 g
Dimensions:	101 x 4.6 x 18.5 mm (71 ccm)
Li-Ion battery:	610 mAh
Operating temperature:	-10 °C to 55 °C
Standby time:	up to 200 h*
Talk time:	up to 240 min*
SIM card:	1.8/3.0 V

\* subject to network conditions

## SAR

THIS MODEL PHONE MEETS REQUIREMENTS FOR EXPOSURE TO RADIO WAVES

Mobile phones are radio transmitters and receivers.

Limits for radio frequency exposure are defined in international guidelines (ICNIRP), developed by independent scientific organisations.

The international recommended upper limit for exposure, and that recommended by The Council of the European Union, is a Specific Absorption Rate (SAR) of **2.0 watts/kilogram (W/kg)**.

Tests on this phone, conducted at maximum transmitting power, produced an SAR no greater than **0.67 W/kg**.

In areas of typical network coverage, your phone transmits on lower power, resulting in a reduced SAR.

For more information on this issue, see **[www.my-siemens.com](http://www.my-siemens.com)**.

# Guarantee certificate

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user manuals.
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads).

User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.

- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- This Guarantee shall apply to new devices purchased in the European Union. The Guarantee is issued by Siemens plc, Siemens House, Oldbury, Bracknell, Berkshire, RG12 8FZ.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.

- Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Xelibri telephone service. The relevant number is to be found on page 26.

**A**

additional calls .....	7
alarm clock .....	16
animations	
inserting in text messages ....	15
saving from text messages ...	15
audio menu .....	20

**C**

calendar .....	17
call forwarding/divert .....	17
call records .....	19
call waiting .....	8, 21, 24
calls	
ending .....	5
from Phonebook .....	6
holding .....	7
international .....	6
making .....	5
multiple .....	7
receiving .....	5
redialling .....	6
rejecting .....	5
using voice dialling .....	6
cards .....	15
clock	
alarm .....	16
clock menu .....	19
conference calls .....	7

**D**

deleting text messages .....	13
dialling .....	5
internationally .....	6
recent numbers .....	6
Display key .....	18
display menu .....	20
divert .....	17

**E**

EMS, see text messages	
ending calls .....	5

**F**

favourites	
setting up .....	18
forwarding .....	17

**G**

greetings cards .....	15
-----------------------	----

**H**

hands-free .....	7
holding calls .....	7
hotkeys .....	18

**I**

icons	
inserting in text messages ....	15
saving from text messages ...	15

inbox .....	13
incoming calls .....	5

**K**

keypad	
locking .....	16
keys menu .....	20

**L**

loudspeaker .....	7
-------------------	---

**M**

media	
inserting in text messages ....	15
saving from text messages ...	15
messages, see text messages or voice mail	
multimedia menu .....	20
multiple calls .....	7

**O**

outbox .....	13
--------------	----

**P**

phone numbers	
inserting in text messages ....	12
making a note of .....	7
saving/calling from text messages	
14	
Phonebook	

# Index

making calls .....	6
saving entries .....	9
tips .....	9
typing .....	9
updating .....	10
pictures	
saving from text messages ...	15
<b>R</b>	
ready made messages .....	13
receiving calls .....	5
recent calls .....	19
rejecting calls .....	5
ringer melodies	
saving from text messages ...	15
switching off .....	16
<b>S</b>	
screensaver .....	17
sending text messages .....	13
sending text messages to a group	13
setup menu .....	21
SMS, see text messages	
sounds	
inserting in text messages ....	15
saving from text messages ...	15
speed dial .....	18
spelling .....	12
switching off ringer melodies .....	16

<b>T</b>	
T9 .....	12
text messages	
deleting .....	11, 13
inserting media .....	15
inserting phone numbers .....	12
length .....	15
multimedia (EMS) .....	15
ready made .....	13
receiving .....	11
replying to .....	11
reviewing .....	13
saving media .....	15
saving ringer melodies .....	15
saving/calling phone numbers	14
sending .....	13
sending to group .....	13
special characters .....	12
writing .....	11
troubleshooting .....	23
<b>V</b>	
voice dialling	
calls .....	6
making recordings .....	10
voice mail	
listening to messages .....	7
setting up .....	17
volume	

hands-free .....	7
in calls .....	5
<b>W</b>	
what if .....	23