



**XELIBRI™**

**USER GUIDE**

*All you need to know to get the best from your Xelibri*


<b>Contents</b> .....	<b>1</b>	<b>Phonebook</b> .....	<b>8</b>	<b>Settings</b> .....	<b>17</b>
<b>Overview</b> .....	<b>2</b>	Making a Phonebook entry .....	8	Key lock .....	17
<b>Getting Started</b> .....	<b>3</b>	Typing in the Phonebook .....	8	Setting up voice mail .....	17
Fitting battery.....	3	Updating an entry .....	8	Divert (call forwarding).....	17
Fitting SIM card .....	3	Adding extension numbers.....	8	Setting up favourites .....	18
Charging .....	3	Phonebook tips .....	8	<b>Symbols</b> .....	<b>19</b>
Switching on .....	4	Identifying callers .....	9	Display symbols .....	19
Language .....	4	Voice dialling .....	9	<b>Menu Summary</b> .....	<b>20</b>
Setting the time and date .....	4	Further Phonebook features.....	9	Messages .....	20
Standby .....	4	<b>Text messages</b> .....	<b>10</b>	Stay in Touch.....	20
Switching off .....	4	Receiving a text message .....	10	Activities.....	20
Precautions .....	4	Writing a text message.....	11	My Xelibri .....	20
<b>Making and Taking Calls</b> .....	<b>5</b>	Writing other characters .....	12	Themes .....	21
Making a call .....	5	Sending a message .....	12	<b>What if...?</b> .....	<b>22</b>
Adjusting call volume .....	5	Managing messages.....	12	<b>Precautions/Maintenance</b> .....	<b>24</b>
Ending a call.....	5	<b>Multimedia (EMS) messages</b> .....	<b>14</b>	<b>Xelibri Service</b> .....	<b>25</b>
Taking a call.....	5	Cards .....	14	<b>Accessories</b> .....	<b>26</b>
Wearing your Xelibri.....	5	Including a Phonebook number....	14	<b>Specifications</b> .....	<b>27</b>
<b>More ways to call</b> .....	<b>6</b>	Inserting a ready message.....	14	<b>Index</b> .....	<b>28</b>
Dialling internationally and in China.	6	Inserting multimedia .....	14		
Phonebook .....	6	Saving multimedia.....	14		
Voice dialling .....	6	<b>Activities</b> .....	<b>15</b>		
Redialling numbers .....	6	Using the alarm clock .....	15		
Retrying a busy number .....	6	Using the calendar .....	15		
<b>Call features</b> .....	<b>7</b>	Using the calculator.....	15		
Voice mail .....	7	Games .....	15		
Noting a phone number .....	7	<b>Features</b> .....	<b>16</b>		
Pausing a call .....	7	Themes.....	16		
Second calls .....	7	Ring tones.....	16		
‘Party’ calls .....	7				

# Overview


**Reception strength/battery** – the stronger these indicators the better.

**Themed background** – suit the look and sound of your Xelibri to your mood (p 16).

 


**Network name** – indicates **standby** – you're ready to make and receive calls and messages.

**On, off, or "go back"**  – do what's shown at bottom left of display – often backspace or cancel. Hold to go back to standby. Hold to switch on or off.

You can put your favourite number or feature on this key in standby (p 18).

**Up or down**  – click to move up or down through a list, menu or message.


In standby,




 
- click  to view/redial recently called number(s)
- click  to open your Phonebook
- hold  to voice dial.


## Special keys



- \* – hold to switch all tones off
- 1 – hold to call your voice mailbox
- # – hold to lock keypad



 
**Reminders** – show settings in use – e.g.  indicates you've switched ringer off (p 16).

**Announcements** – your Xelibri also displays text messages , voice mail , missed calls  etc. here – click  to view.


**Menu**  – do what's shown at the bottom right of display – usually open a menu or confirm a setting.


**Call**  – click to answer an incoming call or to dial a number shown on the display. Click  to do what's highlighted first on

the **Options** menu.

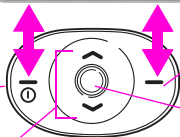

## Using menus

Click  to rotate to the next menu item.

 
Click  to open it.




# Getting Started

## Fitting battery

Open SIM cover, using thumbnail to extract one end first (1). Press the button at the rear of your Xelibri (2) whilst sliding the battery cover towards the bottom of your Xelibri (3).

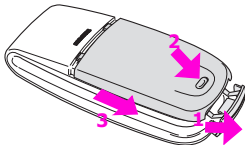

 Engage the battery tabs in the slots (4), then swing into place (5). Refit the battery cover.

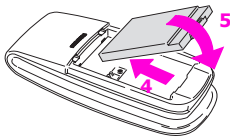


*To remove battery, lift tab at the bottom.*

## Fitting SIM card

 
Your service provider supplies your SIM card. If it's credit card size, snap out the smaller portion and tidy any rough edges.

Flip down SIM cover, see **Fitting battery**. Fit the SIM in the top slot, positioning the cut-off corner as shown. Press until it clicks into place. The SIM is spring-loaded – to remove, press it in.

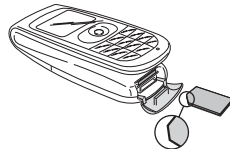

## Charging

 Insert the supplied charger into an easily accessible mains socket of the correct rating and, flipping open the SIM cover, plug into the bottom socket with the pins face up.

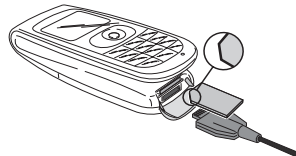


While it charges, the battery indicator will animate – if it doesn't, then see **What if...?** on p 22. Allow 2-3 hours for a full charge. Be sure to unplug the charger from the mains when you're finished.

# Getting Started

## Switching on


### To switch on your Xelibri

Hold . Enter your PIN if asked.

### To enter a PIN

A PIN number protects your Xelibri against unauthorised use. Service providers often supply a SIM with the PIN switched on; see your documentation for the number.





Type the PIN on the keypad. Click  to correct, if necessary.

Click  to confirm.

You have three tries at entering the right PIN. If there's a problem, see *What if...?* on p 22. Your provider may let you switch off the PIN (p 21).


## Language

To choose a different language, hold the **9** key. Click  to highlight the correct language and click  to select.

## Setting the time and date

When you first use your Xelibri, it will ask you to set the time and date.

Type the time using 24 hour clock and date, preceding a number with a zero if it's less than 10.

Click  when done.

## Standby

When a network has been found and its name displayed, your Xelibri is in **standby**. If you can't see a network name, please see *What if...?* on p 22.

## Switching off

From standby, hold .

## Precautions

All mobile phones are radio transmitters; switch off where prohibited (e.g. aircraft).

 
To be certain you use your Xelibri safely and correctly, see *Precautions/Maintenance* on p 24.

# Making and Taking Calls

## Making a call

### To make a call


Starting from standby (network name showing), type the phone number, always including area code.

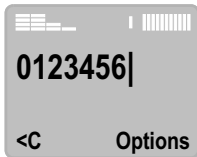

Click .

### To correct a number


Click  to clear a digit. Hold to clear all earlier digits.

Click  to move the cursor back or forward. Hold to go to the start or end.

## Adjusting call volume

During a call, click .

## Ending a call

Click  to choose **End**.

Always do this, even if you think the other person has hung up.

Your Xelibri tells you how long the call lasted.

## Taking a call

### Who's calling?


When you receive a call, the display shows the caller's phone number (if available) or their name (if their number's in your Phonebook).

You can use special ringer melodies and pictures for callers you recognise (p 9).

### To answer a call

Click .

### To reject a call

Click  to choose:

- **Reject** – hangs up the call immediately
- **Divert** – (if you're using call divert, p 17) forwards the call to your voice mail or alternative number.


## Wearing your Xelibri

Your Xelibri's made to clip onto clothing, belts, bags, you name it! Find a new way to wear it – only don't force it onto something that's too thick (1 cm max.).

# More ways to call

## Dialling internationally and in China

Hold **0** to enter “+” and type the country code or click  and select the country or Chinese city from the list.


Type the area code (in many countries omitting the first digit – e.g. “0”) and phone number and click .


## Phonebook

To make an entry, see p 8.

### To call someone in your Phonebook

From standby, click  to open the Phonebook.


Type the first letter of the name (press key the right number of times) and/or click  to go up or down the list.

Click  to call the person highlighted.

## Voice dialling

To record a name so you can voice dial the person, see p 9.




### To call someone by saying their name

From standby, hold (and then release) . At the tone, say the name.




**Note that a noisy environment may affect your Xelibri’s ability to recognise what you said.**

## Redialling numbers

### To redial a number you called earlier


From standby, click  to display the last number called. Click  to see previous numbers, if required. Click  to dial the number highlighted.

### Returning received or missed calls

Choose **Menu, Stay in Touch**, and select the list of recent calls you want. Click  to highlight the correct number and click  to dial. Alternatively, click  to save the number, send an SMS, etc.

## Retrying a busy number

If a number is busy, your Xelibri will offer to retry it. Choose **Yes** to redial at intervals for up to 15 minutes.

To stop your Xelibri trying the number, click  to cancel one of the call attempts.

## Voice mail

If you need to set up your answering service, see p 17.

### To listen to voice mails

Service providers may alert you to a new voice mail by text message (✉), the ☎ symbol or a phone call. To dial your voice mailbox, hold the **1** key or click ☎ to choose ☎, if shown.

## Noting a phone number

To take down a phone number during a call, type it on the keypad. After the call, click ☎ to dial, or choose **Options, Save** (in Phonebook).

## Pausing a call

To interrupt a call for a private conversation, choose **Options and Mute**. Repeat to resume.

## Second calls

### Receiving a second call

If you subscribe to call waiting, you may be alerted to an additional call while you are using your Xelibri.

- To accept the call, click ☎ or choose **Swap**.
- To reject or divert it (according to your settings), simply ignore it.

Otherwise, click ☎ to hang up your current call and ☎ to answer the new one.

### Making a second call

During a call, choose **Options** and **Add call**. Dial a number (or choose **Options, Phonebook**) and call as usual.

### Swapping/ending calls

Choose **Options, Swap** to switch between calls. To end the active call, click ☎.

## 'Party' calls

When you have two calls on the go, choose **Options, Join** to connect them together. Then, if you want, choose **Options, Add call** to add somebody else to the party. You can join up to five calls together.

Click ☎ to end the call for everybody or (where available) choose **Options, Transfer** to connect the callers to each other and exit.




# Phonebook

## Making a Phonebook entry

The Phonebook makes it simple to call your favourite numbers and to recognise incoming calls.

### To make a new entry

From standby, type the number on the keypad.

Choose **Options**, **Save**. Type the name (see below) and click  to choose **OK**.

## Typing in the Phonebook


Press a number key the right number of times for the letter you want. For example, press **2** once for "a" and twice for "b".

Keep pressing for characters with accents.

Leave a short pause between letters that appear on the same key.



 
### Corrections

Click  to clear a letter. Hold to clear all earlier letters.

Click  to move the cursor back or forward. Hold to go to the start or end.


### Spaces/punctuation



For a space, press **1**.

For punctuation, press \* and click  or  to highlight the mark you want. Click  to insert it.

## Updating an entry

From standby, click  to show the first entry.

Type the first letter of the name (press key the right number of times) and/or click  to go up or down the list.

Click  to call the person highlighted or click  to choose **Options** to edit or delete the entry, send a text message, etc.

## Adding extension numbers

You can add extension numbers (or control codes) to your entry. Enter phone number, the "+" (long press on "0") for pause, followed by the extension digits.

## Phonebook tips



You can save numbers from your list of calls made, received or missed (**Menu, Stay in Touch**), or from text messages. With a number on your display, choose **Options, Save**.

Save more than one number for a person by adding a letter at the end of their name: "H" for a home number, "M" for a mobile number, etc.

To use your Phonebook abroad, use the "+" country code even for saving local numbers. See *Dialling internationally and in China* on p 6.

## Identifying callers

So you can tell when your friends are calling, assign a special ring tone and picture to people in your Phonebook.

Edit the Phonebook entry and choose **Options, Ringer** or **Picture**. Click  to preview the item you want to use and click  to select.

You can also use a special ring tone for Phonebook callers as a whole – see p 16.

## Voice dialling

You can call people in your Phonebook by saying their name (p 6).

When you voice dial, your Xelibri matches what you say with a recorded sample. You can save samples for up to 20 Phonebook entries. Choose a quiet environment for recording samples and using voice dialling.

### To record a voice sample

Open the Phonebook and highlight the entry that you want to record.


Choose **Options, Voicedialling, Add**. At the tone, say the name, repeating it at the second tone.

### To check all samples

With any phonebook entry highlighted, choose **Options, Voice dial list**.

### To update a voice sample

Open the Phonebook and select the entry.

Click  for **Options, Voicedialling** and choose to play, re-record or remove the sample. You may also update via **Voice dial list** above.

## Further Phonebook features

Depending on your SIM, you may see the following listed in the Phonebook:

- **<Own nos.>** – display or record your own phone number or other useful personal numbers.
- **Special numbers** – lists numbers supplied by your service provider.

You can send a Phonebook entry to a friend via text message. Choose **Options, Send entry** and dial a number or select a recipient from the Phonebook as usual.

 
# Text messages

## Receiving a text message

Your Xelibri can send and receive standard (SMS) and multimedia (EMS) messages including text, pictures, animations and sound.

### To view a message

When you receive a message, you'll see the ✉ symbol. Click ⏪ to view the message and ⏩ to go back and forward.

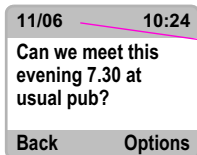

date and time of message

### To save (or dial) a phone number in a message

Choose **Options, Extract Numbers**.

To go back and forward between numbers, click ⏪. Choose **Options** and **Save** (in Phonebook) or click ⏩ to dial.

### To reply to a message

Choose **Options, Reply** and select a reply as follows:

- **New Reply** – start a new message
- **Edit Reply** – start a new message based on the one you're reading
- **Answer is YES/NO, Please call back, I'll be late, Thank you** – send the selected phrase in reply.

### To delete/archive a message

It's important to delete messages, because your SIM card has limited capacity (✉ will flash on display when full – and you won't get any more messages!)

In a message, choose **Options, Delete**. From standby, choose **Menu, Messages, Inbox** and click ⏪ to highlight a message. Choose **Options, Delete** (or **Delete all** to empty your Inbox).

 
Alternatively, choose **Options, Move to Archive** to move a message you're viewing from your SIM card to your Xelibri. The Archive is just like the Inbox.

## Writing a text message

### To start a new message

Choose **Menu, Messages, Write message**.

You can also choose **Options, Send SMS** whenever you have a phone number or Phonebook entry on your display.

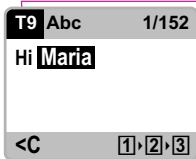

#### text format

"1" – number of SMS messages used (p 13)



 

"152" – characters remaining in current message

### Using T9 to type


T9 enables you to write text messages by pressing each number key just once (e.g. 4, 6, 8, 3, 5 for "hotel").

To type, press the number key that shows the letter you want, then repeat for the next letter, regardless of whether the word's correct. At the end of the word, check it's now correct and press **1** for a space.

### T9 suggestions


If you reach the end of a word and it's not right, then click  to choose  and repeat until you reach the right suggestion (press **1** for a space) or your Xelibri offers **Spell**.

### To spell a word

 
Click  to choose **Spell** and spell out the word by pressing a key the right number of times for the letter you want. For example, press **2** once for "a" and twice for "b".

Keep pressing for characters with accents.

Leave a short pause between letters that appear on the same key.

When the word is correct, click  to choose **Save**, which remembers the word next time.

### Corrections




Click  to clear a letter. Hold to clear final word and (again) all earlier text.

Click  to move back and forward in a message.

# Text messages

## Writing other characters

### Spaces, punctuation and numbers

<b>space</b>	press <b>1</b>
<b>full stop</b>	press <b>0</b> . Using T9, put a full stop where you intend an apostrophe.
<b>punctuation</b>	press <b>*</b> . Click  or  to highlight the required mark and click  to insert.
<b>new line</b>	press <b>1</b> twice
<b>number</b>	hold the correct key

### To switch T9 on or off, type in capitals or lower case letters


For an unfamiliar word or a name, you may want to switch T9 off. You may also want to type capitals, lower case letters or a long number.


Press the **#** key repeatedly to select the option you want.


Without T9 you must type the letter you want by pressing keys the right number of times.

## Sending a message

### To send


Click  and, unless replying, either:

- type the number, or
- choose  to select a name.


Choose **Send** (or hold  to cancel).

### To send to a group

Choose **Options, Send to many**. Your current group (if any) is listed.

To add people, choose **Add recipient** and highlight the name in your Phonebook, clicking  to confirm.

To remove one (or all) of the names listed, highlight it and choose **Options, Remove** (or **Remove all**).

When your group is correct, highlight one of the names and choose **Options, Send** (or click  to cancel).

## Managing messages

### Viewing, deleting and re-sending

Use the **Messages** menu to manage messages you have:

- Received (**Inbox**)
- Sent or last edited (**Outbox**)

Each message gives you the option to **View** or **Delete**. To edit and/or re-send an Outbox message, choose **View** and then **Options, Edit**.

## Service centre

SMS messages are sent to your provider's SMS service centre for onward transmission.

If your SIM card doesn't already contain the service centre phone number, then you'll be prompted for it the first time you send a message. Choose **Menu, My Xelibri, Setup, Service centre** to view or update this number, if necessary.

## Longer messages





Your Xelibri sends messages up to 1530 characters long, whilst your service provider may charge you separately for each standard SMS (160 characters). When you write a message, your Xelibri displays a figure like "1/152" at the top right (p 11), showing that you're in your first standard SMS and you can add 152 characters before you start a second.

# Multimedia (EMS) messages

## Cards

On special occasions, you can send your friends greeting cards that include a picture and melody and in which you can add a personal message.

These can be received on the latest models from most prestige phone manufacturers.

Choose **Menu, Messages, Multimedia, Cards** and click  to highlight a card. Click  to view it and either click  to add your message and send or click  to pick a different one.





## Including a Phonebook number

After a space, choose **Options, Insert media, Insert from** . Click  to highlight the person whose number you want to insert and click .



## Inserting a ready message

A ready message is a handy phrase that saves you time typing.

In the message, choose **Options, Insert media, Ready messages**. Click  to highlight the phrase you want to use and click .

## Inserting multimedia

In a message, choose **Options, Insert media** and select the type of media to insert.

Click  to go back and forward between items and click  to include the current one in your message.

Note that you will not see media indicated in your message.



## Saving multimedia


You can save specific pictures and sounds you receive, and re-use them. In a received message, choose **Options, Save media**, then the media you want to save, adding a name if required. Note that not all media you receive may be in an appropriate format. You can create and send new messages containing sounds, pictures or animations you have saved via **Menu, Messages, Multimedia**.

## Using the alarm clock

Your Xelibri provides a daily alarm that works even with your Xelibri switched off.

### To set the alarm

Choose **Menu, Activities, Alarm clock**. Click  to choose **On/Off**. Click  to confirm the time shown, or type a new time (24 hour clock) and choose **Set**.


When it's set, you'll see  next to the time. To switch off, choose **On/Off** again.

### When you hear the alarm...

Click  to pause (**Snooze**) or  to stop the alarm.

The alarm will sound at the same time tomorrow unless you switch it off (above).

## Using the calendar



As an aid to planning, your Xelibri provides a calendar. Choose **Menu, Activities, Calendar** and click  to see different months.


**Tip:** put your calendar on a favourite key for instant reference (p 18).

## Using the calculator



Choose **Menu, Activities, Calculator**.

Use the keypad to type numbers up to 8 digits long.

Press  (or **\***) the right number of times for decimal point, plus, minus, multiply (**\***), divide (**/**), and percentage. Click  to confirm.

Enter next number, click  for a result.

## Games

Click  and  to use the game menus. Choose **Menu, Activities** and...




### Melody tracker

Use the keypad to try to repeat a melody that gets more and more challenging.

Press **\*** to exit.

### Hotchpotch

As new blocks fall into place, try to remove blocks by placing four or more of the same colour together.

- Click  to rotate the falling blocks,
- click  to position them and
- click  to accelerate them into place.

Press **#** to pause and **\*** to exit.





# Features

## Themes

Suit your Xelibri to your mood with different themes, that include display background, symbols, ringer melodies and screensaver.



Choose **Menu, Themes** and click  to preview. Click  to use the highlighted theme. Note that a theme may replace custom settings you have made.

## Ring tones

### To switch off ring tones

In standby, hold \*.

Ring tones will be switched off until you:

- hold \* to switch them back on, or
- switch your Xelibri off.

Switching off ring tones won't affect the vibrating alarm (p 20) or alarm clock (p 15).

### To change ringer melodies

You can use different ringer melodies for callers you recognise and for messages.

Choose **Menu, My Xelibri, Audio, Ring melodies** and choose the type of call you want to modify:

- **General calls** – numbers that aren't in your Phonebook or are withheld
- **Phonebook calls** – numbers that appear in your Phonebook
- **Individual Callers** – choose a ring tone for a specific person in your Phonebook. Select the required name. You can also assign pictures to callers – see p 9.
- **Messages** – incoming text messages.

Modify volume by choosing **Volume** from the **Audio** menu.

### Quiet and loud settings

To switch quickly between normal, quiet and loud environments, choose **Menu, My Xelibri, Audio, Profiles** and choose:

- **Normal** to use your standard settings, including customised melodies.
- **All quiet** to quieten the ringer and other sounds, turn on vibrate and optionally switch the alarm clock off.
- **All loud** to switch all sounds to high volume.

## Key lock

To prevent accidental calls, hold **#** (in standby) to lock the keypad. Repeat to unlock.

To lock your keypad whenever your Xelibri is idle, choose **Menu, My Xelibri, Keys, Auto key lock**.

Note that you can still answer a call and dial the emergency services with the key lock on.

## Setting up voice mail

If you subscribe to your service provider's answering service (voice mail), they will usually have included it on your SIM.

If not, you may need to enter your voice mailbox number. Your Xelibri prompts you for it the first time you hold **1** to retrieve your voice mail. Alternatively, choose **Menu, Stay in Touch, Voice mailbox**.

You may also need to switch on divert (below).

## Divert (call forwarding)

Divert must be switched on to use voice mail, but you can also divert calls to other numbers.

Choose **Menu, My Xelibri, Setup, Divert** and:

- **For unanswered** – the usual setting: forward calls when your Xelibri is off, out of coverage, busy or when you don't answer.
- **For all calls** – forward every call (if you're abroad, for instance).

In each case, choose to forward calls to your voice mailbox, to an alternative number, or choose **Off** to stop diverting calls/using voice mail.


# Settings


## Setting up favourites

### To program your Display key

Display key



 
You can put a favourite number or feature on the  key (in standby) so it's just a click away.



From standby, click  to choose **Set** (if shown). Select the feature you want, or  **entry** (in which case select a Phonebook entry) and click  to confirm.

Once set, re-program as below.

### To program favourite keys

By programming keys 2 to 8, you can hold the key (in standby) for your favourite number or feature.







Choose **Menu**, **My Xelibri**, **Keys**, **Favourites**. Highlight the key ( for the Display key) and choose **Change**.

Select the feature you want, or  **entry** (in which case select a Phonebook entry) and click  to confirm.






## Display symbols

Your Xelibri may display the following information:



### Reminders

- |   |   |
|---|---|
|  Alarm clock on (p 15)     |  Ringer off: hold * to switch on             |
|  All calls diverted (p 17) |  Autoanswer on (with headset)                |
|  Headset in use            |  Home zone (special tariff in some networks) |
| *!* Cipherring off (privacy risk in some networks)  |   |

### Back key

- |   |  |
|---|--|
|  New text message (p 10) |  New voice mail (depending on network, p 7) |
|  Missed call (p 6)       |  Missed announcement (when screensaver on)  |
|  Missed alarm.           |  |

### Menu key

-  Hold  to unlock keypad

# Menu Summary

This section summarises the menu options on your Xelibri.

## Messages

See p 10.

## Stay in Touch

### Phonebook

See p 8.

### Calls missed/received/dialled

See p 6.

### Voice mailbox

See p 17.

## Activities

See p 15.

## My Xelibri

### Display

#### Language

Choose the language in which to display your Xelibri's menus and options.

To reset from a language you don't understand, hold the **9** key.

#### Screensaver

Choose or switch off the screensaver (e.g. clock) displayed after your Xelibri has been idle for a time.

#### Wallpaper

Choose or switch off the display background.

#### Welcome text

Write a message to display when you switch your Xelibri on.

#### Illumination

Switch display and key illumination on or off.

#### Contrast

Adjust the contrast of your display (click ☺).

### Audio

#### Ring melodies

Select ringer melodies (p 16).

#### Ringer setting

Switch ringer tones on or off.

#### Volume

Set ringer volume (click ☺ and ☹).

#### Info tones

Switch non-ringer sounds (network events, etc.) on or off.

#### Silent alert

Switch your Xelibri's vibrate alert on or off, independently of the ringer.

#### Profiles

See p 16.

# Menu Summary

## Keys

- Favourites** Program favourites (p 18).
- Key tones** Change or turn off the sound that accompanies a key press.
- Auto key lock** Automatically disable the keypad (p 17).

## Time/Date

- Time** Set the time.
- Alarm clock** See p 15.
- Date** Set the date and its display format.
- Calendar** See p 15.


## Setup


- Divert** See p 17.
- Auto answer** **Car Kit, Headset** – Your Xelibri answers calls automatically without you having to press a key.
- Hide ID** Withhold your phone number when you make a call.
- PIN control** Enable or disable PIN number checking when you switch on your Xelibri (service provider permitting).

## Change PIN Network

Choose a different PIN number.

**Auto network** – Normally the network selection is automatic. If you switch this off, you must choose from the list of available networks when you move outside coverage of your current network.

**Network priority** – Change the order in which networks are picked up by automatic network selection. Click  to highlight a network name, choose **Move** and enter a number to indicate preferred position.

Networks marked  are not allowed by your home service provider (or SIM).

## Themes



See p 16.

# What if...?

If you have any questions about using your Xelibri, visit us at **www.xelibri.com** any time. In addition we have listed some frequently asked questions and answers below.

Problem	Possible Causes	Possible Solution
Phone cannot be switched on.	On/Off key not pressed long enough. Flat battery.  Battery contacts dirty. See also below under: "Charging error".	Press On/Off key for 2 to 5 seconds.  Charge battery. Check charging indicator in the display.  Clean contacts.
Charging error (charge icon not displayed).	Battery totally discharged.  Contact problem.  No mains voltage.  Wrong charger.  Battery faulty.	1) Plug in charger cable. 2) Wait up to 2 hours until the charge icon is displayed. 3) Charge battery as usual.  Check power supply and connection to the phone. Check battery and phone contacts, clean them if necessary, then insert battery again.  Use different mains power socket, check mains voltage.  Only use original Siemens accessories.  Replace battery.

Problem	Possible Causes	Possible Solution
SIM error.	SIM card not correctly inserted.	Check (p 3).
	SIM card contacts dirty.	Clean the SIM card with a dry cloth.
	SIM card with wrong voltage. SIM card damaged (e.g. broken).	Use 1.8/ 3 V SIM cards only. Inspect the damage. Return the SIM card to service provider.
No connection to network.	Signal weak.	Move higher, to a window or open space.
	Outside GSM range.	Check service provider coverage map.
	SIM card not valid. New network not authorised.	Contact the service provider. Try manual selection or select a different network (p 21).
	Network barring is set.	Contact the service provider.
Phone loses network.	Signal too weak.	Switching the phone off and on may speed up reconnection.
Calls not possible.	New SIM card inserted.	Check for new restrictions.
	Credit used up.	Load credit.
Poor sound quality	Signal too weak.	Avoid covering the internal antenna (top rear of phone) with your hand.

Problem	Possible Causes	Possible Solution
No entries possible in Phonebook.	Phonebook is full.	Delete entries in Phonebook (p 8).
Phonebook entries missing	Changing SIM from another phone.	Entries may be in other phone memory.
Voice mail does not work	Call divert to the mailbox not set.	Set call divert to the mailbox (p 17).
Call waiting does not work	Not set up in network.	To set, dial: <b>*43*10#</b>  .
SMS (message)  flashes.	SMS memory full.	Delete messages, (p 12).
Function cannot be set.	Not supported by service provider or registration required.	Contact your service provider.
Message cannot be sent.	Some service providers do not support this service. Phone number of the service centre is not set or is wrong. Service centre overloaded. Recipient does not have a compatible phone.	Check with your service provider. Set service centre (p 13). Repeat message. Check.

Problem	Possible Causes	Possible Solution
EMS pictures and sounds are not displayed at the destination phone	The destination phone does not support the EMS standard.	
PIN error	Three wrong entries.	Enter the PUK (master PIN) provided with the SIM card according to the instructions. If you have lost the PUK, contact your service provider.

## Damage

Severe shock.	Remove battery and SIM and insert them again. Do not dismantle phone!
Phone became wet.	Remove battery and SIM card. Dry immediately with cloth, do not heat. Dry connector contacts thoroughly. Stand unit upright in an air current. Do not dismantle phone!



# Precautions/Maintenance

## Precautions

### Interference

Like any radio transmitter, a mobile phone can interfere with electrical equipment. You must always **switch off** your Xelibri:

- in **hospitals** and near medical equipment. If you have a heart pacemaker, keep your Xelibri a minimum of 20 cm from it and hold it to the ear furthest away.
- on **aircraft**.

### For safety

**Switch off** your Xelibri near petrol stations, fuel or chemical plants or blasting operations.

### Driving

**Driving** while holding a mobile phone is **dangerous** and **illegal** in many countries. Please use headset or car kit accessory and then only when it is safe to do so.

### Heat and moisture

Avoid **moisture, shock** or **extreme heat** (for instance, leaving your Xelibri in a car in hot sun).

### Other precautions

Take care, particularly overseas, that you **charge** your Xelibri using the **correct voltage**.

**Do not open your Xelibri**, except to change the SIM card or replace the battery. Tampering with your Xelibri or battery invalidates your warranty and may result in your network refusing service.

To ensure that you don't damage your Xelibri, use only accessories – particularly chargers and batteries – supplied by Xelibri.

The battery is 100% mercury free, but take care to **dispose of batteries legally**. Check with your retailer. For optimum performance, avoid covering the antenna (top rear of Xelibri) whilst using it.

## Maintenance

The SIM card should be treated with the same care as a credit card. Do not bend or scratch it or expose it to static electricity.

Clean the card with a damp cloth or an antistatic wipe without chemical cleaning agents.

Remove the battery if you are not going to use your Xelibri for extended periods of time (more than one month)

### Lost Xelibri

If you lose your Xelibri or SIM card contact your service provider immediately to prevent misuse.

## Service

Please refer to our troubleshooting guide on p 22, or our web site at **www.xelibri.com**. If repair work is necessary please contact one of our service centres:

Austria	0800-49354274
France	0800-905284
Germany	0800-49354274
Italy	800-785780
Spain	900-992904
Switzerland	0800-49354274
UK	0800-0153602

We are adding new numbers all the time. Please see our web site or (in Europe) call +800-4935427, where "+" is international access, e.g. "00" from a land line.

China	800-8201151
Hong Kong	800-963283
Singapore	800-8600007

# Accessories

## Approved accessories

The following Xelibri and Siemens accessories will enhance use of your Xelibri. Use of other non-approved accessories, especially batteries and chargers, may damage it.

## Basics

### Li-Ion Battery (510 mAh)

EBA-640

Spare battery.

### Travel Charger

ETC-500 (Euro)

ETC-510 (UK)

Travel charger with an extended input voltage rate of 100-240V.

## In your car

### Car Charger

ECC-500

Charger for the cigarette lighter socket in your car.

### Car Kit Portable

HKP-500

Handsfree kit with integrated loudspeaker and microphone and auto answer feature. Also charges your

Xelibri: simply plug into the cigarette lighter socket. Ideal for mobility between vehicles.

## Headset

### Headset PTT

HHS-510

Enables convenient and safe hands-free use. It includes a button in the microphone for handling calls.

Products can be obtained in specialist shops. Visit our online shop under:



Xelibri will shortly launch a range of cool accessories. Please check them out at [www.xelibri.com](http://www.xelibri.com)

## Declaration of conformity

Xelibri is brand of Siemens Information and Communication Mobile which hereby declares that the phone described in this user guide is in compliance with the essential requirements and other relevant provisions of European Directive 1999/5/EC (R&TTE).

The declaration of conformity (DoC) concerned has been signed.

CE 0168

## Technical data

GSM class	4 (2 Watt)
Frequency range:	880-960 MHz
GSM class:	1 (1 Watt)
Frequency range:	1,710-1,880 MHz
Weight:	83 g
Dimensions:	104 x 46 x 26 mm
Li-Ion battery:	510 mAh
Operating temperature:	-10 °C to 55 °C
Standby time:	up to 290 h*
Talk time:	up to 240 min*
SIM card:	1.8/3.0 V

\* subject to network conditions

T9® Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5, 818, 437, 5, 953, 541, 5, 187, 480, 5, 945, 928, and 6, 011, 554; Canadian Pat. No. 1,331,057; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463 (96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

## SAR

THIS MODEL PHONE MEETS REQUIREMENTS FOR EXPOSURE TO RADIO WAVES

Mobile phones are radio transmitters and receivers.

Limits for radio frequency exposure are defined in international guidelines (ICNIRP), developed by independent scientific organisations.

The international recommended upper limit for exposure, and that recommended by the Council of the European Union, is a Specific Absorption Rate (SAR) of **2.0 watts/kilogram (W/kg)**.

Tests on this phone, conducted at maximum transmitting power, produced an SAR no greater than **1.1 W/kg**.

In areas of typical network coverage, your phone transmits on lower power, resulting in a reduced SAR.

For more information on this issue, see [www.my-siemens.com](http://www.my-siemens.com).

# Index

## A

Activities menu .....	20
alarm clock .....	15
Archive .....	10
audio profiles .....	16

## B

battery .....	3
---------------	---

## C

calculator .....	15
calendar .....	15
call waiting .....	23
calls	
dialled, received or missed .....	6
ending .....	5
forwarding (divert) .....	17
from Phonebook .....	6
holding .....	7
identifying callers .....	9
international .....	6
making .....	5
making additional .....	7
receiving .....	5
receiving additional .....	7
rejecting/diverting .....	5
retrying .....	6
voice dialling .....	6

cards .....	14
charging .....	3
clock .....	15
conference calls .....	7

## D

date .....	4
dialling .....	5
divert .....	5, 7, 17

## E

EMS, see text messages	
ending calls .....	5

## F

favourites .....	18
fitting	
battery .....	3
SIM card .....	3
forwarding calls .....	17

## G

games .....	15
greetings cards .....	14

## H

holding calls .....	7
hot keys .....	18

## I

icons .....	19
identifying callers .....	9
Inbox .....	12
incoming calls .....	5
international calls .....	6

## K

keypad lock .....	17
keys .....	2

## L

language .....	4
----------------	---

## M

making additional calls .....	7
making calls .....	5
menus .....	2, 20
Messages menu .....	20
messages, see text messages	
mute .....	7
My Xelibri menu .....	20

## O

on/off .....	2, 4
Outbox .....	12

## P

- party calls .....7
- phone numbers
  - making a note of .....7
  - text messages ..... 10, 14
- Phonebook
  - making an entry .....8
  - making calls .....6
  - special ring tone/picture .....9
  - typing .....8
  - updating .....8
- pictures
  - Phonebook callers .....9
- PIN .....4
- profiles (audio) ..... 16

## R

- receiving additional calls .....7
- receiving calls .....5
- reception .....2
- redialling .....6
- retrying numbers .....6
- returning calls .....6
- ring tones .....16
- ringer melodies ..... 16
  - Phonebook callers .....9

## S

- SIM ..... 3
- SMS, see text messages
- Spell .....11
- standby .....2, 4
- Stay in Touch menu .....20
- switching on/off .....2, 4
- symbols .....19

## T

- T9 .....11
- text messages (SMS)
  - deleting/archiving .....10
  - multimedia (EMS) .....14
  - phone numbers ..... 10, 14
  - ready messages .....14
  - receiving .....10
  - replying .....10
  - sending .....12
  - special characters .....12
  - T9 .....11
  - viewing/deleting/re-sending ....12
  - writing .....11
- themes .....2, 16
- Themes menu .....21
- time & date ..... 4
- troubleshooting .....22
- typing .....8, 11, 12

## V

- voice dialling ..... 6
  - recording a voice sample ..... 9
- voice mail .....7, 17
- volume
  - calls ..... 5
  - ringer ..... 16

## W

- wearing ..... 5



**SOMEONE IS WAITING FOR YOUR CALL!**

**XELIBRI™**

**好明天 啲! THAT'S SO TOMORROW!**

© Siemens AG 2003  
All rights reserved. Subject to availability.  
Rights of modification reserved  
[WWW.XELIBRI.COM](http://WWW.XELIBRI.COM)

## **Box contents**

- ♥ **Xelibri X7**
- ♥ **510mAh Li-ion battery**
- ♥ **D-ring**
- ♥ **standard charger**
- ♥ **user guide**
- ♥ **quick start**
- ♥ **service card**

Issued by  
Information and Communication mobile  
Haidenauplatz, D-81667 Munich, Germany  
Ref. No: A31008-H9260-A45-2-7619