

**SONY**<sup>®</sup>

3-859-543-11(1)

# ***Mini Hi-Fi Component System***

---

Operating Instructions



***MHC-RX70  
MHC-RX80***

©1996 by Sony Corporation

 
## WARNING

**To prevent fire or shock hazard, do not expose the unit to rain or moisture.**

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

Laser component in this product is capable of emitting radiation exceeding the limit for Class 1.

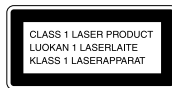


This appliance is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT MARKING is located on the rear exterior.

This caution label is located inside the unit.

|          |  |
|----------|--|
| CAUTION  | : INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM.           |
| ADVARSEL | : USYNLIG LASERSTRÅLING NÅR DEKSEL ÅPNES. UNNGÅ UDSÆTTELSE FOR STRÅLING. |
| VARO!    | : AVATTAESSA JA SUOJALUKITUS OHIETTAESSA OLET ALTILIN LASERISÄTELYLLE.   |
| VARNING  | : LASERSTRÅLING NÅR DENNA DEL ÄR ÖPPNAD OCH SPÄRRAD ÅR UTSÖPPPLÅD.       |
| ADVARSEL | : USYNLIG LASERSTRÅLING NÅR DEKSEL ÅPNES. UNNGÅ EKSPONERING FOR STRÅLEN. |

This stereo system is equipped with the Dolby\* B-type noise reduction system.

\* Dolby noise reduction manufactured under licence from Dolby Laboratories Licencing Corporation. "DOLBY" and the double-D symbol  are trademarks of the Dolby Laboratories Licencing Corporation.

---

# Table of Contents

---

## Getting Started

|   |   |
|---|---|
| Step 1: Hooking up the system .....     | 4 |
| Step 2: Setting the time .....          | 6 |
| Step 3: Presetting radio stations ..... | 6 |
| Connecting optional AV components .     | 7 |

## Basic Operations

|                                |    |
|--------------------------------|----|
| Playing a CD .....             | 10 |
| Recording a CD .....           | 12 |
| Listening to the radio .....   | 13 |
| Recording from the radio ..... | 15 |
| Playing a tape .....           | 16 |
| Recording from a tape .....    | 17 |

---

## The CD Player

|  |    |
|--|----|
| Using the CD display .....                     | 19 |
| Playing the CD tracks repeatedly .....         | 19 |
| Playing the CD tracks in random<br>order ..... | 20 |
| Programming the CD tracks .....                | 21 |
| Playing CDs without interruption .....         | 22 |

---

## The Tape Deck

|   |    |
|---|----|
| Recording on a tape manually .....                | 23 |
| Recording a CD by specifying track<br>order ..... | 24 |

---

## DJ Effects

|                             |    |
|-----------------------------|----|
| Looping part of a CD .....  | 26 |
| Flashing part of a CD ..... | 26 |
| Waving the equalizer .....  | 27 |

---

## Sound Adjustment

|  |    |
|--|----|
| Adjusting the sound .....                      | 28 |
| Selecting the audio emphasis .....             | 29 |
| Adjusting the audio emphasis .....             | 30 |
| Making a personal audio emphasis<br>file ..... | 32 |

---

## Other Features

|                                      |    |
|--------------------------------------|----|
| Singing along: Karaoke .....         | 33 |
| Falling asleep to music .....        | 34 |
| Waking up to music .....             | 35 |
| Timer-recording radio programs ..... | 36 |

---

## Additional Information


|                       |            |
|-----------------------|------------|
| Precautions .....     | 38         |
| Troubleshooting ..... | 39         |
| Specifications .....  | 42         |
| Index .....           | Back cover |

GB

## Getting Started


### Step 1: Hooking up the system

Do the following procedure **1** to **5** to hook up your system using the supplied cords and accessories.

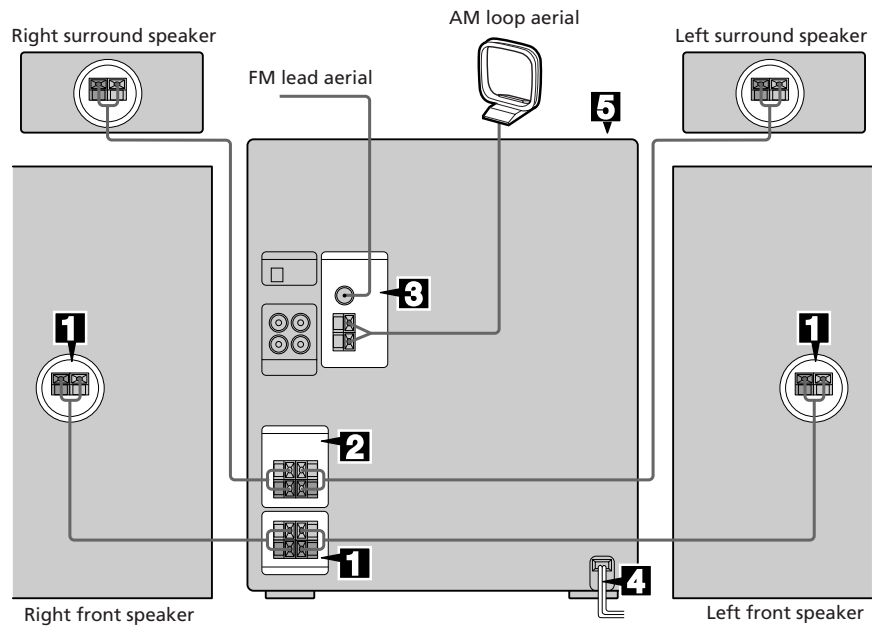

- 1** Connect the front speakers.  
Connect the speaker cords to the SPEAKER jacks of the same colour.  
Keep the speaker cords away from the aerials to prevent noise.


Insert only the stripped portion.

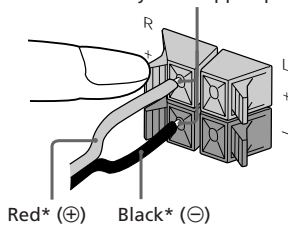

\* The colour of your speaker cords might be different. See the speakers' manual for details if supplied.


- 2** Connect the surround speakers.  
(For MHC-RX80 only)  
Connect the speaker cords to the SPEAKER jacks of the same colour.

Insert only the stripped portion.

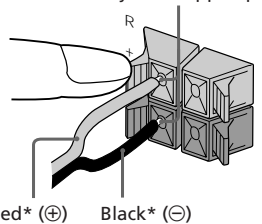

\* The colour of your speaker cords might be different. See the speakers' manual for details if supplied.


- 
- 3** Connect the FM/AM aeri­als.  
Set up the AM loop aerial, then connect it.

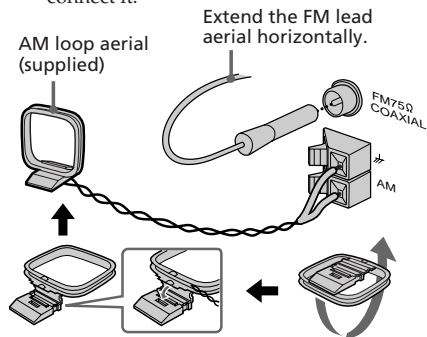

- 
- 4** Connect the mains lead to a wall outlet.  
Demo mode appears in the display.

- 
- 5** Deactivate the demo mode by pressing DISPLAY/DEMO when the system power is turned off. The demo mode is also deactivated when you set the time.

### Inserting two size AA (R6) batteries into the remote

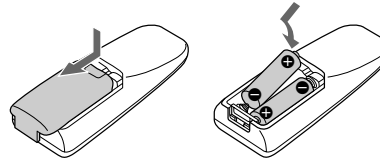

#### Tip

With normal use, the batteries should last for about six months. When the remote no longer operates the system, replace both batteries with new ones.

#### Note

If you do not use the remote for a long period of time, remove the batteries to avoid possible damage from battery leakage.


### When carrying this system

Do the following to protect the CD mechanism.

- 1** Press FUNCTION repeatedly until "CD" appears in the display.
- 2** Hold down PLAY MODE and press POWER to turn off the power.

## Step 2: Setting the time

You must set the time before using the timer functions.

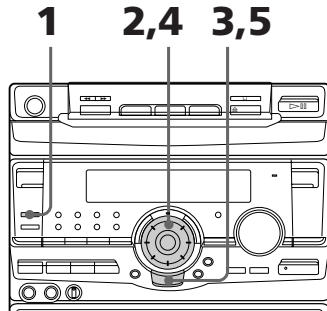


- 1 Press CLOCK TIMER SET.  
The hour indication flashes.



- 2 Turn the jog dial to set the hour.  
The clock is on a 12-hour system.

 - 3 Press ENTER/NEXT.  
The minute indication flashes.

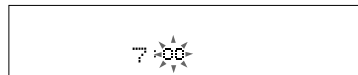

- 4 Turn the jog dial to set the minute.

- 5 Press ENTER/NEXT.  
The clock starts working.

### Tips


- If you've made a mistake, start over from step 1.
- Setting the time deactivates the demo mode.  
If you want to display the demo mode, press DISPLAY/DEMO when the power is off.

### Note

When setting the time, set the equalizer display to anything other than Spectrum analyzer pattern 3. (See "To change the equalizer display" on page 30.)

## Step 3: Presetting radiostations

The 3 band model lets you preset up to 40 stations, 20 for FM, 10 for MW and 10 for LW.  
The 4band model lets you preset up to 45 stations, 20 for FM, 10 for MW and 5 for UKV.

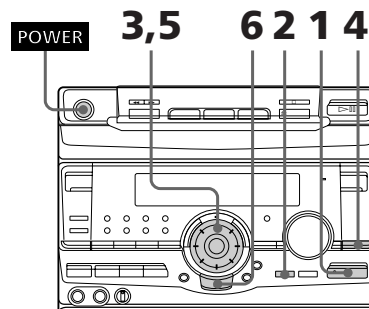

- 1 Press TUNER/BAND repeatedly until the band you want appears in the display.

the bands you can receive vary depending on the model you purchased. Be sure to check which bands you can receive.

Every time you press this button, the band changes as follows:

3 band models:  
FM → MW → LW

↑

4 band model:

 
FM → MW → LW → UKV\*

↑


\* "STEREO PLUS" is displayed when you select UKV.

- 2 Press TUNING MODE repeatedly to select "AUTO".

- 3** Turn the jog dial.  
The frequency indication changes and scanning stops when the system tunes in a station. "TUNED" and "STEREO" (for a stereo programme) appear.

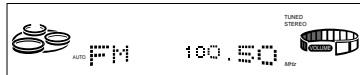

 - 4** Press TUNER MEMORY.  
A preset number appears in the display.

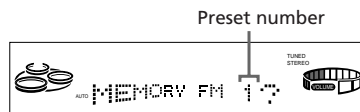

- 5** Turn the jog dial to select the preset number you want.

- 6** Press ENTER/NEXT.  
The station is stored.

- 7** Repeat steps 1 to 6 to store other stations.

### To tune in a station with a weak signal

Press TUNING MODE repeatedly to select "MANUAL" in step 2, then turn the jog dial to tune in the station.

### To change the preset number

Start over from step 1.

#### Tip

The preset stations are retained for half a day even if you unplug the power cord or if a power failure occurs.

## Connecting optional AV components

To enhance your system, you can connect optional components. Refer to the instructions of each component.


### Connecting audio components

Select one of the following two connections, depending on the equipment to be connected and method of connecting.

### Connecting an MD deck for digital recording

You can record from CD into the MD deck digitally by connecting an optical cable.

To the DIGITAL IN jack of the MD deck

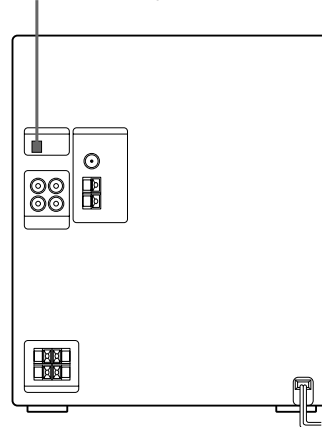


continued

### Connecting optional AV components (continued)

#### Connecting an MD deck for analog recording

Make sure to match the colour of the plugs and the connectors. To listen to the sound of the connected MD deck, press FUNCTION repeatedly until "MD" appears.

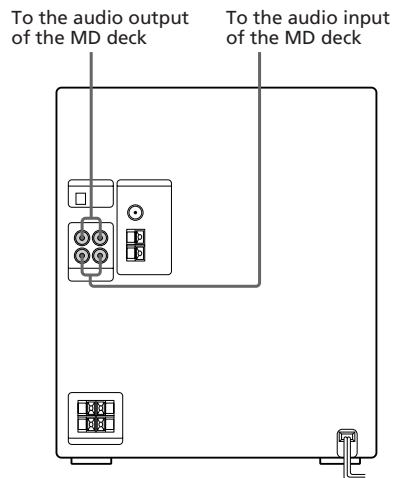

#### Tip

If you connect a turntable with MM cartridge, connect it to VIDEO/MD IN using the optional MM cartridge equalizer EQ-2 and an audio connecting cord. To listen to the sound, press FUNCTION repeatedly until "VIDEO" appears.


#### Notes

- You need to connect both left and right surround speakers. Otherwise, the sound will not be heard (MHC-RX80 only).
- If you cannot select "MD" even when you have pressed FUNCTION, press POWER while pressing FUNCTION when the power is turned off. "VIDEO" will be switched to "MD". To return to "VIDEO" do the same procedure.

### Connecting a VCR

Make sure to match the color of the plugs and the connectors. To listen to the sound of the connected VCR, press FUNCTION repeatedly until "VIDEO" appears.

To the audio output of the VCR

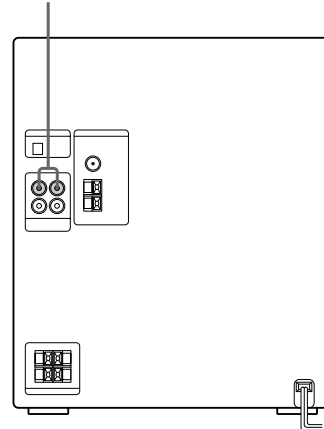

#### Note

If the sound is distorted when selecting "VIDEO", switch to "MD" (see previous "Notes").




## Connecting outdoor aerials

Connect the outdoor aerial to improve the reception.


### FM aerial

Connect the optional FM outdoor aerial. You can also use the TV aerial instead.

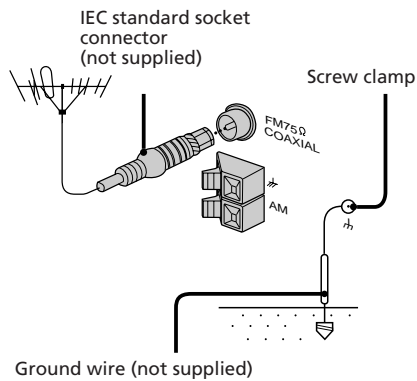

### AM aerial

Connect a 6- to 15- meter (20- to 50- feet) insulated wire to the AM aerial terminal. Leave the supplied AM loop aerial connected.

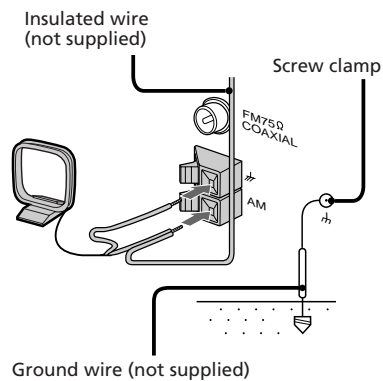


### Important

If you connect an outdoor aerial, ground from *h* terminal with the screw clamp. To prevent a gas explosion, do not connect the ground wire to a gas pipe.

## Préparatifs


### Etape 1: Raccordement de la chaîne

Effectuez les opérations **1** à **5** pour relier les différents éléments de la chaîne avec les cordons et les accessoires fournis.

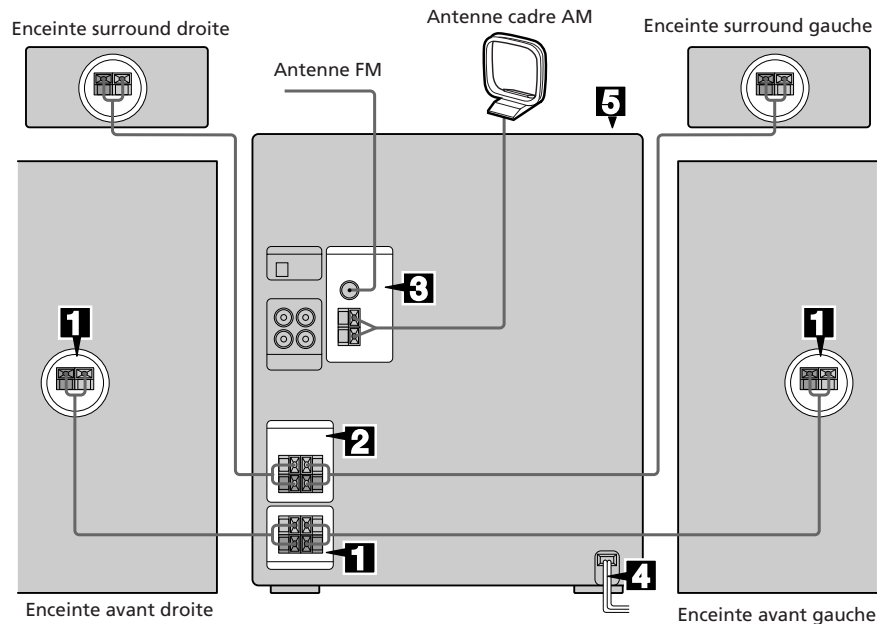

- 1** Raccordez les enceintes.  
Raccordez les cordons d'enceintes aux prises SPEAKER de la même couleur.  
Eloignez les cordons d'enceintes des antennes pour éviter que les antennes ne captent du bruit.

Insérez seulement la partie dénudée du cordon.

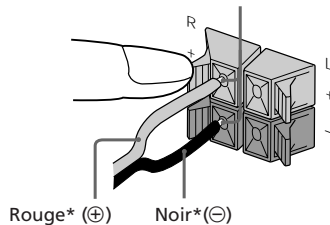


4

\* La couleur de vos cordons d'enceintes peut être différente. Reportez-vous au mode d'emploi des enceintes pour les détails.


- 2** Raccordez les enceintes surround.  
(MHC-RX80 seulement)  
Raccordez les cordons d'enceinte surround aux prises SPEAKER de même couleur.  
Insérez seulement la partie dénudée du cordon.

Insérez seulement la partie dénudée du cordon.

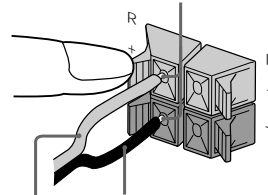

\* La couleur de vos cordons d'enceintes peut être différente. Reportez-vous au mode d'emploi des enceintes pour les détails.


- 3** Raccordez les antennes FM et AM. Préparez l'antenne cadre AM, puis raccordez-la.

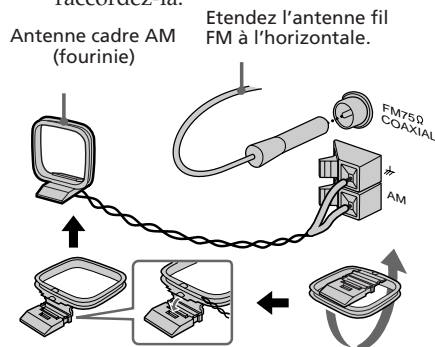

- 4** Raccordez le cordon d'alimentation secteur à une prise murale. Le mode de démonstration apparaît sur l'afficheur.

- 5** Désactivez le mode de démonstration en appuyant sur DISPLAY/DEMO quand la chaîne est éteinte. Le mode de démonstration est aussi désactivé quand vous réglez l'horloge.

### Mise en place des deux piles de format AA (R6) dans la télécommande

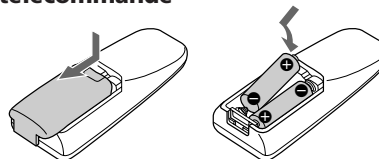

#### Conseil

Normalement, les piles devraient durer environ six mois. Quand vous ne pouvez plus faire fonctionner la chaîne avec la télécommande, remplacez les deux piles par des neuves.

#### Remarque

Si vous ne comptez pas utiliser la télécommande pendant un certain temps, enlevez les piles pour éviter tout dommage dû à une fuite de l'électrolyte.


#### Pour transporter la chaîne

Protégez le mécanisme du lecteur de CD de la façon suivante.

- 1** Appuyez de façon répétée sur FUNCTION jusqu'à ce que "CD" apparaisse sur l'afficheur.
- 2** Tout en tenant PLAY MODE enfoncée, appuyez sur POWER pour éteindre la chaîne.

## Etape 2: Réglage de l'heure

Vous devez mettre l'horloge à l'heure avant d'utiliser les fonctions de programmation.

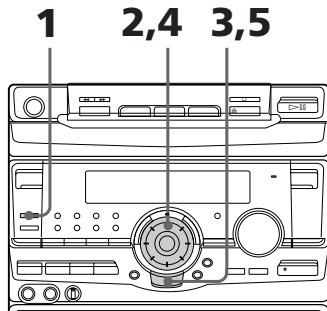

- 1 Appuyez sur CLOCK TIMER SET. Les chiffres des heures se mettent à clignoter.



- 2 Tournez la molette pour régler l'heure. L'horloge fonctionne selon un cycle de 12 heures.

- 3 Appuyez sur ENTER/NEXT. Les chiffres des minutes se mettent à clignoter.



- 4 Tournez la molette pour régler les minutes.

- 5 Appuyez sur ENTER/NEXT. L'horloge se met en marche.

### Conseils

- En cas d'erreur, recommencez à partir de l'étape 1.
- Le réglage de l'heure désactive automatiquement le mode de démonstration. Si vous voulez afficher le mode de démonstration, appuyez sur DISPLAY/DEMO quand la chaîne est hors tension.


### Remarque

Quand vous réglez l'heure, vous pouvez choisir n'importe quel affichage de l'égaliseur sauf le motif 3 de l'analyseur de spectre. (Voir "Pour changer l'affichage de l'égaliseur" à la page 30.)

## Etape 3: Préréglage des stations radio

Le modèle à 3 gammes permet de prérégler 40 stations, 20 FM, 10 PO et 10 GO.

Le modèle à 4 gammes permet de prérégler 45 stations, 20 FM, 10 PO, 10 GO et 5 UKV.

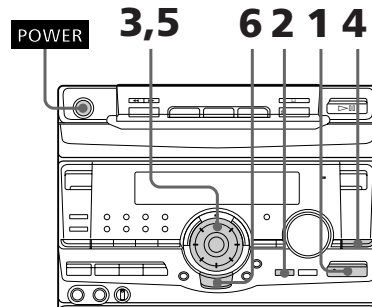

- 1 Appuyez de façon répétée sur TUNER/BAND jusqu'à ce que la gamme souhaitée apparaisse sur l'afficheur.

Les gammes de fréquences que vous pouvez recevoir dépendent du modèle que vous avez acheté.

Vérifiez les gammes que vous pouvez recevoir.

A chaque pression sur cette touche, la gamme change dans l'ordre suivant:

Modèle à 3 gammes

FM → MW → SW

↑

Modèle à 4 gammes

FM → MW → LW → UKV\*

↑

 
\*"STEREO PLUS" apparaît quand vous sélectionnez la gamme UKV.

- 2 Appuyez de façon répétée sur TUNING MODE pour sélectionner "AUTO".

- 
- 3** Tournez la molette.  
L'indication de la fréquence change et le balayage s'arrête quand une station est accordée. "TUNED" et "STEREO" (lors d'une émission en stéréo) apparaissent.



- 
- 4** Appuyez sur TUNER MEMORY.  
Un numéro de préréglage apparaît sur l'afficheur.  
Numéro de préréglage

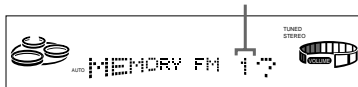

- 
- 5** Tournez la molette pour sélectionner le numéro de préréglage souhaité.
- 
- 6** Appuyez sur ENTER/NEXT.  
La station est mémorisée.
- 
- 7** Répétez les étapes 1 à 6 pour préréglager d'autres stations.
- 

### **Pour accorder une station de faible puissance**

Appuyez de façon répétée sur TUNING MODE pour sélectionner "MANUAL" à l'étape 2, puis tournez la molette pour accorder vous-même la station.

### **Pour changer de numéro de préréglage**

Recommencez à partir de l'étape 1.

### **Remarque**

Les stations préréglées restent mémorisées une demi-journée même si vous débranchez la chaîne ou si une coupure de courant a lieu.

## Raccordement d'appareils AV en option

Pour tirer le meilleur parti de votre chaîne, vous pouvez raccorder des appareils disponibles en option. Reportez-vous au mode d'emploi de chaque appareil pour le détail des opérations.


### Raccordement d'appareils audio

Selon l'appareil qui sera raccordé et la méthode de raccordement, choisissez une des deux liaisons suivantes.

#### Raccordement d'une platine MD pour l'enregistrement numérique

Vous pouvez enregistrer numériquement un CD sur une platine MD en utilisant un câble optique pour la liaison.


à la prise DIGITAL IN de la platine MD

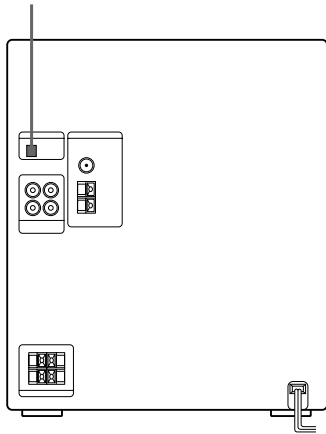

#### Raccordement d'une platine MD pour l'enregistrement analogique

Veillez à bien faire correspondre la couleur des fiches et des prises. Pour écouter le son fourni par la platine MD raccordée, appuyez de façon répétée sur FUNCTION jusqu'à ce que "MD" apparaisse.

à la sortie audio de la platine MD      à l'entrée audio de la platine MD

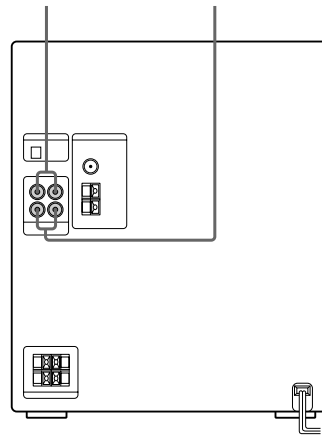

#### Remarques

- Vous devez raccorder les deux enceintes surround (gauche et droite) pour entendre le son (MHC-RX80 seulement).
- Si vous ne pouvez pas sélectionner "MD" même après avoir appuyé sur FUNCTION, appuyez simultanément sur POWER et FUNCTION quand la chaîne est éteinte. L'affichage "VIDEO" est remplacé par "MD". Pour revenir à l'affichage de "VIDEO", faites la même opération.


#### Conseil

Si vous raccordez une platine tourne-disque avec tête de lecture MM, raccordez-la à VIDEO/MD IN en utilisant un égaliseur EQ-2 optionnel pour tête de lecture MM et un cordon de liaison. Pour écouter le son, appuyez de façon répétée sur FUNCTION jusqu'à ce que "VIDEO" apparaisse.

## Raccordement d'un magnéscope

Veillez à faire correspondre la couleur des fiches et des prises. Pour écouter le son fourni par un magnéscope raccordé, appuyez de façon répétée sur FUNCTION jusqu'à ce que "VIDEO" apparaisse.

à la sortie audio du magnéscope

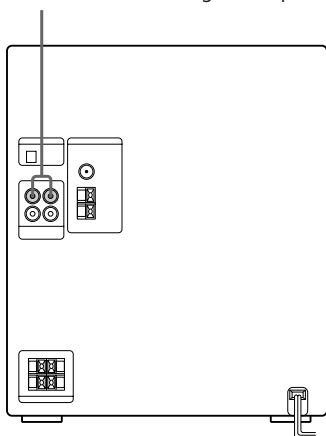

### Remarque


Si le son présente de la distorsion quand vous sélectionnez "VIDEO", réaffichez "MD" (voir les remarques précédentes).

## Raccordement d'antennes extérieures

Raccordez une antenne extérieure pour améliorer la réception.

### Antenne FM


Raccordez une antenne extérieure FM optionnelle. Vous pouvez utiliser l'antenne de télévision comme antenne extérieure.

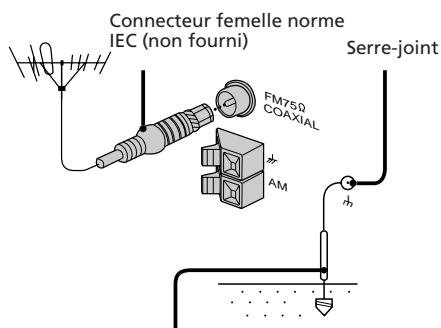

Fil de terre (non fourni)

### Antenne AM

Raccordez un fil isolé de 6 à 15 mètres (20 à 50 pieds) à la borne d'antenne AM. Laissez l'antenne cadre AM fournie raccordée.

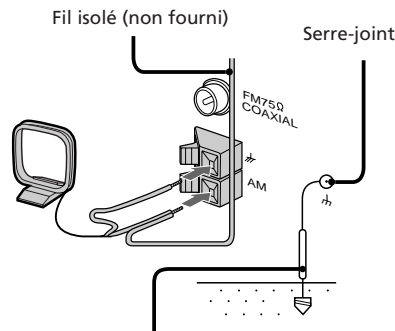

Fil de terre (non fourni)

### Important



Si vous raccordez une antenne extérieure, reliez la borne de terre à la terre avec un serre-joint. Afin d'éviter tout risque d'explosion, ne raccordez pas le fil de terre à un tuyau de gaz.

## Basic Operations

### Playing a CD


#### — Normal play

You can play up to three CDs in a row.

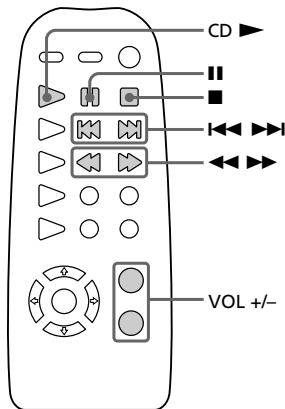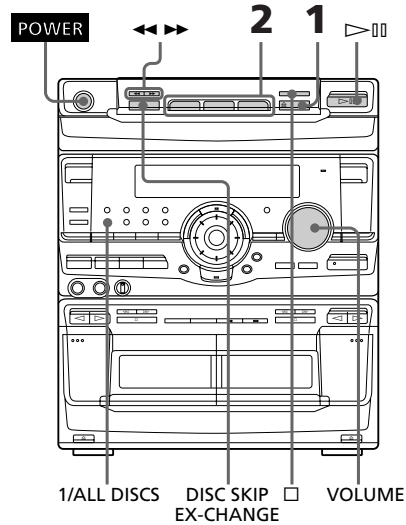


- 1 Press OPEN/CLOSE and place up to two CDs on the disc tray. If a disc is not placed properly it will not be recognized.

With the label side up. When you play a single CD, place it on the inner circle of the tray.

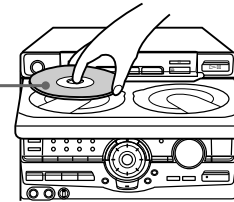

To insert a third disc, press DISC SKIP EX-CHANGE to rotate the disc tray.

- 2 Press one of the DISC 1~3 buttons. The disc tray closes and play starts. If you press (or on the remote) when the disc tray is closed, play starts from the CD loaded on the tray whose button is lit green.

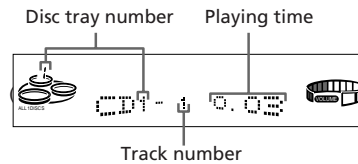



| To                                 | Do this   |
|------------------------------------|---|
| Stop play                          | Press <b>□</b> ( <b>■</b> on the remote).   |
| Pause                              | Press <b>▷   </b> ( <b>   </b> on the remote).<br>Press again to resume play.   |
| Select a track                     | During play or pause, turn the jog dial clockwise (to go forward) or counterclockwise (to go back) and release it when you reach the desired track. Or press <b>▶▶▶</b> (to go forward) or <b>◀◀◀</b> (to go back) on the remote. |
| Find a point in a track            | Press and hold down <b>▶▶</b> or <b>◀◀</b> (or <b>▶▶/◀◀</b> on the remote) during play and release it at the desired point.   |
| Select a CD in stop mode           | Press a DISC 1~3 button or DISC SKIP EX-CHANGE.   |
| Play only the CD you have selected | Press 1/ALL DISCS repeatedly until "1 DISC" appears.  |
| Play all CDs                       | Press 1/ALL DISCS repeatedly until "ALL DISCS" appears.   |
| Remove the CD                      | Press <b>⏏</b> OPEN/CLOSE.  |
| Exchange other CDs while playing   | Press DISC SKIP EX-CHANGE.  |
| Adjust the volume                  | Turn VOLUME (or press VOL +/- on the remote).   |


#### Tips

- Pressing **▷|||** when the power is off automatically turns the power on and starts CD playback if there is a CD in the tray (One Touch Play).
- You can switch from another source to the CD player and start playing a CD just by pressing **▷|||** or the DISC 1~3 buttons (Automatic Source Selection).
- If there is no CD in the player, "CD NO DISC" appears in the display.
- When a disc tray is selected or the CD placed on that tray is playing, the DISC 1~3 button for the respective tray lights green.

## Recording a CD


### — CD Synchro Recording

The CD SYNCHRO button lets you record from a CD to a tape easily. You can use TYPE I (normal) or TYPE II (CrO<sub>2</sub>) tapes. The recording level is adjusted automatically.

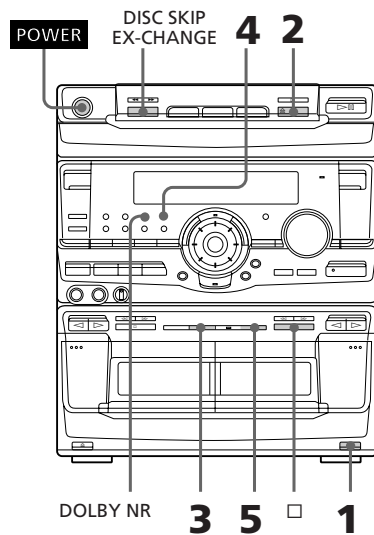

- 1 Press EJECT and insert a blank tape into deck B.

With the side you want to record facing forward

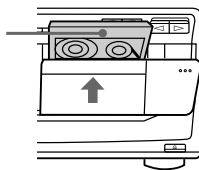

- 2 Press OPEN/CLOSE and place a CD.

Then press again to close the disc tray.

If the indicator for the tray you want to record is not lit green, press DISC SKIP EX-CHANGE repeatedly so that it lights green.

With the label side up. When you play a single CD, place it on the inner circle of the tray.



- 3 Press CD SYNCHRO. Deck B stands by for recording and the CD player stands by for playback. (for front side) lights up.
- 4 Press DIRECTION repeatedly to select to record on one side. Select (or RELAY) to record on both sides.
- 5 Press on deck B. Recording starts.

### To stop recording

Press on deck B or on the CD player.

### Tips

- If you want to record from the reverse side, press  $\triangleleft$  so that  $\triangleleft$  (for reverse side) lights up.
- When you record on both sides, be sure to start from the front side. If you start from the reverse side, recording stops at the end of the reverse side.
- When you want to reduce the hiss noise in low-level high-frequency signals, press DOLBY NR so that "DOLBY NR B" appears after pressing CD SYNCHRO.


### Note

You cannot listen to other sources while recording.

## Listening to the radio

### — Preset Tuning

Preset radio stations in the tuner's memory first (see "Step 3: Presetting radio stations").

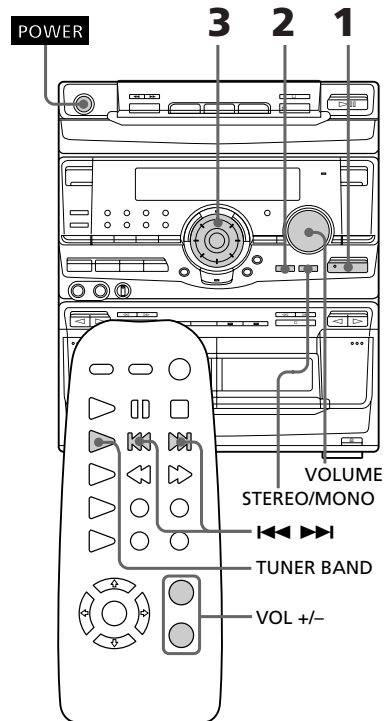

### Listening to the radio (continued)

**1** Press TUNER/BAND repeatedly until the band you want appears in the display.  
the bands you can receive vary depending on the model you purchased. Be sure to check which bands you can receive.

Every time you press this button, the band changes as follows:

3 band models:

FM → MW → LW



4 band model:

FM → MW → LW → UKV\*



\* "STEREO PLUS" is displayed when you select UKV.


 
**2** Press TUNING MODE repeatedly so that "PRESET" appears in the display.

MANUAL → AUTO → PRESET



**3** Turn the jog dial (or press ◀◀ or ▶▶ on the remote) to tune in the desired preset station.

Turn counter-clockwise (or press ◀◀ on the remote) for lower preset numbers. Turn clockwise (or press ▶▶ on the remote) for higher preset numbers.

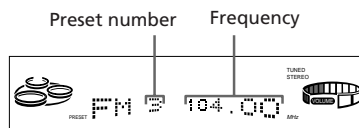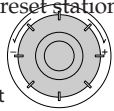

### To listen to non-preset radio stations

Press TUNING MODE repeatedly so that "MANUAL" appears in step 2, then tune in the station by turning the jog dial.


#### Tips

- Pressing TUNER/BAND when the power is off automatically turns the power on and tunes to the last received station (One Touch Play).
- You can switch from another source to the radio just by pressing TUNER/BAND (Automatic Source Selection).
- When an FM programme is noisy, press STEREO/MONO so that "MONO" appears in the display. There will be no stereo effect, but the reception will improve. Press the button again to restore the stereo effect.
- To improve broadcast reception, reorient the supplied aerials.

| To                 | Do this                                       |
|--------------------|---|
| Turn off the radio | Press POWER.                                  |
| Adjust the volume  | Turn VOLUME (or press VOL +/- on the remote). |

## Recording from the radio

You can record the radio programme on a tape by calling up a preset station. You can use TYPE I (normal) or TYPE II (CrO<sub>2</sub>) tapes. The recording level is automatically adjusted.

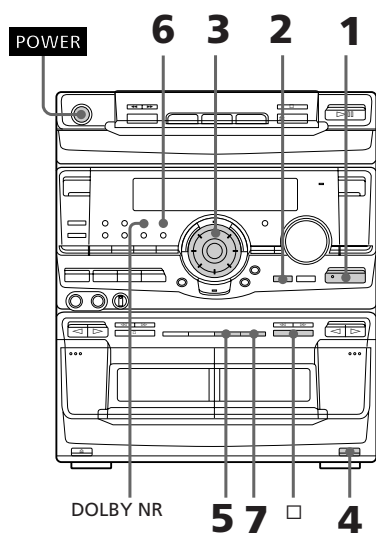


**1** Press TUNER/BAND to select the band you want.


**2** Press TUNING MODE so that "PRESET" appears in the display.

**3** Turn the jog dial to tune in a preset station.

 Turn counter-clockwise for lower preset numbers.

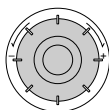


Turn clockwise for higher preset numbers.

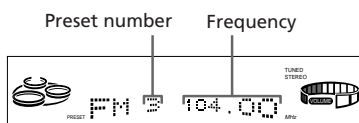

**4** Press EJECT and insert a blank tape into deck B.

With the side you want to record facing forward

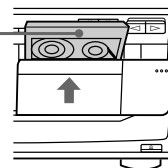

**5** Press . Deck B stands by for recording.

**6** Press DIRECTION repeatedly to select to record on one side. Select (or RELAY) to record on both sides.

**7** Press on deck B. Recording starts.

### To stop recording



Press on deck B.

### Tips

- If you want to record from the reverse side, press so that (for reverse side) lights up.
- When you record on both sides, be sure to start from the front side. If you start from the reverse side, recording stops at the end of the reverse side.
- To record non-preset stations, select "MANUAL" in step 2, then turn the jog dial to tune in the desired station.
- When you want to reduce the hiss noise in low-level high-frequency signals, press DOLBY NR so that "DOLBY NR B" appears after pressing .
- If noise is heard while recording from the radio, move the respective aerial to reduce the noise.


## Playing a tape

You can use any type of tape, TYPE I (normal), TYPE II (CrO<sub>2</sub>) or TYPE IV (metal), since the deck automatically detects the tape type. To select either deck A or B, press DECK A or DECK B on the remote.

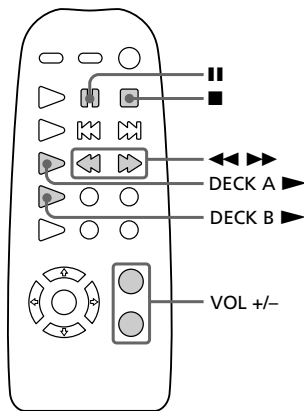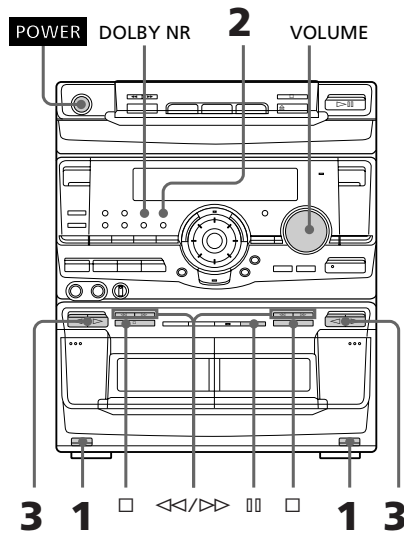

- 1 Press EJECT and insert a recorded tape in deck A or B.

With the side you want to play facing forward

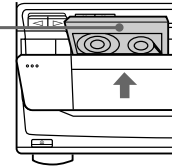

- 2 Press DIRECTION repeatedly to select to play one side. Select \* to play both sides. To play both decks in succession, select RELAY (relay play).\*\*

- 3 Press . Press to play the reverse side. The tape starts playing.

\* The deck stops automatically after repeating the sequence five times.

\*\* Relay play always follows the following sequence:

Deck A (front side), Deck A (reverse side), Deck B (front side), Deck B (reverse side).

| To                  | Do this   |
|---------------------|---|
| Stop play           | Press  (or  on the remote).   |
| Pause (Deck B only) | Press . Press again to resume play.                                     |
| Fast-forward        | Press  while playing the front side or  while playing the reverse side. |
| Rewind              | Press  while playing the front side or  while playing the reverse side. |
| Remove the cassette | Press  EJECT.   |
| Adjust the volume   | Turn VOLUME (or press VOL +/- on the remote).                           |


### Tips

- Pressing ▷ or ◁ when the power is off automatically turns the power on and starts tape playback if there is a tape in the deck (One Touch Play).
- You can switch from another source to the tape deck just by pressing ▷ or ◁ (Automatic Source Selection).
- When you want to reduce the hiss noise in low-level high-frequency signals, press DOLBY NR so that "DOLBY NR B" appears.
- When dubbing tapes originally recorded with Dolby NR B, the dubbed tape is automatically played with Dolby NR B.


## Recording from a tape

### — High-speed Dubbing

You can use TYPE I (normal) or TYPE II (CrO<sub>2</sub>) tapes. The recording level is automatically adjusted.

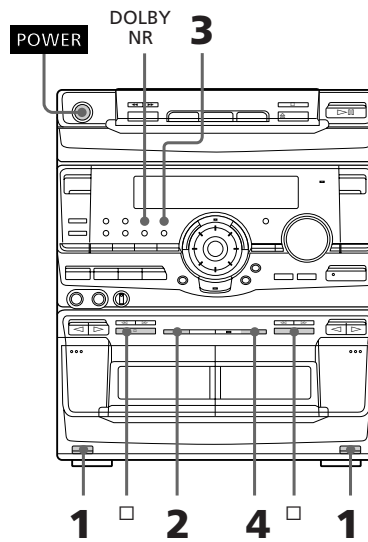

- 1** Press EJECT and insert a recorded tape in deck A and a blank tape in deck B.

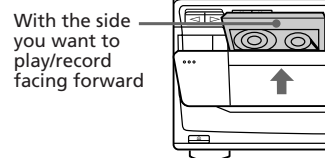

- 2** Press HIGH SPEED DUBBING. Deck B stands by for recording.

continued

### **Recording from a tape (continued)**

---

**3** Press DIRECTION repeatedly to select  $\rightleftarrows$  to record on one side. Select  $\leftrightarrow$  (or RELAY) to record on both sides.

---

**4** Press  $\square$ .  
Dubbing starts.

---

#### **To stop dubbing**

Press  $\square$  on deck A or B.

#### **Tips**


- When you dub on both sides, start recording from the front side. If you record from the reverse side, recording stops at the end of the reverse side.
- If you set DIRECTION to  $\leftrightarrow$  when the tapes you use have different lengths, the tape in each deck reverses independently. If you select RELAY, the tapes in both decks reverse together.
- You don't have to set DOLBY NR, since the tape in deck B is automatically recorded in the same state as the tape in deck A.




## The CD Player

### Using the CD display

You can check the remaining time of the current track or that of the CD.

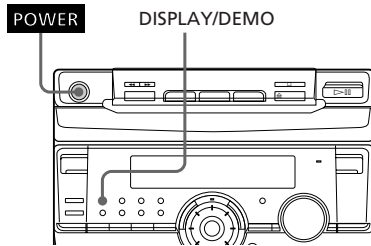

- ➔ Press DISPLAY/DEMO during playback.  
Each time you press the button during normal playback, the display changes as follows:

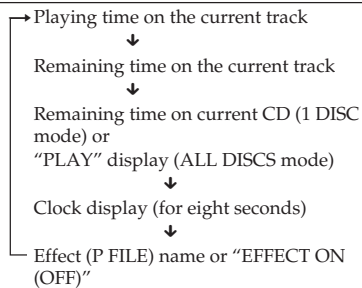

#### To check the total playing time and the number of tracks on a CD


Press DISPLAY/DEMO in the stop mode.

If you press DISPLAY/DEMO again, the clock display appears for eight seconds then the display returns to the previous indication.

### Playing the CD tracks repeatedly

#### — Repeat Play

This function lets you repeat a single CD or all CDs in normal play, Shuffle Play and Programme Play.

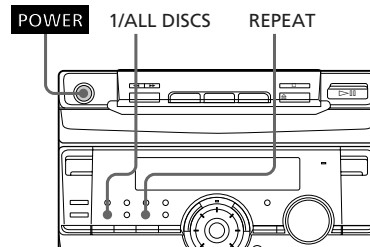

- ➔ Press REPEAT during playback until "REPEAT" appears in the display.  
Repeat Play starts. Do the following procedure to change the repeat mode.

| To repeat                        | Press   |
|----------------------------------|---|
| All the tracks on the current CD | 1/ALL DISCS repeatedly until "1 DISC" appears in the display.   |
| All the tracks on all CDs        | 1/ALL DISCS repeatedly until "ALL DISCS" appears in the display.                                      |
| Only one track*                  | REPEAT repeatedly until "REPEAT 1" appears in the display while playing the track you want to repeat. |

\* You can't repeat a single track during Shuffle Play and Programme Play.

#### To cancel Repeat Play


Press REPEAT so that "REPEAT" or "REPEAT 1" disappears from the display.

---

## Playing the CD tracks in random order

### — Shuffle Play

You can play all the tracks on one CD or all CDs in random order.

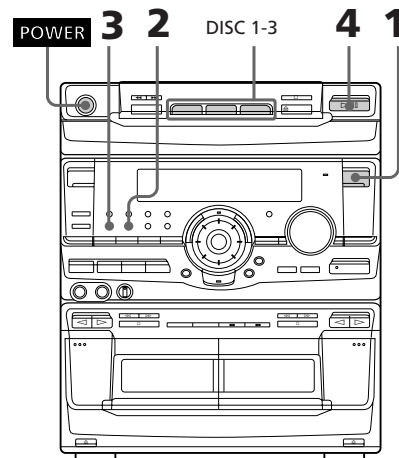

- 
- 1** Press FUNCTION repeatedly until "CD" appears in the display, then place a CD.
  - 2** Press PLAY MODE repeatedly until "SHUFFLE" appears in the display.
  - 3** Press 1/ALL DISCS to choose "1 DISC" or "ALL DISCS".  
"ALL DISCS" shuffles all the CDs in the player. "1 DISC" shuffles the CD whose DISC indicator is green.
  - 4** Press ▷◻◻.  
"◻" appears and then all the tracks play in random order.
- 

### To cancel Shuffle Play

Press PLAY MODE repeatedly until "SHUFFLE" or "PROGRAM" disappears from the display. The tracks continue playing in their original order.

### To select a desired CD

Press DISC 1-3.


### Tips

- You can start Shuffle Play during normal play by pressing PLAY MODE repeatedly to select "SHUFFLE".
- To skip a track, turn the jog dial clockwise (or press ►► on the remote).

## Programming the CD tracks

### — Programme Play

You can make a programme of up to 32 tracks from all the CDs in the order you want them to be played.

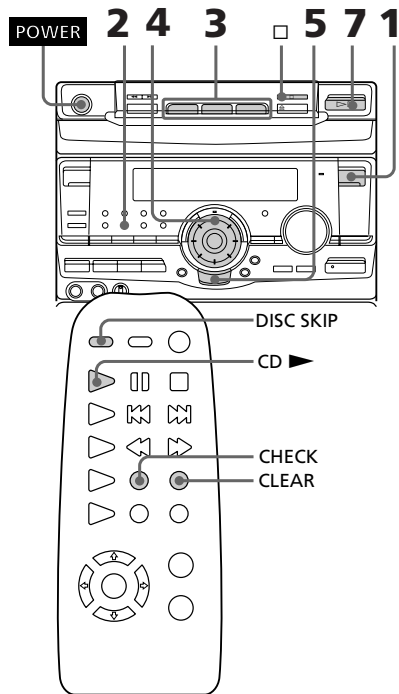


**1** Press FUNCTION repeatedly until "CD" appears in the display, then place a CD.

**2** Press PLAY MODE repeatedly until "PROGRAM" appears in the display.


**3** Press one of the DISC 1~3 buttons to select a CD.

**4** Turn the jog dial until the desired track appears in the display.

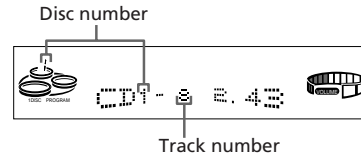

**5** Press ENTER/NEXT.

The track is programmed. "STEP" and the programmed playing order appear, followed by the total playing time.

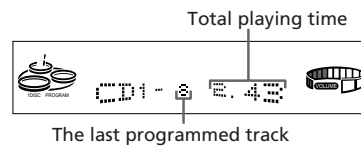

**6** To programme additional tracks, repeat steps 3 to 5. Skip step 3 to select tracks from the same disc.

**7** Press ▷◻◻. All the tracks play in the order you selected.

### To cancel Programme Play

Press PLAY MODE repeatedly until "PROGRAM" or "SHUFFLE" disappears from the display.

continued

### Programming the CD tracks (continued)

| To                           | Press  |
|------------------------------|--|
| Check the programme          | CHECK on the remote repeatedly. After the last track, "CHECK END" appears.   |
| Clear a track from the end   | CLEAR on the remote in stop mode.  |
| Clear a specific track       | CHECK on the remote repeatedly until the number of the track to be erased lights up, then press CLEAR.               |
| Add a track to the programme | 1 Select the disc tray with a DISC 1~3 button.<br>2 Select the track by turning the jog dial.<br>3 Press ENTER/NEXT. |
| Clear the entire programme   | □ once in stop mode or twice while playing.  |


#### Tips

- The programme you made remains in the CD player even after it has been played back. Press ▷||| to play the same programme again.
- If "--:--" appears instead of the total playing time during programming, this means:
  - you have programmed a track number which exceeds 20
  - the total playing time has exceeded 100 minutes.

## Playing CDs without interruption

### — Non Stop Play

You can play CDs without pausing between tracks.

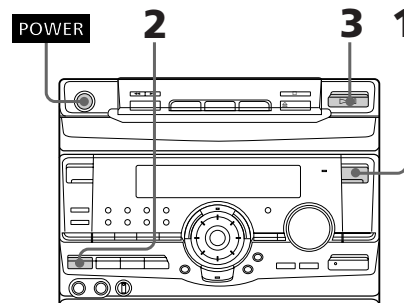

**1** Press FUNCTION repeatedly until "CD" appears in the display, then place a CD.

**2** Press NON-STOP so that the indicator on the button lights up.

**3** Press ▷|||.


### To cancel Non Stop Play

Press NON-STOP so that the indicator on the button goes out.

## The Tape Deck

### Recording on a tape manually

You can record from CD, tape, or radio as you like. For example, you can record just the songs you want or record from the middle of the tape. The recording level is adjusted automatically.

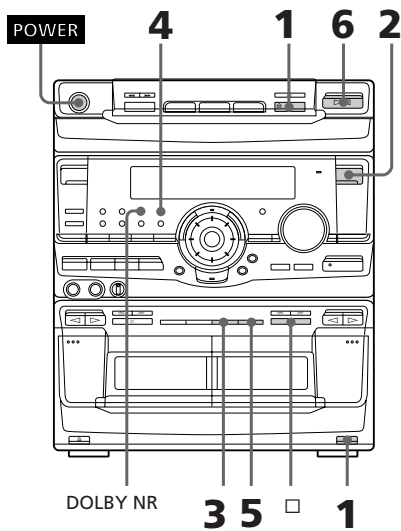

- 1** Insert a blank tape into deck B.
- 2** Press FUNCTION repeatedly until the source you want to record (e.g., CD) appears.
- 3** Press ●. Deck B stands by for recording. ▷ (for front side) lights up.
- 4** Press DIRECTION repeatedly to select ⇄ to record on one side. Select ⇄ (or RELAY) to record on both sides.

- 5** Press ▢ on deck B. Recording starts.

- 6** Start playing the source to be recorded.

| To              | Press            |
|-----------------|------------------|
| Stop recording  | □ on the deck B  |
| Pause recording | ▢▢ on the deck B |



#### Tips

- If you want to record from the reverse side, press ◁ so that ◁ (for reverse side) lights up.
- When you want to reduce the hiss noise in low-level high-frequency signals, press DOLBY NR so that "DOLBY NR B" appears after pressing ●.
- To skip tracks while recording from a tape, press ▷▷ or ◁◁ on deck A. Deck B stands by for recording, and you can skip tracks. To resume dubbing, press ▢▢ on deck B.

## Recording a CD by specifying track order

### — Programme Edit

You can record tracks from all the CDs in the order you want. When programming, make sure the playing times for each side do not exceed the length of one side of the tape.

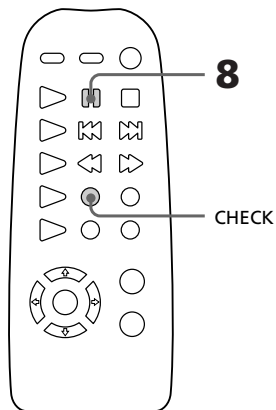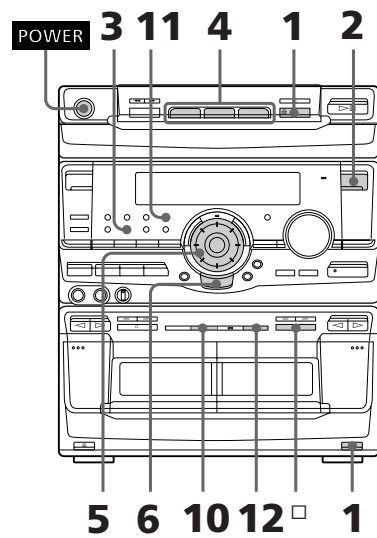

- 1 Place a CD and insert a blank tape into deck B.
- 2 Press FUNCTION repeatedly until "CD" appears in the display.
- 3 Press PLAY MODE repeatedly until "PROGRAM" appears in the display.

- 4 Press one of the DISC 1-3 buttons to select a CD.

- 5 Turn the jog dial until the desired track appears in the display.
- 
- The diagram shows a display with icons for a CD and a cassette. Labels indicate: "Disc number" pointing to the CD icon, "Total playing time (including selected track)" pointing to the time display, and "Track number" pointing to the track number display.

- 6 Press ENTER/NEXT. The track is programmed. "STEP" and the programmed playing order appear, followed by the total playing time.



- 7 To programme additional tracks to be recorded on side A, repeat steps 4 to 6. Skip step 4 to select tracks from the same disc.

---

**8** Press **⏸** on the remote to insert a pause at the end of side A.  
“P” appears in the display and the total playing time resets to “0.00” in the display.

---

**9** Repeat steps 5 and 6 for tracks from the same disc or steps 4 to 6 for tracks from another disc to programme the remaining tracks to be recorded on side B.

---

**10** Press **CD SYNCHRO**.  
Deck B stands by for recording and the CD player stands by for playback. **▷** (for front side) lights up.

---

**11** Press **DIRECTION** repeatedly to select **⇌** to record on one side.  
Select **↔** (or **RELAY**) to record on both sides.

---

**12** Press **⏸** on deck B.  
Recording starts.

---

#### **To stop recording**

Press **□** on the deck B or on the CD player.

#### **To check the order**

Press **CHECK** on the remote repeatedly. After the last track, “CHECK END” appears.

#### **To cancel Programme Edit**

Press **PLAY MODE** repeatedly until “PROGRAM” or “SHUFFLE” disappears from the display.

## **Selecting tape length automatically**

### **— Tape Select Edit**

You can check the most suitable tape length for recording a CD. Note that you cannot use Tape Select Edit for discs containing more than 20 tracks.

---

➔ After inserting a CD, press **EDIT** once, so that “EDIT” flashes.

The required tape length for the currently selected CD appears, followed by the total playing time and tracks for side A and side B.

---

#### **Note**


You cannot use this function after programming. In order to use this function, you must first erase the programme (see “To clear the entire program” on page 22).

## DJ Effects

### Looping part of a CD

#### — Loop

With the loop function, you can repeat part of a CD during playback. This lets you create original recordings.

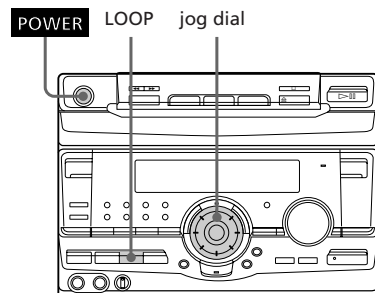

→ Press and hold LOOP during playback at the point you want to start the Loop function, and release to resume normal play.


#### To adjust the loop length

Turn the jog dial while holding LOOP (or press MUSIC MENU ◀ or ▶ while holding LOOP on the remote) to select different loop lengths (LOOP 1~20).

### Flashing part of a CD

#### — Flash

With the flash function, you can “flash” the CD sound during playback. This lets you create original recordings.

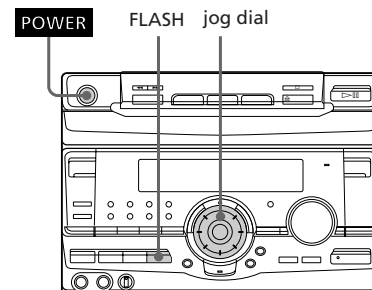

→ Press and hold FLASH during playback at the point you want to start the Flash function, and release to resume normal play.

#### To adjust the flash length

Turn the jog dial while holding FLASH (or press MUSIC MENU ◀ or ▶ while holding FLASH on the remote) to select different flash lengths (FLASH 1~20).

#### To use LOOP and FLASH together

Press and hold both LOOP and FLASH at the same time.

#### Notes

- The loop and flash length cannot be adjusted during this operation. Adjust the loop and flash lengths independently beforehand if necessary.
- To record the flash effect, use the analog (VIDEO/MD OUT) connections or this unit's tape deck.




---

## Waving the equalizer

### — Wave

With the Wave function, you can fluctuate the graphic equalizer automatically. This effect can be used with any source, but it cannot be recorded.

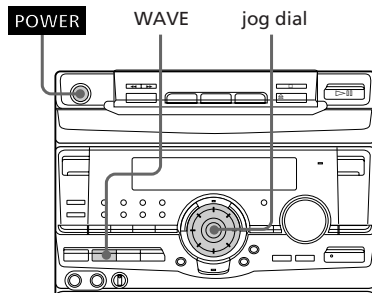

- 
- ➔ Press and hold WAVE to start the Wave function, and release to resume normal listening.
- 


### To adjust the wave length

Turn the jog dial while holding WAVE to select a different wave length (WAVE1~10).

## Sound Adjustment

### Adjusting the sound

You can reinforce the bass, create a more powerful sound, and listen with headphones.

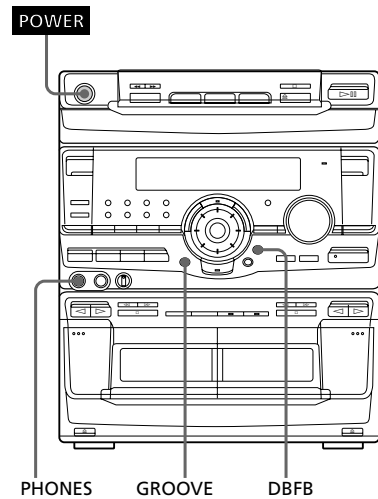

#### To reinforce bass (DBFB)

Press DBFB\*.

Every time you press the button, the display changes as follows:

DBFB ■■■ → DBFB ■■■■■ → display off

“DBFB ■■■■■” is more effective than “DBFB ■■■”.

\* DBFB = Dynamic Bass Feedback

#### For a powerful sound (GROOVE)

Press GROOVE. The volume switches to power mode, DBFB is automatically set to full strength, the equalizer curve changes, and the “GROOVE” button lights up. Press GROOVE again to return to the previous volume.

#### Notes

- With some songs, the music will sound distorted when you use the DBFB system with the graphic equalizer if the bass is too strong. Adjust the bass slowly while listening to music so that you can monitor the effect of the adjustment.
- Cancelling GROOVE sets DBFB to “DBFB ■■■” and flattens the equalizer curve. To cancel the DBFB level, press DBFB until the indication disappears. Adjust the equalization to obtain the effect you desire.


#### To listen through the headphones

Connect the headphones to PHONES jack. No sound will come from the speakers.

## Selecting the audio emphasis

The audio emphasis menu lets you select the sound characteristic according to the sound you are listening to.

The personal file function (see "Making a personal audio emphasis file") lets you store your own effects.

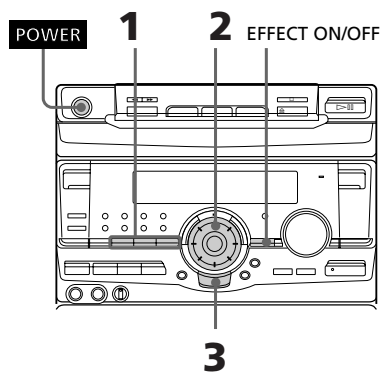

- 1 Press MUSIC, MOVIE, or GAME (or MUSIC MENU  $\uparrow/\downarrow$  on the remote repeatedly) to select a menu.

See the chart "Music menu options" below. The last effect chosen from that menu appears in the display.

- 2 Use the jog dial (or press MUSIC MENU  $\leftarrow/\rightarrow$  on the remote repeatedly) to select the preset you desire. The preset name appears in the display.

- 3 Press ENTER/NEXT. You don't need to press ENTER/NEXT when you use the remote.

### To cancel the effect

Press EFFECT ON/OFF repeatedly (or MUSIC MENU ON/OFF on the remote) so that "EFFECT OFF" appears in the display.

### Music menu options

"SUR ■■■■■" appears if you select an effect with surround effects.


| MENU button | Effect    | For  |
|-------------|-----------|--|
| MUSIC       | ROCK      | Standard music sources                       |
|             | POP       |  |
|             | JAZZ      |  |
|             | DANCE     |  |
| MOVIE       | SOUL      | Soundtracks and special listening situations |
|             | ACTION    |  |
|             | SF        |  |
|             | ROMANCE   |  |
|             | DRAMA     |  |
| GAME        | SPORTS    | Video games                                  |
|             | SHOOTING  |  |
|             | RACING    |  |
|             | RPG       |  |
|             | BATTLE    |  |
|             | ADVENTURE |  |

continued

### Selecting the audio emphasis (continued)

#### To change the equalizer display

Each time you press DISPLAY/DEMO, the equalizer display changes to show one of the four displays below.

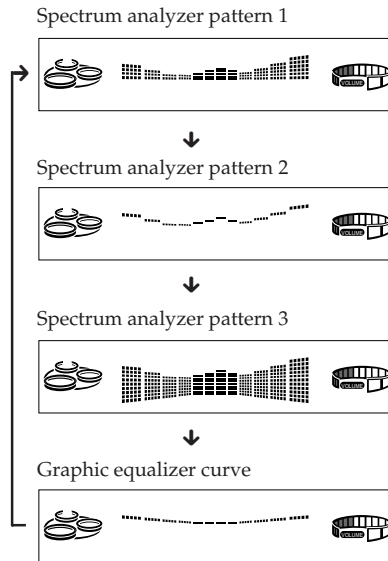


## Adjusting the audio emphasis

You can adjust the audio emphasis using the graphic equalizer and surround effect.

### Adjusting the graphic equalizer


You can adjust the sound by raising or lowering the levels of specific frequency ranges.

Before operation, first select the audio emphasis you want for your basic sound.

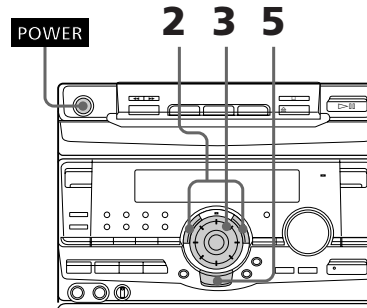


**1** Select the audio emphasis you want for your basic sound (see "Selecting the audio emphasis").

 **2** Press HIGH FREQUENCY or LOW FREQUENCY repeatedly to select a frequency band.

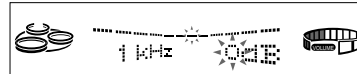

 - 
- 3** Turn the jog dial to adjust level.

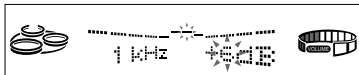

- 
- 4** Repeat steps 2 and 3.


- 
- 5** Press ENTER/NEXT when finished.
- 

**Note**

If you choose another menu audio emphasis (other than "EFFECT OFF") the adjusted sound effect is lost. To retain the adjusted sound effect for future use, store it in a personal file. (See "Making a personal audio emphasis file".)

## Activating the surround effect

You can enjoy the surround effect.

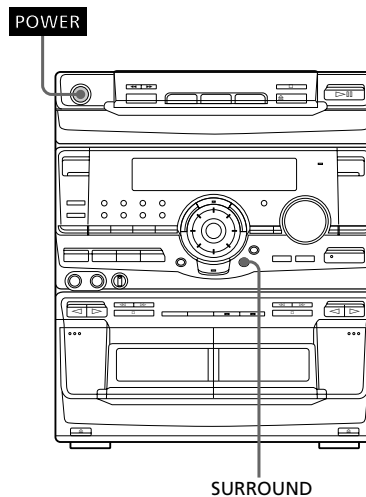

- 
- ➔ Press SURROUND repeatedly so that "SUR ■■■■■" appears in the display.
- 

**Note**

When you choose other sound effects, the surround effects will be canceled. If you want to memorize the effect, store it into a personal file (see "Making a personal audio emphasis file").

---

## Making a personal audio emphasis file


### — Personal file

You can create a personal file of audio patterns (surround effect and graphic equalizer) and store them in the memory of the unit. Later call up an audio pattern to play a favorite tape, CD, or radio programme. Create up to five audio files.

Before operation, first select the audio emphasis you want for your basic sound.


### To call up the personal file

- 1 Press P FILE (or MUSIC MENU  $\blacktriangle/\blacktriangledown$  on the remote repeatedly) to display the last selected personal file.
- 2 Use the jog dial (or press MUSIC MENU  $\blacktriangle/\blacktriangledown$  on the remote repeatedly) to select the personal file you desire.
- 3 Press ENTER/NEXT.  
You don't need to press ENTER/NEXT when you use the remote.

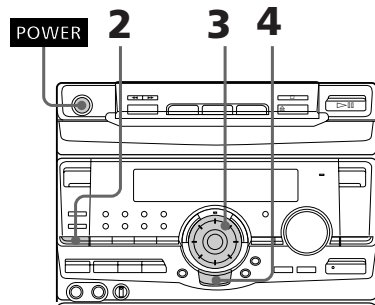

- 
- 1 Obtain the sound effect you want by using the graphic equalizer and surround effect.

 - 
- 2 Press P FILE MEMORY.  
The personal file number appears in the display.

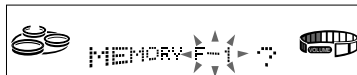


- 
- 3 Use the jog dial to select the file number (P FILE) where you want to store the sound effect.


- 
- 4 Press ENTER/NEXT.  
The adjusted sound effects are stored under the selected file number. The settings previously stored at this memory location are erased and replaced by the new settings.

## Other Features


### Sing along: Karaoke

You can sing along with any stereo CD or tape by turning down the singer's voice. You need to connect an optional microphone.

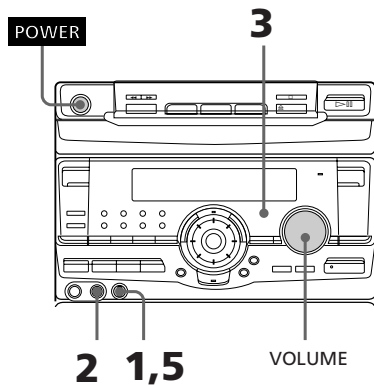


- 1 Turn MIC LEVEL to MIN to turn down the microphone control level.
- 2 Connect an optional microphone to MIX MIC.
- 3 Press KARAOKE PON/MPX repeatedly to obtain the karaoke effect you desire.  
Every time you press the button, the display changes as follows:  
KARAOKE PON → MPX R → MPX L  
↑ EFFECT OFF ↓  
The  indicator appears in the display when a karaoke mode is activated.  
To sing karaoke with decreasing the vocal level of a CD, select KARAOKE PON. To sing karaoke of multiplex CD or tape, select MPX R or MPX L.
- 4 Start playing the music and adjust the volume.
- 5 Adjust the microphone volume by turning MIC LEVEL.

#### When you are done

Turn MIC LEVEL to MIN and disconnect the microphone from MIX MIC, then press KARAOKE PON/MPX repeatedly so that  disappears.

### Mixing and recording sounds

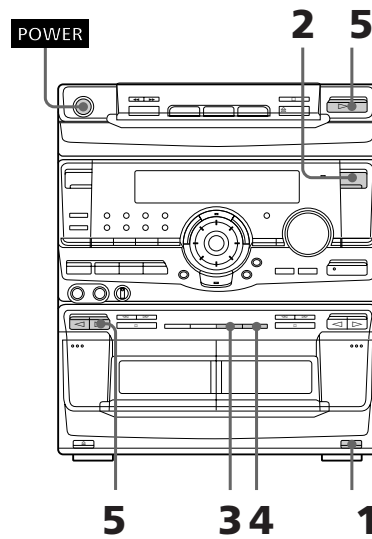

- 1 Do the above steps 1 to 5. Then, insert a tape in deck B.
- 2 Press FUNCTION repeatedly to select the source you desire and set it to pause mode.

continued

### **Singing along: Karaoke (continued)**

- 3** Press ●.
- 4** Press □□.
- 5** Press ▷ to start playing the CD player (or tape deck A).  
Playback starts. Start singing along with the music.

#### **To stop recording**

Press ■ on deck B and the CD player.

#### **Tips**

- If acoustic feedback (howling) occurs, move the microphone away from the speakers or change the direction of the microphone.
- If you want to record your voice through the microphone only, you can do so by selecting the CD function and not playing a CD.


#### **Notes**

- If you press EFFECT ON/OFF or recall a sound effect, the karaoke mode is cancelled.
- The instrumental sound may be reduced as well as the singer's voice when the sound is recorded in monaural.
- The singer's voice may not be reduced when:
  - only a few instruments are playing
  - a duet is being played
  - the source has strong echoes or chorus
  - the singer's voice deviates from the centre.
  - the voice on the source is singing in high soprano or tenor.

## **Falling asleep to music**

### **— Sleep Timer**

You can let the system turn off at the preset time, so you can sleep to the music. You can preset the time to be turned off by 10 minutes.

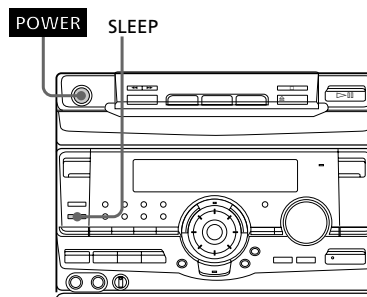

➔ Press SLEEP.

Every time you press the button, the minute display (the turn-off time) changes as follows:

AUTO → 90min → 80min → 70min  
→ ... → 10min → OFF → AUTO ...

#### **When you choose auto**

The power turns off when the current CD or tape finishes playback (for up to 100 minutes).

#### **To check the remaining time**

Press SLEEP once.

#### **To change the time to turn off**

Select the time you want by pressing SLEEP.

#### **To cancel the Sleep Timer function**


Press SLEEP repeatedly until "OFF" appears.



## Waking up to music

### — *Wake-up Timer*


You can wake up to music at a preset time every day. Make sure you have set the clock (see "Step 2: Setting the time").

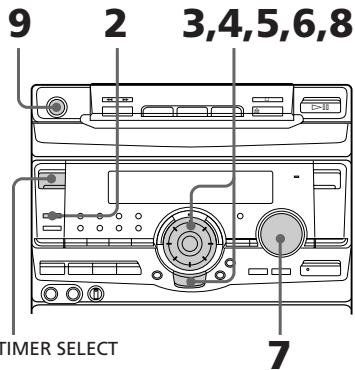

- 1 Prepare the music source you want to play.
  - CD: Insert a CD. To start from a specific track, make a programme (see "Programming the CD tracks").
  - Tape: Insert a tape with the side you want to play facing forward.
  - Radio: Tune in the preset station you want (see "Step 3: Presetting radio stations").

- 2 Press CLOCK TIMER SET.  
"SET (DAILY 1)" appears.

 - 3 Turn jog dial to select DAILY 1 or 2, then press ENTER/NEXT.  
"ON" appears and the hour digits flash in the display.

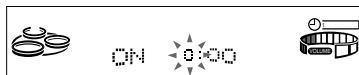

- 4 Set the time to start playback.  
Turn jog dial to set the hour, then press ENTER/NEXT.  
The minute indication starts flashing.



Turn jog dial to set the minute, then press ENTER/NEXT.  
The hour indication flashes again.

- 5 Set the time to stop playback following the above procedure.

- 6 Turn jog dial until the music source you want appears.  
The indications change as follows:  
TUNER → CD PLAY → TAPE PLAY

- 7 Adjust the volume.

- 8 Press ENTER/NEXT.  
The start time, followed by the stop time and the music source, appears, then the original display appears.

- 9 Turn off the power.

continued

### **Waking up to music (continued)**

#### **To check the setting**

Press **TIMER SELECT** and turn the jog dial to select the respective mode (**DAILY 1** or **DAILY 2**), then press **ENTER/NEXT**. To change the setting, start over from step 1.

#### **To cancel the timer operation**

Press **TIMER SELECT** and turn the jog dial to select **"OFF"**, then press **ENTER/NEXT**.

#### **Tip**

The power turns on 15 seconds before the preset time.


#### **Note**

When setting the wake-up timer, set the equalizer display to anything other than Spectrum analyzer pattern 3. (See "To change the equalizer display" on page 30.)

---


## **Timer-recording radio programmes**

To timer-record, you must preset the radio station (see "Step 3: Presetting radio stations") and set the clock (see "Step 2: Setting the time") beforehand.

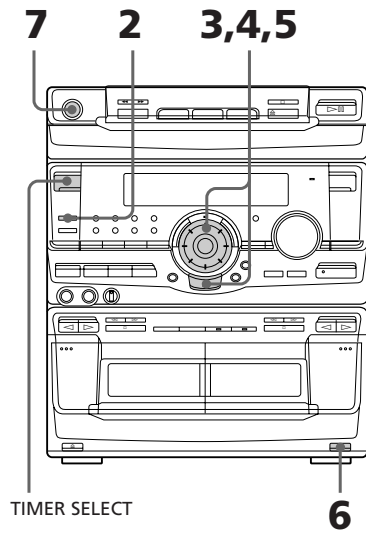


- 
- 1** Tune in the preset radio station (see "Listening to the radio").
  - 2** Press **CLOCK TIMER SET**.  
"SET (DAILY 1)" appears.

 - 
- 3** Turn jog dial to select REC, then press ENTER/NEXT.  
“ON” appears and the hour digits flash in the display.

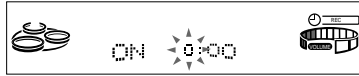

 - 
- 4** Set the time to start recording.  
Turn jog dial to set the hour, then press ENTER/NEXT.  
The minute indication starts flashing.

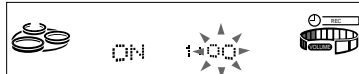

Turn jog dial to set the minute, then press ENTER/NEXT.  
The hour indication flashes again.

- 
- 5** Set the time to stop recording following the above procedure.  
The start time appears, followed by the stop time, the recording source and the radio station, then the original display appears.

- 
- 6** Insert a recordable tape.

- 
- 7** Turn off the power.  
When the recording starts, the volume level is set to the minimum.
- 

#### To check the setting

Press TIMER SELECT and turn the jog dial to select “REC”, then press ENTER/NEXT. To change the setting, start over from step 1.

#### To cancel the timer operation

Press TIMER SELECT and turn the jog dial to select “OFF”, then press ENTER/NEXT.

#### Notes

- When setting the timer-recording, set the equalizer display to anything other than Spectrum analyzer pattern 3. (See “To change the equalizer display” on page 30.)
- If the power is on at the preset time, the recording will not be made.

## Additional Information

### Precautions

#### On operating voltage

Before operating the system, check that the operating voltage of your system is identical with the voltage of your local power supply.

#### On safety

- The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.
- Unplug the system from the wall outlet (mains) if it is not to be used for an extended period of time. To disconnect the cord (mains lead), pull it out by the plug. Never pull the cord itself.
- Should any solid object or liquid fall into the component, unplug the stereo system and have the component checked by qualified personnel before operating it any further.
- The AC power cord must be changed only at the qualified service shop.

#### On placement

- Place the stereo system in a location with adequate ventilation to prevent heat build-up in the stereo system.
- Do not place the unit in an inclined position.
- Do not place the unit in locations where it is;
  - Extremely hot or cold
  - Dusty or dirty
  - Very humid
  - Vibrating
  - Subject to direct sunlight

#### On operation

- If the stereo system is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens inside the CD player. Should this occur, the system will not operate properly. Remove the CD and leave the system turned on for about an hour until the moisture evaporates.
- When you move the system, take out any discs.

If you have any questions or problems concerning your stereo system, please consult your nearest Sony dealer.

#### Notes on CDs

 
- Before playing, clean the CD with a cleaning cloth. Wipe the CD from the centre out.
- Do not use solvents such as benzene, thinner, commercially available cleaners or anti-static spray intended for vinyl LPs.
- Do not expose the CD to direct sunlight or heat sources such as hot air ducts, nor leave it in a car parked in direct sunlight.

#### Cleaning the cabinet


Use a soft cloth slightly moistened with mild detergent solution.

#### To save a tape permanently

To prevent a tape from being accidentally recorded over, break off the cassette tab from side A or B as illustrated. If you later want to reuse the tape for recording, cover the broken tab with adhesive tape.

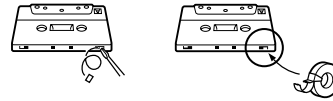

 When you are using a TYPE II (CrO<sub>2</sub>) or TYPE IV (metal) cassette, be careful not to cover the detector slots which allow the tape player to automatically detect the type of tape.

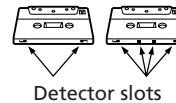

### **Before placing a cassette in the tape deck**

Take up any slack in the tape. Otherwise the tape may get entangled in the parts of the tape deck and become damaged.

### **When using a tape longer than 90 minutes**

The tape is very elastic. Do not change the tape operations such as play, stop, and fast-winding etc. frequently. The tape may get entangled in the tape deck.

### **Cleaning the tape heads**

Clean the tape heads after every 10 hours of use. When the tape heads become dirty

- the sound is distorted
- there is a decrease in sound level
- the sound drops out
- the tape does not erase completely
- the tape does not record

Make sure to clean the tape heads before you start an important recording or after playing an old tape. Use separately sold dry-type or wet-type cleaning cassette. For details, refer to the instructions of the cleaning cassette.

### **Demagnetizing the tape heads**

Demagnetize the tape heads and the metal parts that have contact with the tape every 20 to 30 hours of use with a separately sold demagnetizing cassette. For details, refer to the instructions of the demagnetizing cassette.

---

## **Troubleshooting**

If you run into any problem using this stereo system, use the following check list.

First, check that the power cord is connected firmly and the speakers are connected correctly and firmly.

Should any problem persist, consult your nearest Sony dealer.

### **General**

---

#### **The display starts flashing as soon as you plug in the power cord even though you haven't turned on the power (demonstration mode).**

- Press DISPLAY/DEMO when the power is turned off.

The demonstration mode appears automatically the first time you plug in the power cord. If there is a power outage lasting longer than half a day, redo the following:

- Clock setting (see "Step 2: Setting the time")
- Preset stations (see "Step 3: Presetting radio stations")
- Timer settings (see "Waking up to music" and "Timer recording radio programmes").

---

#### **"0:00" flashes in the display.**

- A power interruption occurred. Set the clock and timer settings again.

---

#### **There is no sound.**

- Rotate VOLUME clockwise.
- The headphones are connected.
- Insert only the stripped portion of the speaker cord into the SPEAKER jack. Inserting the vinyl portion of the speaker cord will obstruct the speaker connections.

continued

## **Troubleshooting (continued)**

---

### **There is severe hum or noise.**

- A TV or VCR is placed too close to the stereo system. Move the stereo system away from the TV or VCR.

---

### **The sound from the connected source is distorted.**

- If "VIDEO" appears in the display when you press FUNCTION, switch the display to "MD" (see "Notes: Connecting a VCR").

---

### **The timer does not function.**

- Set the clock correctly.

---

### **DAILY1, DAILY 2, and REC do not appear when you press the TIMER SELECT button.**

- Set the timer correctly.
- Set the clock.

---

### **The remote does not function.**

- There is an obstacle between the remote and the system.
- The remote is not pointing in the direction of the system's sensor.
- The batteries have run down. Replace the batteries.

---

### **There is acoustic feedback.**

- Decrease the volume level.
- Move the microphone away from the speakers or change the direction of the microphone.

---

### **The color irregularity on a TV screen persists.**

- Place the speakers farther away from the TV set.
- 

## **Speakers**

---

### **Sound comes from one channel or unbalanced left and right volume.**

- Check the speaker connection and speaker placement.

---

### **There is no sound from the surround speakers (MHC-RX80 only).**

- Press SURROUND to turn on the surround effect.
- 

## **CD Player**

---

### **The CD tray does not close.**

- The CD is not placed properly.

---

### **The CD will not play.**

- The CD is not lying flat in the disc tray.
- The CD is dirty.
- The CD is inserted label side down.
- Moisture condensation has built up. Remove the CD and leave the system turned on for about an hour until the moisture evaporates.

---

### **Play does not start from the first track.**

- The player is in programme or shuffle mode. Press PLAY MODE repeatedly until "PROGRAM" or "SHUFFLE" disappear.

---

### **"OVER" is displayed.**

- You have reached the end of the CD. Press and hold ◀◀ to return.
-

## Tape Deck

---

### The tape does not record.

- No tape in the cassette holder.
- The tab has been removed from the cassette (see "To save a tape permanently" on page 38).
- The tape has reeled to the end.

### The tape does not record nor play or there is a decrease in sound level.

- The heads are dirty. Clean them (see "Cleaning the tape heads" on page 39).
- The record/playback heads are magnetized. Demagnetize them (see "Demagnetizing the tape heads" on page 39).

### The tape does not erase completely.

- The record/playback heads are magnetized. Demagnetize them (see "Demagnetizing the tape heads" on page 39).

### There is excessive wow or flutter, or the sound drops out.

- The capstans or pinch rollers are dirty. Clean them (see "Cleaning the tape heads" on page 39).

### Noise increases or the high frequencies are erased.

- The record/playback heads are magnetized. Demagnetize them (see "Demagnetizing the tape heads" on page 39).
- 

## Tuner

---

### Severe hum or noise ("TUNED" or "STEREO" flashes in the display.

- Adjust the aerial.
- The signal strength is too weak. Connect the external aerial.

### A stereo FM programme cannot be received in stereo.

- Press STEREO/MONO so that "STEREO" appears.
- 

### If other troubles not described above occur, reset the system as follows:

- 1 Unplug the power cord.
- 2 Plug the power cord back in.
- 3 Press SPECTRUM ANALYZER, ENTER/NEXT, and DISC 1 at the same time.

## Specifications

### Amplifier section

|                             |  |
|-----------------------------|--|
| DIN power output            | 40 + 40 watts<br>(6 ohms, at 1kHz, DIN)  |
| Continuous RMS power output | 55 + 55 watts<br>(6 ohms at 1 kHz,<br>10% THD)   |
| Music power output          | 95 + 95 watts<br>(6 ohms at 1 kHz, 10%<br>THD)   |
| Inputs                      | VIDEO/MD IN (phono<br>jacks): voltage 250 mV,<br>impedance 47 kilohms<br>MIX MIC (phone jack):<br>sensitivity 1 mV,<br>impedance 10 kilohms  |
| Outputs                     | VIDEO/MD OUT (phono<br>jacks): voltage 250 mV<br>impedance 1 kilohms<br>PHONES (stereo phone<br>jack): accepts headphones<br>of 8 ohms or more.<br>SPEAKER: accepts<br>impedance of 8 to 16<br>ohms.<br>SURROUND SPEAKER<br>(MHC-RX80 only):<br>accepts impedance of 16<br>ohms. |

### CD player section

|   |   |
|---|---|
| System  | Compact disc and digital<br>audio system  |
| Laser   | Semiconductor laser<br>( $\lambda=780\text{nm}$ )<br>Emission duration:<br>continuous   |
| Laser output  | Max. 44.6 $\mu\text{W}$ *<br>*This output is the value<br>measured at a distance of<br>200 mm from the<br>objective lens surface on<br>the Optical Pick-up Block<br>with 7 mm aperture. |
| Frequency response  | 2 Hz – 20 kHz ( $\pm 0.5$ dB)   |
| Wavelength  | 780 – 790 nm  |
| Signal-to-noise ratio   | More than 90 dB   |
| Dynamic range   | More than 90 dB   |
| CD OPTICAL DIGITAL OUT<br>(Square optical connector jack, rear panel) |   |
| Wavelength  | 600 nm  |
| Output Level  | -18 dBm   |

### Tape player section

|                                      |   |
|--------------------------------------|---|
| Recording system                     | 4-track 2-channel stereo  |
| Frequency response<br>(DOLBY NR OFF) | 60 – 13,000 Hz ( $\pm 3$ dB),<br>using Sony TYPE I<br>cassette<br>60 – 14,000 Hz ( $\pm 3$ dB),<br>using Sony TYPE II<br>cassette |
| Wow and flutter                      | $\pm 0.15\%$ W.Peak (IEC)<br>0.1% W.RMS (NAB)<br>$\pm 0.2\%$ W.Peak (DIN)   |

### Tuner section

FM stereo, FM/AM superheterodyne tuner

#### FM tuner section

|                        |   |
|------------------------|---|
| Tuning range           | 87.5 – 108.0 MHz<br>(50 kHz step)                                     |
| 3 band type model:     | 87.5 – 108.0 MHz<br>(50 kHz step)                                     |
| 4 band type model:     | 65.0 – 74.0 MHz (10 kHz<br>step)<br>87.5 – 108.0 MHz<br>(50 kHz step) |
| Aerial                 | FM Lead aerial  |
| Aerial terminals       | 75 ohm unbalanced   |
| Intermediate frequency | 10.7 MHz  |

#### UKV tuner section (4 band type model only)

|              |  |
|--------------|--|
| Tuning range | 65.0-74.0 MHz<br>(10 kHz step)<br>Polar Stereo |
|--------------|--|

#### AM tuner section

|                        |  |
|------------------------|--|
| Tuning range           | MW: 531 – 1,602 kHz<br>(with interval set at<br>9 kHz)<br>LW: 153 – 279 kHz<br>(with interval set at<br>3 kHz) |
| Aerial                 | AM loop aerial<br>External aerial terminal   |
| Intermediate frequency | 450 kHz  |



## Speaker

### Front speaker SS-L80

|                    |                                    |
|--------------------|------------------------------------|
| Speaker system     | 3-way, 3-unit,<br>bass-reflex type |
| Speaker units      |                                    |
| Woofer:            | 15 cm dia., cone type              |
| Centre Tweeter:    | 5 cm dia., cone type               |
| Super Tweeter:     | 2 cm dia., dome type               |
| Nominal impedance  | 6 ohms                             |
| Dimensions (w/h/d) | Approx. 205 x 330 x 315<br>mm      |
| Mass               | Approx. 3.9 kg net per<br>speaker  |

### Rear speaker SS-SR101 (For MHC-RX80 only)

|                    |                                    |
|--------------------|------------------------------------|
| Speaker system     | 1-way, 1-unit,<br>bass-reflex type |
| Speaker units      |                                    |
| Full range:        | 8 cm dia., cone type               |
| Nominal impedance  | 16 ohms                            |
| Dimensions (w/h/d) | Approx. 205 x 95 x 240<br>mm       |
| Mass               | Approx. 1.1 kg net per<br>speaker  |

## General

|                       |  |
|-----------------------|--|
| Power requirements    | 220 – 230 V AC, 50/60 Hz   |
| Power consumption     | 115 watts (MHC-RX70)<br>130 watts (MHC-RX80)   |
| Dimensions (w/h/d)    | Approx. 280 x 330 x 366<br>mm  |
| Mass                  | Approx. 8.1 kg   |
| Supplied accessories: | AM loop aerial (1)<br>Remote RM-SD70 (1)<br>Sony SUM-3 (NS)<br>batteries (2)<br>FM lead aerial (1)<br>Speaker cords (2)*<br>* (4) for MCH-RX80 |

Design and specifications are subject to change without notice.

---

# Index

## A

Adjusting  
    the audio emphasis 30  
    the sound 28  
    the volume 11, 14, 16  
Aerials 4, 9  
Automatic Source Selection  
    11, 14, 17

## B

Batteries 5

## C

CD player 10, 19  
CD Synchro Recording 12  
Clock setting 6  
Connecting. *See* Hooking up

## D, E

Display 5, 19, 30

## F, G

Flash 26

## H, I, J, K

Hooking up  
    optional components 7  
    the aerials 4, 9  
    the power 5  
    the system 4

## L, M

Loop 26

## N

Normal Play 10

## O

One Touch Play 11, 14, 17

## P, Q

Personal file 32  
Playing  
    a CD 10  
    a preset radio station 13  
    tracks in random order  
    (Shuffle Play) 20  
    tracks in the desired  
    order (Programme Play)  
    21  
    tracks repeatedly  
    (Repeat Play) 19  
Presetting radio stations 6  
Preset tuning 13  
Programme Play 21  
Protecting recordings 38

## R

Radio stations  
    presetting 6  
    tuning in 13  
Recording  
    a CD 12  
    a radio programme 15  
    timer recording 36  
Repeat Play 19  
Resetting the system 41

## S

Saving recordings 38  
Selecting the audio emphasis  
    29  
Setting the time 6  
Shuffle Play 20  
Sleep Timer 34  
Sound adjustment 28  
Speakers 4

## T, U, V

Timer  
    falling asleep to music  
    34  
    timer recording 36  
    waking up to music 35  
Troubleshooting 39  
Tuner 6, 13

## W, X, Y, Z

Wake-up timer 35  
Wave 27