

Service Manual

Automatic Bread Maker

Model No. **SD-2501WXC**

Chassis

Product Color White

Destination UK



⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by ⚠ in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

TABLE OF CONTENTS

	PAGE	PAGE
1 Safety Precautions-----	2	
2 Specifications -----	3	
3 Location of Controls and Components -----	4	
4 Operating Instructions-----	6	
5 Troubleshooting Guide-----	16	
6 Disassembly and Assembly Instructions -----	25	
7 Wiring Connection Diagram -----	39	
8 Exploded View and Replacement Parts List -----	41	




Panasonic

© Panasonic Corporation 2011 Unauthorized copying and distribution is a violation of law.




1 Safety Precautions

The precautions listed below must be followed in order to prevent accidents during repair and ensure the safety of the product after repair.




■ The following labels describe the degree of danger and damage that might result through non-compliance with these precautions.

	Danger	This section warns of the urgent danger of death or serious injury.
	Warning	This section warns of the risk of death or serious injury.
	Caution	This section warns of the risk of injury or damage to property.

■ The following labels describe the types of rules that need to be followed.
(These labels are examples.)

	This label shows a "reminder" action to be paid attention to.
	This label shows a "prohibited" action.
	This label shows a "compulsory" action to be followed without fail.

Warning

<p>After repair, return wiring to its original condition.</p> <p> Rotary parts or part extremities that contact lead may cause failure, electrical shock, or fire.</p>	<p>Before repair.</p> <div style="border: 1px solid black; padding: 2px; display: inline-block;"> <p>CUT A.C. POWER LINE</p> </div> <p>Make sure to cut off the power line before disassembly, parts replacement, and assembly. Otherwise, electrical shock or injury may occur.</p>
<p>Use a designated part</p> <p> Make sure to use a designated part when the part is marked in circuit diagrams and parts lists. Otherwise, smoke, fire, or failure may occur.</p>	<p>Wait until the rotary part has stopped completely.</p> <p> You may injure your hands even when the part is rotating slowly.</p> <p>Do not touch</p>

Caution

<p> Wear gloves for disassembly, replacement and assembly.</p> <p>Make sure to wear gloves in order to prevent injuries by metal edges and electric shock when the power is turned on.</p>
--

2 Specifications

Power supply	230-240 V -50 HZ
Power consumed	505-550 W
Capacity	(Strong flour for a loaf) max.600g min.400g (Strong flour for a dough) max.600g min.250g (Yeast) max.8g min.0.75g
Capacity of raisin nut dispenser	max.150g raisins
Timer	Digital timer (up to 13 hours)
Protective device	Self-resetting motor protector (Open:230°F)
Dimensions (H × W × D)	approx. 38.2cm × 25.6cm × 38.9cm
Weight	approx. 7.0kg
Accessories (Included)	Measuring cup (1cup/300ml), Measuring spoon

3 Location of Controls and Components



Accessories/Parts Identification

Main Unit

Raisin nut dispenser (SD-2501 only)

The ingredients placed in the raisin nut dispenser will drop into the bread pan automatically upon selecting the menu with raisin (03, 06, 14, 17, 19 and 25).

Turn to P. 14 for ingredients which may be placed in the raisin nut dispenser. Never operate the Bread Maker without the dispenser being in place.

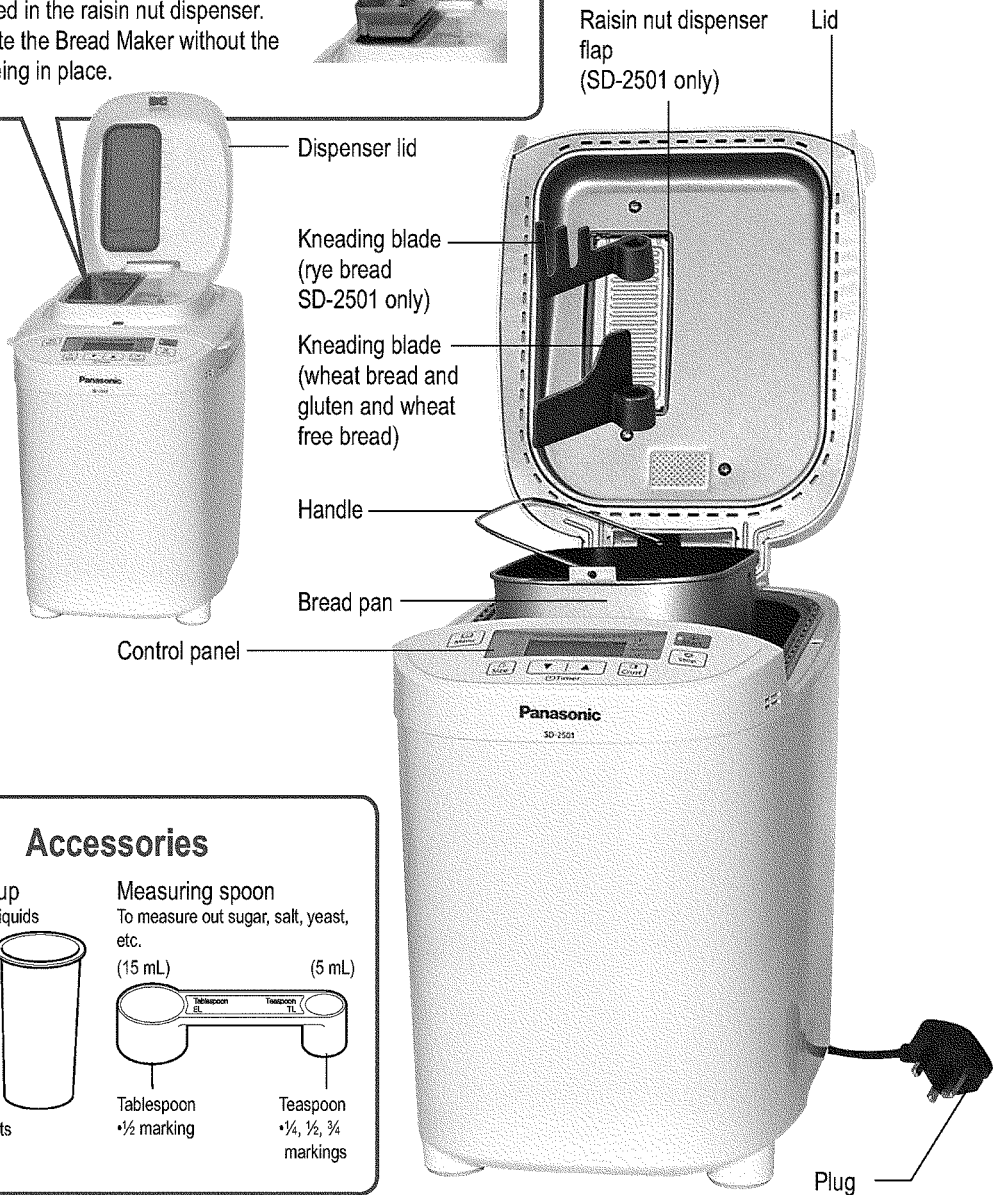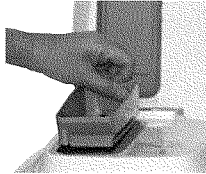

Accessories

Measuring cup

To measure out liquids

(max. 310 mL)



 
•10 mL increments

Measuring spoon

To measure out sugar, salt, yeast, etc.

(15 mL)

(5 mL)



Tablespoon
•½ marking

Teaspoon
•¼, ½, ¾ markings

Control Panel

■ Operation status


■ : displayed for the current stage of the program. Ingredients are being regulated on the 'Rest' stage before kneading.

⚡ : displayed when there has been an interruption in the power supply.

👤 : (SD-2501) displayed when adding ingredients manually on menu 11 and 23. (SD-2500) displayed when the menu with extra ingredients are added manually is chosen.

■ Time remaining until program finished

Also when adding ingredients manually, display will show the time until adding extra ingredients in the program.

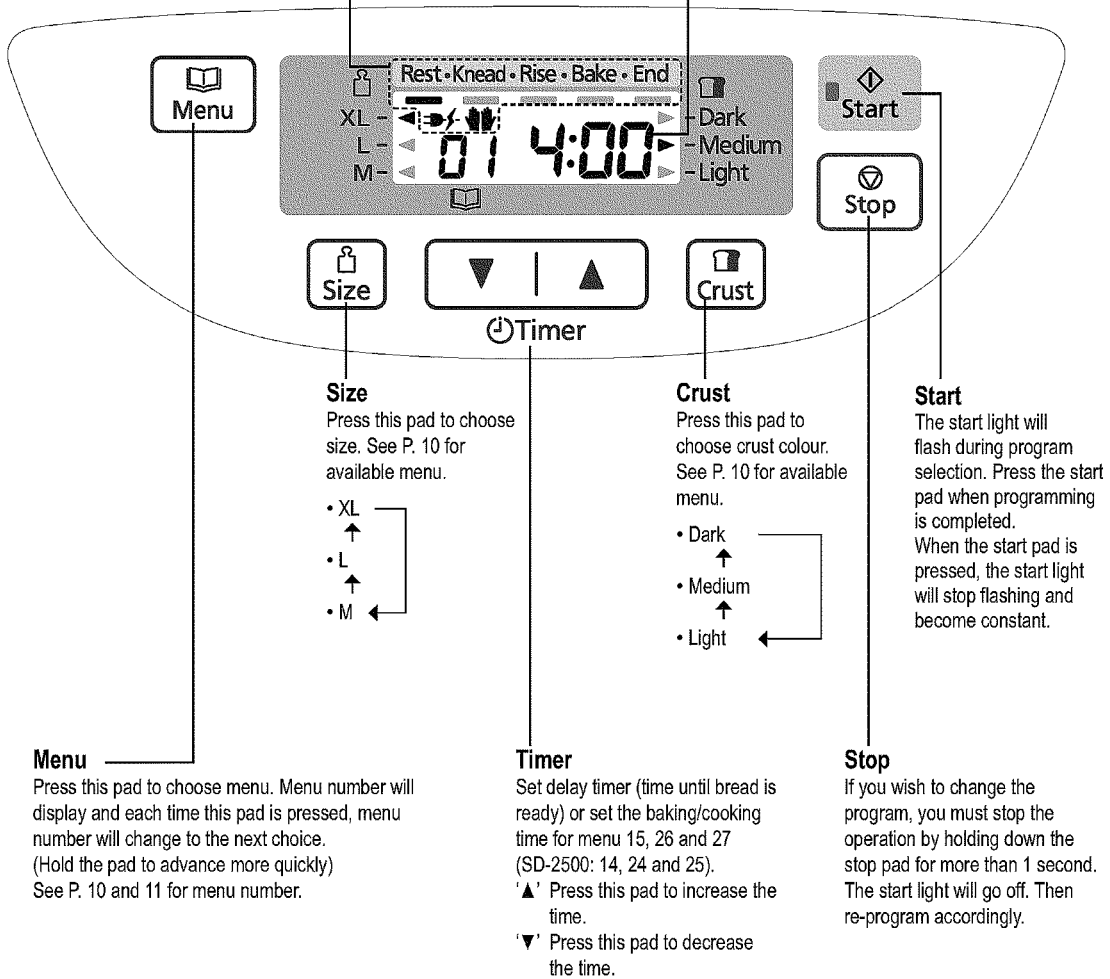

This picture shows all words and symbols, but during operation only those relevant will be displayed.

4 Operating Instructions

4.1. Befor Use

Before Use

Bread-making Ingredients

Flour

Main ingredient of bread. The protein in flour forms gluten during kneading. Gluten provides structure and texture and helps the bread to rise.

- Use strong bread flour only.
- Flour must be weighed on scales.

Water

- Use normal tap water.
- Use tepid water if using menu 02, 05, 07, 12 or 20 (SD-2500, 02, 05 or 11) in a cold room.
- Use chilled water if using menu 07, 08, 11, 13, 14, 20, 21, 23, 24 or 25 (SD-2500; 07, 10, 12, 13, 19, 21, 22 or 23) in a hot room.
- Always measure out liquids using the measuring cup provided.

Salt

- Improves the flavour and strengthens gluten to help the bread rise.
- The bread may lose size/flavour if measuring is inaccurate.

Dairy Products

- Add flavour and nutritional value.
- If you use milk instead of water, the nutritional value of the bread will be higher, but do not use in timer setting as it may not keep fresh overnight.
- Reduce the amount of water proportionally to the amount of milk.

Sugar

- Adds softness and gives crust colour.
- (granulated sugar, brown sugar, honey, treacle etc)

Fat

- Adds flavour and softness to the bread.
- Use butter, margarine or oil. 2 tbsps oil are equivalent to 25 g butter.

Yeast

- Enables the bread to rise.
- Yeast which has "Easy Blend", "Fast Action" or "Easy Bake" written on the packet is recommended.
- Do not use dried yeast that requires preliminary fermentation.
- When using yeast from sachets, seal the sachet again immediately after use. To store follow manufacturers' instructions but use opened individual sachets within 48 hours.

■ You can make your bread taste better by adding other ingredients:

Eggs	Improve the nutritional value and colouring of the bread. (Water amount must be reduced proportionally) Beat eggs when adding eggs.
Bran	Increases the bread's fibre content. • Use max. 50 g (2 oz).
Wheat germ	Gives the bread a nuttier flavour. • Use max. 50 g (2 oz).
Spices, herbs	Enhance the flavour of the bread. • Only use a small amount (1-2 tsp).

Main Flours Used in Bread

Strong flour is milled from hard wheat and has a high content of protein which is necessary for the development of gluten. Carbon dioxide produced during fermentation is trapped within the elastic network of gluten, thus making the dough rise.

White flour:

- Made by grinding wheat kernel, excluding bran and germ. Used in e.g. menu 01, 08, 16 or 21 (SD-2500; 01, 07, 15 or 19).
- Always use strong flour when using the recipes in this book.
- Do NOT use plain or self-raising flour as a substitute for bread flour.

Wholemeal flour:

- Made by grinding entire wheat kernel, including bran and germ.
- Makes bread rich in minerals, but lower in height and denser than bread baked with white flour because the gluten strands are cut by the edges of bran flakes and germ.

Rye flour:

- Contains some proteins, but these do not produce as much gluten as wheat flour.
- Makes dense, heavy bread with a flat or slightly sunken top crust (use in menu 07 or 20). (SD-2501 only)
- Do not use more than stated quantity, 100 g maximum rye out of 500 g flour in SD-2500.

Spelt flour:

- In the wheat family but is a completely different species genetically.
- Although it contains gluten some gluten-intolerant people can digest it. (Consult your doctor.)
- Makes loaves with a flat/slightly sunken crust.
- Spelt wholegrain flour bread becomes low height and dense compare with spelt white flour bread.
- We will recommend spelt white flour to be used more than the half of the entire flour.
- There is Spelt (Triticum spelta) suitable for baking bread and Einkorn wheat (Triticum monococcum; also it is called small spelt) which is not suitable for baking bread are sold as spelt. Please use spelt. [Use in menu 13, 14, 24 or 25 (SD-2500; 12, 13, 22 or 23)]

Brown flour:

- 10-15% of wheat grain removed during milling.

Softgrain flour:

- Strong white flour with wheat and rye grains added. Provides extra fibre, texture, and flavour.
- Do not use with "Timer" option (grains can absorb water and swell up, spoiling texture of loaf).

Granary® or Malted Grain flour:

- Has crushed wheat or rye grains added together with malted whole wheat.
- Makes brown bread coarser and moister with nuttier flavour.
- Do not use more than stated quantity (could damage the bread pan's non-stick finish).

Stoneground flour:

- Grains are crushed between two large millstones rather than with steel rollers.
- Do not use more than stated quantity (could damage the bread pan's non-stick finish, or overload motor).

Other flour:

- Products milled from other grains (i.e. corn meal, rice, millet, soy, oat, buckwheat, barley flours).
- Do not use more than stated quantity (hurders rising and texture).
- Should not be used as substitute for bread flour.
- Gluten Free - see P. 28.

- Coarse ingredients such as flours with whole grains or the addition of nuts and seeds may damage the bread pan's non-stick finish.

If using a bread mix...

- Bread mixes including yeast
 - ① Place a 500 g mix in the bread pan, then add water. (Follow instructions on the packet for the quantity of water)
 - ② Select menu 02 - 'Large' size setting.
 - With some mixes, it is not clear how much yeast is included, so results may vary.
- Baking broche with broche mix
 - Select menu 11 (SD-2500: 10) or 02 - 'Medium' size - Light crust colour.
- Bread mix with separate yeast sachet
 - ① First place the measured yeast in the bread pan, then the bread mix, then the water.
 - Bread Maker Capacity
 - 400-600 g mix (for a loaf), 250-600 g mix (for a dough)
 - ② Set the machine according to the type of flour included in the mix, and start the baking.
 - White flour, brown flour → menu 01
 - Whole wheat, multi grain flour → menu 04
 - rye flour → menu 07 (SD-2501 only)

4.2. How to Use

List of Bread Types and Baking Options

Function Availability and Time Required

* Time required for each process will differ according to room temperature.

Menu Number SD-2501	Menu	Options			Processes				Total
		Size	Crust	Timer	Rest	Knead	Rise	Bake	
01	Basic	●	●	●	30 min- 60 min	15-30 min ^{*4}	1 hr 50 min- 2 hr 20 min	50-55 min	4 hr- 4 hr 5 min
02	Basic Rapid	●	●	—	—	15-20 min	approx. 1 hour	35-40 min	1 hr 55 min- 2 hr
03	Basic Raisin	●	● ^{*1}	● ^{*3}	30 min- 60 min	15-30 min ^{*4}	1 hr 50 min- 2 hr 20 min	50 min	4 hours
04	Whole wheat	●	—	●	1 hr- 1 hr 40 min	15-25 min ^{*4}	2 hr 10 min- 2 hr 50 min	50 min	5 hours
05	Whole wheat Rapid	●	—	—	15 min- 25 min	15-25 min ^{*4}	1 hr 30 min- 1 hr 40 min	45 min	3 hours
06	Whole wheat Raisin	●	—	● ^{*3}	1 hr- 1 hr 40 min	15-25 min ^{*4}	2 hr 10 min- 2 hr 50 min	50 min	5 hours
07	Rye	—	—	●	45 min- 60 min	approx. 10 min	1 hr 20 min- 1 hr 35 min	1 hour	3 hr 30 min
08	French	—	—	●	40 min- 2 hr 5 min	10-20 min	2 hr 45 min- 4 hr 10 min	55 min	6 hours
09	Italian	—	—	●	30 min-1 hr	10-15 min	2 hr 25 min- 3 hr	50 min	4 hr 30 min
10	Sandwich	—	—	●	1 hr- 1 hr 40 min	15-25 min ^{*4}	2 hr 10 min- 2 hr 50 min	50 min	5 hours
11	Brioche	—	● ^{*1}	—	30 min	25-45 min ^{*4}	1 hr 25 min	50 min	3 hr 30 min
12	Gluten Free	—	● ^{*2}	—	—	15-20 min	40-45 min	50-55 min	1 hr 50 min- 1 hr 55 min
13	Specialty	●	—	●	30 min- 1 hr 15 min	15-30 min ^{*4}	1 hr 50 min- 2 hr 45 min	55 min	4 hr 30 min
14	Specialty Raisin	●	—	● ^{*3}	30 min- 1 hr 15 min	15-30 min ^{*4}	1 hr 50 min- 2 hr 45 min	55 min	4 hr 30 min
15	Bake only	—	—	—	—	—	—	30 min- 1 hr 30 min	30 min- 1 hr 30 min

*1 Only Light or Medium available. *2 Only Medium or Dark available. *3 The liner can only be used on the SD-2501.

*4 There is a period of rise during the knead period.

• The Bread Maker will operate for a short time during the rise period (to ensure optimal gluten development).


How to Use

Menu Number SD-2501	Menu	Options			Processes				Total
		Size	Crust	Timer	Rest	Knead	Rise	Bake	
16	Basic	—	—	—	30 min- 50 min	15-30 min ^{*4}	1 hr 10 min- 1 hr 30 min	—	2 hr 20 min
17	Basic Raisin	—	—	—	30 min- 50 min	15-30 min ^{*4}	1 hr 10 min- 1 hr 30 min	—	2 hr 20 min
18	Whole wheat	—	—	—	55 min- 1 hr 25 min	15-25 min ^{*4}	1 hr 30 min- 2 hr	—	3 hr 15 min
19	Whole wheat Raisin	—	—	—	55 min- 1 hr 25 min	15-25 min ^{*4}	1 hr 30 min- 2 hr	—	3 hr 15 min
20	Rye	—	—	—	45 min- 60 min	approx. 10 min	—	—	2 hours
21	French	—	—	—	40 min- 1 hr 45 min	10-20 min	1 hr 35 min- 2 hr 40 min	—	3 hr 35 min
22	Pizza	—	—	●	(Knead) 10-18 min	(Rise) 7-15 min	(Knead) approx. 10 min	(Rise) approx. 10 min	45 min
23	Brioche	—	—	—	30 min	25-45 min ^{*4}	35 min	—	1 hr 50 min
24	Specialty	—	—	—	30 min- 1 hr 5 min	15-30 min ^{*4}	1 hr 10 min- 1 hr 55 min	—	2 hr 45 min
25	Specialty Raisin	—	—	—	30 min- 1 hr 5 min	15-30 min ^{*4}	1 hr 10 min- 1 hr 55 min	—	2 hr 45 min
26	Jam	—	—	—	—	—	—	—	1 hr 30 min- 2 hr 30 min
27	Compote	—	—	—	—	—	—	—	1 hr- 1 hr 40 min

Dough

Baking Bread


Place the ingredients in the bread pan

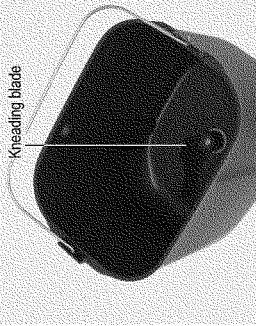


Kneading blade

Turn to P.22-27 for bread recipes

Set the program and start

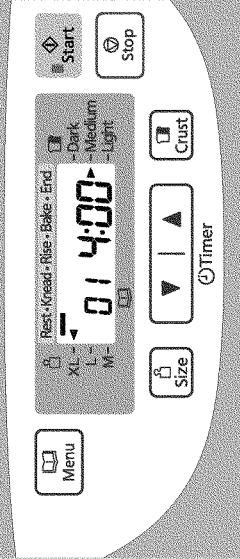

Remove the bread

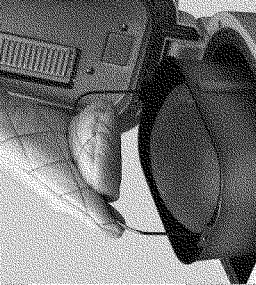

1 Remove the bread pan and set the kneading blade

- Twist the bread pan anti-clockwise and lift up to remove.
 - Ensure the kneading blade is firmly on the kneading mounting shaft.
- Ensure that the shaft and kneading blade are clean, see P.42 for cleaning.
- Use the specified kneading blade when baking rye bread. (SD-2501 only)
 - The kneading blade is designed to fit loosely on the shaft.

Baking bread with added ingredients (P. 14) (SD-2501 only)

Clean and dry beforehand

2 Place the measured ingredients in the bread pan

- Place the dry yeast at the bottom (so that it does not mix with the liquid until later).
- Cover the yeast with all the dry ingredients (flour, sugar, salt, etc.).
• Flour must be weighed on scales.
- Pour in the water and any other liquids.
• Wipe the outside of the bread pan to remove any flour or liquid.
- Put the bread pan into the Bread Maker and turn slightly clockwise.
- Close the lid.

3 Plug the Bread Maker into a 230-240V socket

Make sure the start light is off before selecting a program.

For optimum results, don't open the lid until bread is complete as it affects bread quality.

4 Select a bake menu

(The display shows when menu '01' is selected.)

- See P. 10 for menu, availability of size and crust.
- To change the size
- To change the crust colour

To set the timer

Set the timer to 9:30 (9 hours, 30 minutes from now).
e.g. It is 9:00 PM now, and you want the bread to be ready at 6:30 the next morning.

Pressing the button once will advance the timer by 10 minutes (hold to advance more quickly).

5 Press Start pad to start the machine


Time until the selected program is complete

- The start light will come on.

6 Press Stop pad and remove bread

- when machine beeps 8 times and the bar at 'End' flashes.
-
- The flashing start light will go off.

7 Remove the bread immediately,

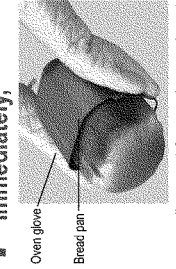


allow to cool, for example, on a wire rack

8 Unplug after use

- The Bread Maker has a keep warm facility to reduce condensation of steam within the loaf which operates if the stop pad is not pressed on completion of the program.
- However, this will accelerate the browning of the crust, therefore, upon completion of baking, switch off the unit, remove the bread immediately from the unit to cool it.
- If you leave the bread to cool down in the bread pan, moisture will be retained within the loaf which will affect the finished quality of the loaf. Therefore, cool on a wire rack to ensure optimum quality of the loaf.

When adding extra ingredients

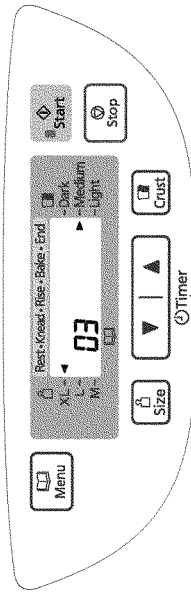

Press this pad when display indicates minutes until ingredient is added, to see how long to wait until the selection of program is complete. (SD-2500 only)

Adding extra ingredients to bread or dough

By selecting a menu number below, you can mix your favourite ingredients into the dough to make all kinds of flavoured breads.

(SD-2501) 03, 06, 14, 17, 19, 25
(SD-2500) 03, 06, 13, 16, 18, 23

SD-2501 (with raisin nut dispenser)

Simply place the extra ingredients in the dispenser or the bread pan before start

SD-2500 (no raisin nut dispenser)

Wait until the beeper sounds before placing the ingredients in the bread pan

Dry ingredients, insoluble ingredients

→ Place the extra ingredients in the raisin nut dispenser and set the machine.

Dried fruits

- Cut up roughly into approx. 5mm cubes.
- Sugar-coated ingredients may stick to the raisin nut dispenser and not fall into the bread pan.

Nuts

- Chop finely.
- Nuts impair the effect of gluten, so avoid using too much.

Seeds

- Using large, hard seeds may scratch the coating of the dispenser and bread pan.

Herbs

- Use up to 1-2 tbsp of dried herbs. For fresh herbs, follow the instructions in the recipe.

Bacon, salami

- Sometimes oily ingredients may stick to the raisin nut dispenser and not fall into the bread pan.

Moist/viscous ingredients, soluble ingredients*

→ Place these ingredients together with the others into the bread pan.

Fresh fruits, fruits pickled in alcohol


- Only use quantities as in the recipe, as the water content of the ingredients will affect your bread.

Cheese, chocolate

- These ingredients cannot be placed in the raisin nut dispenser as they would stick to it and not fall into the bread pan.

* Follow the recipe for the quantities for each ingredient.

Baking Brioche

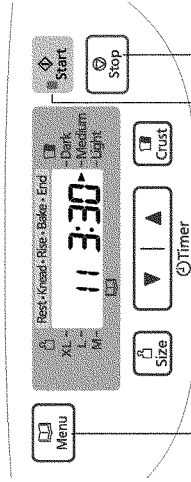

Preparation (P. 12)

- 1 Cut the butter for adding later into 1-2 cm cubes and keep them in fridge.
- 2 Put the kneading blade into the bread pan.
- 3 Place the ingredients in the bread pan in the order listed in the recipe.
- 4 Set the bread pan into the main unit, and plug the machine into the socket. (Make sure the start light is off.)

1 Select menu '11' (SD-2500; *10')



2 Press Start pad to start the machine

 


Time displayed indicating minutes until butter is added

- The start light will come on.

3 Adding additional butter when the beep sounds, then press Start pad again

Complete placing the additional cubed butter while the Start pad is flashing.



Display indicates remaining time until completion of the program

4 Press Stop pad and remove bread

when machine beeps 8 times and the bar at 'End' flashes

- The flashing start light will go off.


How to Use

[Simple way to bake brioche] Add butter with other ingredients at the beginning.

- Cut the butter into 2 cm cubes and place them into the bread pan at the same time as the other ingredients.
- Follow the steps shown on the left. However when the machine beeps on step 3 to add extra butter, please leave as it is.
- Time required for completion is 3 hrs 30 minutes.
- *When butter is added at the beginning, flavour, texture and rising of bread are a little different from the time bread is baked with extra butter added in later.
- A 'Rest' process will begin immediately after starting, followed by 'Knead' and 'Rise'.

- When adding extra ingredients such as raisins, add them with the butter. (Use max. 150 g for ingredients)
- Even without pressing the Start pad, kneading will continue after 5 min. It does not continue kneading immediately, even if the Start pad is pressed after adding butter or ingredients.
- Do not add butter after display shows remaining time. (P. 46)

Making Dough

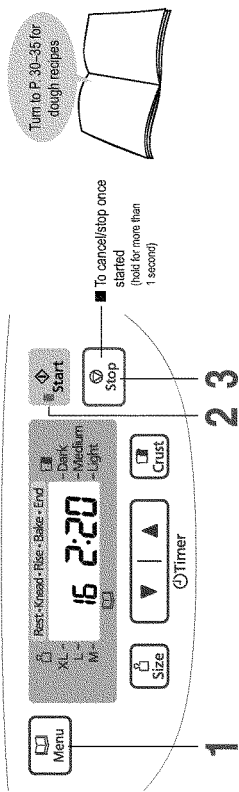

- Preparation (P. 12)
- Put the kneading blades into the bread pan.
 - Place the ingredients in the bread pan in the order listed in the recipe.
 - Set the bread pan into the main unit, and plug the machine into the socket. (Make sure the start light is off.)

 
1 Select a dough menu



[The display shows when menu '16' (SD-2500: 15) is selected.]

- Timer is not available on Dough menus (except menu 22 (SD-2500: 20)).
- If you would like to add extra ingredients to your dough, see P. 14.

2 Press Start pad to start the machine




Time until the selected program is complete

- The start light will come on.

3 Press Stop pad and remove dough

- When machine beeps 8 times and the bar at 'End' flashes
- The flashing start light will go off.

Making Brioche Dough

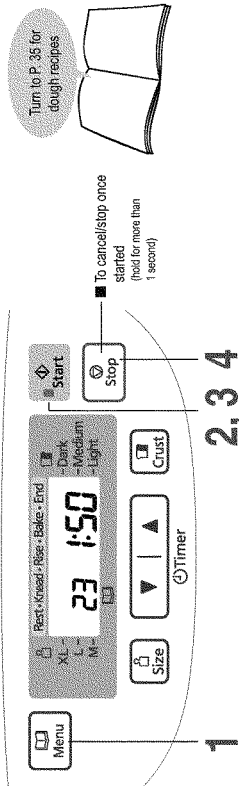

- Preparation (P. 12)
- Cut the butter for adding later into 1-2 cm cubes and keep them in fridge.
 - Put the kneading blades into the bread pan.
 - Place the ingredients in the bread pan in the order listed in the recipe.
 - Set the bread pan into the main unit, and plug the machine into the socket. (Make sure the start light is off.)

1 Select menu '23' (SD-2500: 21)



[Simple way to make brioche] Add butter with other ingredients at the beginning.

- Cut the butter into 2 cm cubes and place them into the bread pan at the same time as the other ingredients.
- Follow the steps shown on the left. However, when the machine beeps on step 3 to add extra butter, please leave as it is.
- Time required for completion is 1 hr 50 minutes.
- When butter is added at the beginning, flavour, texture and rising of bread are a little different from the time bread is baked with extra butter added in later.
- A 'Rest' process will begin immediately after starting, followed by 'Knead' and 'Rise'.

2 Press Start pad to start the machine



Time displayed indicating minutes until butter is added

- The start light will come on.

3 Adding additional butter when the beep sounds, then press Start pad again



Complete placing the additional cubed butter while 'Rest' is flashing.

After the Start pad is pressed


Display indicates remaining time until completion of the program

4 Press Stop pad and remove dough

- When machine beeps 8 times and the bar at 'End' flashes
- The flashing start light will go off.


How to Use

Baking Cakes

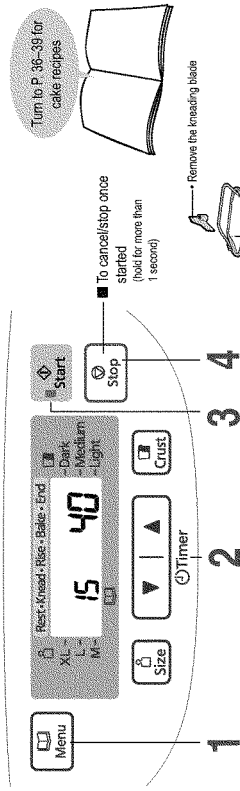

- Preparation**
- 1 Prepare the ingredients according to the recipe.
 - 2 Line the bread pan with parchment paper or loaf tin liners and pour in the mixed ingredients.
 - 3 Set the bread pan into the main unit, and plug the machine into the socket. (Make sure the start light is off.)

 1 Select menu '15' (SD-2500: '14')



2 Press Timer pad to set the baking time



3 Press Start pad to start the machine



- The start light will come on.


4 Press Stop pad when the machine beeps and the bar at 'End' flashes, check that baking is complete, and remove the pan

- The flashing start light will go off.
- If baking is not complete → Repeat steps 1-3 (Additional cooking time can be made up to twice. Each time should be within 50 minutes. The timer will start again from 1 minute when the unit is hot. Increase the time by pressing the timer pad as required.)

Take care!
It's hot!


- To check whether baking is complete, insert a skewer into the centre of the cake or tea bread - it is ready if there is no mixture stuck to the skewer when you remove it.

Making Jam

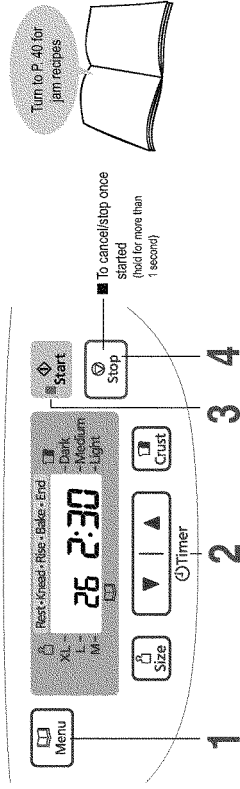


- Preparation**
- 1 Prepare the ingredients according to the recipe.
 - 2 Put the kneading blade into the bread pan.
 - 3 Place the ingredients into the bread pan in the following order: half of the fruits → half of the sugar → remainder of fruits → remainder of sugar.
 - 4 Set the bread pan into the main unit, and plug the machine into the socket. (Make sure the start light is off.)

 1 Select menu '26' (SD-2500: '24')



 2 Press Timer pad to set the cooking time



3 Press Start pad to start the machine



- The start light will come on.

4 Press Stop pad and remove jam


- The flashing start light will go off.
- If the cooking is not complete → Repeat steps 1-3 (Additional cooking time can be made up to twice. Each time should be within 10-40 minutes. The timer will start again from 1 minute when the unit is hot. Increase the time by pressing the timer pad as required.)

How to Use

- Timer is not available on menu 26 (SD-2500: 24). (The timer pad only sets the duration of the cooking time.)
- It is necessary to have an adequate amount of sugar, acid, and pectin to make firm set jam.
- Fruits with a high level of pectin set easily. Fruits with less pectin do not set well.
- Use freshly ripened fruits. Over or under ripe fruits do not set firmly.
- The recipes in this book make soft set jams. This is due to lower levels of sugar.
- Follow the recipe for the quantity for each ingredient.
- Do not increase or decrease the quantities of fruits. It may cause the jam to boil over or scorch.
- Do not increase the quantity of sugar more than half quantities of fruits.
- It may cause the jam to boil over or scorch. When decrease the quantity of sugar, jam does not set firm.
- When the acidity of the fruit is strong, you can decrease quantity of the lemon juice but if it is decreased too much, jam does not set firm.
- When the cooking time is short, fruit bits can remain partially and the jam may become watery.
- The jam will continue to set as it cools. Be careful not to over cook.

- Put the finished jam into the container as soon as possible. Please take care of the burn when you take out jam.
- Jam can burn if it is left in the bread pan.
- Store the jam in a cool, dark place. Due to the lower levels of sugar the shelf life is not as long as shop bought varieties. Once open, refrigerate and consume shortly after opening.

Making Compote

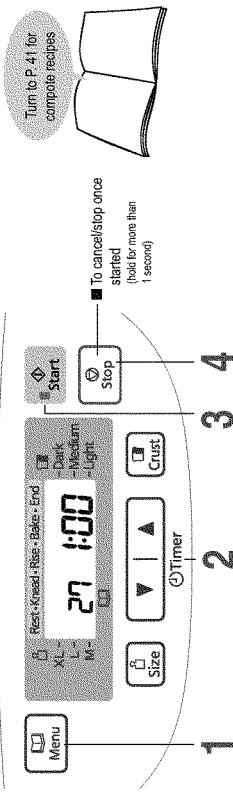

Preparation

- ① Prepare the ingredients according to the recipe. (Remove the kneading blade.)
- ② Place the ingredients into the bread pan in the following order: fruits → sugar → liquid.
- ③ Set the bread pan into the main unit, and plug the machine into the socket. (Make sure the start light is off.)

1 Select menu '27' (SD-2500: '25')



2 Press Timer pad to set the cooking time



3 Press Start pad to start the machine



Time until the selected program is complete

- The start light will come on.

4 Press Stop pad and remove compote

- when machine beeps 8 times and the bar at 'End' flashes
- The flashing start light will go off.
- If the cooking is not complete → Repeat steps 1-3 (Additional cooking time can be made up to twice. Each time should be within 10-40 minutes. The timer will start again from 1 minute when the unit is hot. Increase the time by pressing the timer pad as required.)

- Timer is not available on menu 27 (SD-2500: 25). (The Timer pad only sets the duration of the cooking time.)
- Follow the recipe for the quantities for each ingredient.
 - Do not increase or decrease the quantities of fruits. It may cause the compote to boil over or scorch.

4.3. How to Clean

Care & Cleaning

 
Before cleaning, unplug your Bread Maker and allow it to cool down.

To avoid damaging your Bread Maker...

- Do not use anything abrasive! (cleansers, scouring pads etc)
- Use a soft sponge when cleaning bread pan and kneading blade.
- Do not wash any part of your Bread Maker in the dishwasher*
- Do not use benzine, thinners, or alcohol!
- Keep your Bread Maker clean and dry.


Lid

Wipe with a damp cloth.



Steam vent

 Wipe with a damp cloth.



Bread pan & kneading blade

Twist the bread pan anti-clockwise to remove. Remove the kneading blade and wash in warm soapy water.

 


- Ensure the area around the shaft and inside the kneading blade are cleaned thoroughly.
- If the kneading blade is difficult to remove from the bread pan, place a small quantity of warm water into the bread pan and soak for 5-10 minutes. Do not submerge the bread pan in water.



Measuring spoon & cup

Wash with water.



- Not dishwasher safe

Dispenser lid (SD-2501 only)

Remove and wash with water.

- Raise the dispenser lid to an angle of approximately 75 degrees. Align the connections and pull towards you to remove or push carefully back at the same angle to attach. (Wait until the machine has cooled down first, because it will be very hot immediately after use)
- Take care not to damage or pull the seal. (Damage could lead to leakage of steam, condensation, or deformation)




Raisin nut dispenser (SD-2501 only)

Remove and wash with water.

- Wash after each use to remove any residue.



Seal

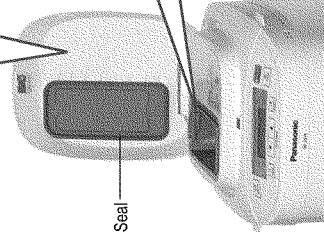

To protect the non-stick finish

Bread pan and kneading blade are coated with a non-stick finish to avoid stains and to make it easier to remove bread.

To avoid damaging it, please follow the instructions below.



- Do not use hard utensils such as a knife or a fork when removing the bread from the bread pan. When you have had time taking out the bread from the bread pan, see P. 46.
- Ensure that the kneading blade is not embedded in the bread loaf before slicing it. If it is embedded, wait for the loaf to cool and remove it. In removing the kneading blade, press on the base of the loaf and manipulate the kneading blade gently to avoid damaging the loaf. (Do not use hard or sharp utensils such as a knife or a fork.) Be careful not to get burns as the kneading blade may still be hot.
- Use the soft sponge when cleaning the bread pan and the kneading blade. Do not use anything abrasive such as cleansers or scouring pads.
- Hard, coarse or large ingredients such as flours with whole or ground grains, sugar, or the addition of nuts and seeds may damage the non-stick finish of the bread pan. If using large chunk of ingredient, break into small pieces. Please make sure to follow the recipe quantities stated.


* The colour of the inside of the unit may change with use.

4.4. Trouble shooting

Troubleshooting



Before calling for service, please check through this section.

Problem	Cause → Action
My bread does not rise.	<p>[All bread]</p> <ul style="list-style-type: none"> The quality of the gluten in your flour is poor, or you have not used strong flour. (Gluten quality can vary depending on temperature, humidity, how the flour is stored, and the season of harvest) Try another type, brand or another batch of flour. The dough has become too firm because you haven't used enough liquid. <ul style="list-style-type: none"> Stronger, Organic and Stoneground flour with higher protein content absorbs more water than others, so try adding an extra 10–20 mL of water. You are not using the right type of yeast. <ul style="list-style-type: none"> Use dry yeast from a sachet, which has 'Easy Blend', 'Fast Action' or 'Easy Bake' written on it. This type does not require pre-fermentation. You are not using enough yeast, or your yeast is old. <ul style="list-style-type: none"> Make sure yeast sachets not open for longer than 48 hours. The yeast has touched the liquid before kneading. Check the yeast's expiry date. Use the measuring spoon provided. Check that you have put in the ingredients in the correct order according to the instructions. (P. 12) You have used too much salt, or not enough sugar. Check the recipe and measure out the correct amounts using the measuring spoon provided. Check that salt and sugar is not included in other ingredients. <p>[Specialty bread]</p> <ul style="list-style-type: none"> Einkorn wheat was used when baking specialty bread and/or a lot of flour other than spelt flour were used.
The top of my bread is uneven.	<ul style="list-style-type: none"> The spelt flour should be up to 60% of the entire flour when you use more than two kinds of flour other than spelt. The rye and the rice flour should be up to 40% of the entire flour and buckwheat flour should be up to 20% of the entire flour.
My bread is full of air holes.	<ul style="list-style-type: none"> You have used too much yeast. <ul style="list-style-type: none"> Check the recipe and measure out the correct amount using the measuring spoon provided. You have used too much liquid. <ul style="list-style-type: none"> Some types of flour absorb more water than others, so try using 10–20 mL less water.
My bread seems to have collapsed after rising.	<ul style="list-style-type: none"> The quality of your flour isn't very good. <ul style="list-style-type: none"> Try using a different brand of flour. You have used too much liquid. <ul style="list-style-type: none"> Try using 10–20 mL less water.
My bread has risen too much.	<ul style="list-style-type: none"> You have used too much yeast/water. <ul style="list-style-type: none"> Check the recipe and measure out the correct amount using the measuring spoon (yeast)/cup (water) provided. Check that excess water amount is not included in other ingredients. You have not used enough flour. <ul style="list-style-type: none"> Carefully weigh the flour using scales.
Why is my bread pale and sticky?	<ul style="list-style-type: none"> You are not using enough yeast, or your yeast is old. Use the measuring spoon provided. Check the yeast's expiry date. There has been a power failure, or the machine has been stopped during breadmaking. <ul style="list-style-type: none"> The machine switches off if it is stopped for more than 10 minutes. You will need to remove the bread from the bread pan and start again with new ingredients.

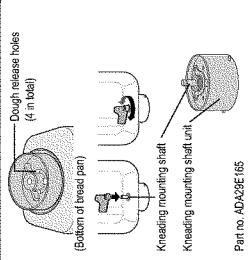Problem	Cause → Action
There is excess flour around the bottom and sides of my bread.	<ul style="list-style-type: none"> You have used too much flour, or you are not using enough liquid. <ul style="list-style-type: none"> Check the recipe and measure out the correct amount using scales for the flour or the measuring cup provided for liquids.
Why has my bread not mixed properly?	<ul style="list-style-type: none"> You haven't put the kneading blade in the bread pan. <ul style="list-style-type: none"> Make sure the kneading blade is in the bread pan before you put in the ingredients. There has been a power failure, or the machine has been stopped during breadmaking. <ul style="list-style-type: none"> The machine switches off if it is stopped for more than 10 minutes. You might be able to start the loaf again, though this might give poor results if kneading had already begun. The kneading mounting shaft in the bread pan is stiff and does not rotate. <ul style="list-style-type: none"> If the kneading mounting shaft does not rotate when the blade is attached, you will need to replace the kneading mounting shaft unit (consult the place of purchase or a Panasonic service centre: 0844 8443868 or order online at www.panasonic.co.uk).
My bread has not been baked.	<ul style="list-style-type: none"> The dough menu was selected. <ul style="list-style-type: none"> The dough menu does not include a baking process. There has been a power failure, or the machine has been stopped during breadmaking. <ul style="list-style-type: none"> The machine switches off if it is stopped for more than 10 minutes. You can try baking the dough in your oven if it has risen and proved. There is not enough water and the motor protection device has activated. This only happens when the unit is overloaded and excessive force is applied to the motor. <ul style="list-style-type: none"> Visit place of purchase for a service consultation. Next time, check the recipe and measure out the correct amount using the measuring cup provided for liquid and scales for weighing flour.
Dough leaks out of the bottom of the bread pan.	 <ul style="list-style-type: none"> A small amount of dough will escape through the four holes (so that it does not stop the rotating parts from rotating). This is not a fault, but check occasionally that the kneading mounting shaft rotate properly. <ul style="list-style-type: none"> If the kneading mounting shaft does not rotate when the kneading blade is attached, you will need to replace the place of mounting shaft unit (consult the place of purchase or a Panasonic service centre: 0844 8443868 or order online at www.panasonic.co.uk).
The sides of my bread have collapsed and the bottom is damp.	<ul style="list-style-type: none"> You have left the bread in the bread pan for too long after baking. <ul style="list-style-type: none"> Remove the bread promptly after baking. There has been a power failure, or the machine has been stopped during breadmaking. <ul style="list-style-type: none"> The machine switches off if it is stopped for more than 10 minutes. You may try baking the dough in your oven.
The kneading blade rattles.	<ul style="list-style-type: none"> This is because the kneading blade fits loosely on the kneading mounting shaft. (This is not a fault)

Troubleshooting

  Before calling for service, please check through this section.

Problem	Cause → Action
I can smell burning while the bread is baking. Smoke is coming out of the steam vent.	<ul style="list-style-type: none"> Ingredients may have spilled on the heating element. → Sometimes a little flour, raisins or other ingredients may be flicked out of the bread pan during mixing. Simply wipe the heating element gently after baking once the Bread Maker has cooled down. → Remove the bread pan from the Bread Maker to place ingredients.
The kneading blade stays in the bread when I remove it from the bread pan.	<ul style="list-style-type: none"> The dough is a little stiff. → Allow the bread to cool completely before removing the kneading blade carefully. Some types of flour absorb more water than others, so try adding an extra 10-20 mL of water next time. → Crust has built up underneath the kneading blade. → Wash the kneading blade and its spindle after each use.
The crust creases and goes soft on cooling.	<ul style="list-style-type: none"> The steam remaining in the bread after baking can pass into the crust and soften it slightly. → To reduce the amount of steam, try using 10-20 mL less water. → Remove loaf from the bread pan immediately after baking completed.
How can I keep my crust crispy?	<ul style="list-style-type: none"> To make your bread crispier, you could use menu 08 (SD-2500: 07) or the Dark crust colour option, or even bake it in the oven at 200°C/gas mark 6 for an extra 5-10 minutes.
My bread is sticky and slices unevenly.	<ul style="list-style-type: none"> It was too hot when you sliced it. → Allow your bread to cool on rack before slicing to release the steam.
Extra ingredients are not mixed properly in brioche.	<ul style="list-style-type: none"> Did you add extra ingredients within 5 min of the beep? → Butter must be added while  is flashing in the display.
There is excess oil on the bottom of broche. The crust is oily. My bread has big holes.	<ul style="list-style-type: none"> Did you add butter within 5 min of the beep? → Butter must be added while  is flashing in the display.
The bread does not come out.	<ul style="list-style-type: none"> If the bread cannot be easily removed from the bread pan, leave the bread pan for 5-10 minutes to cool, making sure that it is not left unattended where somebody or something may get burnt. After that, shake the pan several times using oven gloves. (Hold the handle down so that it does not get in the way of bread.)
When cooking jam, it has scorched or the kneading blade fixes and it doesn't come off.	<ul style="list-style-type: none"> The amount of the fruit was a too little, or the amount of sugar is too much. → Place the bread pan in the sink and half fill the bread pan with warm water. Leave the bread pan to soak until the cooked on mixture or kneading blade loosens. After scorching is relieved, wash it with a soft sponge etc. Please be aware of the hot water.
The jam has boiled over.	<ul style="list-style-type: none"> Too much fruit or sugar has been used. → Only use the amounts of fruit and sugar specified in the recipes on P. 40.
Jam is too runny and not firmly set.	<ul style="list-style-type: none"> The fruit was under or over ripe. → Sugar was decreased too much. → Cooking time was insufficient. → Fruit with a low pectin content was used. → Use the runny jam as a sauce for desserts. → Leave the jam to cool completely. The jam will continue to set as it cools.

Problem	Cause → Action
Can frozen fruits be used?	<ul style="list-style-type: none"> It is possible to use them.
What kinds of sugar can we use on jam?	<ul style="list-style-type: none"> White caster and granulated can be used. Do not use brown sugar, diet sugar, and low calorie sugar or artificial sweetener.
When making jam, can we use fruits are pickled in alcohol?	<ul style="list-style-type: none"> Do not use them. The quality is not satisfactory.
The fruit has collapsed when making fruit in syrup.	<ul style="list-style-type: none"> The cooking time was too long. The fruit may have been over ripe.
→ appears on the display.	<ul style="list-style-type: none"> There has been a power failure for approx. 10 minutes (the plug has been accidentally pulled out, or the breaker has been activated), or there is another problem with the power supply. → The operation will not be affected if the problem with the power supply is only momentary. The Bread Maker will operate again if its power is restored within 10 minutes, but the end result may be affected.
01 appears on the display	<ul style="list-style-type: none"> There has been a power failure for a certain amount of time, (differs depending on the circumstances-e.g. mains power failure, unplugging, malfunctioning fuse or breaker). → Remove the ingredients and start again using new.
H01-H02 appears on the display.	<ul style="list-style-type: none"> The display indicates a problem with the Bread Maker. → Consult the place of purchase or a Panasonic service centre: 0844 8443868
J50 appears on the display.	<ul style="list-style-type: none"> The unit is hot (above 40°C/105°F). → Allow the unit to cool down to below 40°C/105°F before using it again (J50 will disappear).

5 Troubleshooting Guide

Before troubleshooting, operate the main body test mode in the following procedure in order to check the P.C.Boards.

5.1. Self check mode

5.1.1. Electric power breakdown mode

- Transfer the main body in a low consumption electricity mode and let you maintain a state of the low voltage.
- Detect the normalcy return of the power supply and let you return to a former state.

Load control

- LED indication: Turn off all LED.
- LCD indication: Turn off all LCD.
- Buzzer information: DO NOTHING
- Heater: OFF
- Motor: OFF


- YD / RD: OFF

- During cooking, save blackout information.

- If it is the blackout that is more than it for ten minutes, I do a mode with "wait mode - function choice - fault choice".

Indication on LCD

- If it is under blackouts for ten minutes, LCD indication for the indication of the mode before a blackout enters. If it is a blackout, display "wait mode - function choice - non-choice" more than ten minutes.

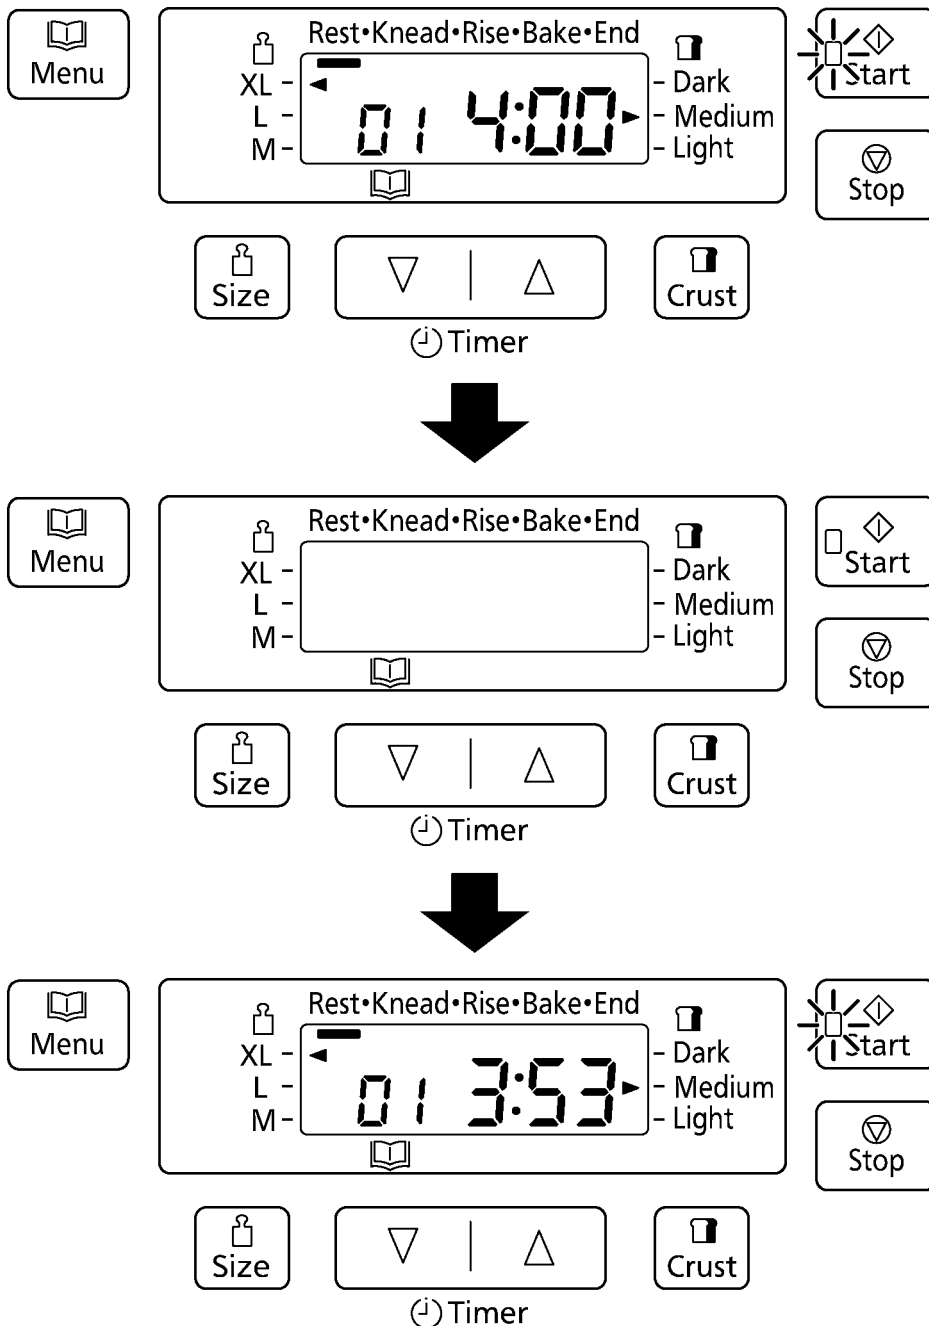

5.1.2. Sensor disconnection mode

- When the disconnection of a sensor is detected, all load of the device goes off in this mode.


Load control

- LED indication: Flashes on and off, and it is displayed "H 02" by the clock part.
- LCD indication: Turn off the light.
- Buzzer information: OFF
- Heater: OFF
- Motor: OFF

- YD / RD: OFF
- Room temperature sensor (TH1) detection temperature except the disconnection when is in a condition, it is with "wait mode - function choice - fault choice". At this time, I display "H01" if a sensor is snapped.

Indication on LCD

- "H02" is displayed on the LCD during the sensor disconnection. ("H02" is brinking)

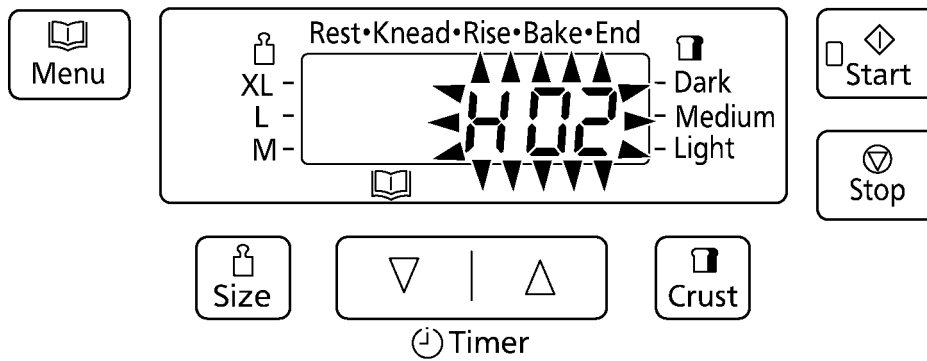

5.1.3. Sensor disconnection mode

- When the disconnection of a sensor is detected, all load of the device goes off in this mode.


Load control

- LED indication: Flashes on and off, and it is displayed "H 01" by the clock part.
- LCD indication: Turn off the light.
- Buzzer information: OFF
- Heater: OFF

- Motor: OFF
- YD / RD: OFF
- Sensor detection temperature except the disconnection when is in a condition, it is with "wait mode - function choice - fault choice".

Indication on LCD

- "H01" is displayed on the LCD during the sensor disconnection. ("H01" is brinking)

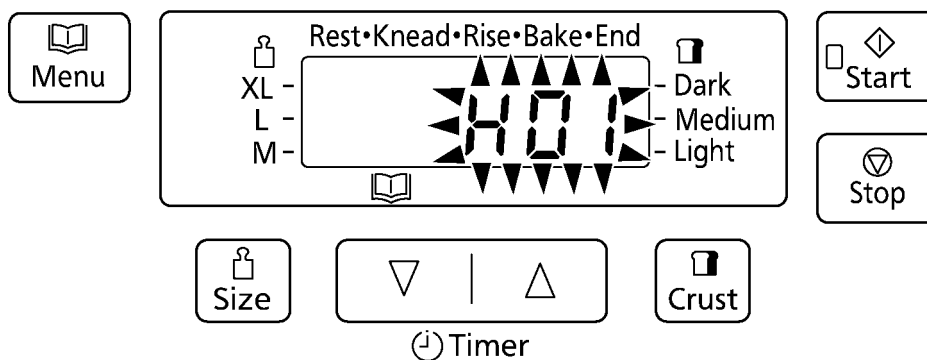

5.1.4. High temperature alarm mode

When the "Start" key is pressed when the unit is in the hot condition at a temperature of more than 40 deg.C, the buzzer sounds, the LED goes on and off, and the other load goes off in this mode.

* The high temperature alarm mode does not occur at the "BAKE ONLY" menu rebaking setting.

Behaviour of restoration from high temperature alarm mode

- When the unit temperature is less than 40 deg.C, and more than 10 seconds passes after the high temperature alarm mode has begun, the buzzer sounds once and the high temperature alarm mode is canceled. (No indication on LCD)


Load control

- LED indication: Flashes on and off, and it is displayed "U50" by the clock part.

- LCD indication: Turn off the light.
- Buzzer information:
 - Error buzzer rumbling at the time of "U50" starts.
 - Cancellation buzzer rumbling in a Stop key receptionist.
 - When I satisfied "the end condition - others" mentioned above, a receptionist buzzer rumbles.
- Heater: OFF
- Motor: OFF
- YD / RD: OFF
- Stop key: Become the setting state before becoming "U50".
- Become the setting state before becoming "U50" after progress more than ten seconds after displaying "U50" if a sensor becomes less than 40 degrees Celsius.

Indication on LCD

- "U50" is displayed on LCD. ("U50" is brinking)

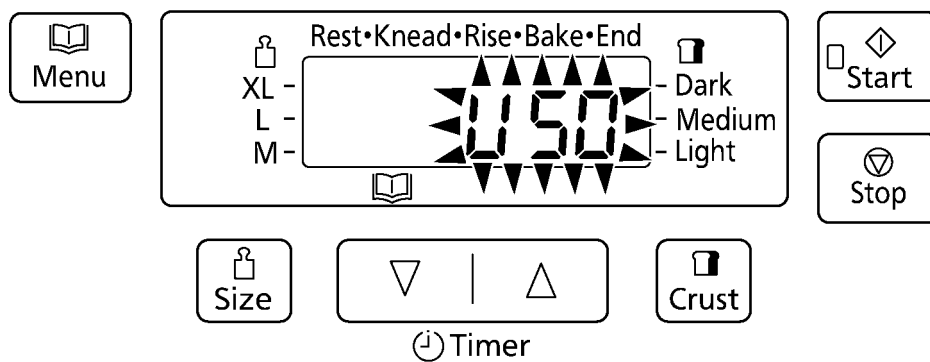


5.2. Key operation and check mode

Before troubleshooting, operate the checkmode in the following procedure.


5.2.1. Key operation

Multiplex push key


1. "Main body test" mode
"Menu" key + "Crust" key + "Start" key

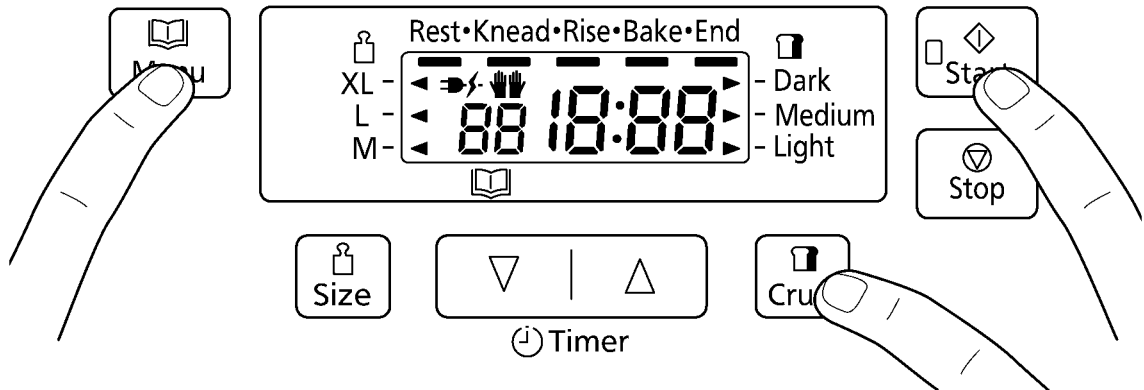


2. "YD confirmation" mode (during a main body test)
"Crust" key + "Stop" key

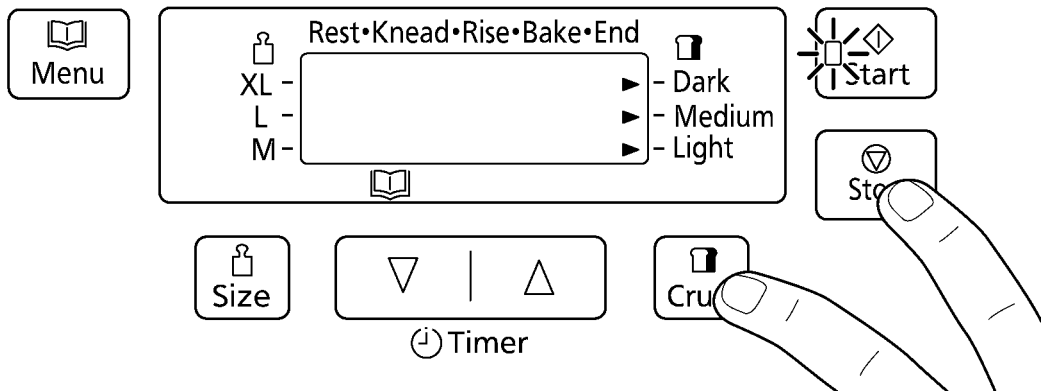

3. "RD confirmation" mode (during a main body test)
"Size" key + "Stop" key

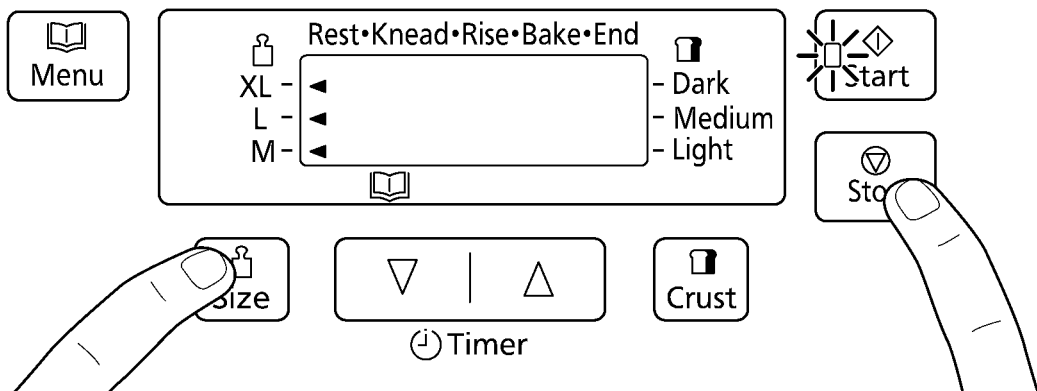

4. "Buzzer interlocking movement rumbling" mode (during a main body test)
"Start" key + "Menu" key

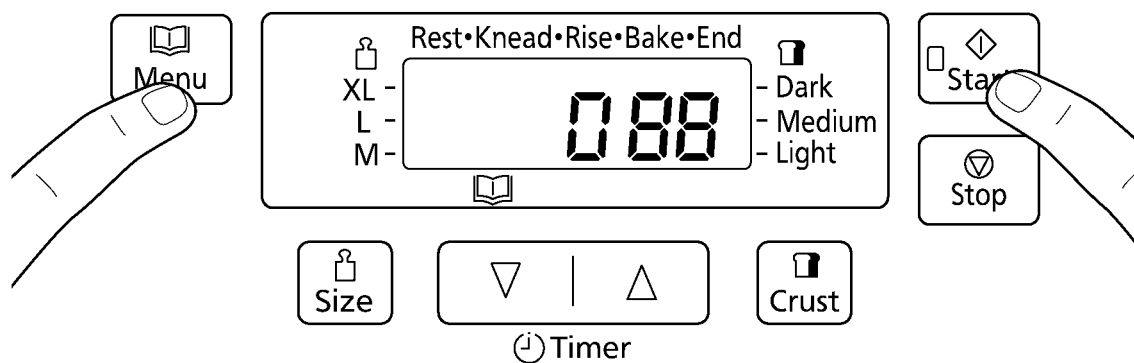


5.3. Main body test mode

5.3.1. Setting the main body initial test mode

Operation procedure

1. Insert the power cord plug into an electrical outlet.
2. Press the "Menu" "Crust" and "Start" keys at the same time.

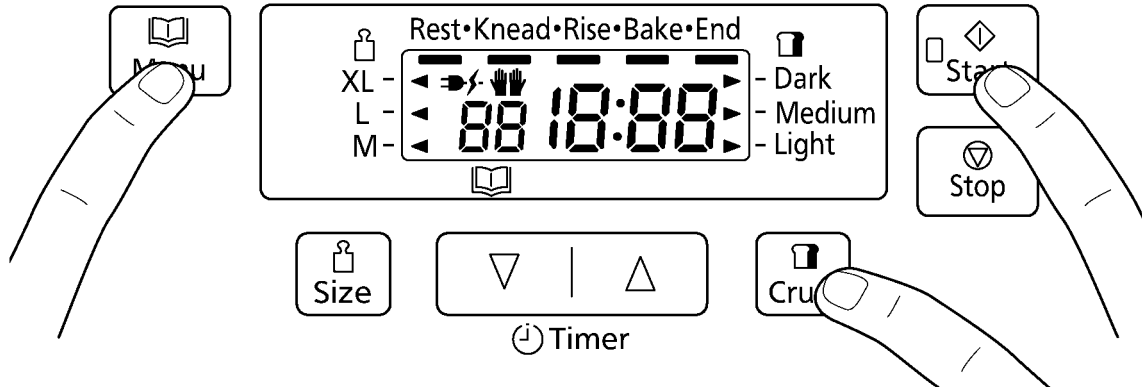

Phenomena


- LCD indication: All indications displayed
- Behaviour of device: Load other than LCD is off.
- Restoration: Pressing "Stop" key, the device returns to the normal initial mode.
- * When all indications do not appear on the LCD, check the

device again following the above operations.


Judgement/Remedy

- When all the indications do not appear on the LCD, replace P.C.Boards A and/or B. Check the device condition in this test mode after replacing the P.C.Board (s).

All Light up

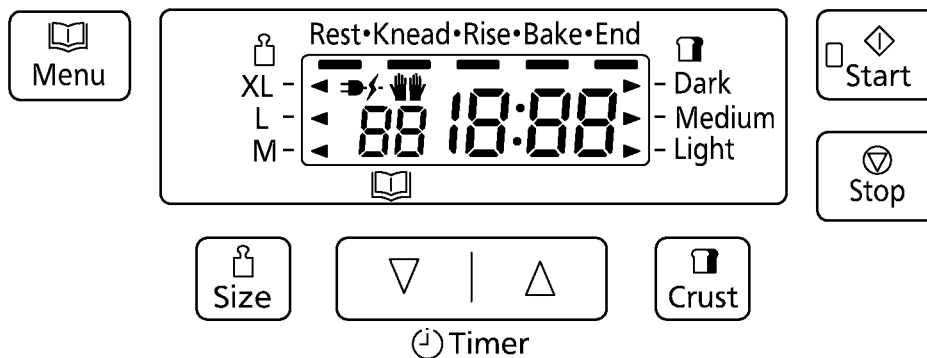

Chidori Light up

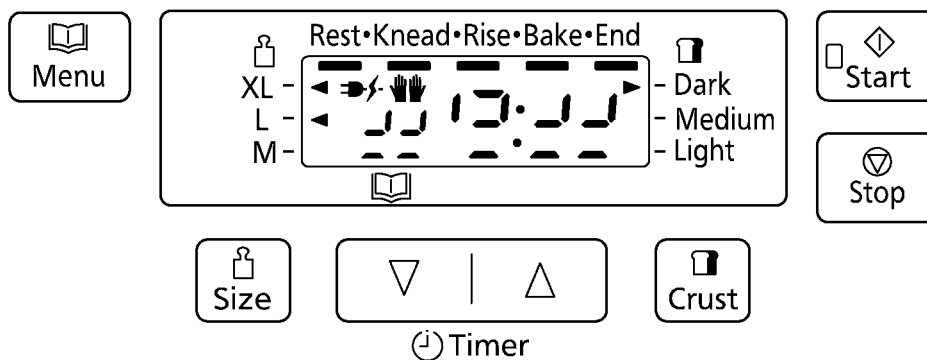

5.3.2. Solenoid/motor operation test (Volume.1) mode

Operation procedure


1. Press the "Crust" key.

Phenomena

- LCD indication: It light up like the next figure.
- Behaviour of device: The solenoid runs for 1 second and stops for 1 second. Then the motor runs and stops in the manner of 0.2 sec on/1.8 sec off, and repeat once in that manner.
- Restoration: Pressing "Stop/Start" key, the device returns to the main body initial test mode.

Judgement/Remedy

- Replace the solenoid and/or P.C.Board B if the solenoid does not work.
- Check and remedy the driving parts, i.e., pulley B, belt or motor, and/or replace P.C. Board B if the motor does not work.
- Replace P.C. Board A if the device does not work normally after following the above remedy.

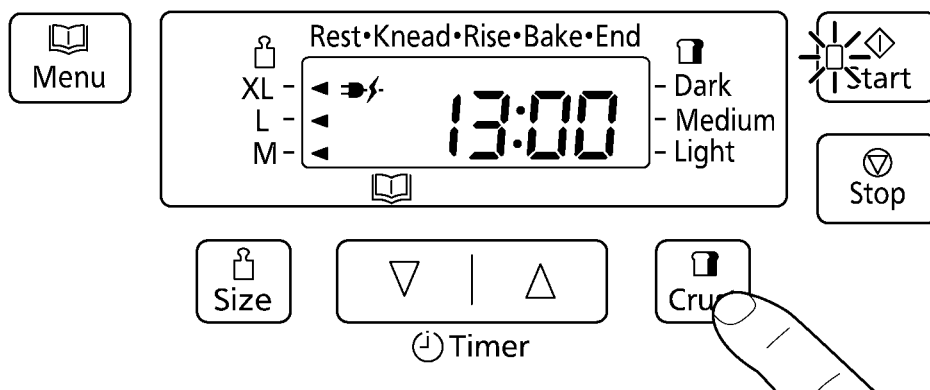

5.3.3. Heater operation test mode

Operation procedure


1. Press the "Timer up" key.

Phenomena

- LCD indication: It light up like the next figure.
- Behaviour of device: The device supplies electric power to the heater after 1 second and the power is off when the sensor temperature reaches 165 deg.C.
- Restoration: Pressing "Stop" key, the device returns to the main body initial test mode.

Judgement/Remedy

- Replace the sensor and/or P.C.Board B if the power is not off when the sensor temperature reaches 165 deg.C.
- Replace the heater and/or P.C.Board B if the heater does not work normally.
- Replace P.C.Board A if the device does not work normally after trying the above remedy.

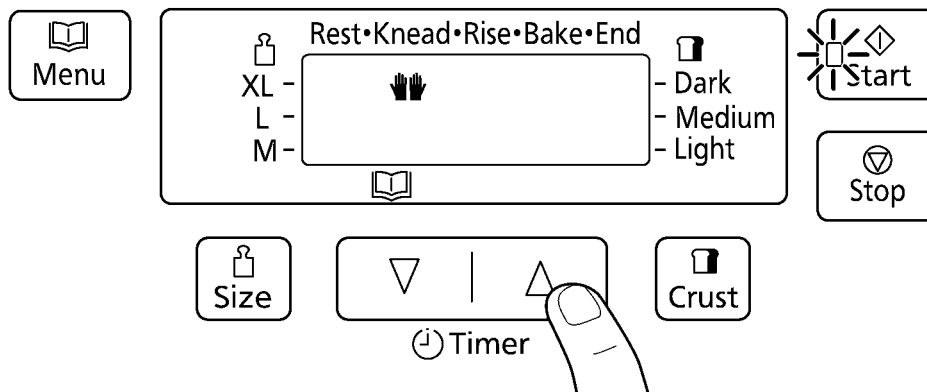

5.3.4. Sensor inspection mode

Operation procedure

1. Press the "Size" key.

Phenomena


- LCD indication: It light up like the next figure.
- Behaviour of device: The device supplies electric power to the heater for 3 seconds at an interval of 32 seconds and

controls the sensor temperature at approx. 35 deg.C.

- Restoration: Pressing "Stop" key, the device returns to the main body initial test mode.

Judgement

- The P.C.Boards and heater work properly when the temperature inside the unit is controlled at approx. 35 deg.C.

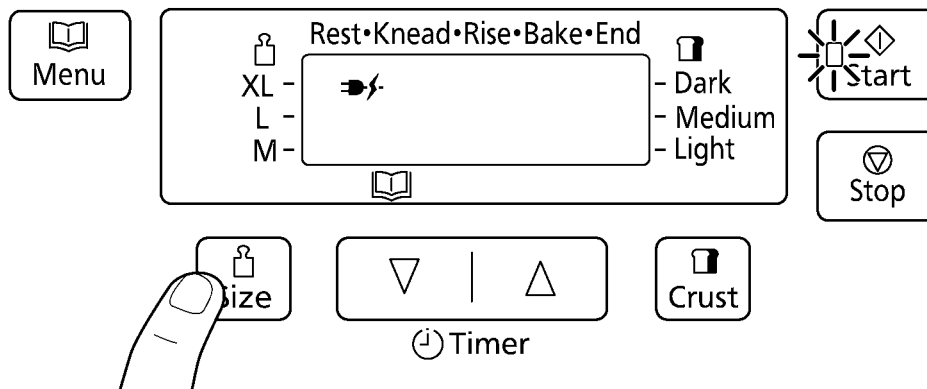


5.3.5. A buzzer continuation rumbling mode

Operation procedure

1. Push a "Menu" key and the "Start" key at the same time.

Phenomena

- A buzzer rumbles in succession. Stop with a "Stop" key.

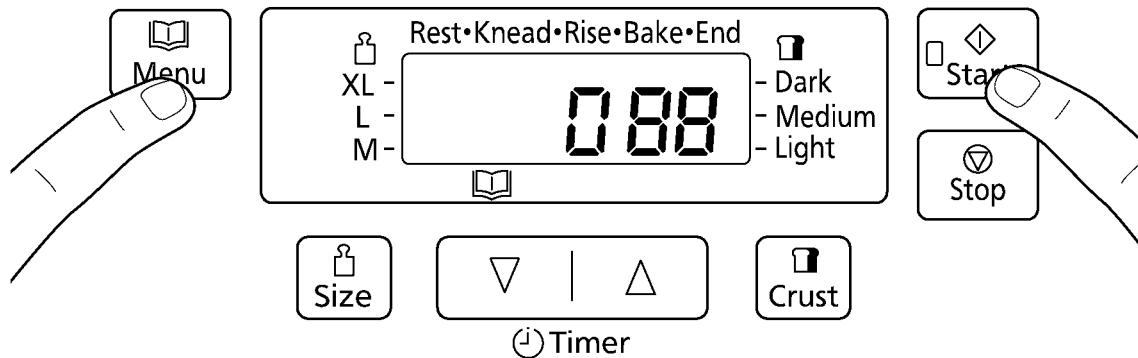


5.3.6. The operation check mode of the solenoid coil for RD

Operation procedure

1. Push a "Size" key and the "Stop" key at the same time.

Phenomena

- A solenoid for RD is movement. I hear a movement sound.

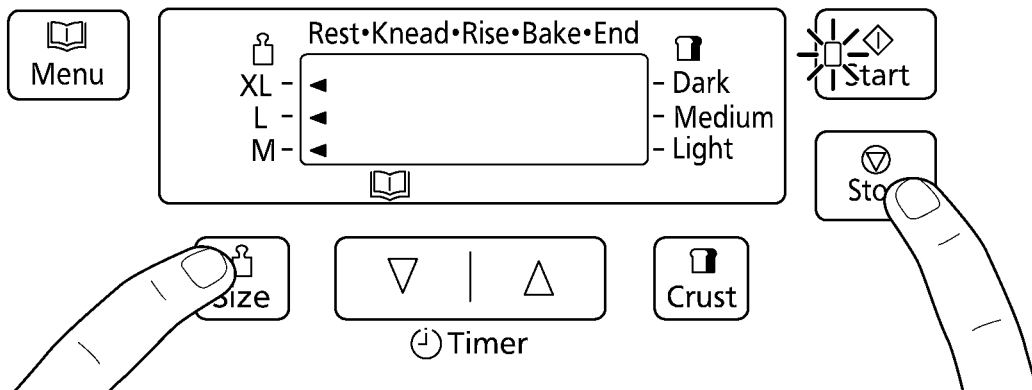


5.3.7. The operation check mode of the solenoid coil for YD

Operation procedure



1. Push a "Crust" key and the "Stop" key at the same time.

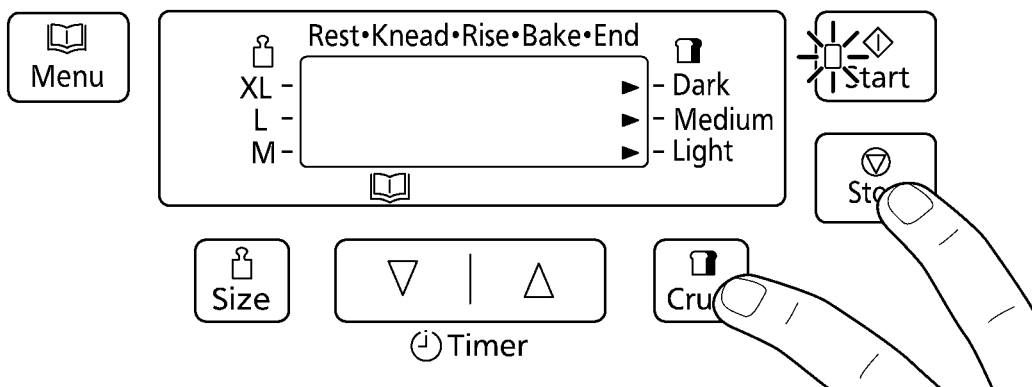- A solenoid for YD is movement. I hear a movement sound.



6 Disassembly and Assembly Instructions

 Caution	
	Be careful not to injure yourself on the metal edge during disassembly, replacement, or assembly. Make sure to wear gloves.


 Caution	
	Do not reuse P.C.Board after repair in case P.C.Board print pattern is disconnected.

Important:

- Refer to the tips on assembly, and carry out the disassembly procedure backward to assembly.
- Remove the bread pan assy and kneading blade B unit before disassembling.

6.1. Dispenser cover assy



1. Remove the dispenser cover from the hinge part.

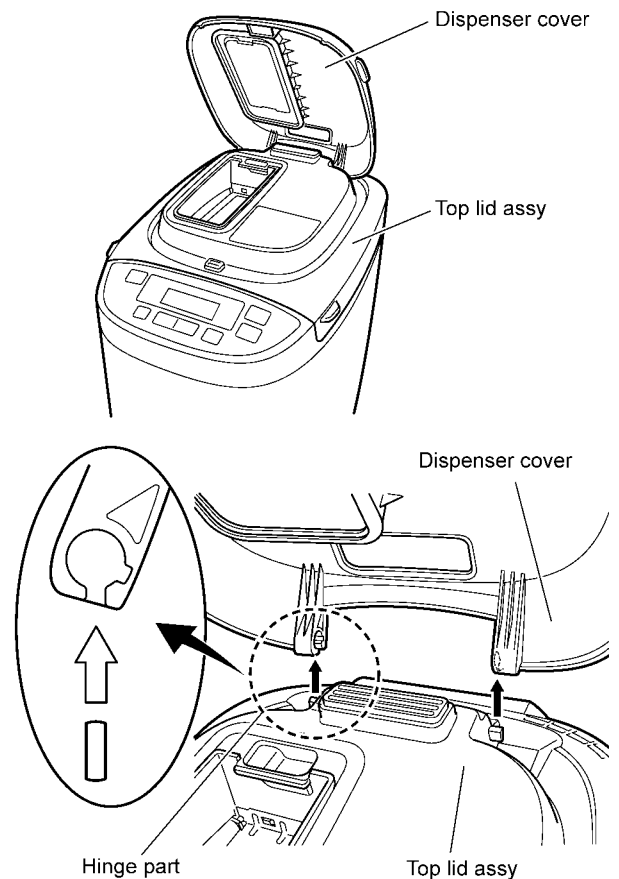

2. Push the middle lid inside (toward arrow symbol direction 1 or 2), slide the fixing spring out from the hook part, and remove the middle lid.
3. Remove the rubber seal from the middle lid.
4. If the fixing springs are dislocated, attach them to the dispenser cover.




Tips on assembly

- Check the setting direction of the middle lid and force the middle lid straight into the fixing spring. (With the anti-reverse set rib, the middle lid cannot be set in the wrong direction.)

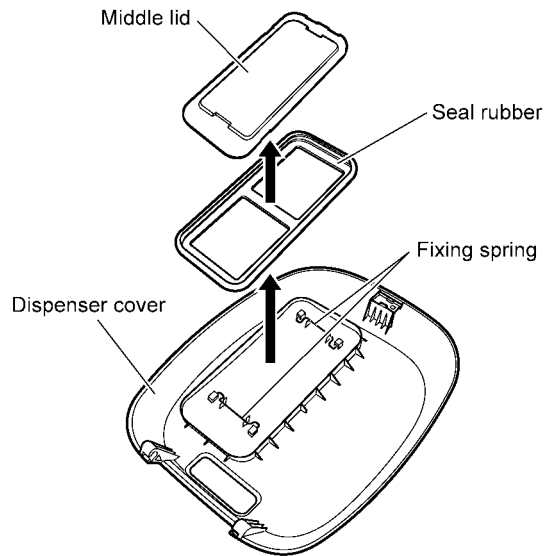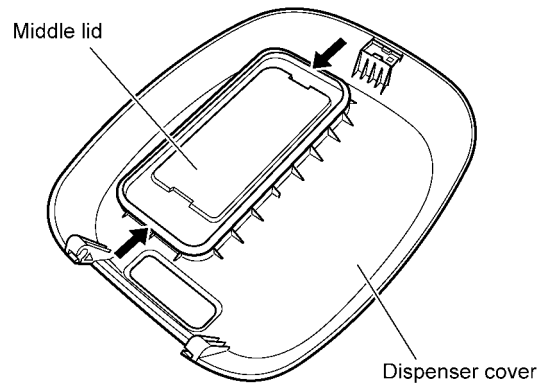


6.2. Top lid assy

1. Remove the dispenser B assy.
2. Remove the top lid assy from the hinge part.

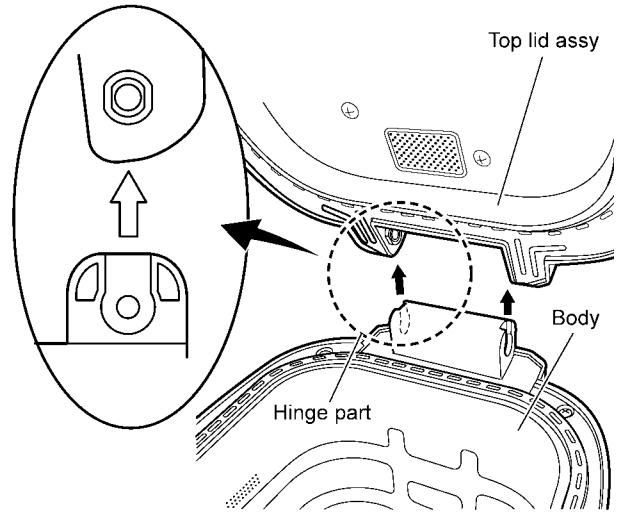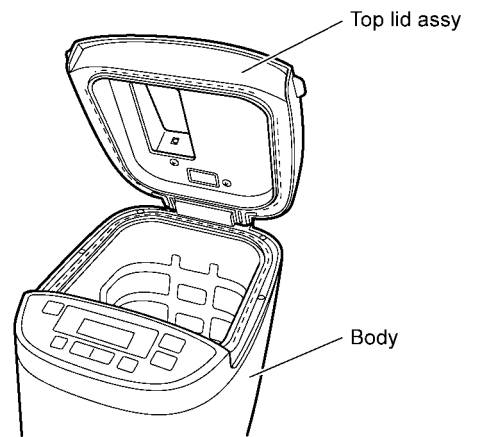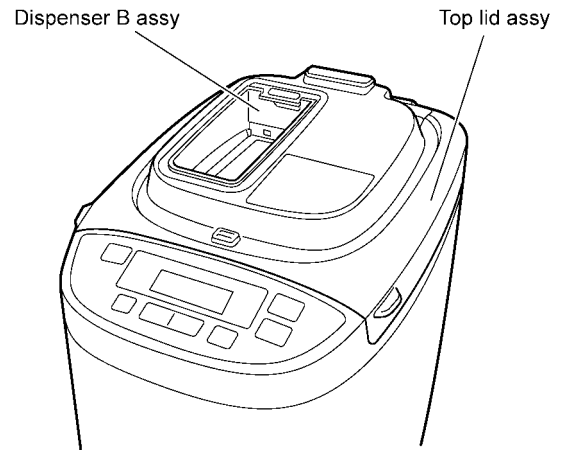


6.3. Body and others


1. Next Bottom side.
2. Remove 3 screws and detach the cord support.

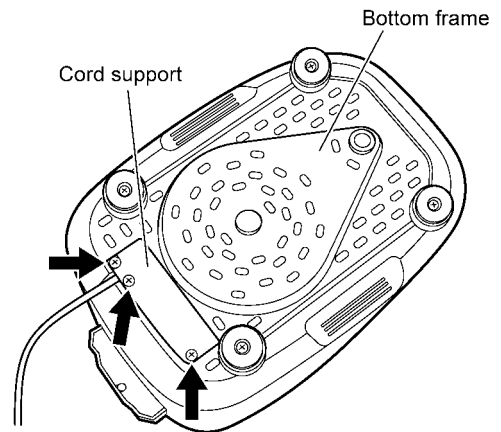

3. Remove 4 screws for rubber leg fixing, and detach the rubber legs.
4. Remove the body.

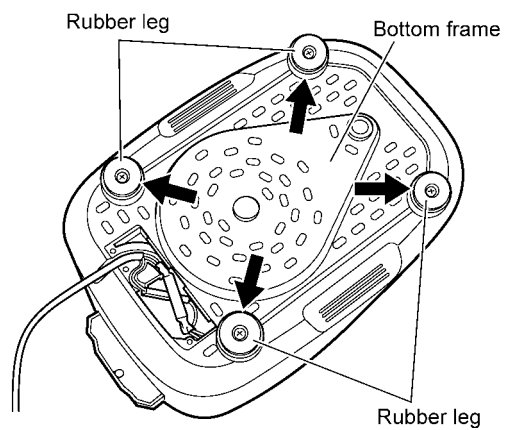


5. Remove the glass tape and disconnect the connector for the power cord assy.
6. Disconnect the connector for Grand wire A assy.

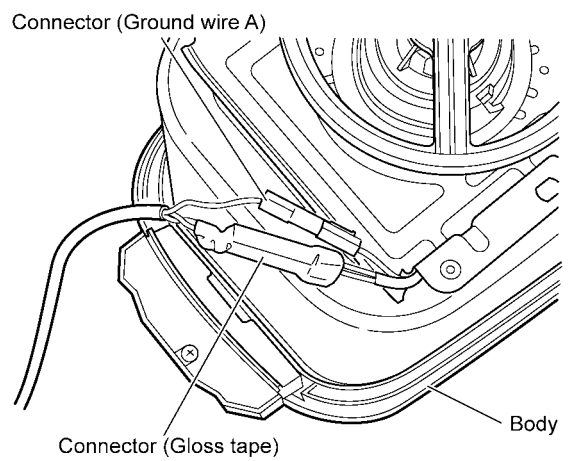


6.4. Solenoid assy B


1. Disconnect the lead wire (solenoid assy B) from P.C. Board B

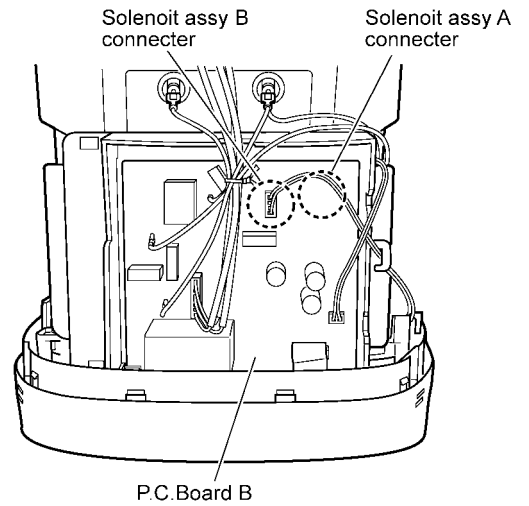


2. Detach the lead wire, from cord hook.

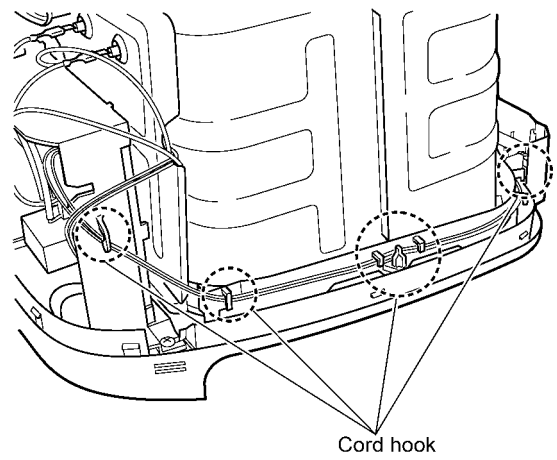

3. Remove the screw and detach the hinge cover.


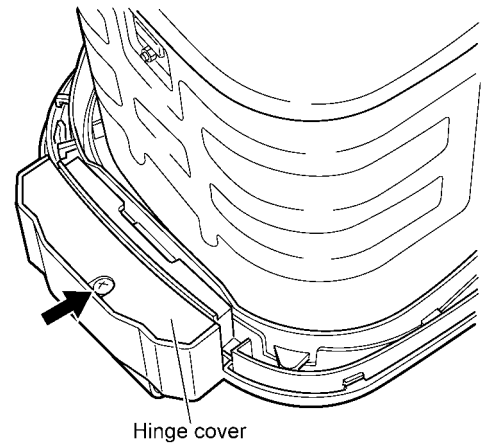


4. Detach the solenoid assy B, solenoid fixing plate and spring A.

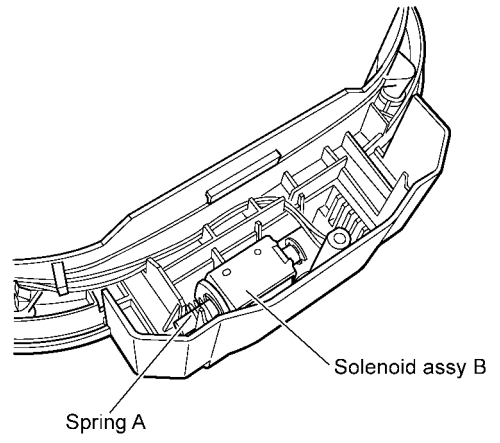

6.5. P.C.Board B assy



1. Remove connector connecting with P.C.Board B.
2. Remove faston terminal connecting to P.C.Board B.

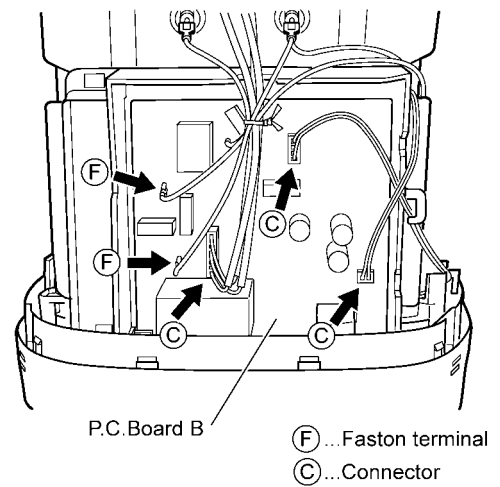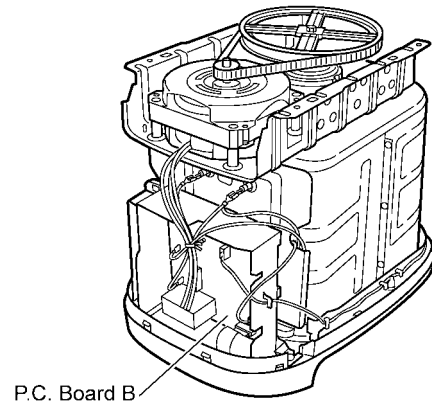


3. Remove the faston terminal connecting to a heater.

***Point around a dismantle**


Please headhunt you while pushing a portion of an arrow for faston terminal with stopper.

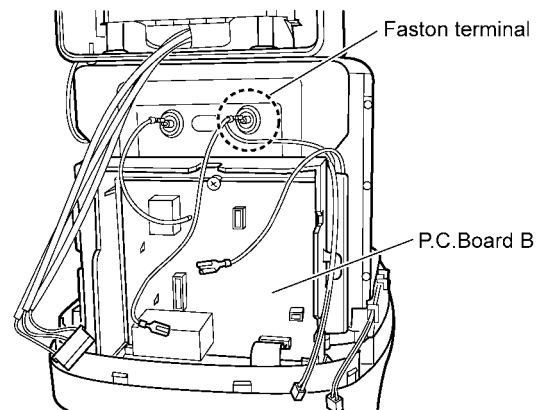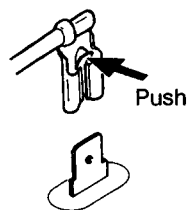


4. Remove three screws which fix a base for P.C.B. to the main body, and exclude a base for P.C.B..

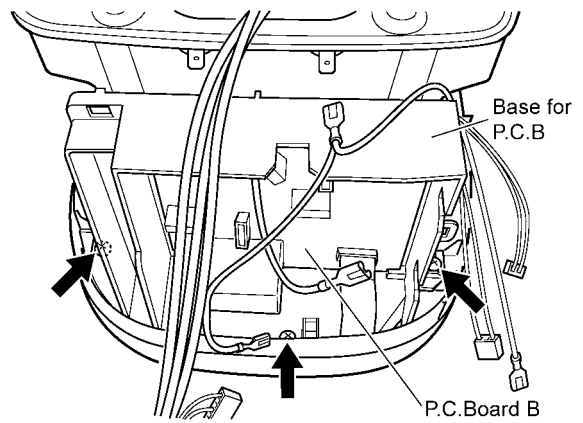

5. Remove one screw.
Remove a flat cable.
Remove a control board B from a base for P.C.B.

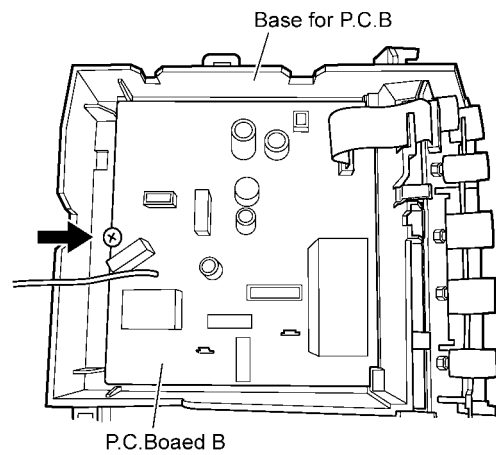


6. Open a claw and exclude P.C.Board A assy from a base for P.C.B..

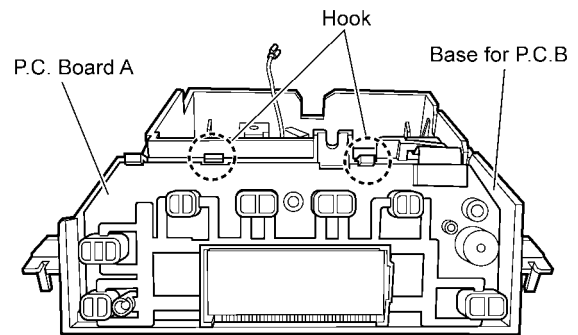

6.6. Pulley B, connector lower unit and others



1. Remove six screws and remove heater case unit from the main body.

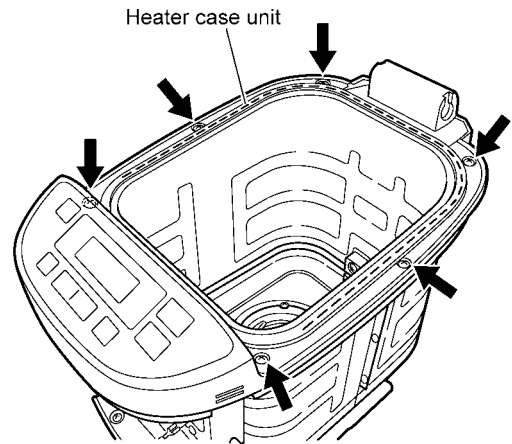

2. Next Bottom side.
3. Remove the belt with sliding it out while rotating pulley B.
4. Remove the hexagon nut (special) fixing pulley B by rotating it counterclockwise.
5. Remove the round plain washer, lock washer and pulley B.
6. Remove U-clip and pull the connector lower unit out toward the inner side.


Tips on assembly

- Position each "D" cut of the connector lower unit, pulley B and lock washer.

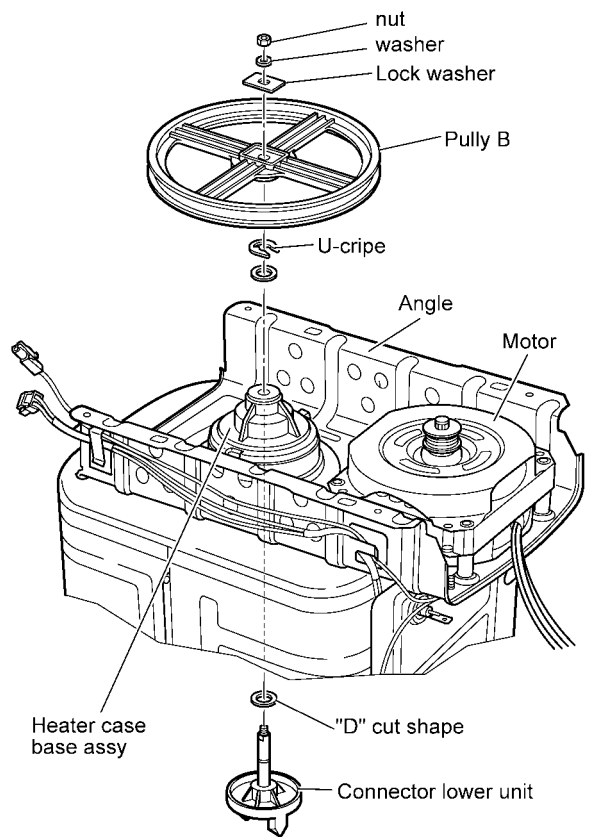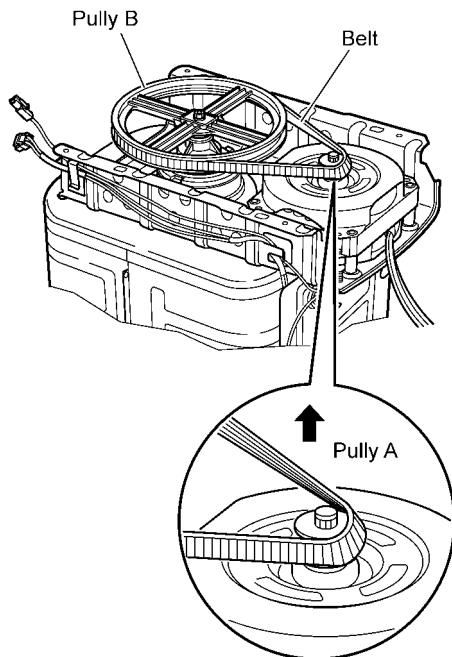


6.7. Heater case base assy


1. Remove a lead wire off the hook of angle.

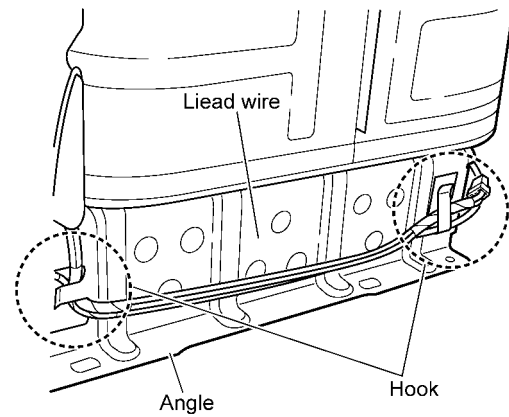

2. Remove the 4 screws and detach the heater case base assy.
3. Remove the heater case unit from the angle.

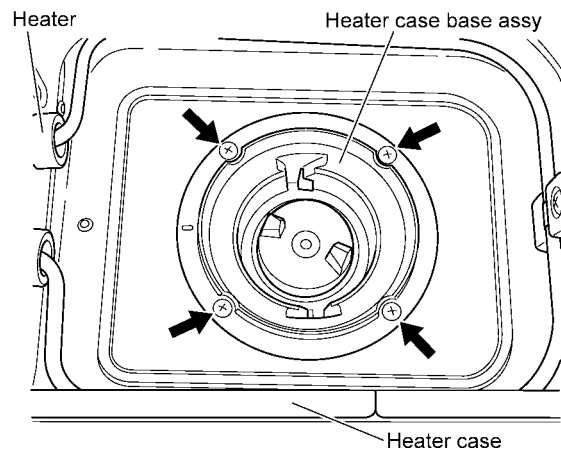

4. Remove an angle and screw one off the frame of insulator and exclude Angle.

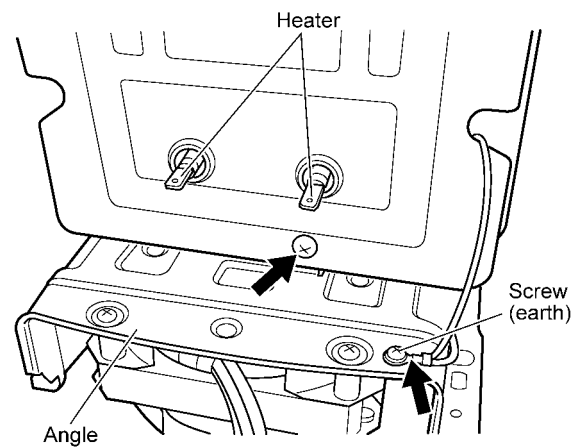


Tips on assembly

- Set the positioning marks across from each other on the heater case side and on heater case base side.


6.8. Motor assy

1. Remove 4 screws and detach the motor assy.

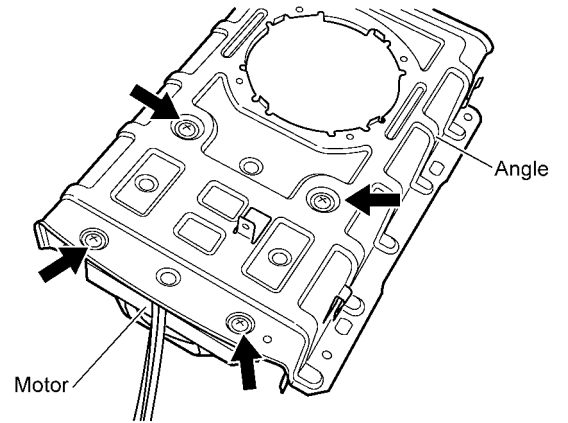



6.9. Heater case and frame of insulator

1. Remove the screw and detach the frame of insulator.

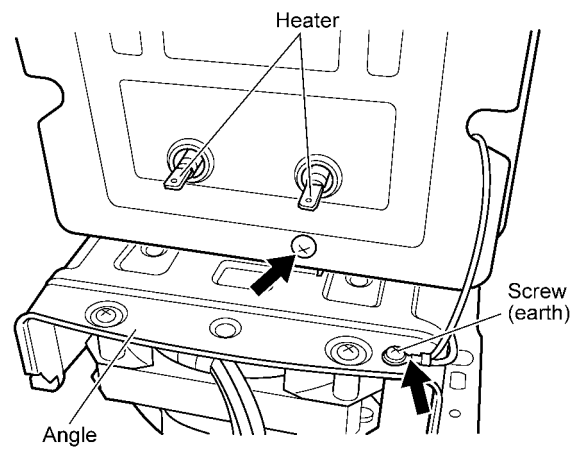


6.10. Temperature fuse

1. Remove screw/nut of the frame of insulator, and change a thermal fuse.

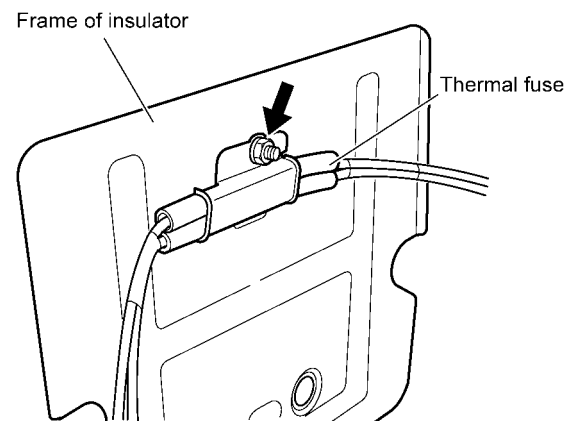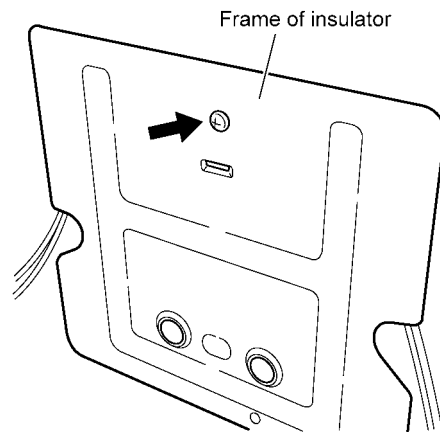


6.11. Sensor

1. Remove screw/nut off the heater case unit and change a sensor assy.

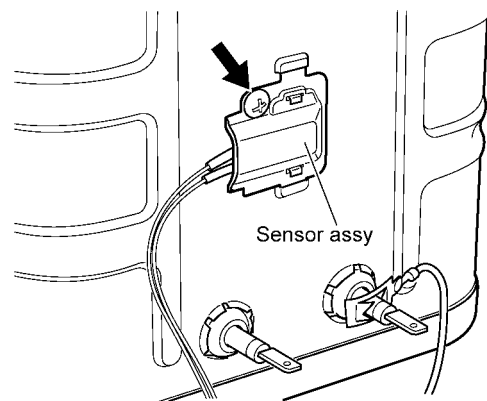


6.12. Heater


1. Remove a ground wire A assy of the heater.

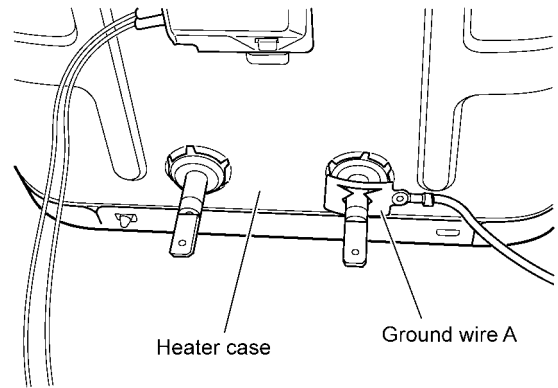


2. Take the 3 claws off from the heater insulator at the outside of the heater case unit.

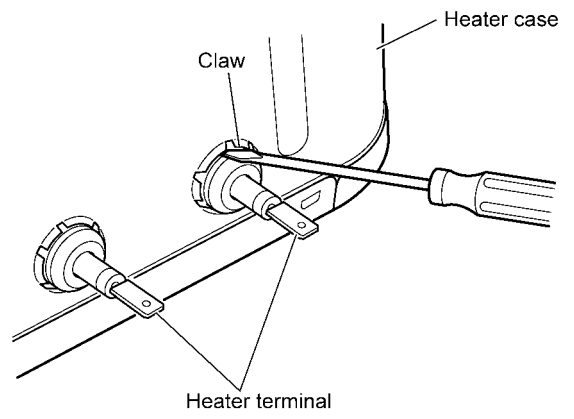

3. Remove the screw and hexagon nut fixing heater insulator A.

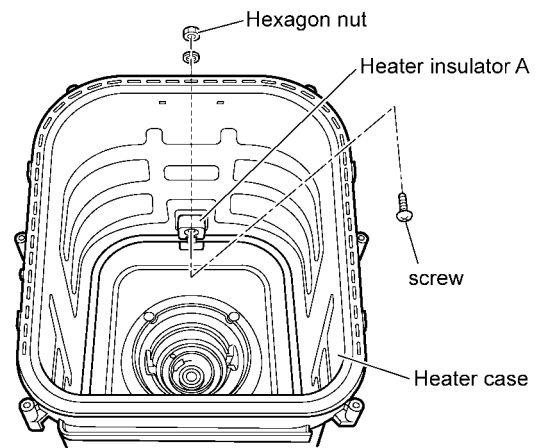

4. Pull out the heater upward.

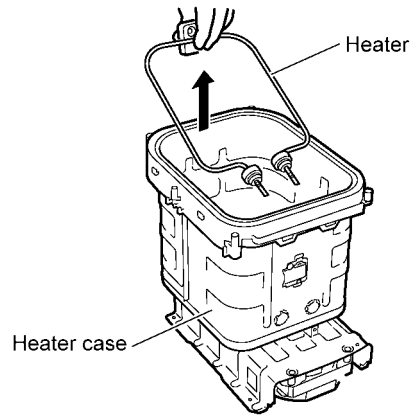


6.13. Bread pan


1. Turn the bread pan upside down and remove 3 screws.
2. Remove the packing.

Tips on assembly

- Set the positioning marks across from each other when assembling the mounting shaft assy and the bread pan.

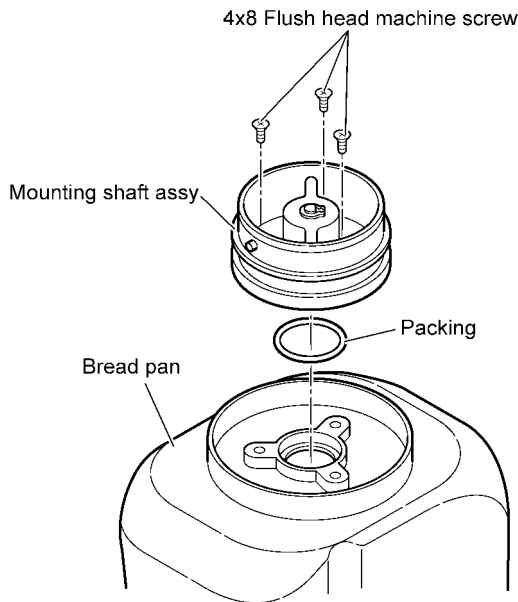

Connector upper side

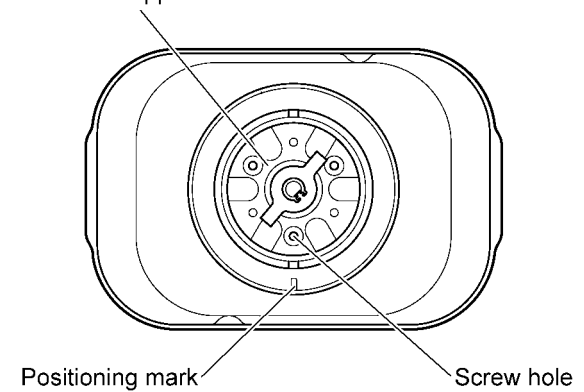


6.14. Post-assembly confirmation

Confirm the insulation resistance, insulation proof stress and operation response after reassembling.


1. Insulation resistance: Upper than 2M ohm at DC500V
2. Insulation proof stress: Longer than 1 min. at AC1000V
3. Operation response: Confirm the device performance in the manner of "Test Mode."

7 Wiring Connection Diagram

7.1. Schematic diagram

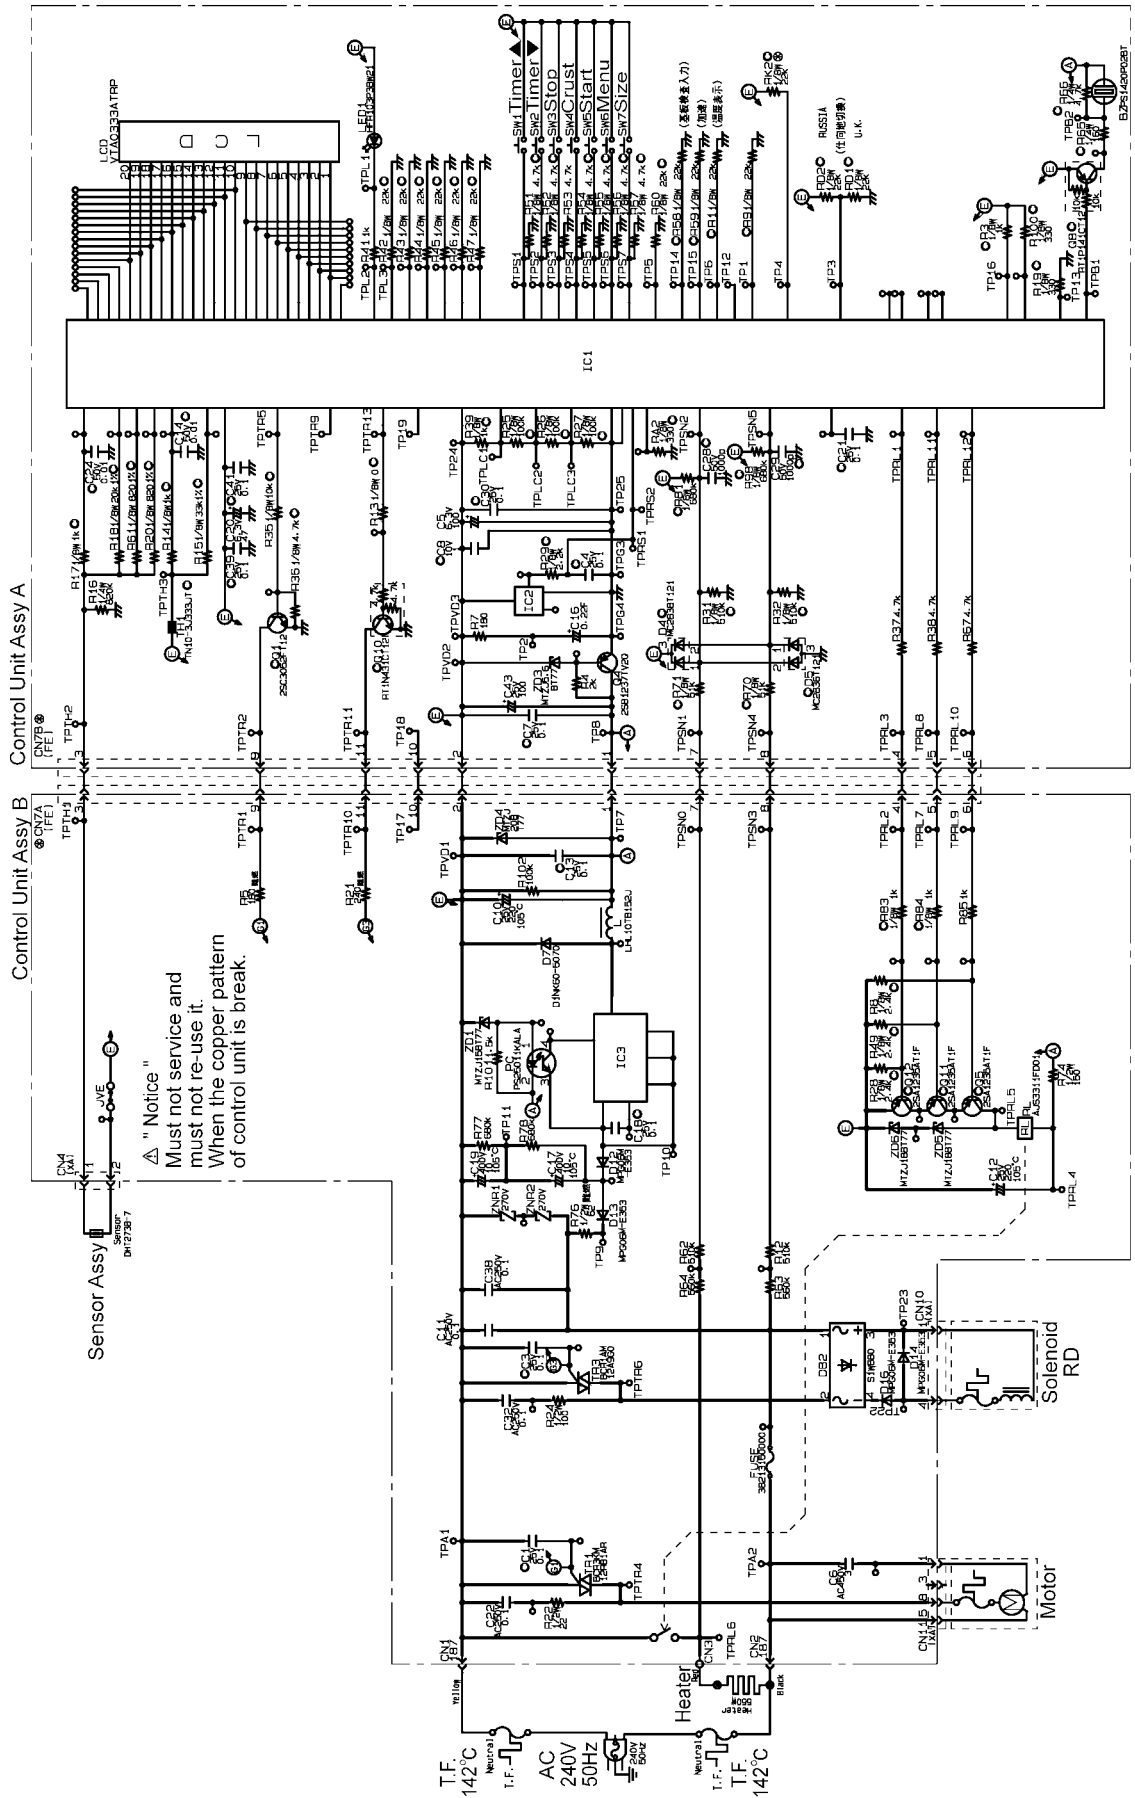


7.2. Basic wiring diagram

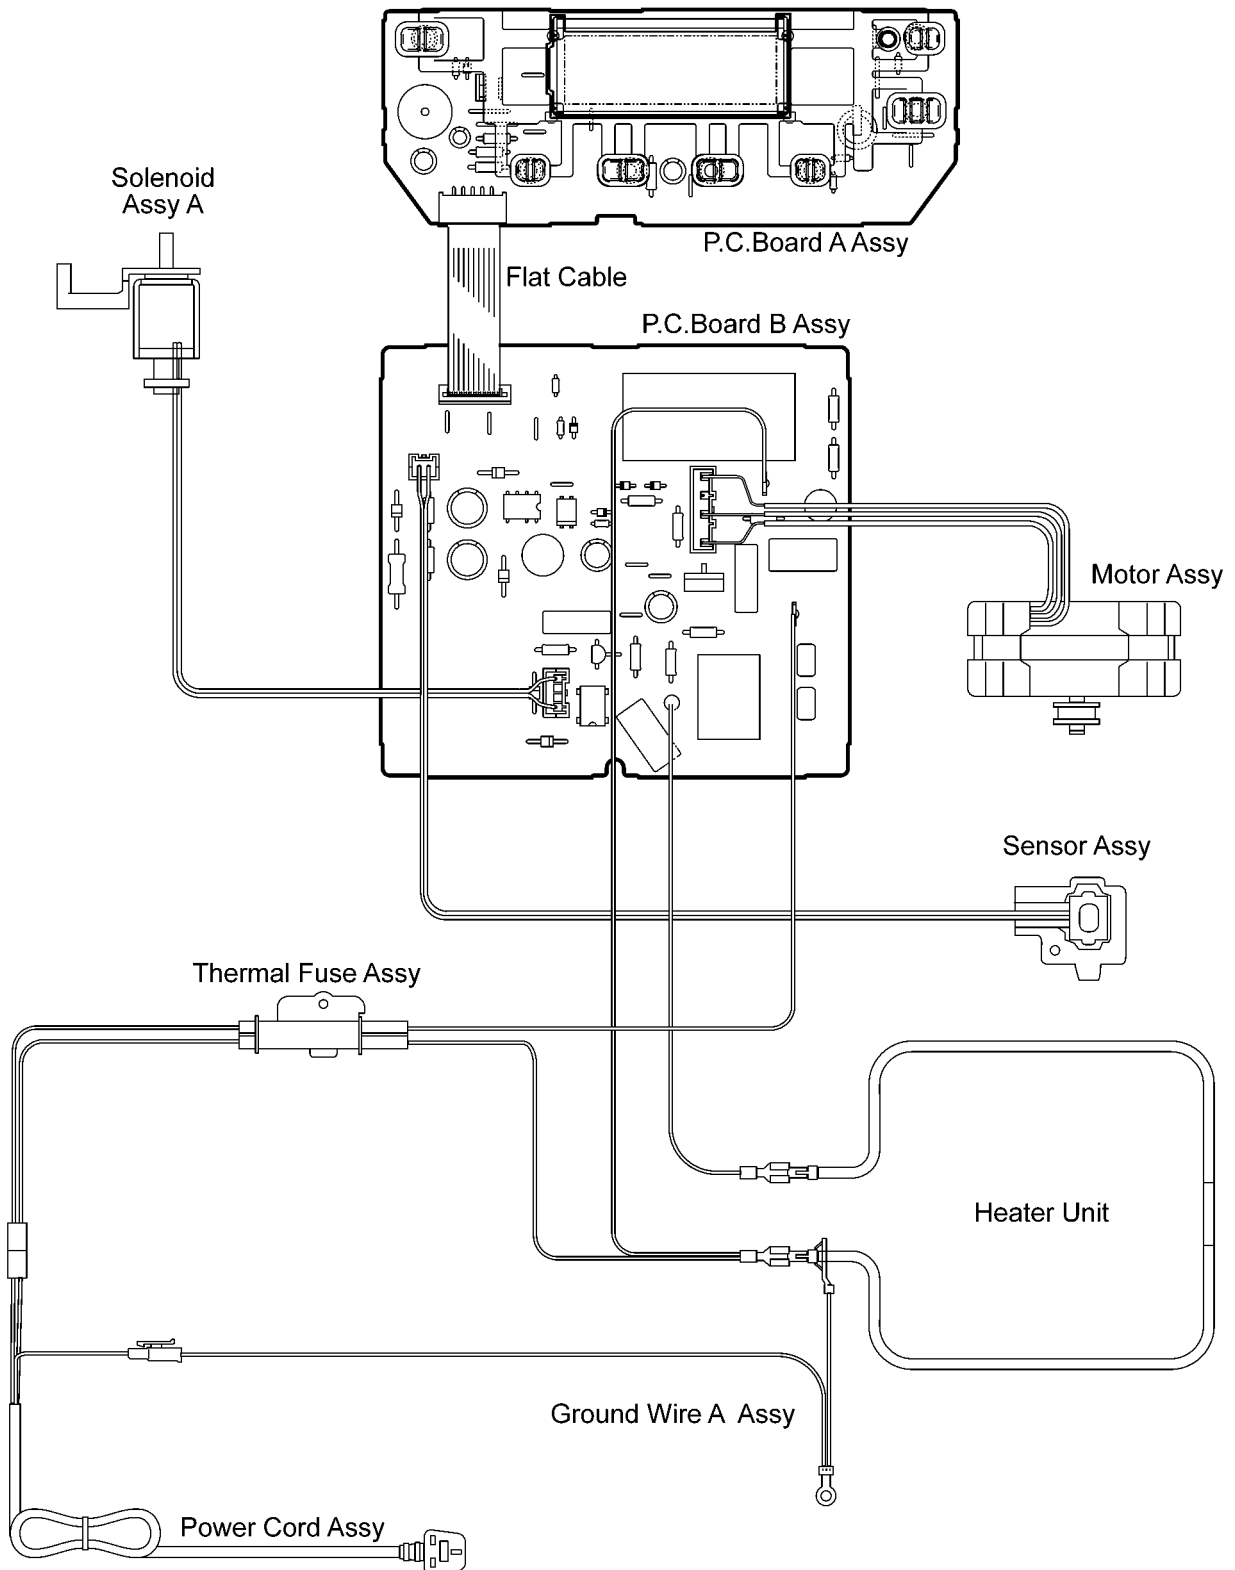

8 Exploded View and Replacement Parts List

8.1. PARTS LOCATION

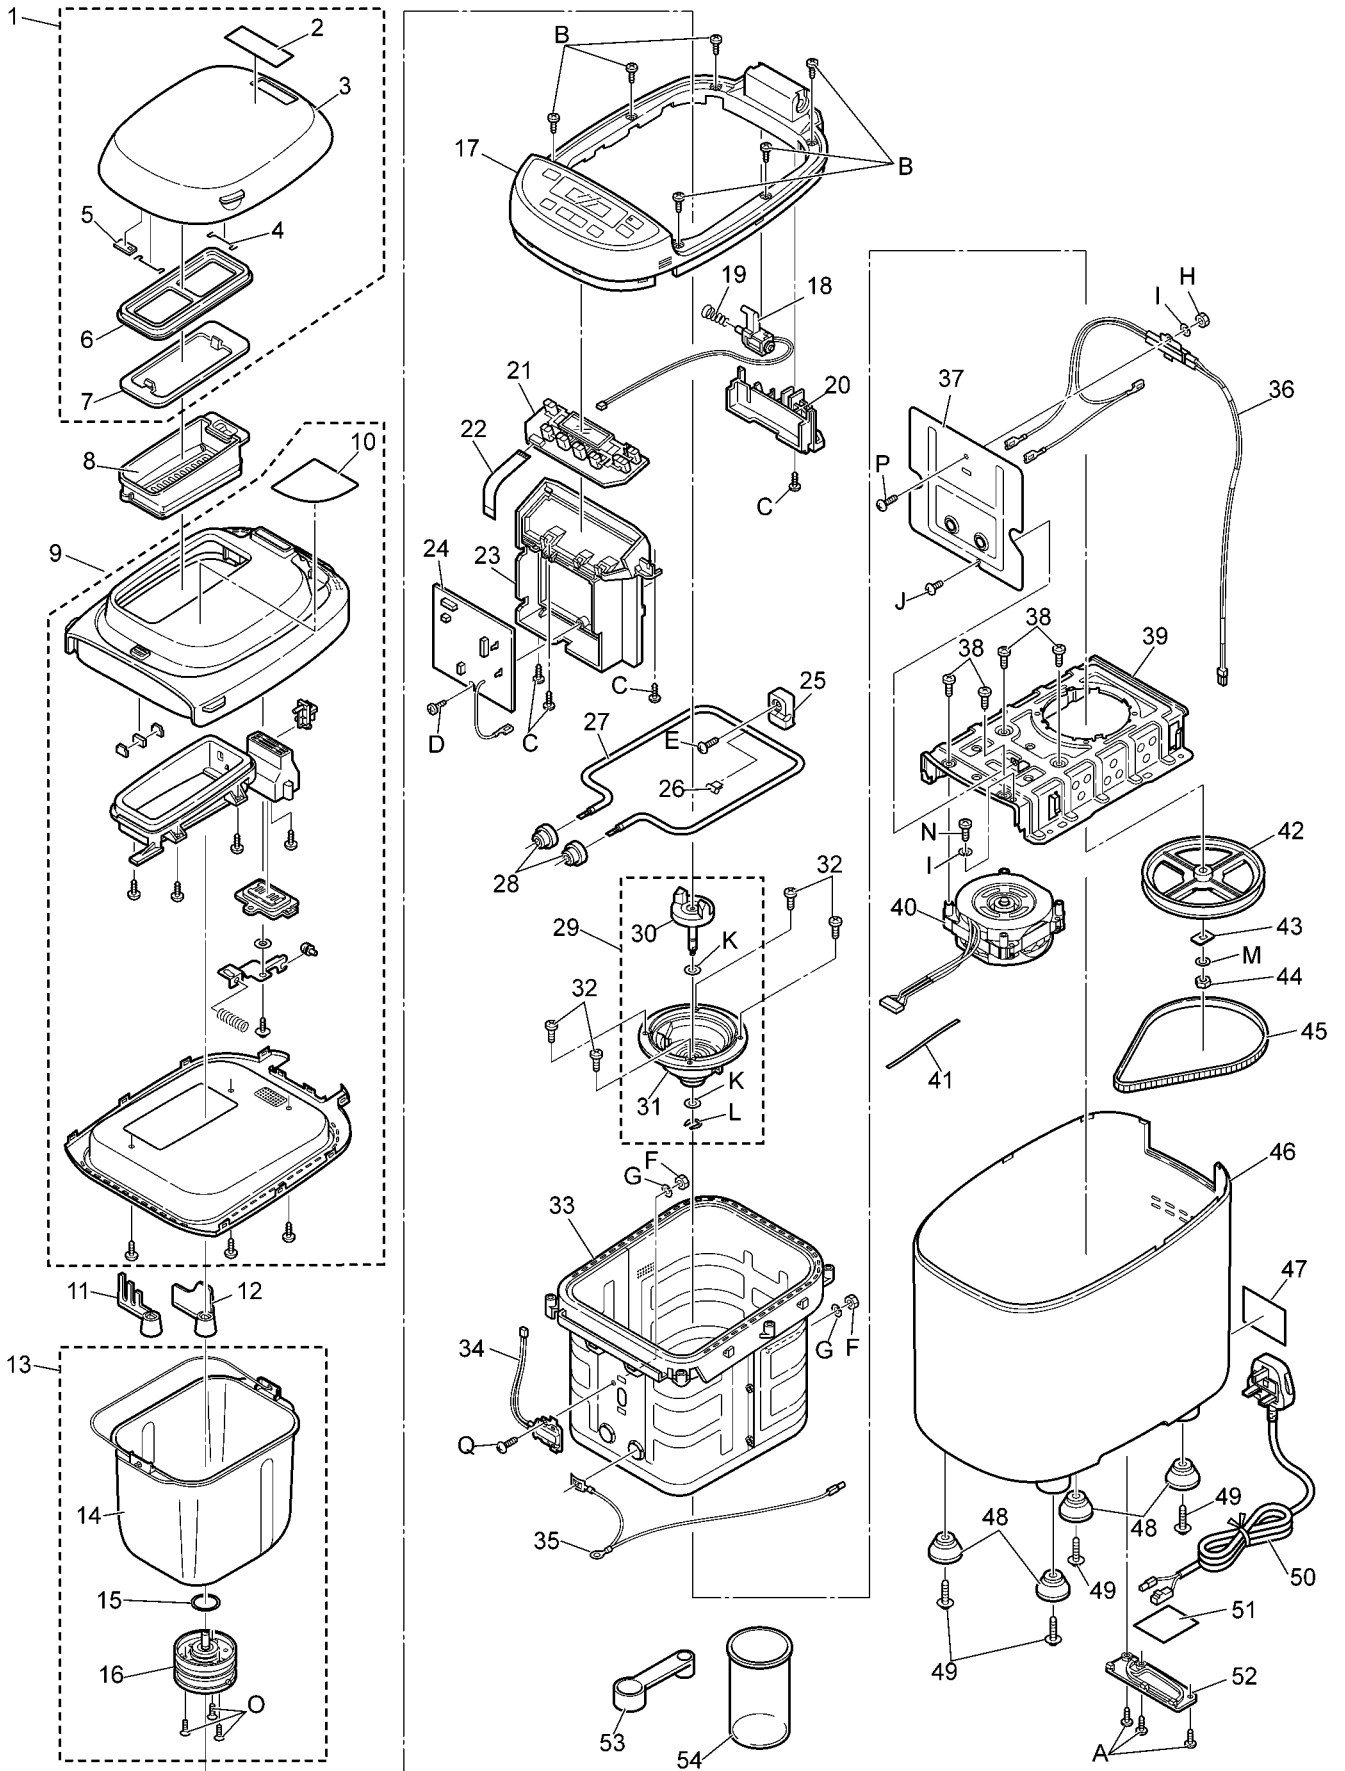

8.2. REPLACEMENT PARTS LIST

Notes: Important safety notice

- Components identified by \triangle mark have special characteristics important for safety.
- " When replacing any of these components use only manufacturer's specified parts."

MODEL No.SD-2501WXC

Safety	Ref. No.	Part No.	Part Name & Description	Pcs/Set	Remarks
				2501WXC	
<PARTS LIST>					
	1	ADA39E166-W0	Dispenser cover assy	1	
\triangle	2	ADY02E166-W0	Caution label	1	
	3	ADD04E166-W0	Dispenser cover	1	
	4	ADD35-143	Fixing Spring	2	
	5	ADD37E165	Magnet Plate B	1	
	6	ADD34E165	Seal rubber	1	
	7	ADD30E165-H0	Middle Lid	1	
	8	ADA44E165-H0	Dispenser B assy	1	
	9	ADD79E166-W0	Top Lid assy	1	
	10	ADY06E166-W0	Menu label	1	
	11	ADD97E160	Kneading blade A unit	1	For Rye
	12	ADD96E160	Kneading blade B unit	1	
	13	ADA12E165	Bread pan assy	1	
	14	ADD84E165	Bread pan	1	
	15	ASD191U103-K	Packing	1	
	16	ADA29E165	Mounting shaft assy	1	
	17	ADB96E166W0S	Upper frame	1	
\triangle	18	ADA40E165	Solenoid assy B	1	For Raisin
	19	ASD850-108-W	Coil spring A	1	
	20	ADB16E165-W0	Hinge cover	1	
\triangle	21	ADR30E166	P.C.Board A assy	1	
\triangle	22	ADP10E166	Flat cable	1	
	23	ADT01E165	Base for P.C.B.	1	
\triangle	24	DR31E166	P.C.Board B assy	1	
	25	ADE09-163	Heater insulator A	1	
	26	ADE16-163	Fixing metal for heater	1	
\triangle	27	ADA22E165	Heater	1	240V-550W
	28	ADE10E165	Heater insulator B	2	
	29	ADA25E165	Heater case base assy	1	
	30	ADE97A107	Connector lower unit	1	
	31	ADE98E165	Heater case base unit	1	
	32	ADJ17A115	Screw P	4	
\triangle	33	ADE96E165	Heater case unit	1	W/No.25-28
\triangle	34	ADA11E166	Sensor assy	1	
\triangle	35	ADA30E166	Ground wire A assy	1	
\triangle	36	ADA17E165	Thermal fuse assy	1	Blowout temp. is 142 degrees of centigrade.
	37	ADE03E166	Heat insulator	1	
	38	ASD938-101AD	Screw R	4	
	39	ADE01E165	Angle	1	
\triangle	40	ADA10E147	Motor assy	1	W/TF
	41	ADP50-143	Bind wire A	4	
	42	ADF05E165	Pulley B	1	
	43	ASD867-100AW	Lock washer	1	
	44	ASD873-100BZ	Hexagon nut (special)	1	
	45	ADF01E165	Belt	1	
	46	ADB01E166-W0	Body	1	
\triangle	47	ADY01E166	Rating plate	1	
	48	ADB09E160-H1	Rubber leg	4	
	49	ADJ14E160	Screw	4	
\triangle	50	ADA24E165	Power cord assy	1	
\triangle	51	AJ-236-20	Glass tape	1	
	52	ADP07E165-W0	Cord support	1	
	53	ASD911U112P0	Measuring spoon	1	
	54	ASD917-108-K	Measuring cup	1	
<SMALL STANDARDIZED METAL PARTS>					
	A	XTB4+10BFJ	Screw	3	
	B	XTB4+14BFC	Screw	6	
	C	XTB4+14BFJ	Screw	4	
	D	XTB4+14BFJ	Screw	1	
	E	XTT4+17HFN	Screw	1	
	F	XNG4BFJ	Hexagon nut	2	
	G	XWA4BFJ	Spring washer	2	

Safety	Ref. No.	Part No.	Part Name & Description	Pcs/Set	Remarks
				2501WXC	
	H	XNG4BFJ	Hexagon nut	1	
	I	XWA4BFJ	Spring washer	2	
	J	XTT4+8FFN	Screw	1	
	K	X28XL5000	Motor washer A	2	
	L	XUE6FP	U-clip	1	
	M	XWG5E10FJ	Washer	1	
	N	XTN4+10FFJ	Screw	1	
	O	XSS4+8UW	Screw	3	
	P	XSN4+8FFJ	Screw	1	
	Q	XTT4+8FFN	Screw	1	
<PACKING SPECIFICATIONS>					
		ADZ01E166-W0	Carton	1	
		ADZ02E165	Upper cushion	1	
		ADZ03E165	Lower cushion	1	
	△	ADZ50E166	Operating instructions	1	
	△	ADZ63E142	Operating instructions C	1	
		ADZ06E165	Protection board	1	
		ASD749-100	Lid protection sheet	1	
		ADY14B166-W0	Multilingual card	1	
		ADZ51E166	Warranty card	1	

8.3. PACKING INSTRUCTION

