

HISTORY INFORMATION FOR THE FOLLOWING MANUAL:

SERVICE MANUAL (UNIQUE)

ITC3.5 CHASSIS
Segment: SE-Pan Asia

Version	Date	Subject
1	7/2014	1 st Issue.
2	9/2014	Part Information Changed (Pg 19, 23)

LCD TV
SONY[®]
9-888-162-P2
For SM - Common , please refer :
9-888-162-XX

SERVICE MANUAL (UNIQUE)

ITC3.5 CHASSIS
Segment: SE-Pan Asia

LCD TV

SONY®

MODEL LIST

<u>MODEL</u>	<u>REMOTE</u>	<u>DESTINATION</u>
KDL-32R300B	RM-ED054	SOMEA AF1 (South Africa, Iran, Saudi Arabia, Kuwait, UAE etc), SSEA SP1 (Singapore, Brunei, Cambodia, Myanmar, Indonesia etc) , Vietnam, Malaysia, Thailand, Indonesia.
KDL-32R304B	RM-ED054	ME7
KLV-32R302B	RM-GA024	SOMEA AF1 (South Africa, Iran, Saudi Arabia, Kuwait, UAE etc), SSEA SP1 (Singapore, Brunei, Cambodia, Myanmar, Indonesia etc) , Philippines.
KLV-32R306B	RM-GA024	ME7
KDL-40R350B	RM-ED054	SOMEA AF1 (South Africa, Iran, Saudi Arabia, Kuwait, UAE etc), SSEA SP1 (Singapore, Brunei, Cambodia, Myanmar, Indonesia etc) , Vietnam, Malaysia, Indonesia.
KLV-40R352B	RM-GA024	SOMEA AF1 (South Africa, Iran, Saudi Arabia, Kuwait, UAE etc), SSEA SP1 (Singapore, Brunei, Cambodia, Myanmar, Indonesia etc) , Philippines.

TABLE OF CONTENTS

<u>Section Title</u>	<u>Page</u>
1. SAFETY NOTES	
1-1. How to Remove TV Stand.....	5
1-2. How to Remove Under Cover.....	6
1-3. How to Remove B-Board.....	7
1-4. How to Remove Main Bracket.....	8
1-5. How to Remove Stand Bracket.....	9
1-6. How to Remove Ornamental Panel.....	10
1-7. How to Remove H-Board.....	11
2. DIAGRAMS	
2-1. Circuit Board Location.....	12
2-2. Wire Dressing.....	13
3. DISASSEMBLY, EXPLODED VIEWS AND OTHER PARTS	
3-1. KDL, KLV-32R3*B.....	17
3-2. KDL, KLV- 40R3*B.....	22

Please refer Service Manual – Common for below information :

- General Safety Notes
- Self Diagnostic Function
- Triage Chart
- Troubleshooting, Troubleshooting reference
- Adjustments
- Diagrams : Block Diagram , Connector Diagram


SECTION 1
DISSASSEMBLY AND REMOVAL CAUTION

CAUTION: During this disassemble, the TV set must lie above soft cushion / protection sheet. Use glove through out the process.

1-1. How To Remove TV Stand (32/40)

1. Place TV set facing down on a flat surface


◆ MOLD STAND

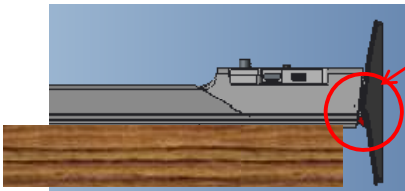


Make sure
TV stand is
not hitting to
the edge of
table

2. Remove 2 X SCREW, +PSW M5x20 from bottom and remove the stand.

◆ MOLD STAND (32)

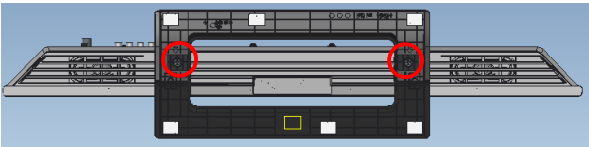

◆ MOLD STAND (40)


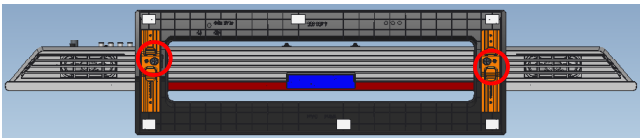


Safety Notes


CAUTION: During this disassemble, the TV set must lie above soft cushion / protection sheet. Use glove through out the process.

1-2. How To Remove Under Cover (32/40)


- 1 Ensure all screws on Under Cover is removed.

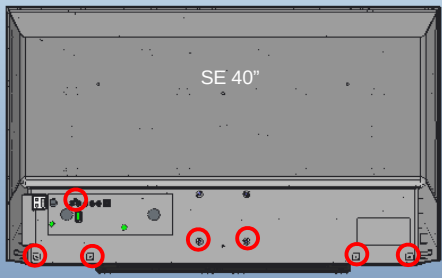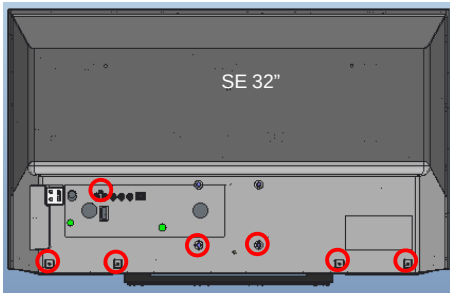

- 2 Lift up Under Cover from the bottom side

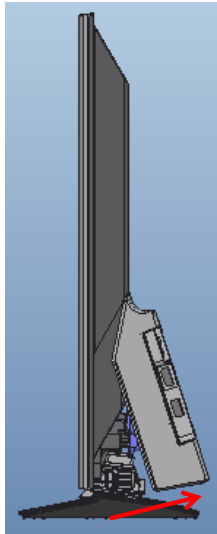


- 3 Pull out the Under Cover from the slot

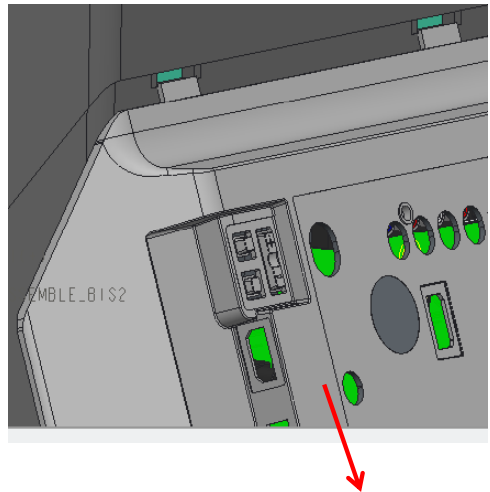


CAUTION: During this disassemble, the TV set must lie above soft cushion / protection sheet. Use glove through out the process.

1-3. How To Remove B-Board (BIS2) (32/40)

1. Remove all the connectors.

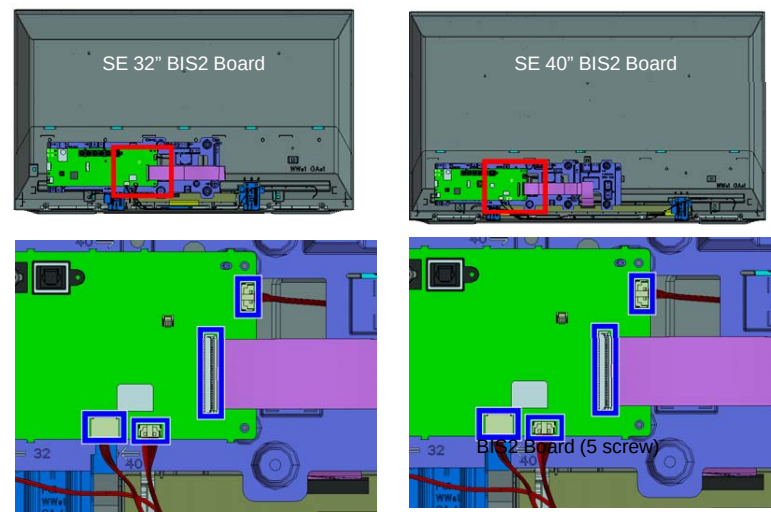

2. Remove all the screws.

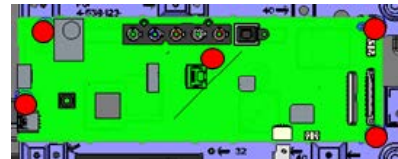


3. Remove B-Board from Main Bracket. *Will have sticky feeling during pulling process due to thermal sheet underneath.

CAUTION: During this disassemble, the TV set must lie above soft cushion / protection sheet. Use glove through out the process.

1-4. How To Remove Main Bracket (32/40)

1. Remove all screws.

◆ Main Bracket (32) 6 screws

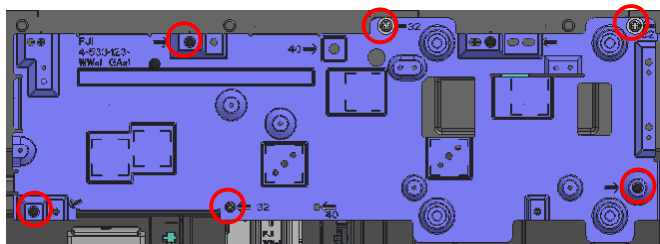

◆ Main Bracket (40) 8 screws





CAUTION: During this disassemble, the TV set must lie above soft cushion / protection sheet. Use glove through out the process.



1-5. How To Remove Stand Bracket (32/40)

1. Take out screw

◆ Stand Bracket (32) 2 screws

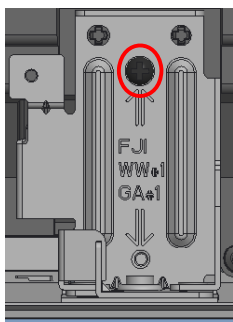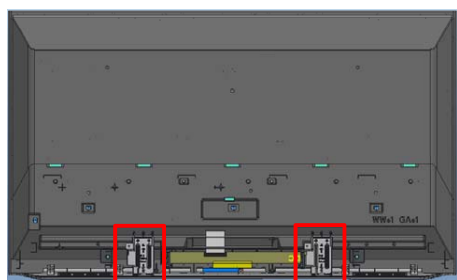

◆ Stand Bracket (40) 4 screws

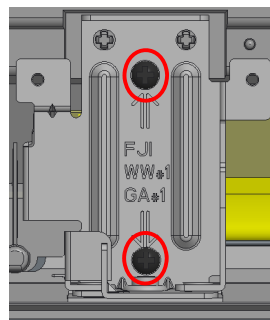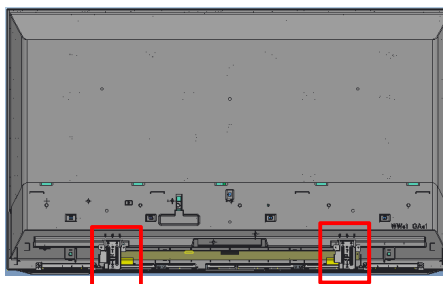

Safety Notes


CAUTION: During this disassemble, the TV set must lie above soft cushion / protection sheet. Use glove through out the process.

1-6. How to Remove Ornamental Panel

1. Remove Screw



2. Push Ornamental Panel to right side before remove it.

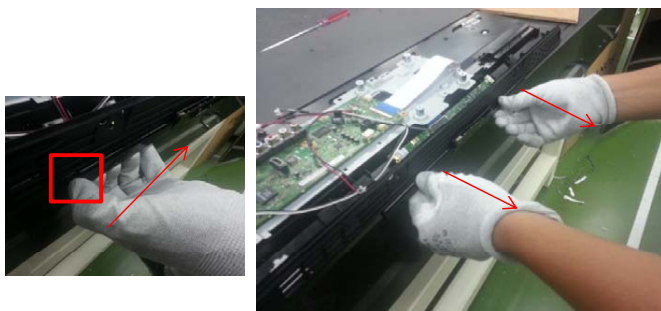


3. Pull out wire harness from H-Board



CAUTION: During this disassemble, the TV set must lie above soft cushion / protection sheet. Use glove through out the process.



1-7. How To Remove H-Board

1. Hold H-board at left side area and pull out the board upwards

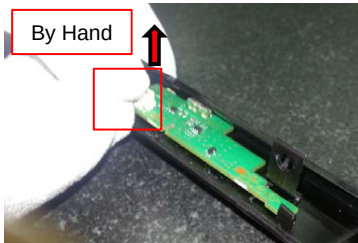


OR

Prepare thin plate without sharp edge (If there sharp edge, it must cover with some tape)

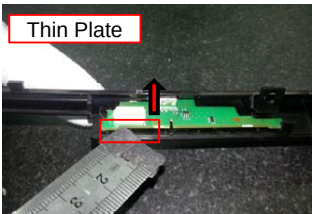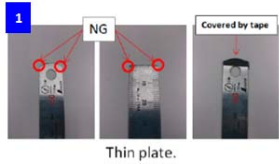

1. Pick the H-Board from bottom side using non sharp end thin plate and pick up to pull out.

2. Make sure H-Board is detached over the rib and then pull out the H-Board

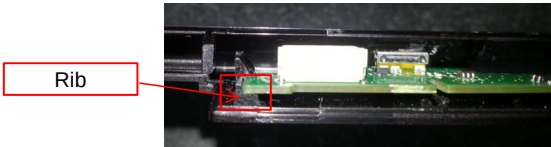


SECTION 2
DIAGRAMS

2-1.CIRCUIT BOARD LOCATION

2-1-1. KDL, KLV-32R3*B


BIS BOARD

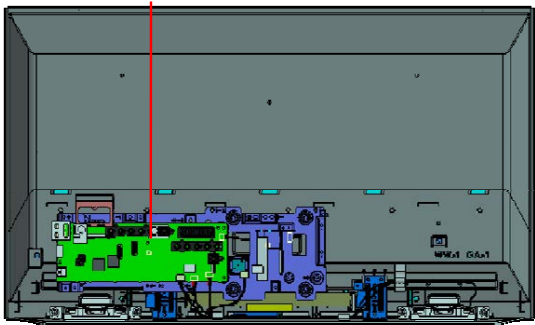

PANEL ORNAMENTAL


2-1-2. KDL, KLV-40R3*B

BIS BOARD

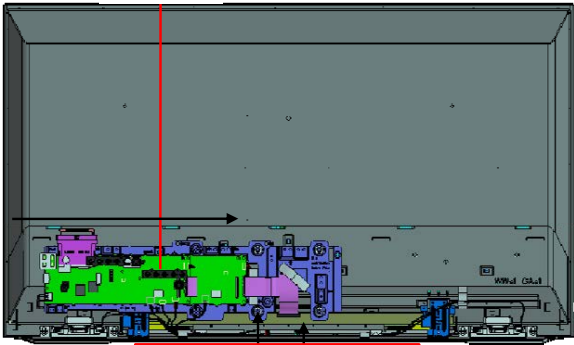

PANEL ORNAMENTAL

PANEL ORNAMENTAL







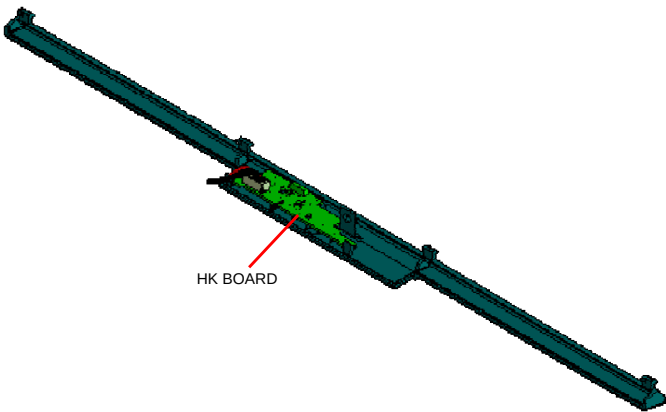


HK BOARD

2-2. Wire Dressing

a) KDL, KLV-32R3*B

1) Flexible Flat Cable 30P

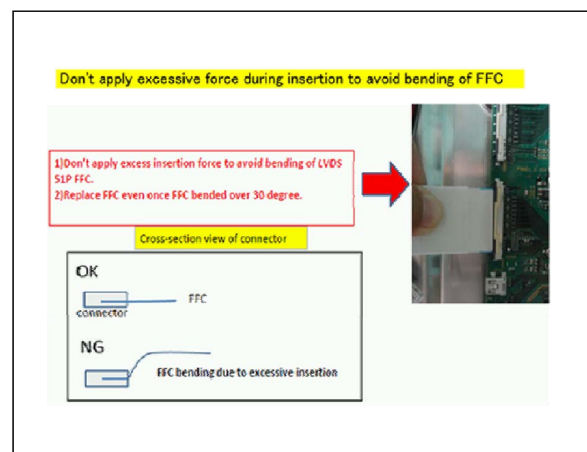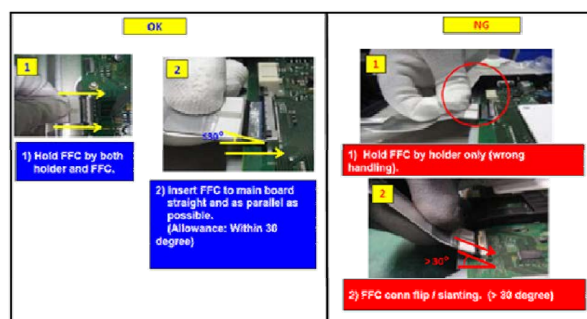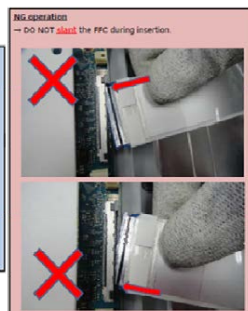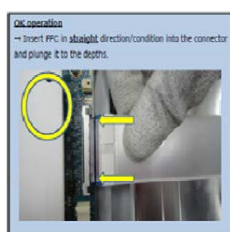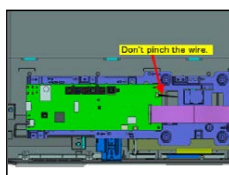
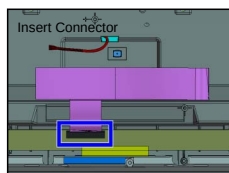
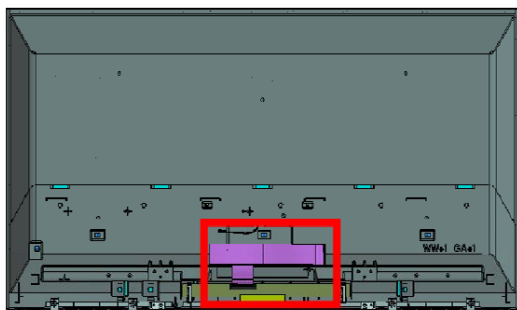


2-2. Wire Dressing

a) KDL, KLV-32R3*B

2) Harness Assy

* Illustrations numberings (a ~ g) are not arranged according to actual process sequence.




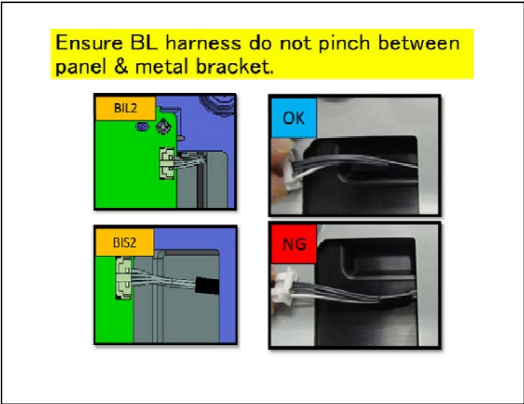
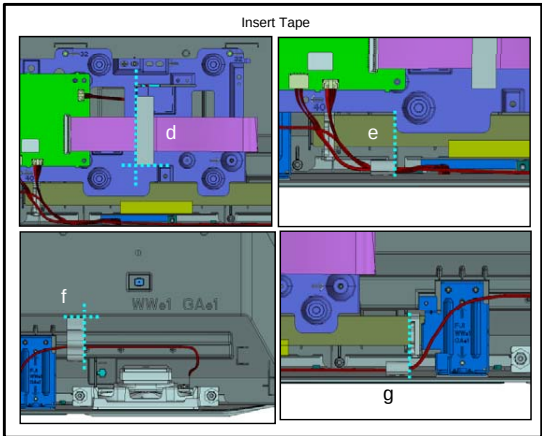
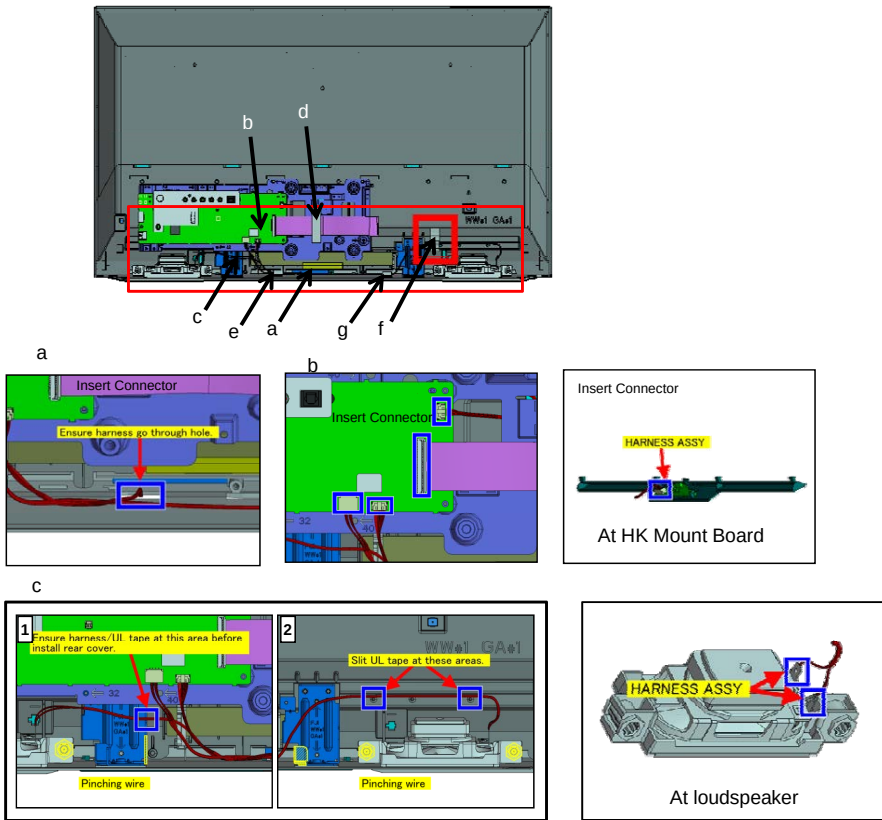


Diagrams


2-2. Wire Dressing

b) KDL, KLV-40R3*B

1) Flexible Flat Cable 30P

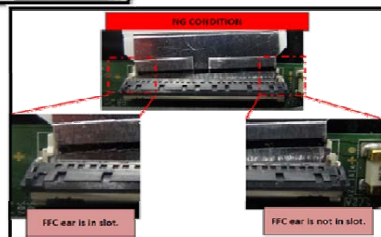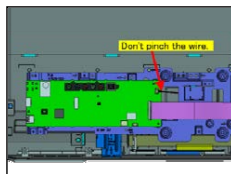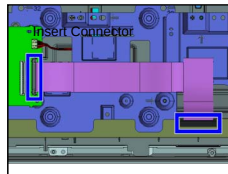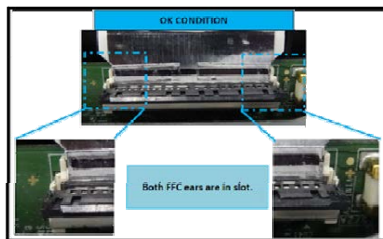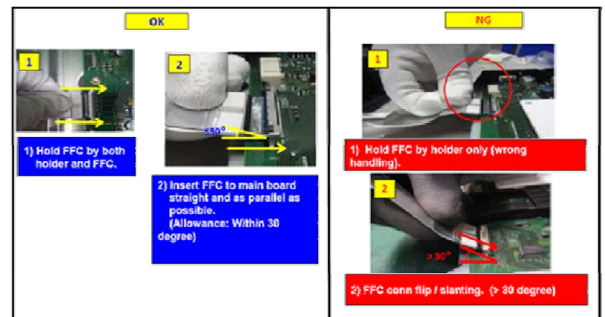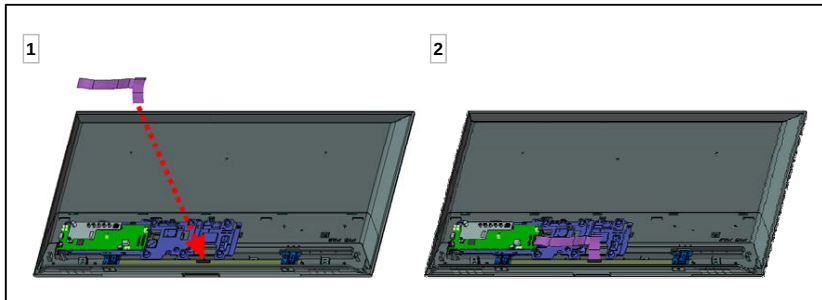






Step to connect FFC at Source board side.

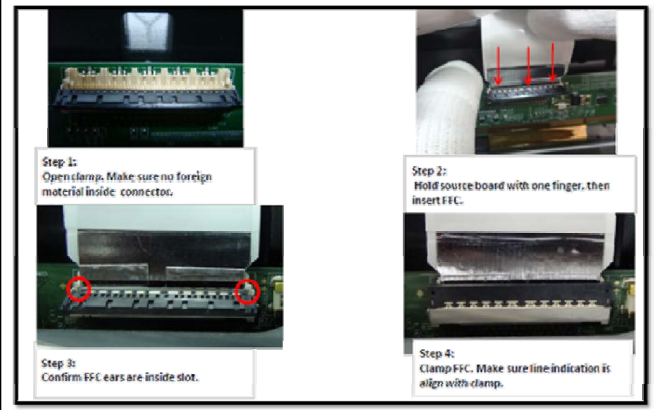


2-2. Wire Dressing

b) KDL, KLV-40R3*B

2) Harness Assy

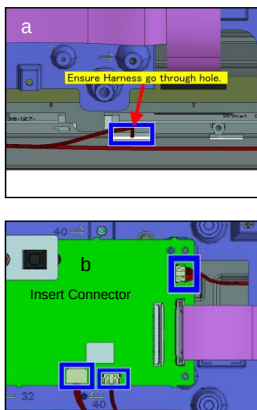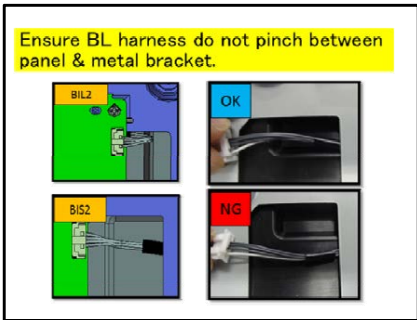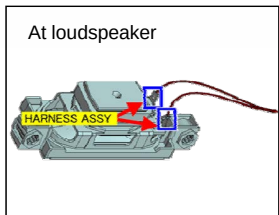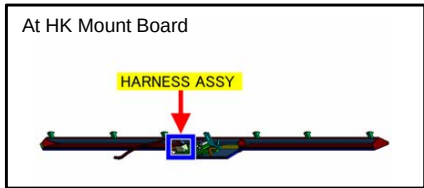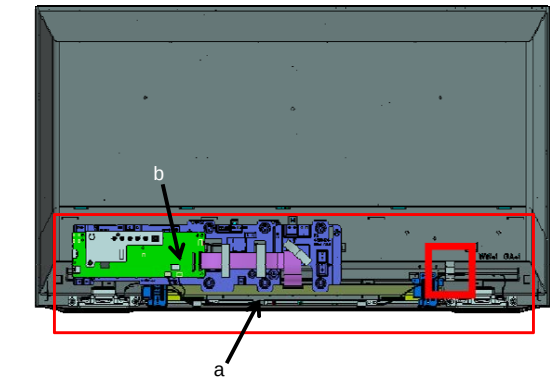


* Illustrations numberings (a ~ g) are not arranged according to actual process sequence.

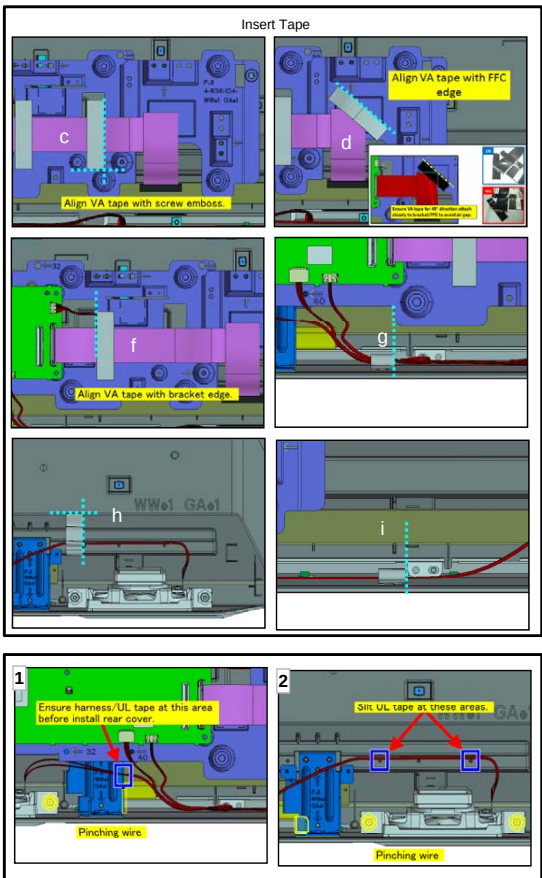

SECTION 3 DISASSEMBLY, EXPLODED VIEWS AND OTHER PARTS

3-1. KDL, KLV-32R3*B

3-1-1. Disassembly, Exploded View

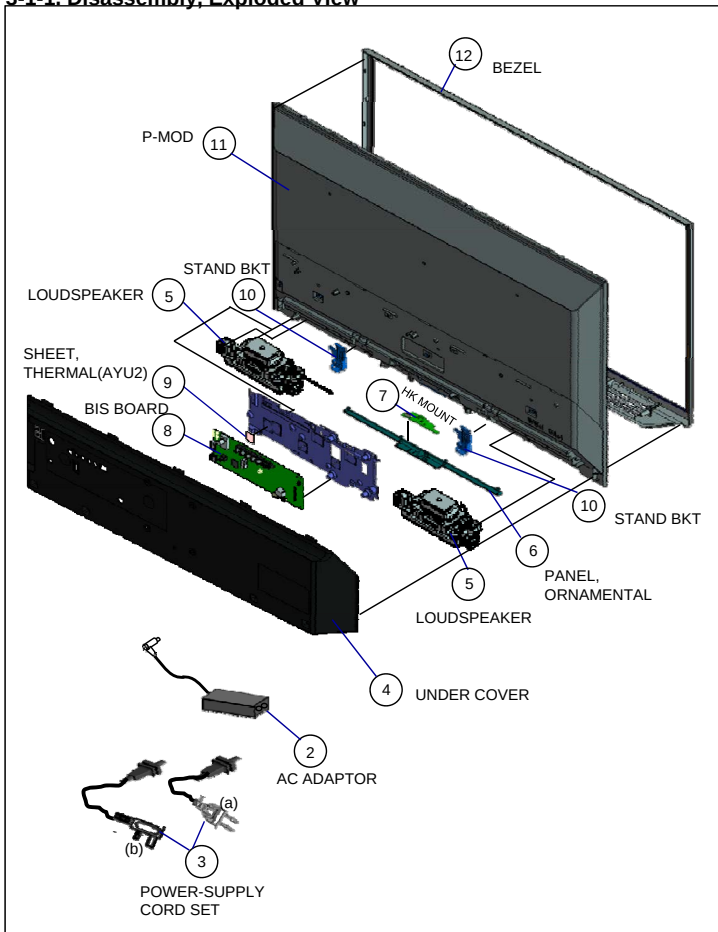


•Place the TV set facing downwards on a stable, level surface before disassembly and assembly of parts.
 • ⚠ and shaded parts are critical for safety. Replace only with part number specified.
 • 🔒 Parts contain confidential information. Strictly follow the instruction whenever the components are repaired and/or replaced.

(*) Parts are not stocked since they are seldom required for routine service. Some delays should be anticipated when ordering these components.
 • Picture provided in this section might have slight difference from the actual sets.
 • Lines that indicate parts are shown in blue in the illustration.
 • The reference number besides the part description in the picture indicates the disassembly sequence.

•Remove screws before disassembly.
 •Unplug connectors before disassembly.

STAND, BASE M ASSY

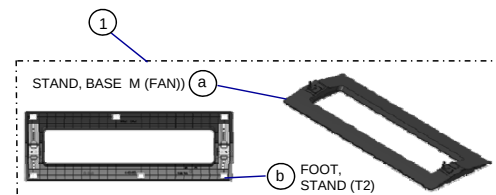

3-1. KDL, KLV-32R3*B






3-1-1. Disassembly, Exploded View

REF. NO.	DESCRIPTION	PART NO.	KDL-32R300B							KDL-32R304B	KLV-32R302B				KLV-32R306B
			DESTINATION							DESTINATION	DESTINATION				DESTINATION
			SOMEA AF1 (South Africa, Iran, Saudi Arabia, Kuwait, UAE etc)	SSEA SP1 (Singapore, Brunei, Cambodia, Myanmar, Indonesia etc)	Vietnam	Malaysia	Thailand	Indonesia			SOMEA AF1 (South Africa, Iran, Saudi Arabia, Kuwait, UAE etc)	SSEA SP1 (Singapore, Brunei, Cambodia, Myanmar, Indonesia etc)	Philippines		ME7
1	STAND, BASE M ASSY	4-464-353-21	•	•	•	•	•	•	•	•	•	•	•	•	•
2	AC ADAPTOR (45W)	1-492-512-31	•	•	•	•	•	•	•	•	•	•	•	•	•
3a	CORD SET, POWER-SUPPLY	1-846-093-11	•	•	•	•	n/a	•	•	•	•	•	•	•	•
3b	CORD SET, POWER-SUPPLY	1-846-094-11	•	n/a	n/a	n/a	n/a	n/a	n/a	n/a	•	n/a	n/a	n/a	n/a
3a	CORD SET, POWER-SUPPLY	1-846-109-11	n/a	n/a	n/a	n/a	•	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a
4	UNDER COVER (32FJI) A	4-540-960-11	•	•	•	•	•	•	•	•	n/a	n/a	n/a	n/a	n/a
4	UNDER COVER (32FJI) A	4-540-960-21	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a	•	•	•	•	•
5	LOUDSPEAKER	1-858-919-11	•	•	•	•	•	•	•	•	•	•	•	•	•
6	PANEL, ORNAMENTAL (32FJI)	4-538-122-11	•	•	•	•	•	•	•	•	•	•	•	•	•
7	HK MOUNT	A-2054-238-A	•	•	•	•	•	•	•	•	•	•	•	•	•
8	COMP SVC BIS2 32W PAA	A-2057-213-A	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a	•	•	•	n/a	n/a
8	COMP SVC BIS2 32W PAA C	A-2057-210-A	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a	•
8	COMP SVC BIS2 32W PAD2	A-2057-214-A	•	•	•	•	•	•	•	n/a	n/a	n/a	n/a	n/a	n/a
8	COMP SVC BIS2 32W PAD2 C	A-2057-211-A	n/a	n/a	n/a	n/a	n/a	n/a	n/a	•	n/a	n/a	n/a	n/a	n/a
9	SHEET, THERMAL (AYU2)	4-440-057-01	•	•	•	•	•	•	•	•	•	•	•	•	•
10	STAND BKT (FJI)	4-538-125-01	•	•	•	•	•	•	•	•	•	•	•	•	•
11	P-MOD (IS4S320DND1101) (SERVICE)	A-2009-475-A	•	•	•	•	•	•	•	•	•	•	•	•	•
12	BEZEL (32FJI) A	4-540-946-11	•	•	•	•	•	•	•	•	•	•	•	•	•

3-1. KDL, KLV-32R3*B

3-1-2. Screws


Ref	Part No	Description
■	7-685-646-71	SCREW +BVTP 3X8 TYPE2 IT-3
●	2-990-421-41	SCREW (+PSW) (M3X6)
▲	4-159-298-01	SCREW, +PSW M4X10
★	3-452-815-21	SCREW +BVTP 3X10 TYPE2 IT-3
◆	3-452-815-21	SCREW, +PSW M5X20

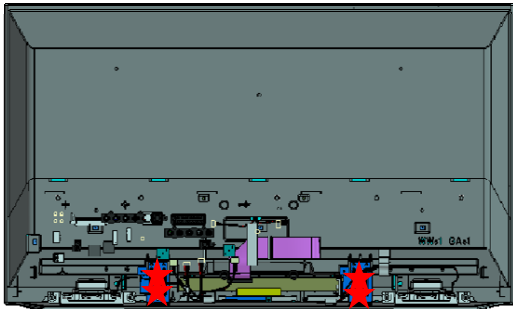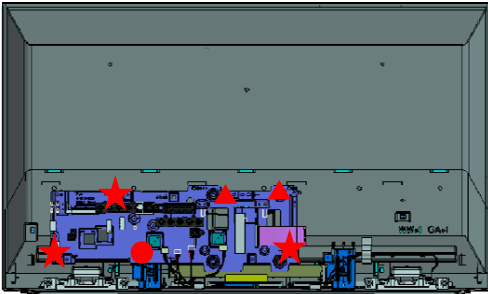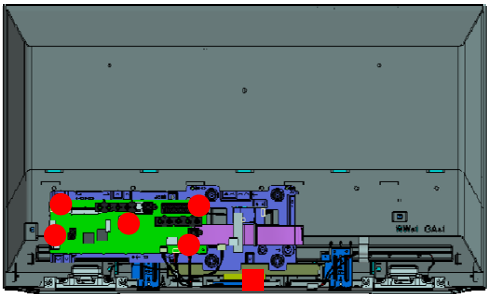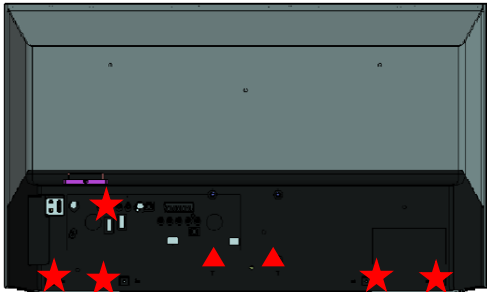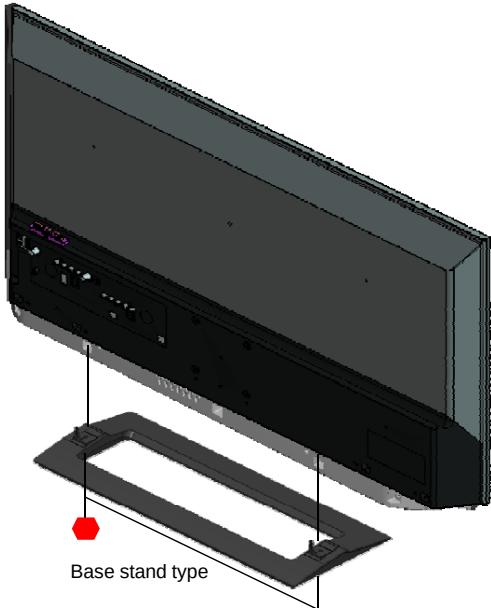

3-1. KDL, KLV-32R3*B

3-1-3. Connectors

REF. NO.	DESCRIPTION	PART NO.	REMARKS	KDL-32R300B				KDL-32R304B	KLV-32R302B			KLV-32R306B	
				DESTINATION				DESTINATION	DESTINATION			DESTINATION	
				SOMEA AF1 (South Africa, Iran, Saudi Arabia, Kuwait, UAE etc)	SSEA SP1 (Singapore, Brunei, Cambodia, Myanmar, Indonesia etc)	Vietnam	Malaysia	Thailand	Indonesia	ME7	SOMEA AF1 (South Africa, Iran, Saudi Arabia, Kuwait, UAE etc)	SSEA SP1 (Singapore, Brun ei, Cambodia, Myanmar, Indonesia etc)	Philippines
81	HARNESS ASSY	1-910-804-89	CN9900(BIL2/BIS2)- CN100(HK)/CN4500(BIL2/BIS2)-SP(1)	•	•	•	•	•	•	•	•	•	•
82	FLEXIBLE FLAT CABLE 30P	1-848-560-11	CN8601(BIS2)- SOURCE BOARD(1)	•	•	•	•	•	•	•	•	•	•

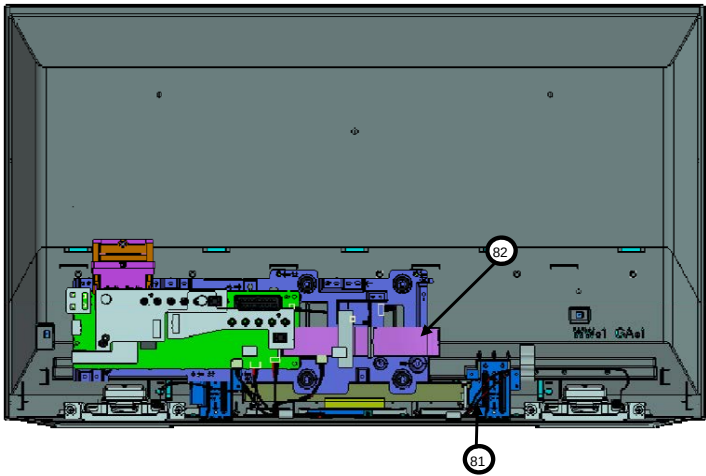


3-1. KDL, KLV-32R3*B

3-1-4. Other Parts

REF. NO.	DESCRIPTION	PART NO.	KDL-32R300B							KDL-32R304B	KLV-32R302B			KLV-32R306B
			DESTINATION							DESTINATION	DESTINATION			DESTINATION
			SOMEA AF1 (South Africa, Iran, Saudi Arabia, Kuwait, UAE etc)	SSEA SP1 (Singapore, Brunei, Cambodia, Myanmar, Indonesia etc)	Vietnam	Malaysia	Thailand	Indonesia	ME7	SOMEA AF1 (South Africa, Iran, Saudi Arabia, Kuwait, UAE etc)	SSEA SP1 (Singapore, Brun ei, Cambodia, Myanmar, Indonesia etc)	Philippines	ME7	
	ADAPTOR, CONVERSION	1-785-504-21	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a	*	n/a
	ADAPTOR, CONVERSION 2P	1-569-008-33	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a	*	n/a
	CARTON, INDIVIDUAL (FJI 32)	* 4-541-383-01	*	*	*	*	*	*	*	*	*	*	*	*
	CLAMPER, AC ADAPTER	4-428-537-01	*	*	*	*	*	*	*	*	*	*	*	*
	CUSHION, LOWER (32FJI)	* 4-541-352-01	*	*	*	*	*	*	*	*	*	*	*	*
	CUSHION, UPPER (32FJI)	* 4-541-351-01	*	*	*	*	*	*	*	*	*	*	*	*
	MANUAL, INSTRUCTION	* 4-543-595-11	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a	*	*	n/a	*
	MANUAL, INSTRUCTION	* 4-543-595-21	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a	*	*	n/a	n/a
	MANUAL, INSTRUCTION	* 4-543-595-31	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a	*	n/a	n/a	n/a
	MANUAL, INSTRUCTION	* 4-543-595-41	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a	*	n/a	n/a	n/a
	MANUAL, INSTRUCTION	* 4-543-595-51	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a	*	n/a	n/a	n/a
	MANUAL, INSTRUCTION	* 4-543-595-61	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a	*	n/a	n/a	n/a
	MANUAL, INSTRUCTION	* 4-543-596-11	*	*	*	*	*	n/a	*	n/a	n/a	n/a	n/a	n/a
	MANUAL, INSTRUCTION	* 4-543-596-21	n/a	*	*	*	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a
	MANUAL, INSTRUCTION	* 4-543-596-31	*	n/a	n/a	n/a	n/a	n/a	n/a	*	n/a	n/a	n/a	n/a
	MANUAL, INSTRUCTION	* 4-543-596-41	*	n/a	n/a	n/a	n/a	n/a	n/a	*	n/a	n/a	n/a	n/a
	MANUAL, INSTRUCTION	* 4-543-596-51	*	n/a	n/a	n/a	n/a	n/a	n/a	*	n/a	n/a	n/a	n/a
	MANUAL, INSTRUCTION	* 4-543-596-61	*	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a
	MANUAL, INSTRUCTION	* 4-543-596-71	n/a	n/a	*	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a
	MANUAL, INSTRUCTION	* 4-543-596-81	n/a	n/a	n/a	n/a	*	n/a	n/a	n/a	n/a	n/a	n/a	n/a
	MANUAL, INSTRUCTION	* 4-543-596-91	n/a	n/a	n/a	n/a	n/a	*	n/a	n/a	n/a	n/a	n/a	n/a
	QUICK START GUIDE	* 4-543-594-11	*	*	*	*	*	*	*	*	*	*	*	*
	REMOTE COMMANDER (RM-ED054)	1-492-067-21	*	*	*	*	*	*	*	*	n/a	n/a	n/a	n/a
	REMOTE COMMANDER (RM-GA024)	1-492-064-21	n/a	n/a	n/a	n/a	n/a	n/a	n/a	n/a	*	*	*	*
	TAPE (3M 1350FB-1)15MMX66M BLK	7-600-031-97	*	*	*	*	*	*	*	*	*	*	*	*

3-2. KDL, KLV-40R3*B
3-2-1. Disassembly, Exploded View

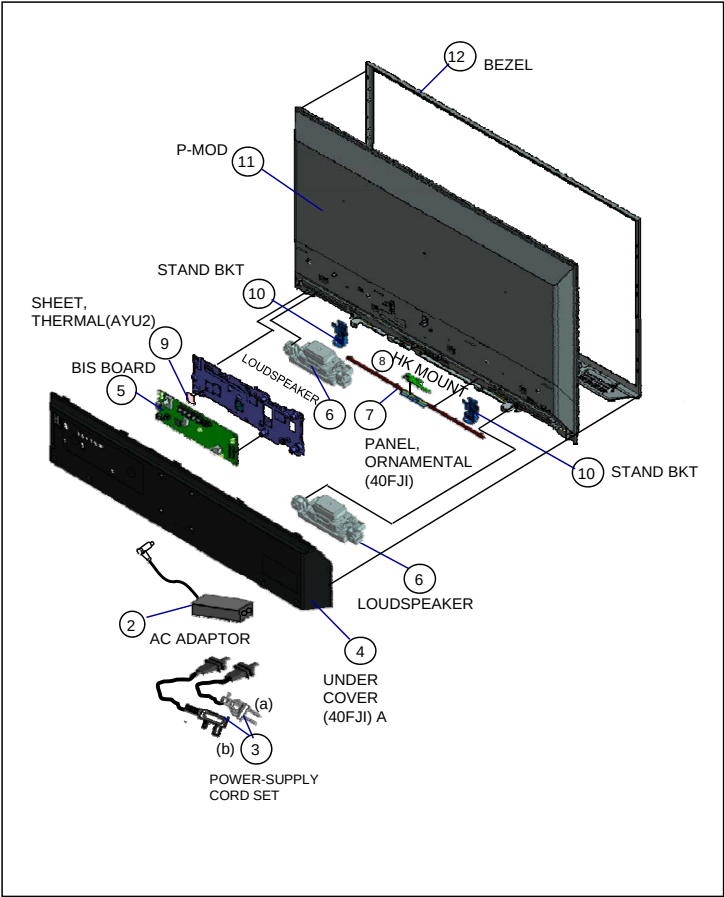

Disassembly, Exploded Views and Other Parts





3-2. KDL, KLV-40R3*B

3-2-1. Disassembly, Exploded View

REF. NO.	DESCRIPTION	PART NO.	KDL-40R350B					KLV-40R352B		
			DESTINATION					DESTINATION		
			SOMEA AF1 (South Africa, Iran, Saudi Arabia, Kuwait, UAE etc)	SSEA SP1 (Singapore, Brunei, Cambodia, Myanmar, Indonesia etc)	Vietnam	Malaysia	Indonesia	SOMEA AF1 (South Africa, Iran, Saudi Arabia, Kuwait, UAE etc)	SSEA SP1 (Singapore, Brunei, Cambodia, Myanmar, Indonesia etc)	Philippines
1	STAND, BASE ML ASSY	4-464-354-21	•	•	•	•	•	•	•	•
2	AC ADAPTOR (60W)	1-492-892-11	•	•	•	•	•	•	•	•
3a	CORD SET, POWER-SUPPLY	1-846-093-11	•	•	•	•	•	•	•	•
3b	CORD SET, POWER-SUPPLY	1-846-094-11	•	n/a	n/a	n/a	n/a	•	n/a	n/a
4	UNDER COVER (40FJI) A	4-540-957-12	•	•	•	•	•	n/a	n/a	n/a
4	UNDER COVER (40FJI) A	4-540-957-22	n/a	n/a	n/a	n/a	n/a	•	•	•
5	COMP SVC BIS2_40F_PAA	A-2057-215-A	n/a	n/a	n/a	n/a	n/a	•	•	•
5	COMP SVC BIS2_40F_PAD2	A-2057-216-A	•	•	•	•	•	n/a	n/a	n/a
6	LOUDSPEAKER	1-858-919-11	•	•	•	•	•	•	•	•
7	PANEL, ORNAMENTAL (40FJI)	4-538-121-12	•	•	•	•	•	•	•	•
8	HK MOUNT	A-2054-238-A	•	•	•	•	•	•	•	•
9	SHEET, THERMAL (AYU2)	4-440-057-01	•	•	•	•	•	•	•	•
10	STAND BKT (FJI)	4-538-125-11	•	•	•	•	•	•	•	•
11	P-MOD(NS4S400DND1101)(SERVICE)	A-2009-476-A	•	•	•	•	•	•	•	•
12	BEZEL (40FJI) A	4-540-945-11	•	•	•	•	•	•	•	•


3-2. KDL, KLV-40R3*B
3-2-2. Screws

Ref	Part No	Description
■	7-685-646-71	SCREW +BVTP 3X8 TYPE2 IT-3
●	2-990-421-41	SCREW (+PSW) (M3X6)
▲	4-159-298-01	SCREW, +PSW M4X10
★	7-685-647-79	SCREW +BVTP 3X10 TYPE2 IT-3
◆	3-452-815-21	SCREW, +PSW M5X20

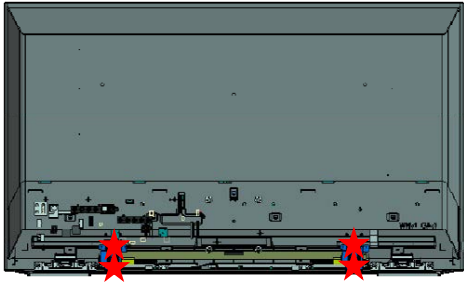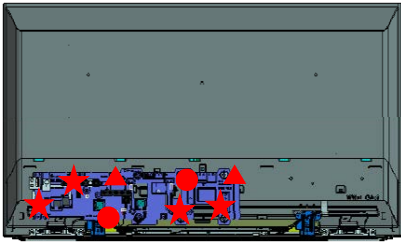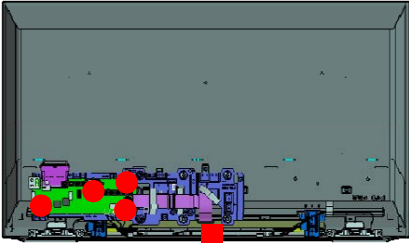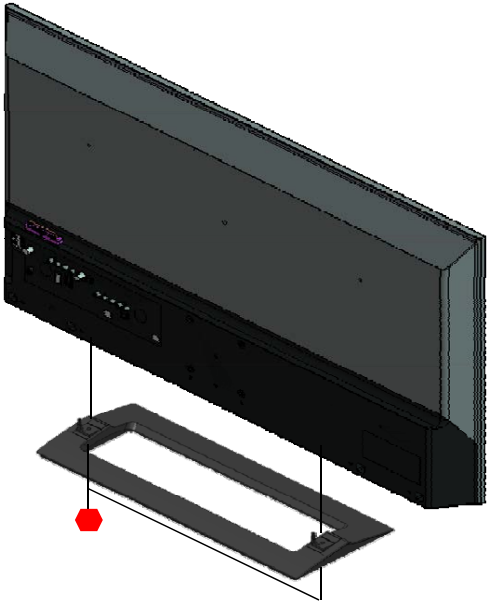

3-2. KDL, KLV-40R3*B
3-2-3. Connectors

REF. NO.	DESCRIPTION	PART NO.	REMARKS	KDL-40R350B					KLV-40R352B		
				DESTINATION					DESTINATION		
				SOMEA AF1 (South Africa, Iran, Saudi Arabia, Kuwait, UAE etc)	SSEA SP1 (Singapore, Brunei, Cambodia, Myanmar, Indonesia etc)	Vietnam	Malaysia	Indonesia	SOMEA AF1 (South Africa, Iran, Saudi Arabia, Kuwait, UAE etc)	SSEA SP1 (Singapore, Brunei, Cambodia, Myanmar, Indonesia etc)	Philippines
81	HARNESS ASSY	1-910-804-91	CN9900(BIL2/BIS2)- CN100(HK)/CN4500(BIL2/BIS2)-SP(1)	•	•	•	•	•	•	•	•
82	FLEXIBLE FLAT CABLE 51P	1-848-562-11	CN8600(BIS2)-SOURCE BOARD(1)	•	•	•	•	•	•	•	•

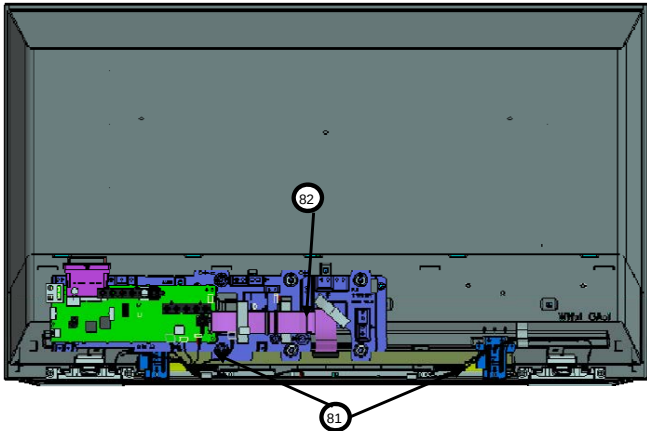

3-2. KDL, KLV-40R3*B**3-2-4. Other Parts**

REF. NO.	DESCRIPTION	PART NO.	KDL-40R350B						KLV-40R352B		
			DESTINATION						DESTINATION		
			SOMEA AF1 (South Africa, Iran, Saudi Arabia, Kuwait, UAE etc)	SSEA SP1 (Singapore, Brunei, Cambodia, Myanmar, Indonesia etc)	Vietnam	Malaysia	Indonesia	SOMEA AF1 (South Africa, Iran, Saudi Arabia, Kuwait, UAE etc)	SSEA SP1 (Singapore, Brunei, Cambodia, Myanmar, Indonesia etc)	Philippines	
	ADAPTOR, CONVERSION	1-785-504-21	n/a	n/a	n/a	n/a	n/a	n/a	n/a	•	
	ADAPTOR, CONVERSION 2P	1-569-008-33	n/a	n/a	n/a	n/a	n/a	n/a	n/a	•	
	CARTON, INDIVIDUAL (FJI 40)	* 4-541-384-01	•	•	•	•	•	•	•	•	
	CLAMPER, AC ADAPTER	4-428-537-01	•	•	•	•	•	•	•	•	
	CUSHION, LOWER (40FJI)	* 4-541-357-01	•	•	•	•	•	•	•	•	
	CUSHION, UPPER (40FJI)	* 4-541-356-01	•	•	•	•	•	•	•	•	
	MANUAL, INSTRUCTION	* 4-543-595-11	n/a	n/a	n/a	n/a	n/a	•	•	n/a	
	MANUAL, INSTRUCTION	* 4-543-595-21	n/a	n/a	n/a	n/a	n/a	n/a	•	n/a	
	MANUAL, INSTRUCTION	* 4-543-595-31	n/a	n/a	n/a	n/a	n/a	•	n/a	n/a	
	MANUAL, INSTRUCTION	* 4-543-595-41	n/a	n/a	n/a	n/a	n/a	•	n/a	n/a	
	MANUAL, INSTRUCTION	* 4-543-595-51	n/a	n/a	n/a	n/a	n/a	•	n/a	n/a	
	MANUAL, INSTRUCTION	* 4-543-595-61	n/a	n/a	n/a	n/a	n/a	•	n/a	n/a	
	MANUAL, INSTRUCTION	* 4-543-596-11	•	•	•	•	n/a	n/a	n/a	n/a	
	MANUAL, INSTRUCTION	* 4-543-596-21	n/a	•	•	•	n/a	n/a	n/a	n/a	
	MANUAL, INSTRUCTION	* 4-543-596-31	•	n/a	n/a	n/a	n/a	n/a	n/a	n/a	
	MANUAL, INSTRUCTION	* 4-543-596-41	•	n/a	n/a	n/a	n/a	n/a	n/a	n/a	
	MANUAL, INSTRUCTION	* 4-543-596-51	•	n/a	n/a	n/a	n/a	n/a	n/a	n/a	
	MANUAL, INSTRUCTION	* 4-543-596-61	•	n/a	n/a	n/a	n/a	n/a	n/a	n/a	
	MANUAL, INSTRUCTION	* 4-543-596-71	n/a	n/a	•	n/a	n/a	n/a	n/a	n/a	
	MANUAL, INSTRUCTION	* 4-543-596-91	n/a	n/a	n/a	n/a	•	n/a	n/a	n/a	
	QUICK START GUIDE	* 4-543-594-11	•	•	•	•	•	•	•	•	
	REMOTE COMMANDER (RM-ED054)	1-492-067-21	•	•	•	•	•	n/a	n/a	n/a	
	REMOTE COMMANDER (RM-GA024)	1-492-064-21	n/a	n/a	n/a	n/a	n/a	•	•	•	
	SCREW +BVTP 3X8 TYPE2 IT-3	7-685-646-71	•	•	•	•	•	•	•	•	

