


EXPLODED VIEW/PARTS LIST


- CABINET

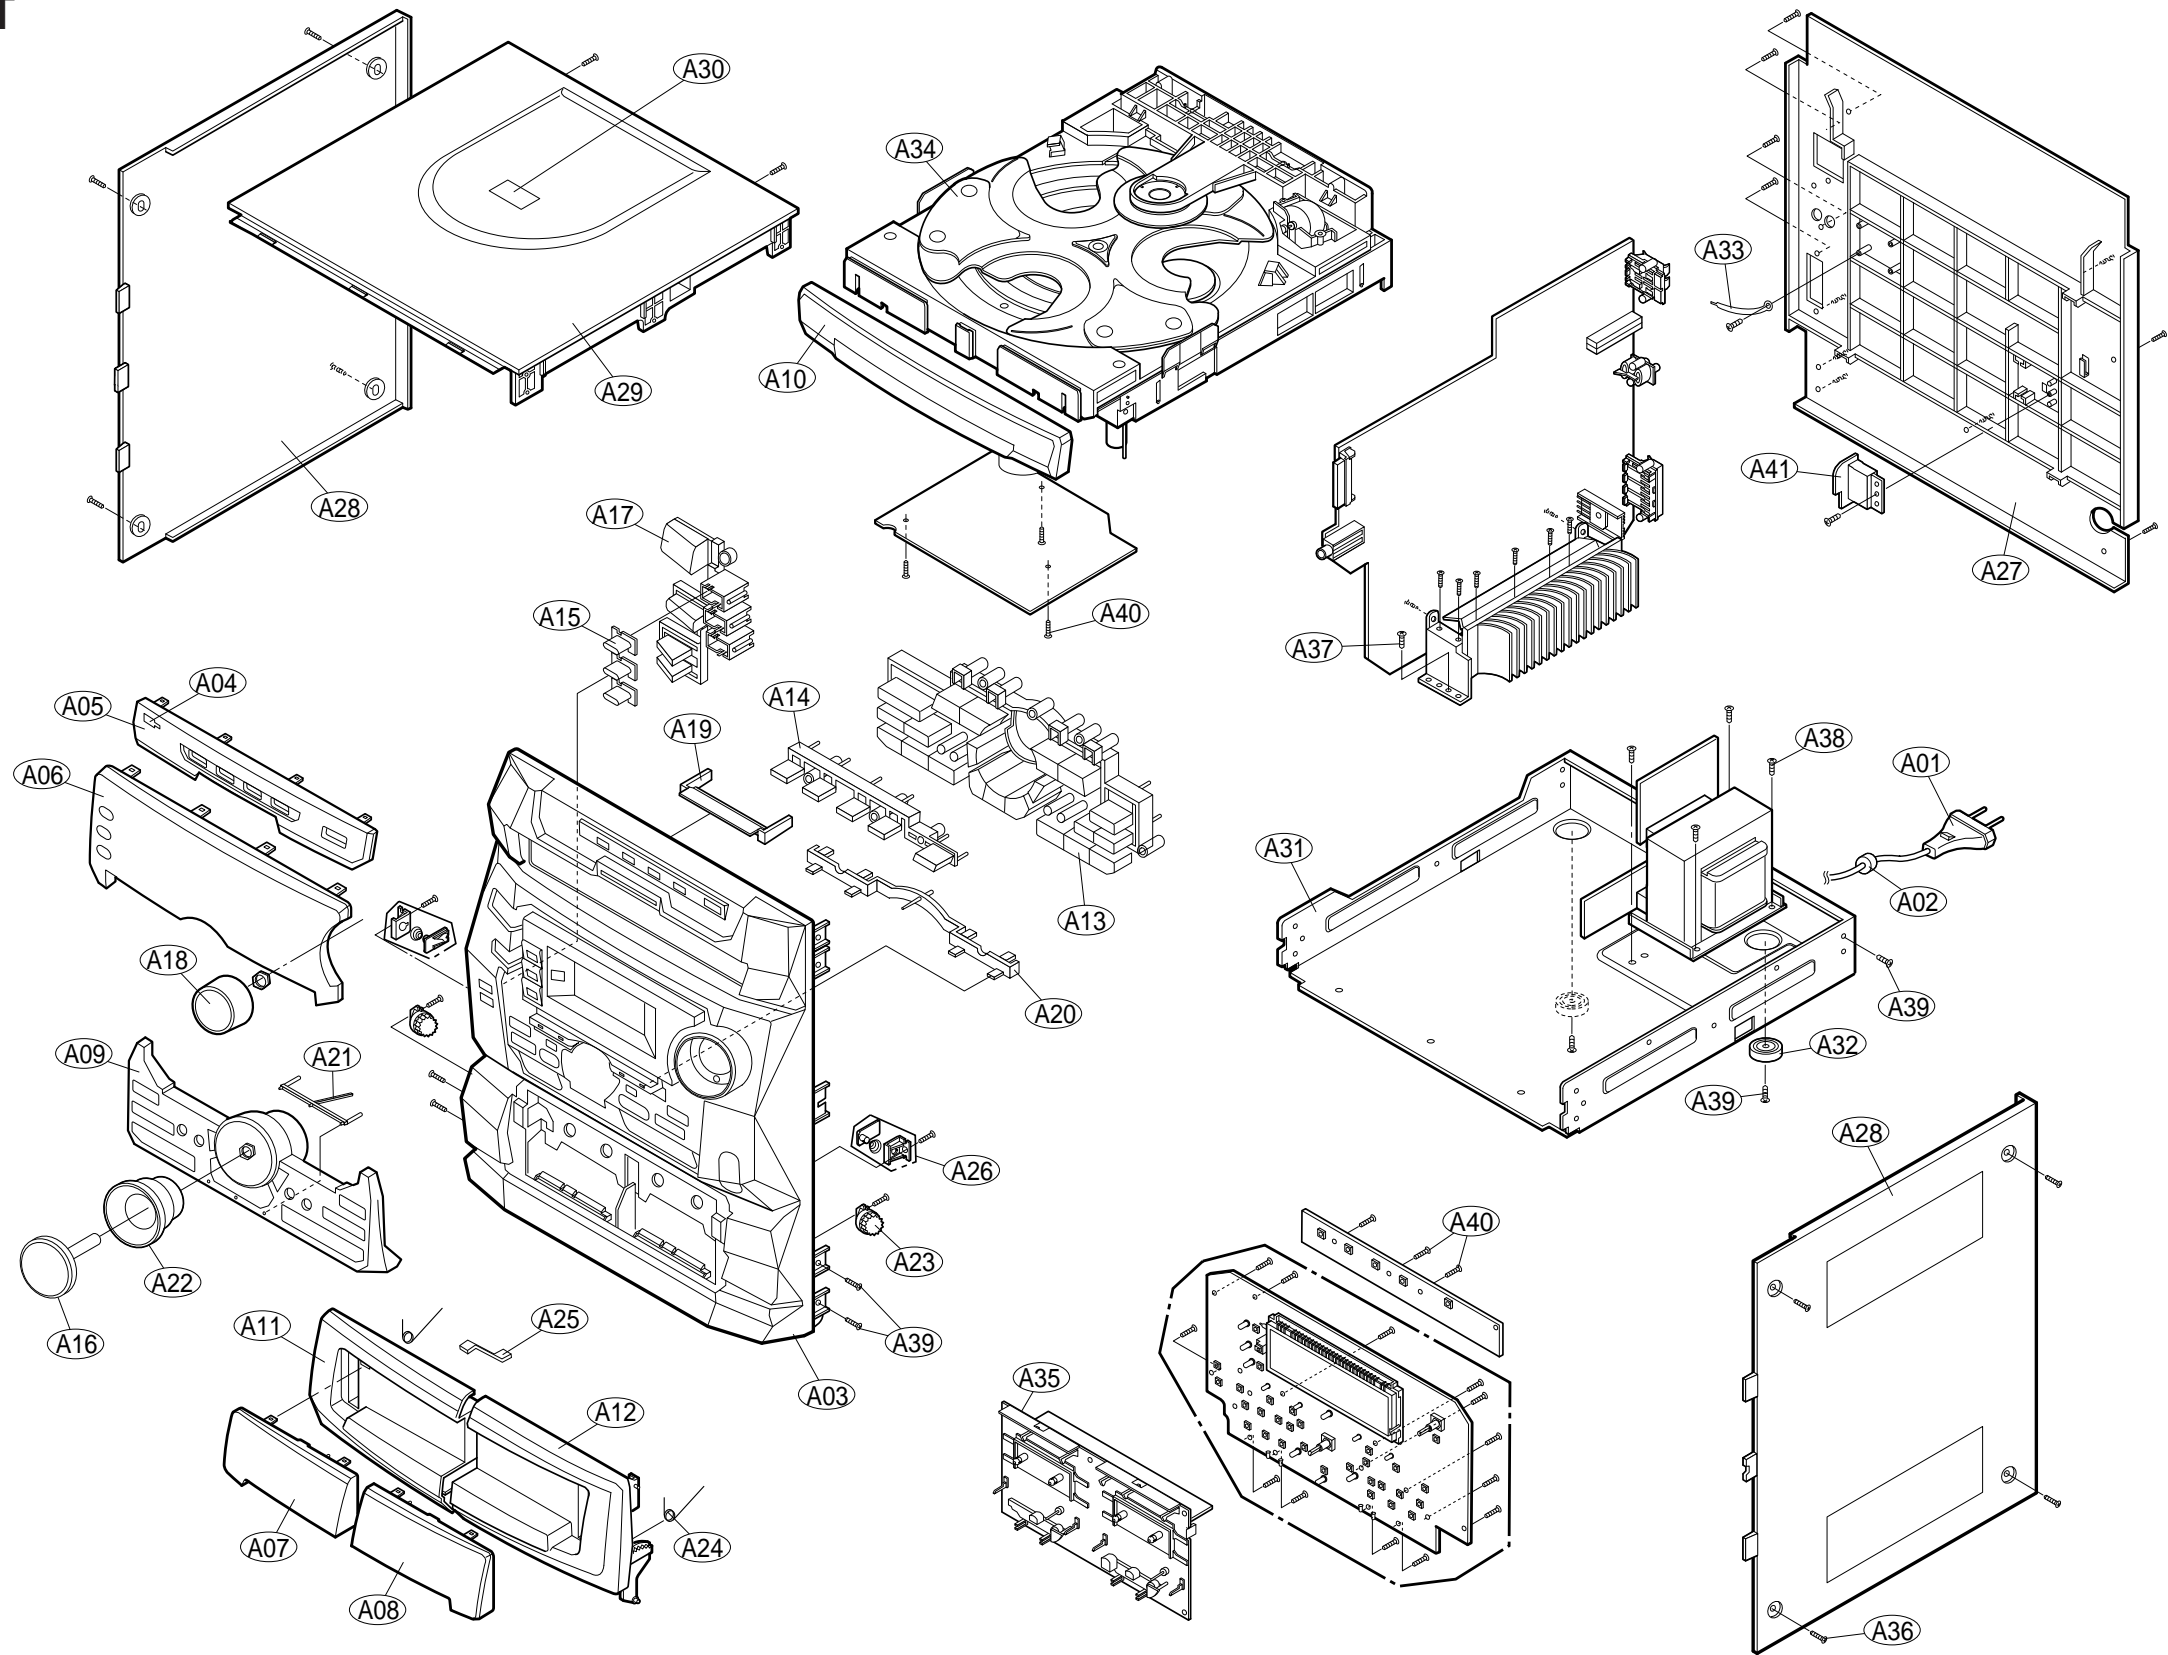

S	LOCA.NO.	PART NO.(GS)	DESCRIPTION	SPECIFICATION	VC
	A01	681N039B	CORD POWER	ACUST/S-0-0053 HITACHI SH	HZ
	A02	324-620A	HOLDER	CORD HEYCD SR-5N-4 HPD	
	A03	3720SCM035B	PANEL, FRONT	FRONT	HZ
	A04	3846S-0193A	MARK	BADGE LG(RED+SILVER)	
	A05	3790SCM055*	WINDOW	CD AL BAD	HZ
	A06	3790SCM054*	WINDOW	AMP	HZ
	A07	3790SCM023*	WINDOW	CST L PLAYBACK	HZ
	A08	3790SCM023*	WINDOW	CST R SYNCHRO DU	HZ
	A09	3550SCM014*	COVER	FRONT	HZ
	A10	3580SCC877*	DOOR	CD SOUNDMASTER	HZ
	A11	3580SCA344*	DOOR	CST-L	HZ
	A12	3580SCA345*	DOOR	CST-R	HZ
	A13	4940SCM058B	KNOB	MAIN	HZ
	A14	4940SCM059A	KNOB	DISC	HZ
	A15	4940SCM060A	KNOB	POWER	HZ
	A16	4940SCM061A	KNOB	JOG VOL	HZ
	A17	4940S-1401G	KNOB	LIGHTING MILKY	HZ
	A18	4940SC0044A	KNOB	VOLUME	HZ
	A19	3680SCM001B	LENS	CD BLUE	HZ
	A20	3680SCM007A	LENS	FUNCTION	HZ
	A21	3680SCM008A	LENS	PLAY	HZ
	A22	3680SCM009A	LENS	JOG	HZ
	A23	4901SK0001C	DAMPER ASSY	GEAR DAMPER AY(WH+WH G331)	HZ
	A24	442-085D	SPRING	SPRING(MINI 10 BG1)	
	A25	442-577B	SPRING	SPRING CST-PACK(H=7.5)	
	A26	384-535A	GUIDE	EJECT AY(FK-535 BD1)DUAL	
	A27	3720SCM041*	PANEL	BACK 3000	HZ
	A28	3090SCC004B	CABINET	SIDE	HZ
	A29	3090SCC003C	CABINET	CABINET TOP	HZ
	A30	246-444K	DECORATION	PLATE SILVER	HZ
	A31	3140SCC059B	CHASSIS	MAIN CHASSIS	HZ
	A32	265-024A	FOOT	ABS(BK)19.7 H=7 F-1000/59	HZ
	A33	562-050Q	LUG	LUG WIRE BEND L=80	
	A34	4405SCE002A	MECHANISM ASSY	CDM-H1303 SHIN HEUNG CD C	HZ
	A35	6730S-G004A	DECK MECHANISM	CWL44FF-03 PIGEON L-DOUBL	HZ
	A36	353-070C	SCREW	TAPTITE WASHER 4X12 FBK	HZ
	A37	353-022M	SCREW	TAPTITE 3X6 FZMY PAN S-TY	HZ
	A38	1TRL0402418	BRAIZER HEAD TA	D 4.0 L 8.0 MSWR3/FZY	HZ
	A39	1TRL0302018	BRAIZER HEAD TA	D 3.0 L 6.0 MSWR3/FZY	HZ
	A40	353-025C	SCREW	TAPTITE 3X10 FBK	HZ
	A41	552-625K	SWITCH SLIDE	CL04-SS(NR541)	HZ

EXPLODED VIEW/PARTS LIST


• TAPE DECK MECHANISM (1)

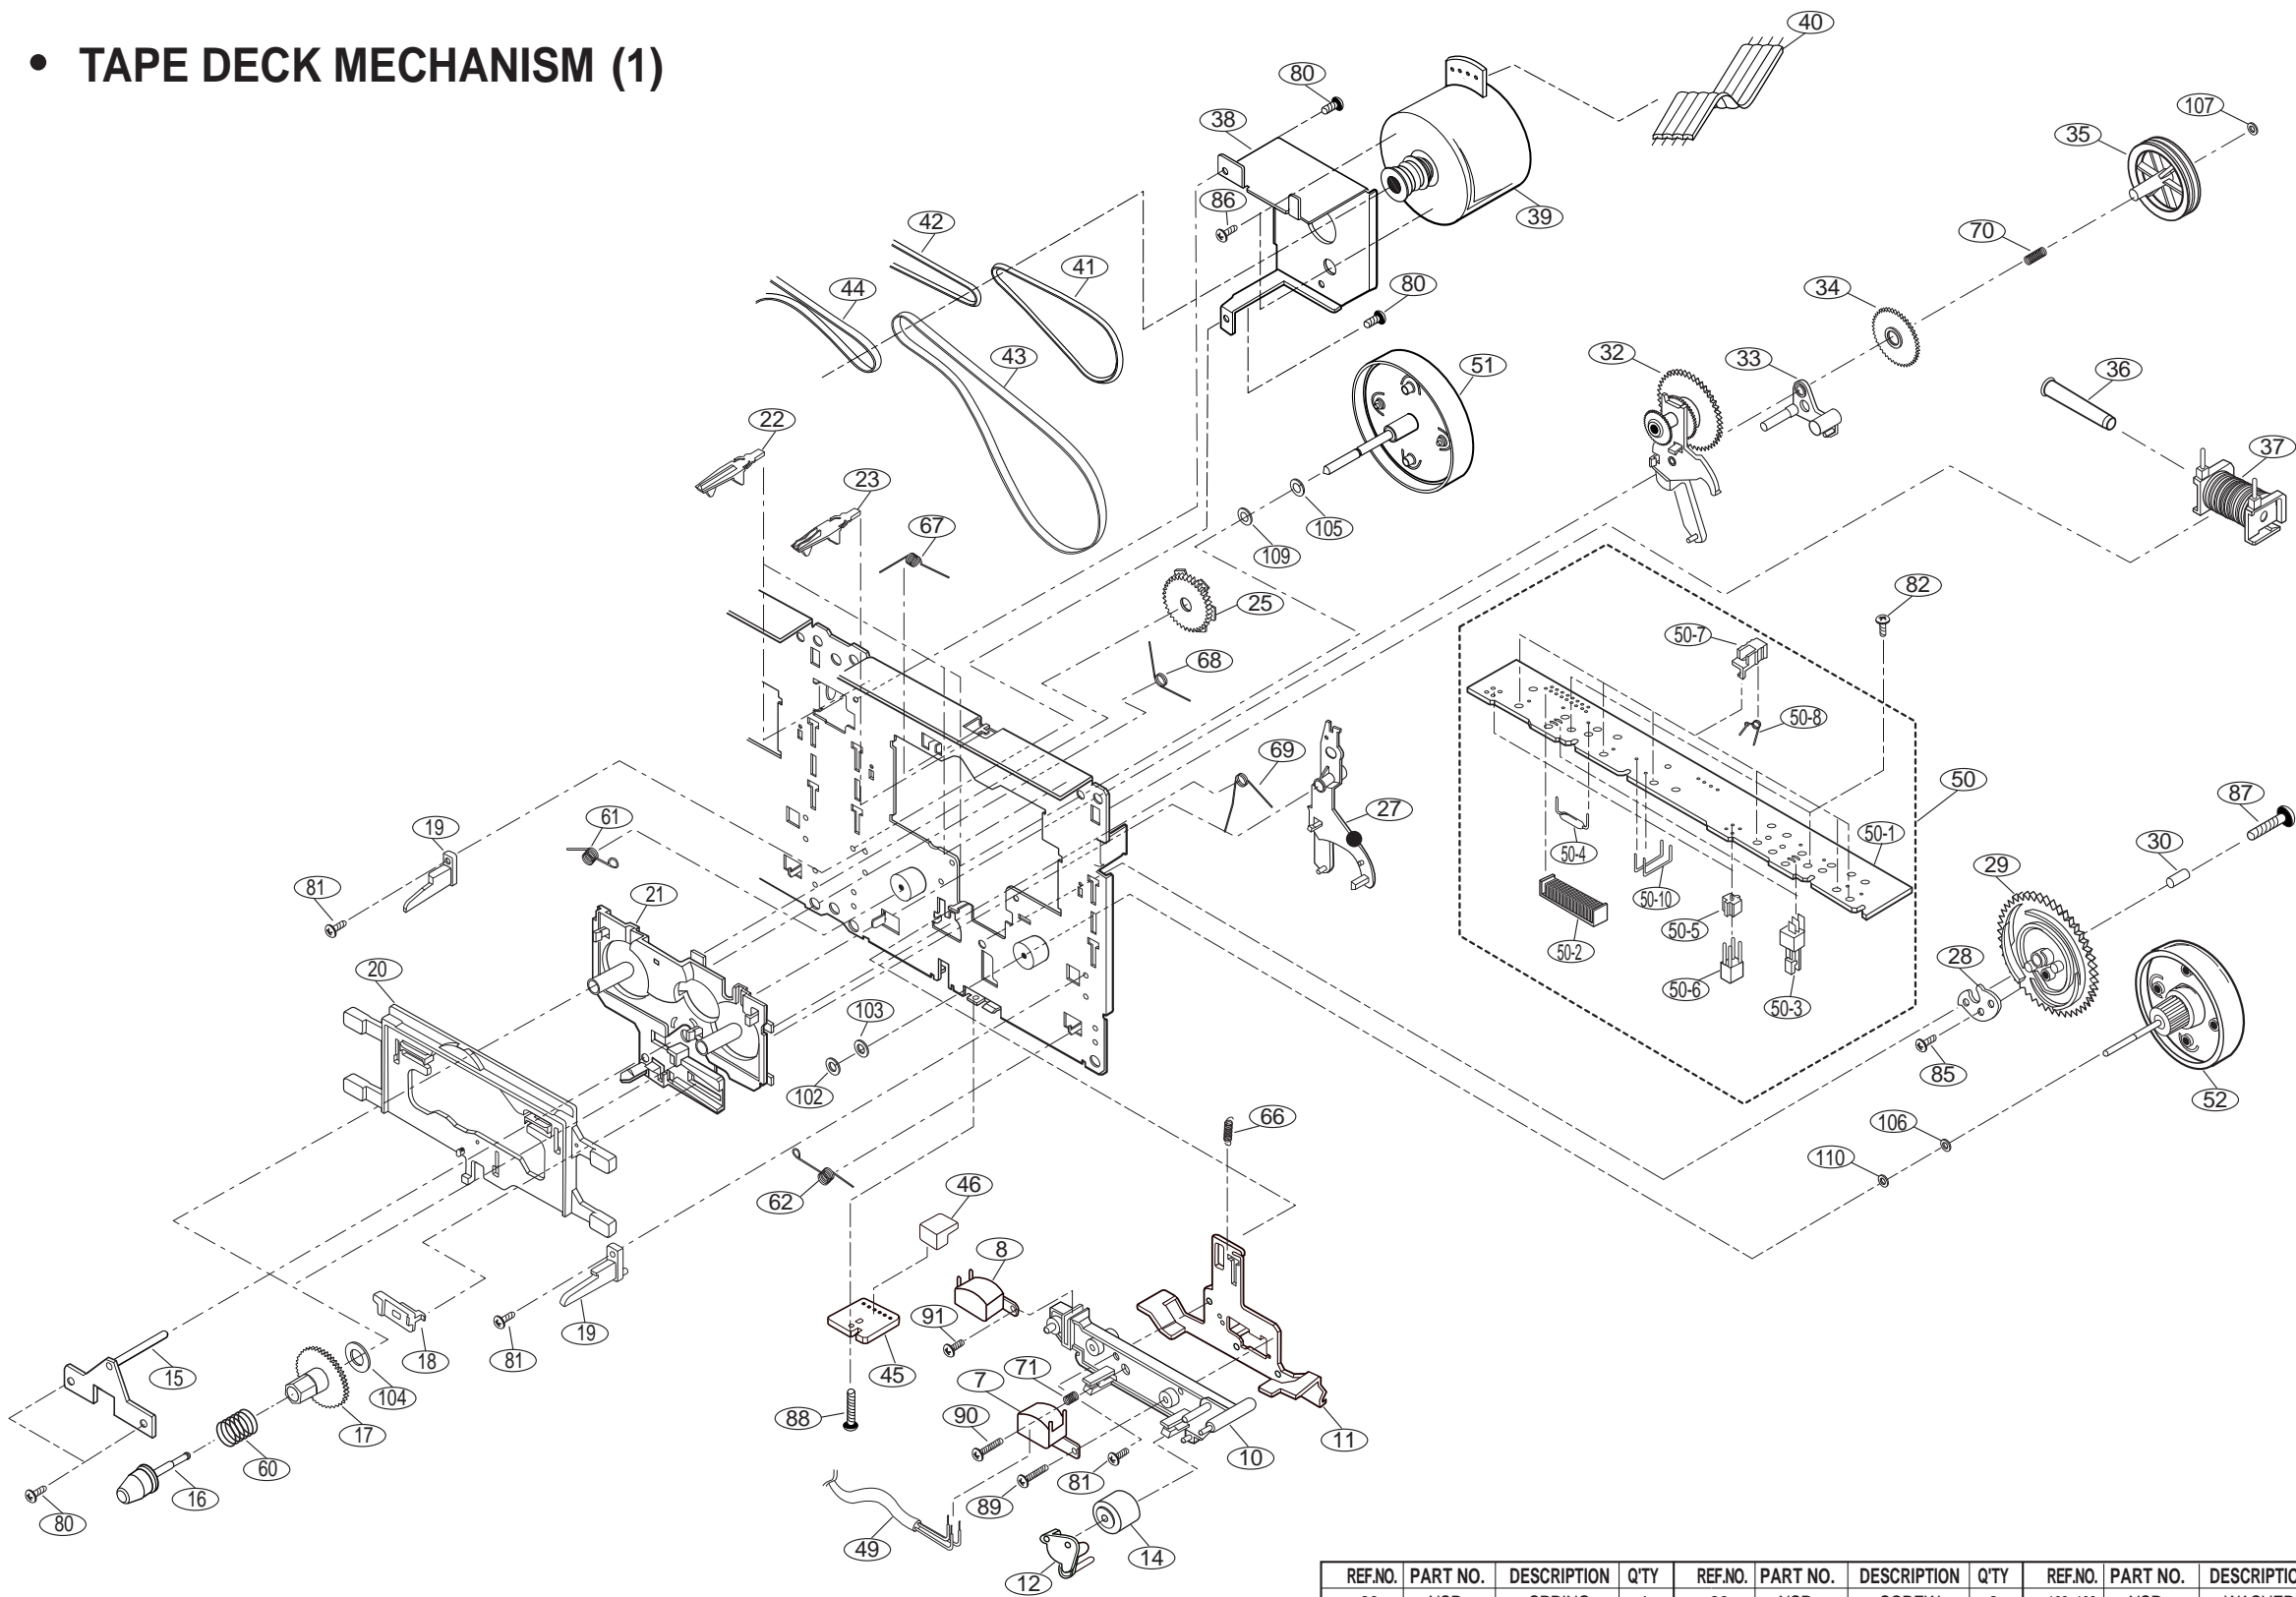


REF.NO.	PART NO.	DESCRIPTION	Q'TY
7	6768S-HP03A	PB HEAD	2
8	NSP	E HEAD	1
9	6768S-HP03B	GUIDE TAPE	1
10	NSP	PLATE HD	2
11	NSP	CHASSIS HD	2
12	NSP	CAP PINCH R	2
14	NSP	ROLLER PINCH	2
15	NSP	ASS'Y PLATE D	2
16	NSP	CAP REEL	4
17	NSP	GEAR REEL	4
18	NSP	LEVER ST	2
19	NSP	GUIDE C	4
20	NSP	LEVER BRAKE B	2
21	NSP	FRAME A	2
22	6768S-AP02C	ARM SW	3
23	6768S-AP02B	ARM CS	2
24	NSP	ASS'Y CHASSIS	1
25	NSP	ASS'Y COVER	2
27	6768S-MP02A	ARM TRIGGER	2
28	NSP	ARM CAM	2
29	NSP	GEAR CAM	2
30	NSP	COLLER	2
32	6768S-GP02A	ASS'Y CLUTCH	2
33	NSP	ARM UD B	2
34	NSP	GEAR UD	2
35	NSP	PULLEY D	2
36	NSP	PLUNGER	2
37	6768S-VP01A	ASS'Y BOBBIN	2
38	NSP	BRACKET MM	1
39	6768S-OP01A	ASS'Y MOTOR	1
40	NSP	WIRE MM	1
41	6768S-BP04A	BELT BFR	1
42	6768S-BP04B	BELT AFR	1
43	6768S-BP04C	BELT BF	1
44	6768S-BP04D	BELT AF	1
45	NSP	PCB HD	1
46	NSP	HOUSING	1
47	NSP	HOUSING	1
48	NSP	WIRE HD B	1
49	NSP	WIRE HD C	1
50	NSP	ASS'Y PCB	1
50-1	NSP	PCB	1
50-2	NSP	HOUSING	1
50-3	NSP	MODE SW	2
50-4	NSP	RESISTER	1
50-5	NSP	SPACER	2
50-6	6768S-XP01B	PHOTOINTERRUPTER	2
50-7	6768S-MP02A	BOX SW	5
50-8	6768S-SP02A	SPRING SW	5
50-10	NSP	JAMPER WIRE	2
52	NSP	ASS'Y FLYWHEEL L	2

REF.NO.	PART NO.	DESCRIPTION	Q'TY	REF.NO.	PART NO.	DESCRIPTION	Q'TY	REF.NO.	PART NO.	DESCRIPTION	Q'TY
60	NSP	SPRING	4	80	NSP	SCREW	6	102-103	NSP	WASHER	2
61-71	NSP	SPRING	2	81	NSP	SCREW	8	104	NSP	WASHER	4
				82-90	NSP	SCREW	2	106-107	NSP	WASHER	2
				91	NSP	SCREW	1	110	NSP	WASHER	1

• TAPE DECK MECHANISM (2)

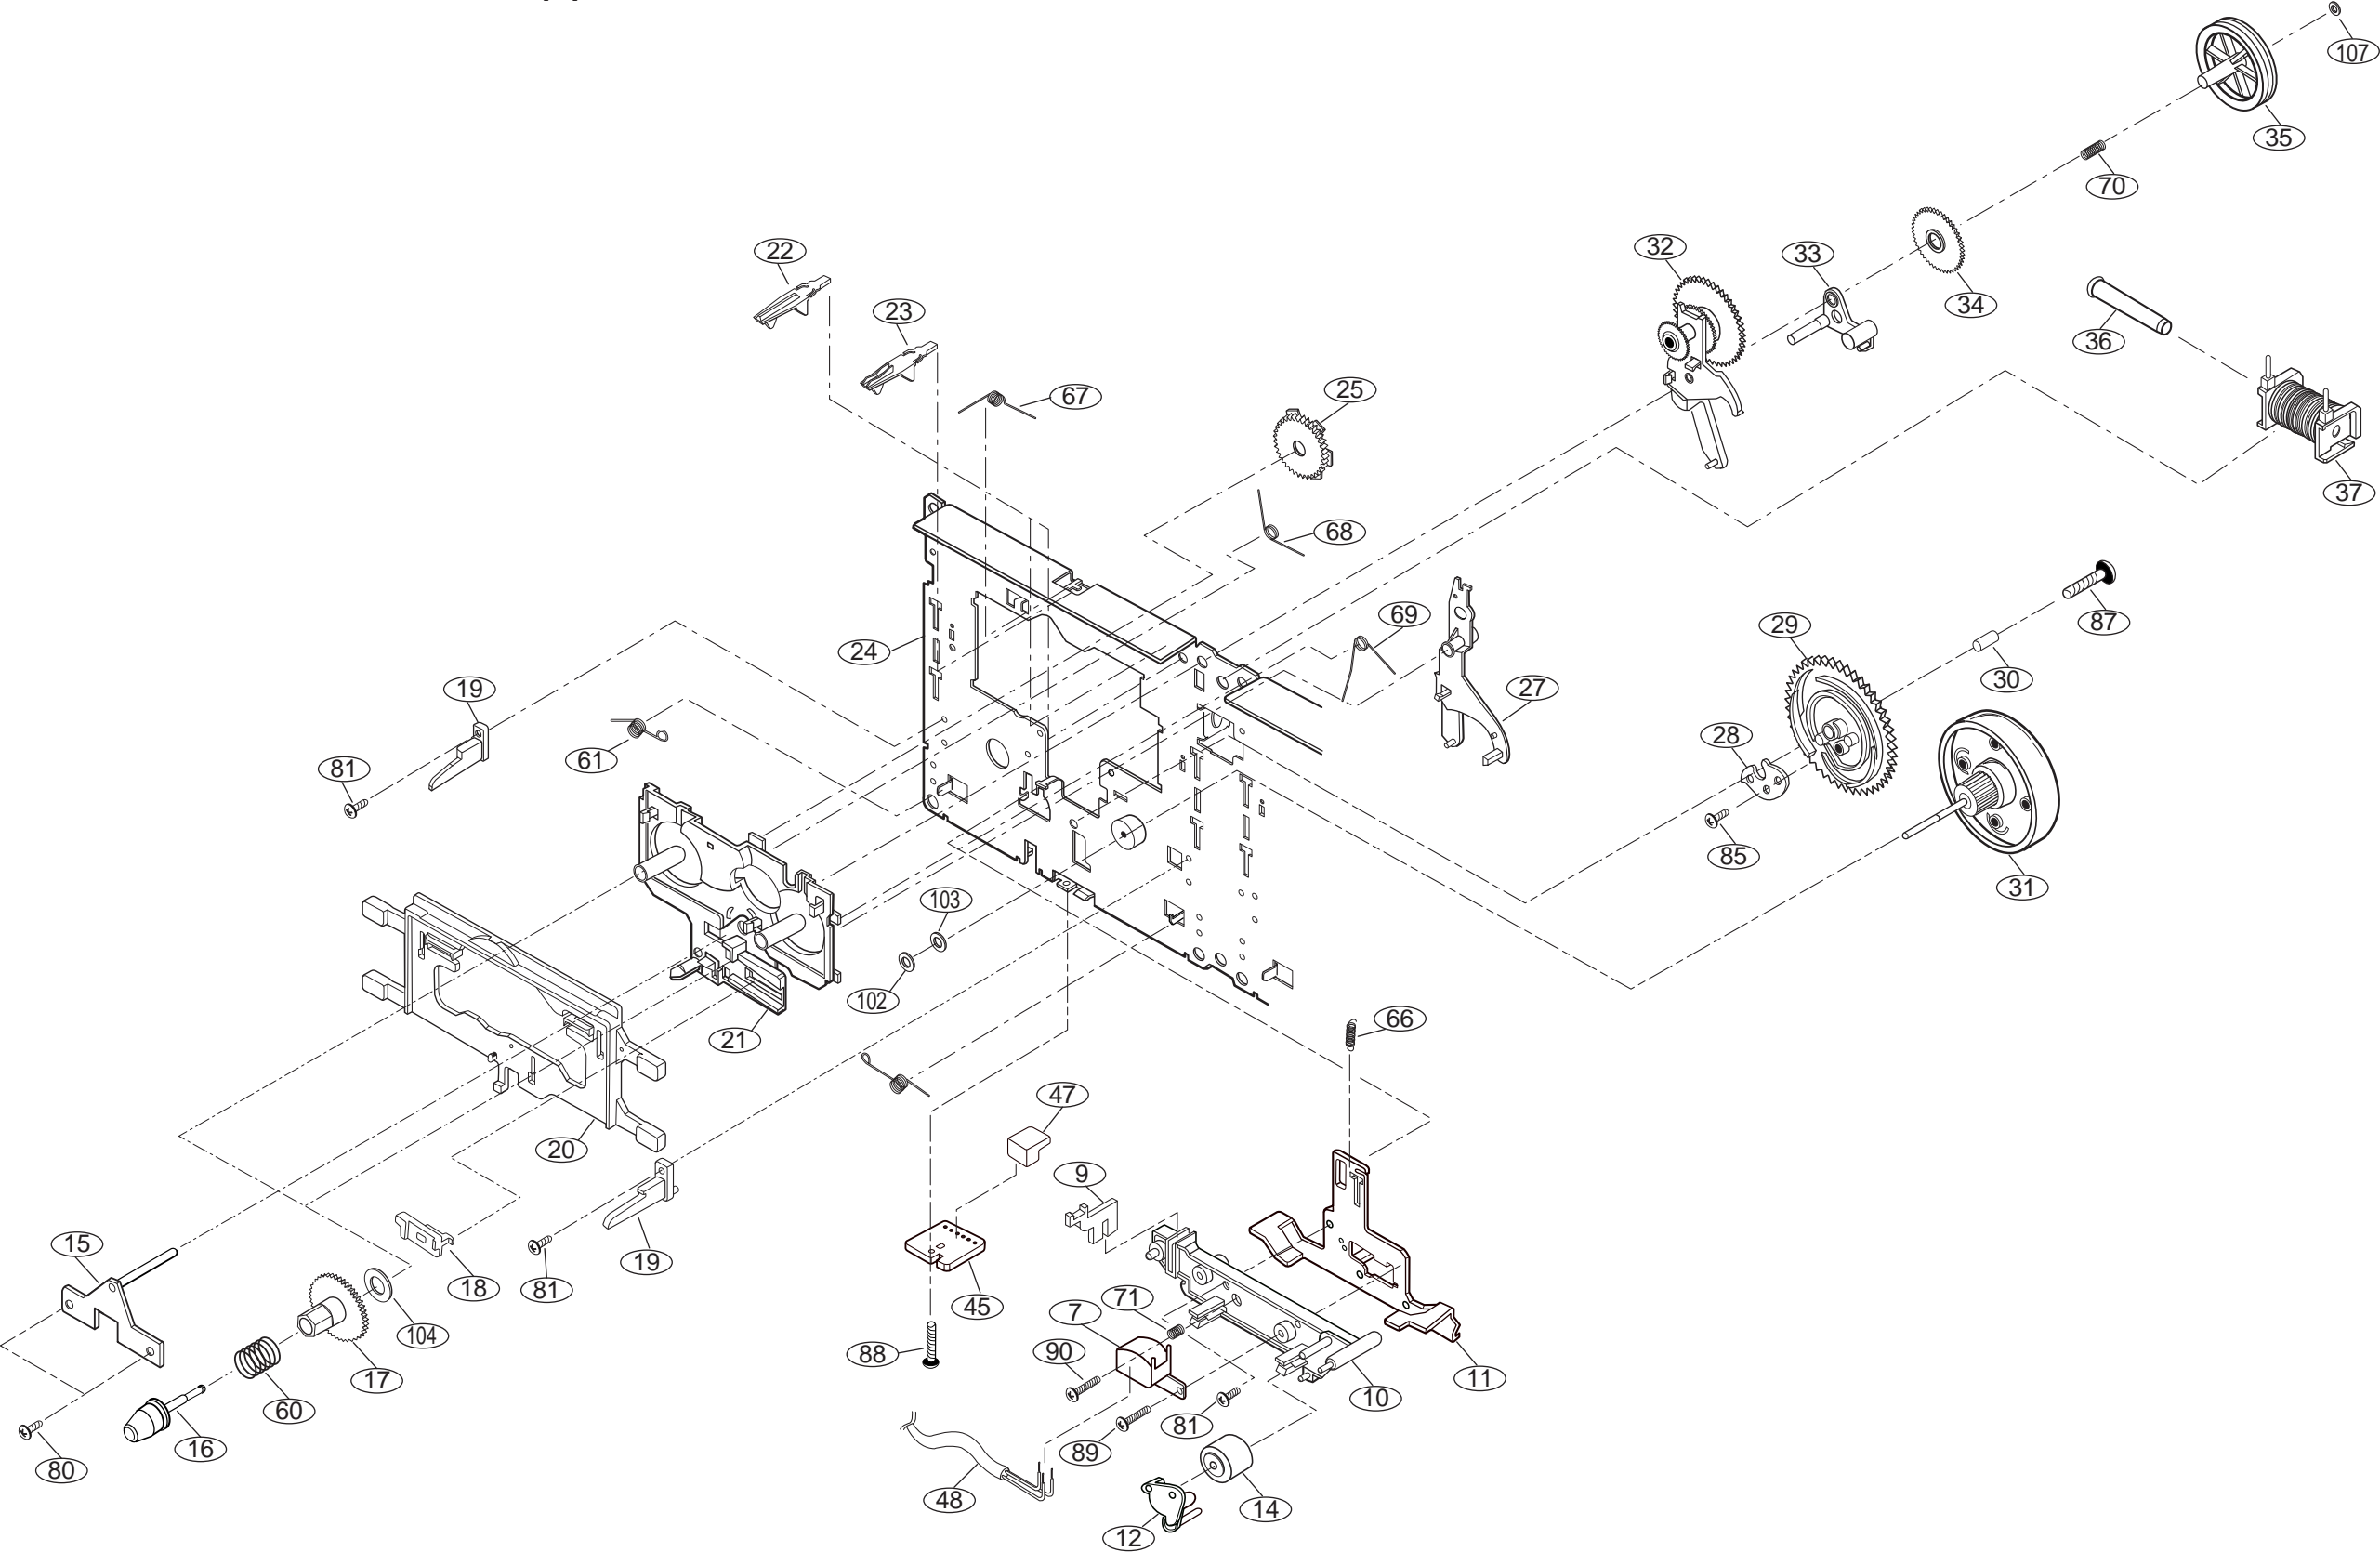

EXPLODED VIEW/PARTS LIST

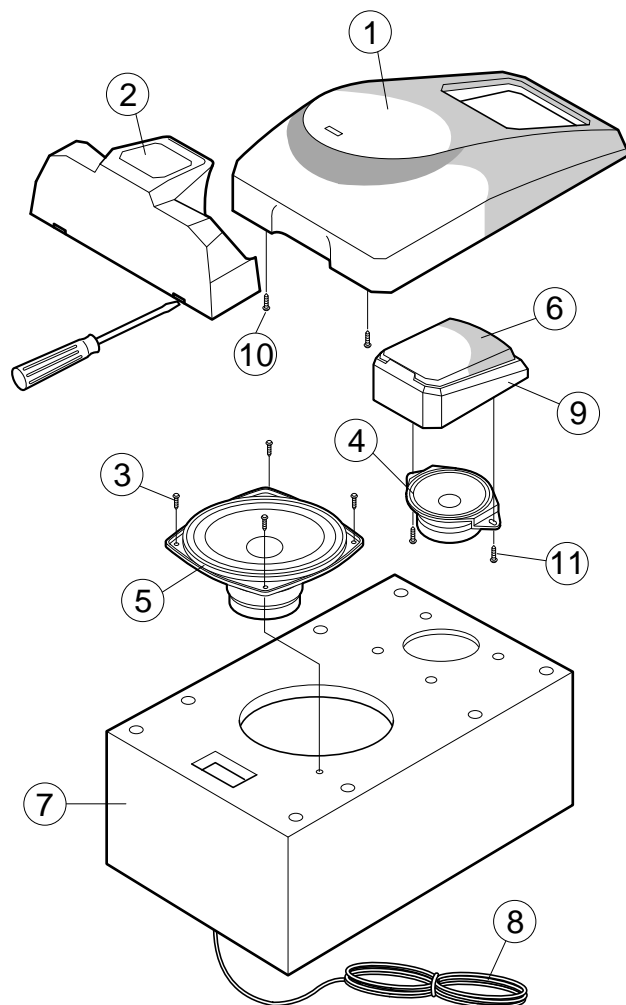

NO	DESCRIPTION	PART NO.	Q'TY
1	NET ASS'Y	3701SM0015A	1
2	PANEL FRONT	3720SMM029A	1
3	SCREW (3.5X16)	353M050C	4
4	TWEETER	6400SCEB02D	1
5	WOOFER	6400SCEH01A	1
6	GRILLE METAL	3530SMM016A	1
7	CABINET ASS'Y	3091SMW022A	1
8	CORD ASS'Y	564M033L	1
9	HOLDER METAL	4930SM0012B	1
10	SCREW(3°ø12)	353M025K	2
11	SCREW(3°ø8)	353M025F	2