


Model: **CR20**
CD changer mechanism

Frequency:
C


Cases reported (country)
Japan

- Subject:** : Disc spacer is come off
Objective Model : CR20 (CD changer mechanism)
Symptom: : Disc spacer which is come off effect other mechanical operation.
 Therefore some symptom appear.
 * CD Changer operation does not work.
 * CD does not play.
 * CD tray does not open. and so on.

Cause: : This mechanism control the switching of Disc Up/Down and Tray Open/Close operation by Change gear. (Refer to following figures)

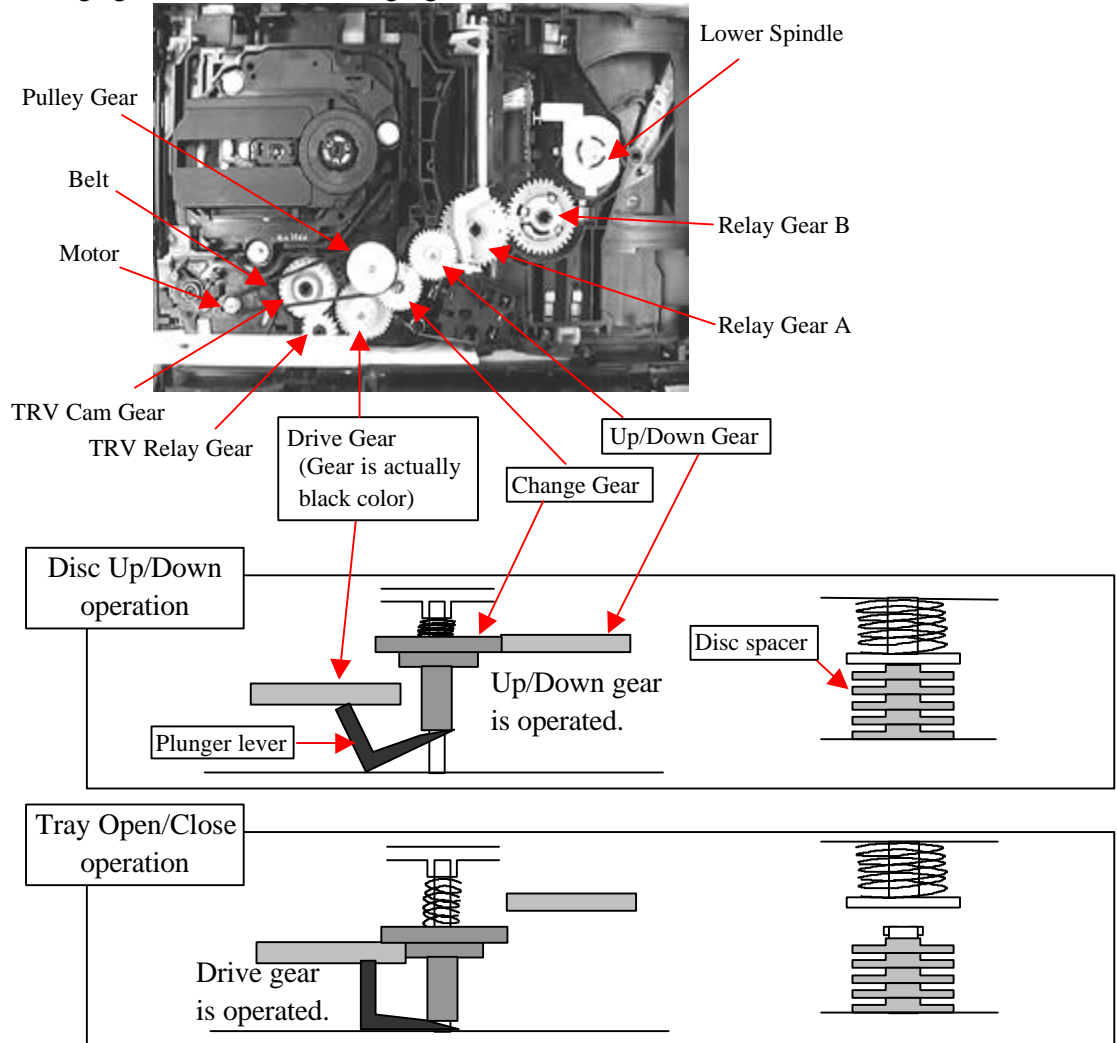

If the Change gear does not drop down due to tight engaging between Change gear and Drive gear when switching to tray open/close operation, Disc spacer come off.

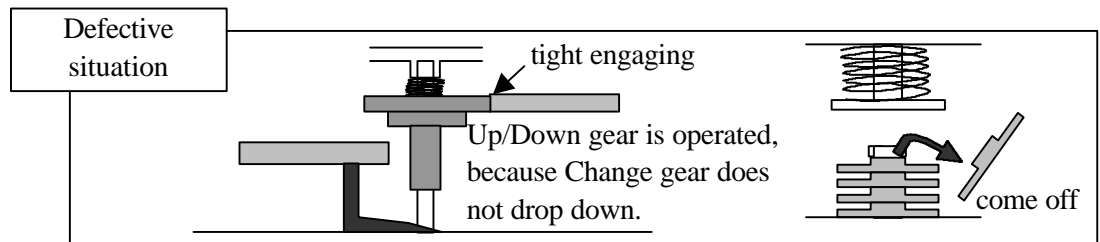

Remedy: Replace the Change gear spring to strong one due the Change gear drop down surely.

Original	New
RMB0549	RMB0549-1

Action on production : From October,1999 production onwards.