

CCD-TRV128/TRV228/TRV228E/TRV328/TRV428/TRV428E

RMT-833

SERVICE MANUAL

Ver 1.1 2005.06
Revision History

How to use
Acrobat Reader



Photo: CCD-TRV328

- US Model*
- Canadian Model*
CCD-TRV128/TRV328
- AEP Model*
- East European Model*
- North European Model*
CCD-TRV228E/TRV428E
- UK Model*
CCD-TRV228E
- E Model*
CCD-TRV128/TRV228/TRV228E/TRV328/TRV428E
- Australian Model*
- Hong Kong Model*
CCD-TRV428E
- Argentine Model*
- Brazilian Model*
CCD-TRV128
- Tourist Model*
CCD-TRV428/TRV428E

M2100/M2101 MECHANISM

Link		
SPECIFICATIONS	BLOCK DIAGRAMS	PRINTED WIRING BOARDS
SERVICE NOTE	FRAME SCHEMATIC DIAGRAMS	REPAIR PARTS LIST
DISASSEMBLY	SCHEMATIC DIAGRAMS	

NTSC MODEL: CCD-TRV128/TRV228/TRV328/TRV428
PAL MODEL: CCD-TRV228E/TRV428E

- For ADJUSTMENTS (SECTION 6), refer to SERVICE MANUAL, ADJ (987629051.pdf).
- [INSTRUCTION MANUAL](#) is shown at the end of this document.
- For MECHANISM ADJUSTMENTS, refer to the "8mm Video MECHANICAL ADJUSTMENT MANUAL IX [M2000 MECHANISM]" (9-929-861-11).
- **Reference No. search on printed wiring boards is available.**
- Table for differences of function of each model.
- **TO TAKE OUT A CASSETTE WHEN NOT EJECT (FORCE EJECT)**
- When the machine needs to be repaired, make sure to follow the items of "LCD TYPE CHECK".
- **HELP:** Sheet attachment positions and procedures of processing the flexible boards/harnesses are shown.

video Hi8 VIDEO CAMERA RECORDER

SONY®



SPECIFICATIONS

Video camera recorder

System

Video recording system

2 rotary heads, Helical scanning FM system

Audio recording system

Rotary heads, FM system

Video signal

CCD-TRV228E/428E:

PAL color, CCIR standards

CCD-TRV128/228/328/428:

NTSC color, EIA standards

Usable cassette

8 mm video format cassette

Tape speed

CCD-TRV228E/428E:

SP: Approx. 20.05 mm/s

LP: Approx. 10.06 mm/s

CCD-TRV128/228/328/428:

SP: Approx. 14.35 mm/s

LP: Approx. 7.19 mm/s

Recording/playback time (using 90 min. Hi8/

Digital8 video cassette)

CCD-TRV228E/428E:

SP: 1 h 30 min

LP: 3 h

Recording/playback time (using 120 min. Hi8/

Digital8 video cassette)

CCD-TRV128/228/328/428:

SP: 2 h

LP: 4 h

Fast forward/rewind time

(CCD-TRV228E/428E: using 90 min. Hi8/

Digital8 video cassette)

(CCD-TRV128/228/328/428: using 120 min.

Hi8/Digital8 video cassette)

Approx. 5 min

Viewfinder

Electric viewfinder (monochrome)

Image device

CCD-TRV228E/428E:

3.0 mm (1/6 type) CCD (Charge Coupled Device)

Gross: Approx. 380 000 pixels

Effective: Approx. 230 000 pixels

CCD-TRV128/228/328/428:

3.0 mm (1/6 type) CCD (Charge Coupled Device)

Gross: Approx. 320 000 pixels

Effective: Approx. 200 000 pixels

Lens

Combined power zoom lens

Filter diameter: 37 mm (1 1/2 in.)

20 × (Optical), 990 × (Digital)

F=1.6 - 2.4

Focal length

2.5 - 50 mm (1/8 - 2 in.)

When converted to a 35 mm still camera

42 - 840 mm (1 11/16 - 33 1/8 in.)

Color temperature

Auto

Minimum illumination

1 lx (lux) (F 1.6)

0 lx (lux) (in the NightShot plus mode)*

* Objects unable to be seen due to the dark can be shot with infrared lighting.

Input/Output connectors

S video output

4-pin mini DIN

Luminance signal: 1 Vp-p, 75 Ω (ohms),

unbalanced

CCD-TRV228E/428E:

Chrominance signal: 0.3 Vp-p, 75 Ω (ohms),

unbalanced

CCD-TRV128/228/328/428:

Chrominance signal: 0.286 Vp-p, 75 Ω

(ohms), unbalanced

Audio/Video output

AV MINIJACK

Video signal: 1 Vp-p, 75 Ω (ohms),

unbalanced, sync negative

Audio signal: 327 mV (at output impedance

more than 47 kΩ (kilohms)), Output

impedance with less than 2.2 kΩ (kilohms)

Monaural minijack (ø 3.5 mm)

RFU DC OUT

Mini-minijack (ø 2.5 mm), DC5V

LCD screen

Picture

6.2 cm (2.5 type)

Total dot number

123 200 (560 × 220)

General

Power requirements

DC 7.2 V (battery pack)

DC 8.4 V (AC Adaptor)

Average power consumption (when using the battery pack)

During camera recording using the viewfinder

1.8 W

During camera recording using the LCD

2.7 W

Operating temperature

0°C to 40°C (32°F to 104°F)

Storage temperature

-20°C to + 60°C (-4°F to + 140°F)

Dimensions (approx.)

85 × 98 × 151 mm (3 3/8 × 3 7/8 × 6 in.) (w/h/d)

Mass (Approx.)

780 g (1 lb 11 oz) main unit only

890 g (1 lb 15 oz) including the

NP-FM30 rechargeable battery pack, Hi8/

Digital8 cassette, lens cap, and shoulder strap

Supplied accessories

AC Adaptor (1)

Power cord (1)

Lens cap (1)

Shoulder strap (1)

Wireless Remote Commander (1)

RMT-833: (CCD-TRV228/228E/428/428E)

A/V connecting cable (1)

Rechargeable battery pack NP-FM30 (1)

21-pin adaptor (1): (AEP, UK, EE, NE)

Camera Operations Guide (This manual) (1)

See page 5-23.

AC Adaptor AC-L15A/L15B

Power requirements

AC 100 - 240 V, 50/60 Hz

Current consumption

0.35 - 0.18 A

Power consumption

18 W

Output voltage

DC 8.4 V, 1.5 A

Operating temperature

0°C to 40°C (32°F to 104°F)

Storage temperature

-20°C to + 60°C (-4°F to + 140°F)

Dimensions (approx.)

56 × 31 × 100 mm (2 1/4 × 1 1/4 × 4 in.) (w/h/d) excluding the projecting parts

Mass (approx.)

190 g (6.7 oz) excluding the mains lead

Rechargeable battery pack (NP-FM30)

Maximum output voltage

DC 8.4 V

Output voltage

DC 7.2 V

Capacity

5.0 Wh (700 mAh)

Dimensions (approx.)

38.2 × 20.5 × 55.6 mm

(1 9/16 × 13/16 × 2 1/4 in.) (w/h/d)

Mass (approx.)

65 g (2.3 oz)

Operating temperature

0°C to 40°C (32°F to 104°F)

Type

Lithium ion

Design and specifications are subject to change without notice.

Table for differences of function

Model	CCD-TRV128	CCD-TRV228	CCD-TRV228E	CCD-TRV328	CCD-TRV428	CCD-TRV428E
Destination	US, CND, E, AR, BR	E	AEP, UK, EE, NE, E	US, CND, E	JE	AEP, EE, NE, E, AUS, HK, JE
Remote commander	✕	○	○	✕	○	○
Color system	NTSC	NTSC	PAL	NTSC	NTSC	PAL
Mechanism deck	M2100	M2100	M2101	M2100	M2100	M2101
SteadyShot	✕	✕	✕	○	○	○
LCD type	Please refer to page 1-3 to discriminate the type of LCD (TYPE C or TYPE S).					

- Abbreviation

AR : Argentine model	CND : Canadian model	JE : Tourist model
AUS : Australian model	EE : East European model	NE : North European model
BR : Brazilian model	HK : Hong Kong model	

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK \triangle OR DOTTED LINE WITH MARK \triangle ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE \triangle SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer.

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, through functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
5. Check the B+ voltage to see it is at the values specified.
6. Flexible Circuit Board Repairing
 - Keep the temperature of the soldering iron around 270°C during repairing.
 - Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
 - Be careful not to apply force on the conductor when soldering or unsoldering.

Unleaded solder

Boards requiring use of unleaded solder are printed with the lead-free mark (LF) indicating the solder contains no lead. (Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size.)



Unleaded solder has the following characteristics.

- Unleaded solder melts at a temperature about 40°C higher than ordinary solder. Ordinary soldering irons can be used but the iron tip has to be applied to the solder joint for a slightly longer time. Soldering irons using a temperature regulator should be set to about 350°C. Caution: The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful!
- Strong viscosity. Unleaded solder is more viscous (sticky, less prone to flow) than ordinary solder so use caution not to let solder bridges occur such as on IC pins, etc.
- Usable with ordinary solder. It is best to use only unleaded solder but unleaded solder may also be added to ordinary solder.


TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>	<u>Section</u>	<u>Title</u>	<u>Page</u>
1. SERVICE NOTE			5. REPAIR PARTS LIST		
1-1.	Note for Repair	1-1	5-1.	Exploded Views	5-2
1-2.	Power Supply During Repairs	1-1	5-1-1.	Overall Assembly	5-2
1-3.	To Take Out a Cassette when not Eject (Force Eject)	1-2	5-1-2.	Front Panel Block	5-3
1-4.	LCD Type Check	1-3	5-1-3.	Lens Block	5-4
1-5.	Self-diagnosis Function	1-4	5-1-4.	LCD Block	5-5
1-5-1.	Self-diagnosis Function	1-4	5-1-5.	Cabinet R Block	5-6
1-5-2.	Self-diagnosis Display	1-4	5-1-6.	EVF Block	5-7
1-5-3.	Service Mode Display	1-4	5-1-7.	Battery Panel Block	5-8
1-5-4.	Self-diagnosis Code Table	1-5	5-1-8.	MD Frame Block	5-9
			5-1-9.	Cassette Compartment Assembly, Drum Assembly	5-10
2. DISASSEMBLY			5-1-10.	LS Chassis Block Assembly	5-11
2-1.	Flow Chart	2-1	5-1-11.	Mechanical Chassis Block Assembly-1	5-12
2-2.	Mechanism Deck Service Position	2-3	5-1-12.	Mechanical Chassis Block Assembly-2	5-13
2-3.	LCD Service Position	2-5	5-2.	Electrical Parts List	5-14
2-4.	Circuit Boards Location	2-6			
2-5.	Flexible Boards Location	2-7			
3. BLOCK DIAGRAMS					
3-1.	Overall Block Diagram (1/5)	3-1			
3-2.	Overall Block Diagram (2/5)	3-3			
3-3.	Overall Block Diagram (3/5)	3-5			
3-4.	Overall Block Diagram (4/5)	3-7			
3-5.	Overall Block Diagram (5/5)	3-9			
3-6.	Power Block Diagram (1/2)	3-11			
3-7.	Power Block Diagram (2/2)	3-13			
4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS					
4-1.	Frame Schematic Diagram	4-1			
4-2.	Schematic Diagrams	4-5			
	CD-465 (CCD IMAGER)	4-7			
	VC-341 (1/10)				
	(A/D CONVERTER, TIMING GENERATOR)	4-9			
	VC-341 (2/10)				
	(CAMERA/VTR PROCESS, LENS CONTROL)	4-11			
	VC-341 (3/10) (LENS DRIVE)	4-13			
	VC-341 (4/10) (REC/PB AMP)	4-15			
	VC-341 (5/10) (SERVO)	4-17			
	VC-341 (6/10) (CAMERA/MECHA CONTROL)	4-19			
	VC-341 (7/10) (HI CONTROL)	4-21			
	VC-341 (8/10) (AUDIO, VIDEO)	4-23			
	VC-341 (9/10) (DC CONTROL)	4-25			
	VC-341 (10/10) (STEADYSHOT, CONNECTOR)	4-27			
	PD-204 (LCD DRIVER, BACKLIGHT DRIVE)	4-29			
	SI-039 (STEADYSHOT, JACK)	4-31			
	FP-792 FLEXIBLE	4-31			
	FP-228, FP-299, FP-300, FP-301, FP-302, FP-802				
	FLEXIBLE	4-33			
	SS-5100, PR-5100 (CONTROL KEY BLOCK)	4-34			
	CF-5100 (CONTROL KEY BLOCK)	4-35			
4-3.	Printed Wiring Boards	4-39			
	CD-465	4-41			
	VC-341	4-43			
	PD-204	4-47			
	SI-039, FP-792 FLEXIBLE	4-49			
	FP-228, FP-299, FP-300, FP-301, FP-302, FP-802				
	FLEXIBLE	4-51			
4-4.	Mounted Parts Location	4-53			


**SECTION 1
SERVICE NOTE**

1-1. NOTE FOR REPAIR

Make sure that the flat cable and flexible board are not cracked or bent at the terminal.
Do not insert the cable insufficiently nor crookedly.


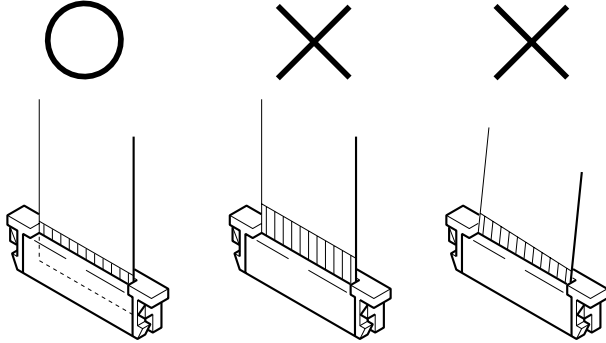


When remove a connector, don't pull at wire of connector.
It is possible that a wire is snapped.

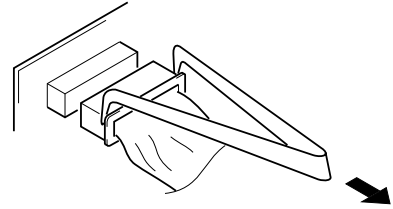

When installing a connector, don't press down at wire of connector.
It is possible that a wire is snapped.

Cut and remove the part of gilt which comes off at the point.
(Be careful or some pieces of gilt may be left inside)

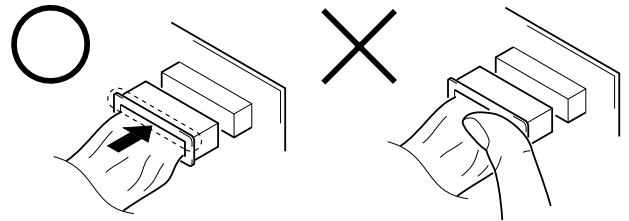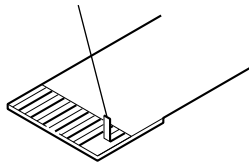

1-2. POWER SUPPLY DURING REPAIRS


In this unit, about 10 seconds after power is supplied to the battery terminal using the regulated power supply (8.4V), the power is shut off so that the unit cannot operate.
The following method is available to prevent this.

Method 1.

Use the AC power adaptor (AC-L10, AC-VQ800 etc.).

1-3. TO TAKE OUT A CASSETTE WHEN NOT EJECT (FORCE EJECT)

- ① Refer to "SECTION 2. DISASSEMBLY" to remove the mechanism deck block.
- ② Disconnect CN401 (2P) of VC-341 board.
- ③ Add +5V from the DC POWER SUPPLY and unload with a pressing the cassette compartment.

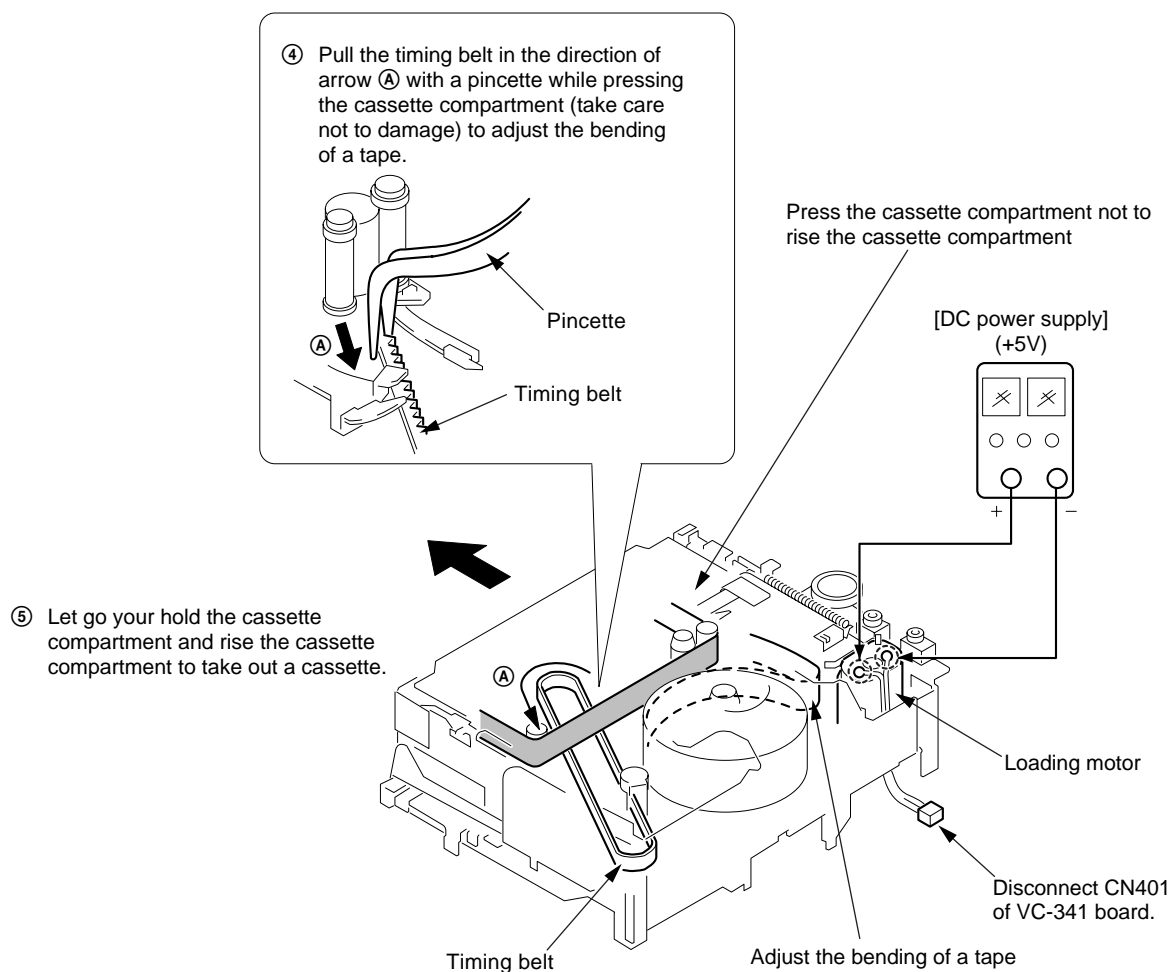

1-4. LCD TYPE CHECK

The LCD type can be checked with data value by connecting the adjustment remote commander.

Note: About PD-204 board and LCD module, discriminate LCD type on the machine, and replace the same type.

Preparations:


- 1) Connect the equipment for adjustments according to Fig. 1.
- 2) Connect the adjustment remote commander to VC-341 board CN007 via I/F unit for LANC control (J-6082-521-A) and CPC jig connector (J-6082-539-A).

To operate the adjustment remote commander, connect the AC power adaptor to the DC IN jack of I/F unit for LANC control, or connect the L series Info-LITHIUM battery to the battery terminal of I/F unit for LANC control.

Checking method:

- 1) Select page: 3, address: CC.
- 2) By checking the data value of display data, the type of LCD can be discriminated.

Data	LCD type
64 to 67	TYPE C
40 to 43	TYPE S

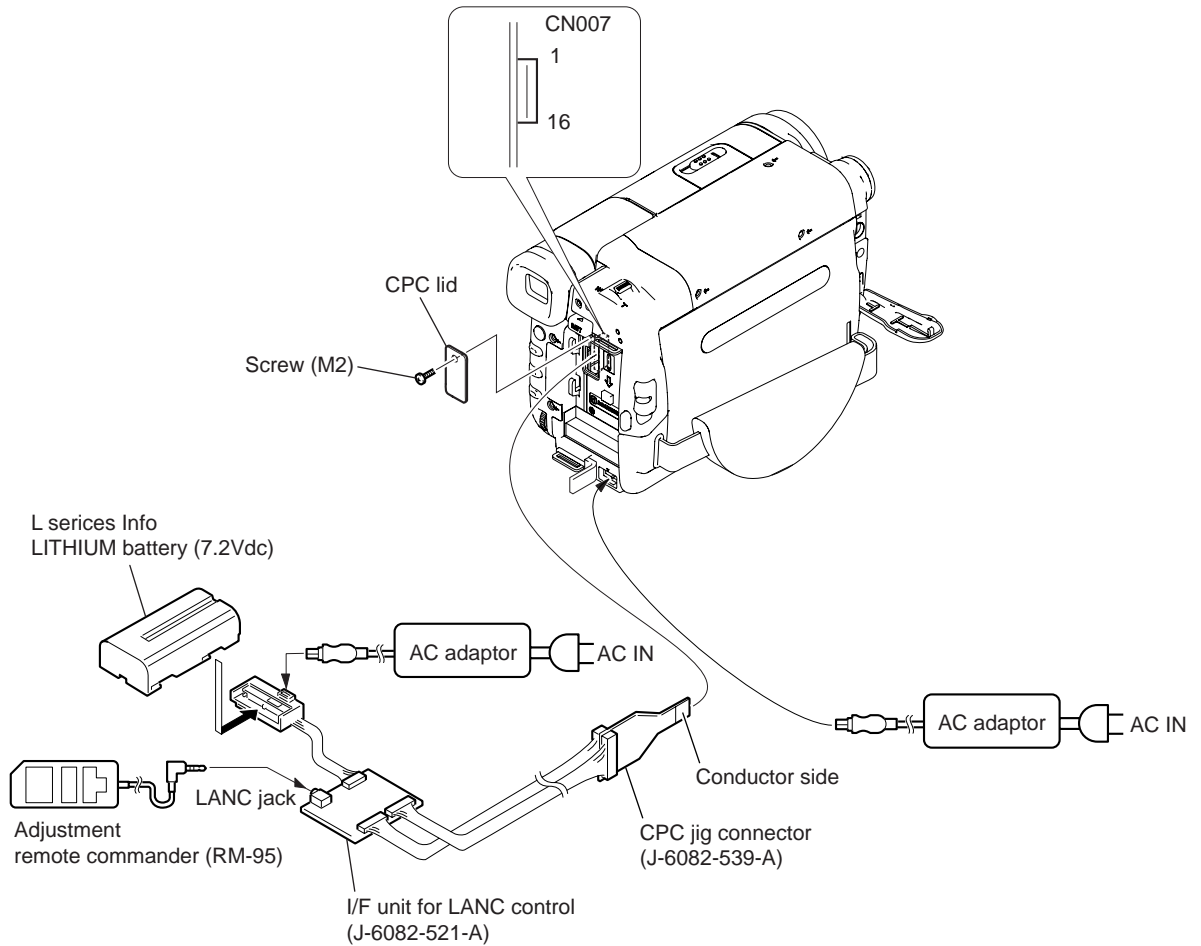

1-5. SELF-DIAGNOSIS FUNCTION


1-5-1. Self-diagnosis Function

When problems occur while the unit is operating, the self-diagnosis function starts working, and displays on the viewfinder or Display window what to do. This function consists of two display; self-diagnosis display and service mode display.

Details of the self-diagnosis functions are provided in the Instruction manual.

1-5-2. Self-diagnosis Display

When problems occur while the unit is operating, the counter of the viewfinder or Display window shows a 4-digit display consisting of an alphabet and numbers, which blinks at 3.2 Hz. This 5-character display indicates the “repaired by:”, “block” in which the problem occurred, and “detailed code” of the problem.


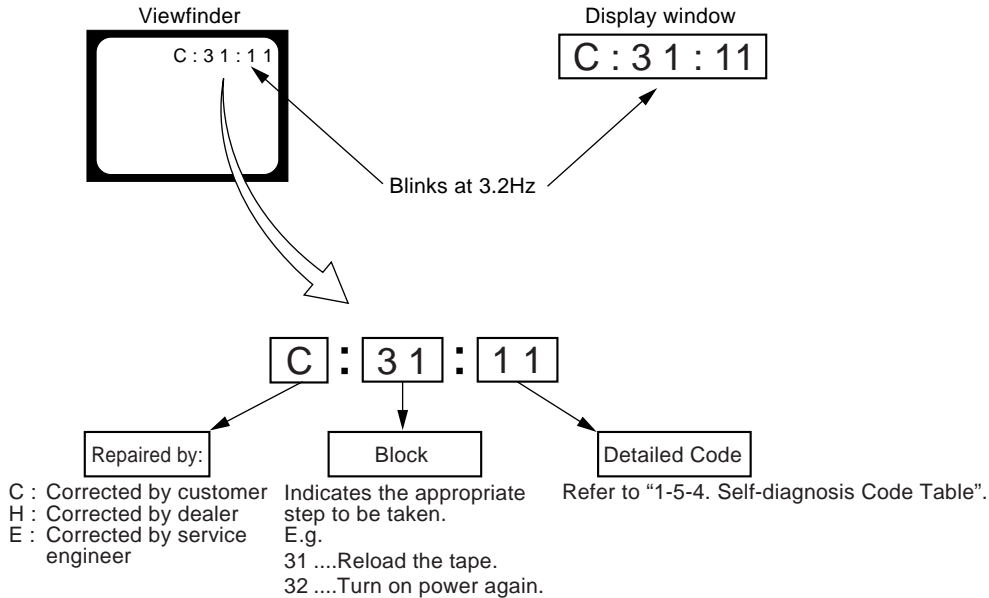


1-5-3. Service Mode Display

The service mode display shows up to six self-diagnosis codes shown in the past.

1. Display Method

While pressing the “STOP” key, set the switch from OFF to “ON”, and continue pressing the “STOP” key for 5 seconds continuously. The service mode will be displayed, and the counter will show the backup No. and the 5-character self-diagnosis codes.

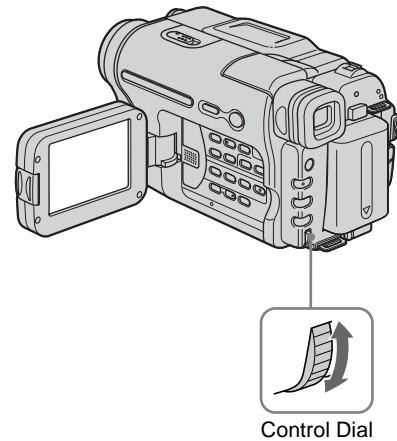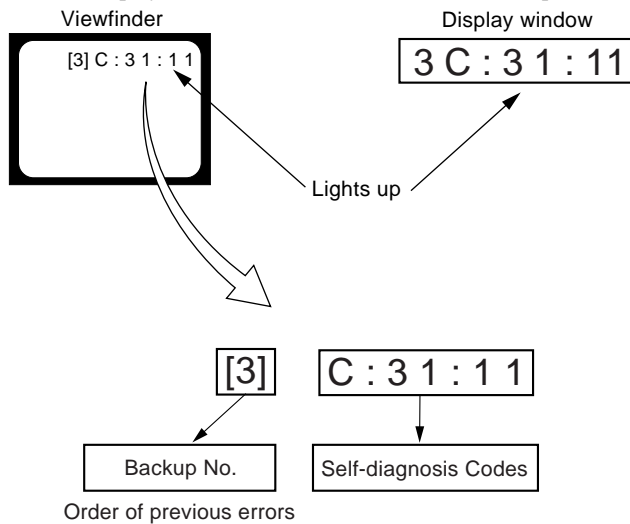

2. Switching of Backup No.

By rotating the control dial, past self-diagnosis codes will be shown in order. The backup No. in the [] indicates the order in which the problem occurred. (If the number of problems which occurred is less than 6, only the number of problems which occurred will be shown.)

- [1] : Occurred first time [3] : Occurred third time [5] : Occurred fifth time
- [2] : Occurred second time [4] : Occurred fourth time [6] : Occurred the last time

3. End of Display

Turning OFF the power supply will end the service mode display.

Note: The “self-diagnosis display” data will not be erased (reset), when the lithium battery (CONTROL KEY BLOCK (CF-5100): BT001) is removed.

1-5-4. Self-diagnosis Code Table

Self-diagnosis Code			Symptom/State	Correction
Repaired by:	Block Function	Detailed Code		
C	0 4	0 0	Non-standard battery is used.	Use the InfoLITHIUM battery.
C	2 1	0 0	Condensation.	Remove the cassette, and insert it again after one hour.
C	2 2	0 0	Video head is dirty.	Clean with the optional cleaning cassette.
C	3 1	1 0	LOAD direction. Loading does not complete within specified time	Load the tape again, and perform operations from the beginning.
C	3 1	1 1	UNLOAD direction. Loading does not complete within specified time	Load the tape again, and perform operations from the beginning.
C	3 1	2 0	T reel side tape slacking when unloading.	Load the tape again, and perform operations from the beginning.
C	3 1	2 1	S reel side tape slacking when unloading.	Load the tape again, and perform operations from the beginning.
C	3 1	2 2	T reel fault.	Load the tape again, and perform operations from the beginning.
C	3 1	2 3	S reel fault.	Load the tape again, and perform operations from the beginning.
C	3 1	3 0	FG fault when starting capstan.	Load the tape again, and perform operations from the beginning.
C	3 1	3 1	FG fault during normal capstan operations.	Load the tape again, and perform operations from the beginning.
C	3 1	4 0	FG fault when starting drum.	Load the tape again, and perform operations from the beginning.
C	3 1	4 1	PG fault when starting drum.	Load the tape again, and perform operations from the beginning.
C	3 1	4 2	FG fault during normal drum operations.	Load the tape again, and perform operations from the beginning.
C	3 1	4 3	PG fault during normal drum operations.	Load the tape again, and perform operations from the beginning.
C	3 1	4 4	Phase fault during normal drum operations.	Load the tape again, and perform operations from the beginning.
C	3 2	1 0	LOAD direction loading motor time-out.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	1 1	UNLOAD direction loading motor time-out.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	2 0	T reel side tape slacking when unloading.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	2 1	S reel side tape slacking when unloading.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	2 2	T reel fault.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	2 3	S reel fault.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	3 0	FG fault when starting capstan.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	3 1	FG fault during normal capstan operations.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	4 0	FG fault when starting drum.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	4 1	PG fault when starting drum.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	4 2	FG fault during normal drum operations.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	4 3	PG fault during normal drum operations.	Remove the battery or power cable, connect, and perform operations from the beginning.
C	3 2	4 4	Phase fault during normal drum operations.	Remove the battery or power cable, connect, and perform operations from the beginning.

CCD-TRV128/TRV228/TRV228E/TRV328/TRV428/TRV428E

Self-diagnosis Code			Symptom/State	Correction
Repaired by:	Block Function	Detailed Code		
E	6 1	0 0	Difficult to adjust focus (Cannot initialize focus.)	Inspect the lens block focus reset sensor (Pin ⑫ of CN201 of VC-341 board) when focusing is performed when the control dial is rotated in the focus manual mode and the focus motor drive circuit (IC201 of VC-341 board) when the focusing is not performed.
E	6 1	1 0	Zoom operations fault (Cannot initialize zoom lens.)	Inspect the lens block zoom reset sensor (Pin ⑬ of CN201 of VC-341 board) when zooming is performed when the zoom switch is operated and the zoom motor drive circuit (IC201 of VC-341 board) when zooming is not performed.
E	6 2	0 0	Steadyshot function does not work well. (With pitch angular velocity sensor output stopped.)	Inspect pitch angular velocity sensor (SE752 of SI-039 board) peripheral circuits. *1
E	6 2	0 1	Steadyshot function does not work well. (With yaw angular velocity sensor output stopped.)	Inspect yaw angular velocity sensor (SE751 of SI-039 board) peripheral circuits. *1




*1: STEADYSHOT model (CCD-TRV328/TRV428/TRV428E)



SECTION 2 DISASSEMBLY







2-1. FLOW CHART

The following flow chart shows the disassembly procedure.





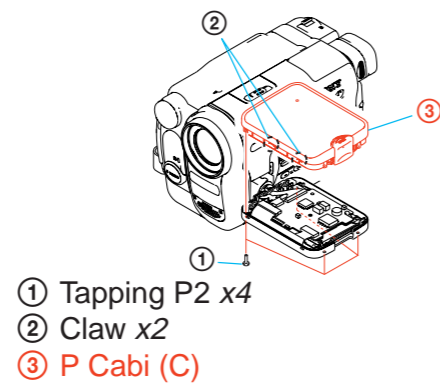
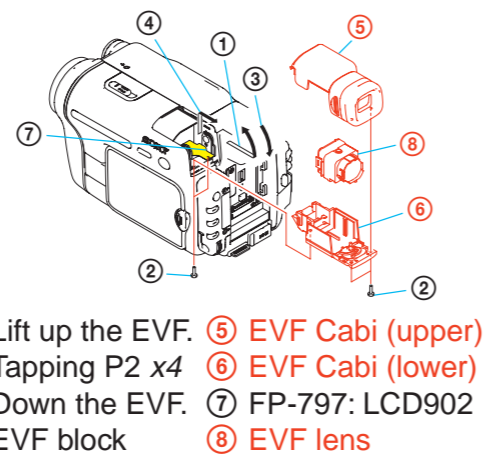
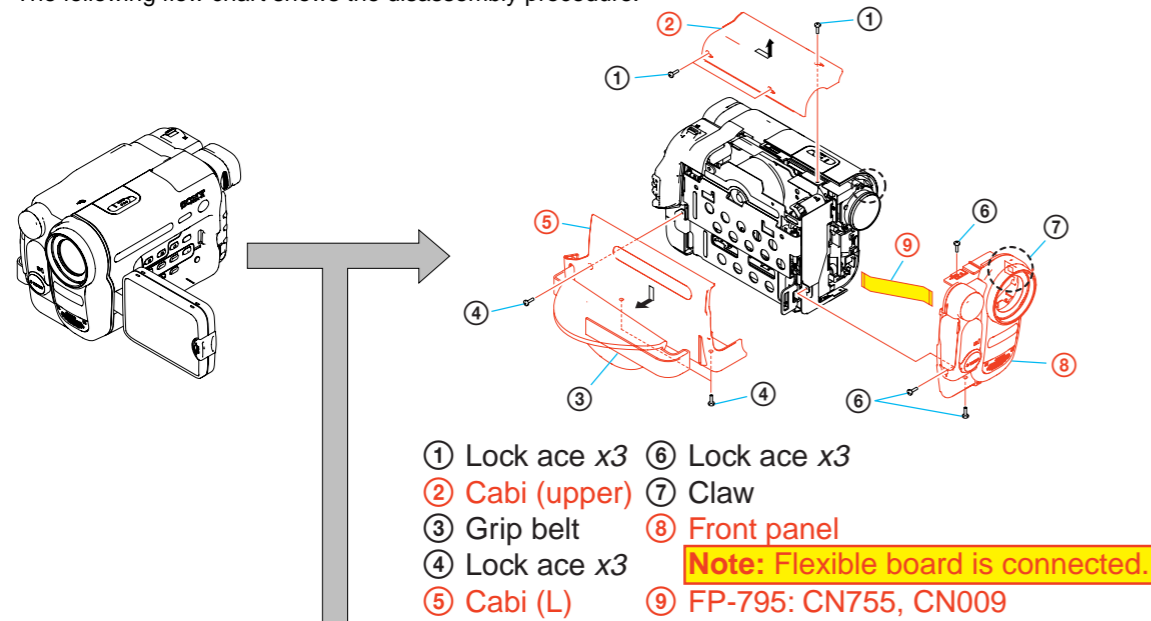


Note: When you remove Cabinet (R) Block, or when you assembly, please slide NS knob to the position of "ON".

OFF ON
 NS knob

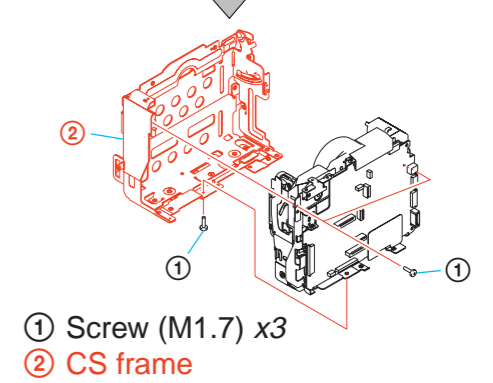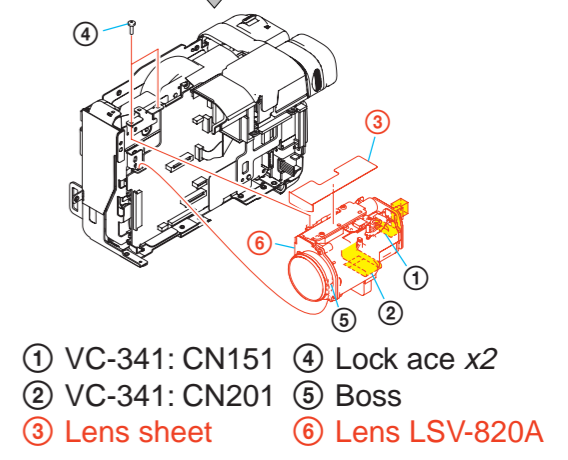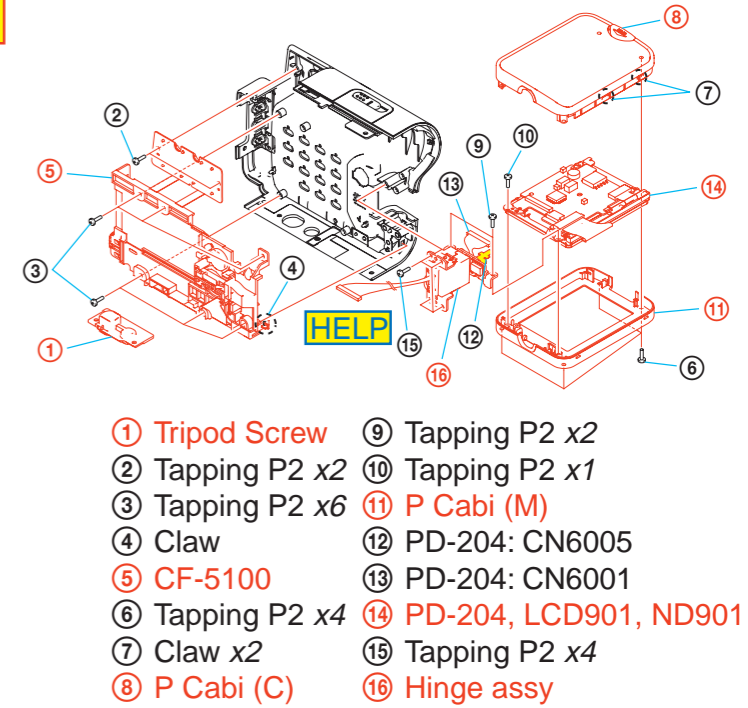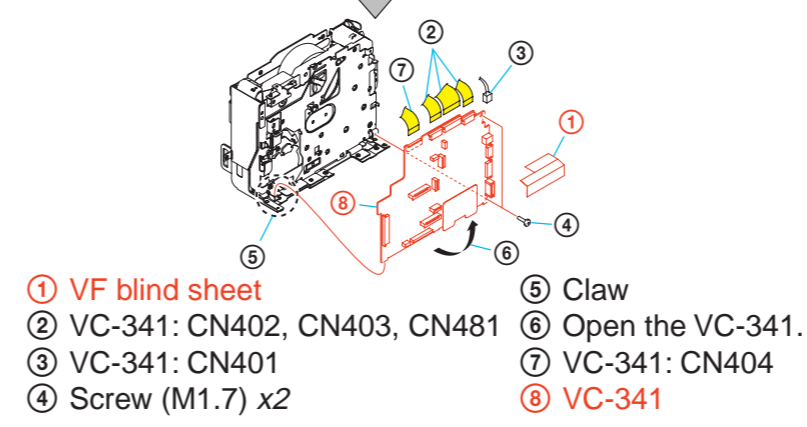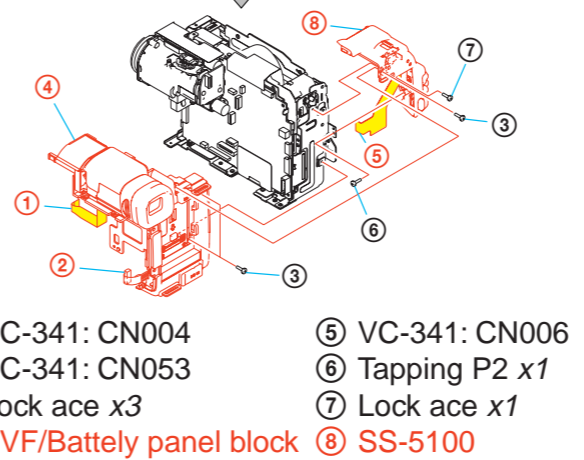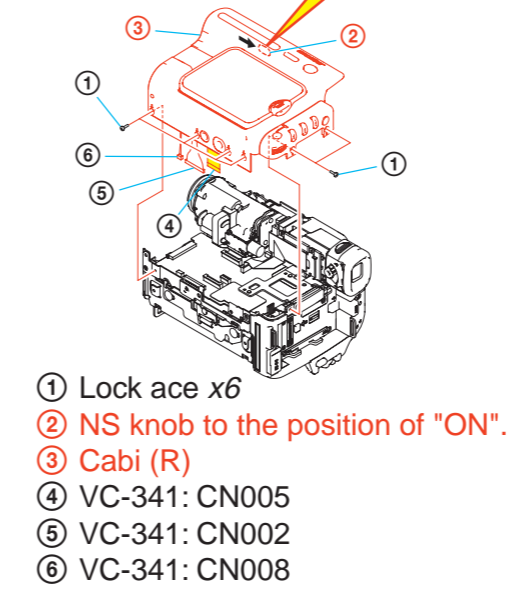

2-2. MECHANISM DECK SERVICE POSITION

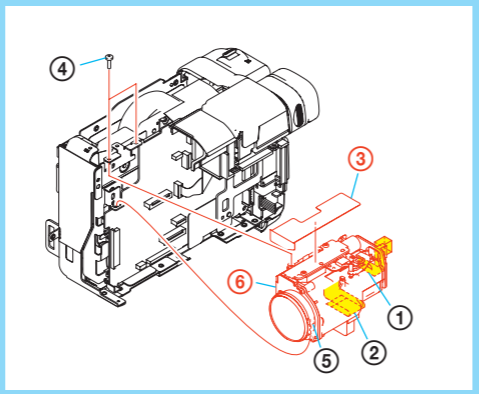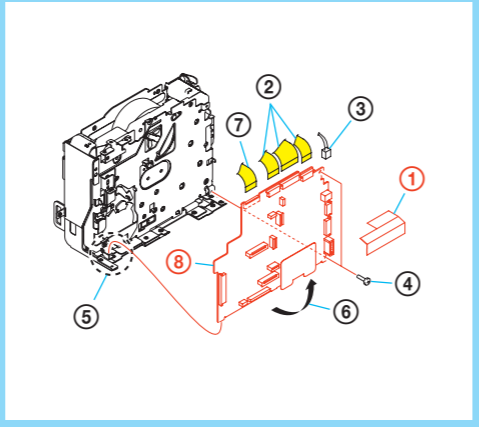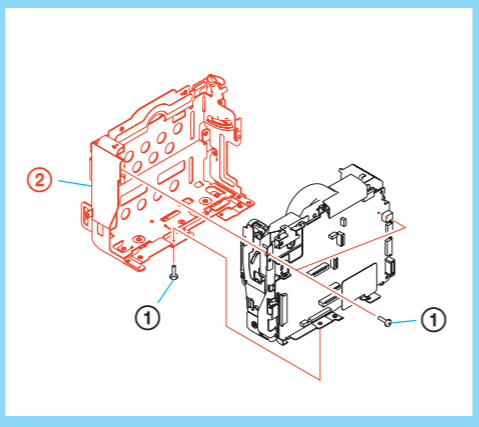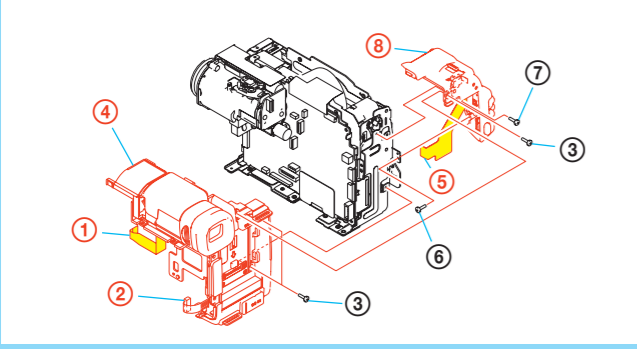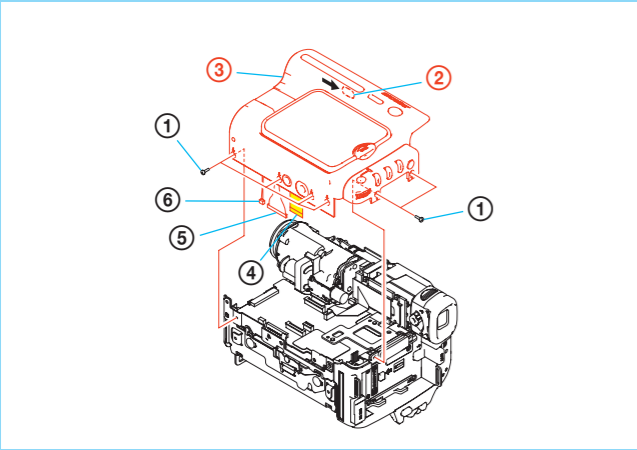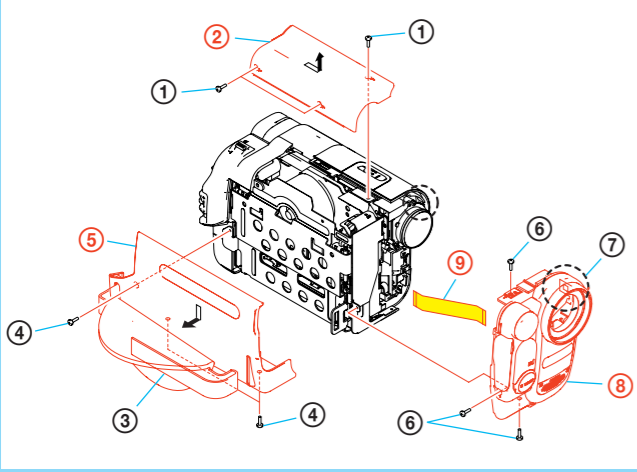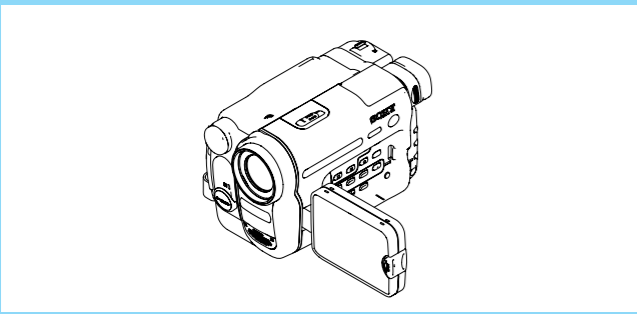

Connection to Check the Mechanism deck

To check the mechanism deck, set the Camera or VTR to the "Forced power ON" mode. (Or, connect the control key block (SS-5100) to the CN006 of VC-341 board and set the power switch to the "CAMERA" or "PLAY/edit" position.) Operate the Camera functions of the zoom and focus, the VTR function using the adjustment remote commander (with the HOLD switch set in the OFF position).

Setting the "Forced Camera Power ON" mode

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: D, address: 10, set data: 02 and press the PAUSE button of the adjustment remote commander.

Exiting the "Forced Power ON" mode


- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: D, address: 10, data: 00, and press the PAUSE button of the adjustment remote commander.
- 3) Select page: 0, address: 01, and set data: 00.

Setting the "Forced VTR Power ON" mode

- 1) Select page: 0, address: 01, and set data: 01.
- 2) Select page: D, address: 10, set data: 02 and press the PAUSE button of the adjustment remote commander.



•How to move up the cassette compartment manually

(Press the cassette compartment in the direction of the arrow (A) to move it up in the direction of the arrow (B).

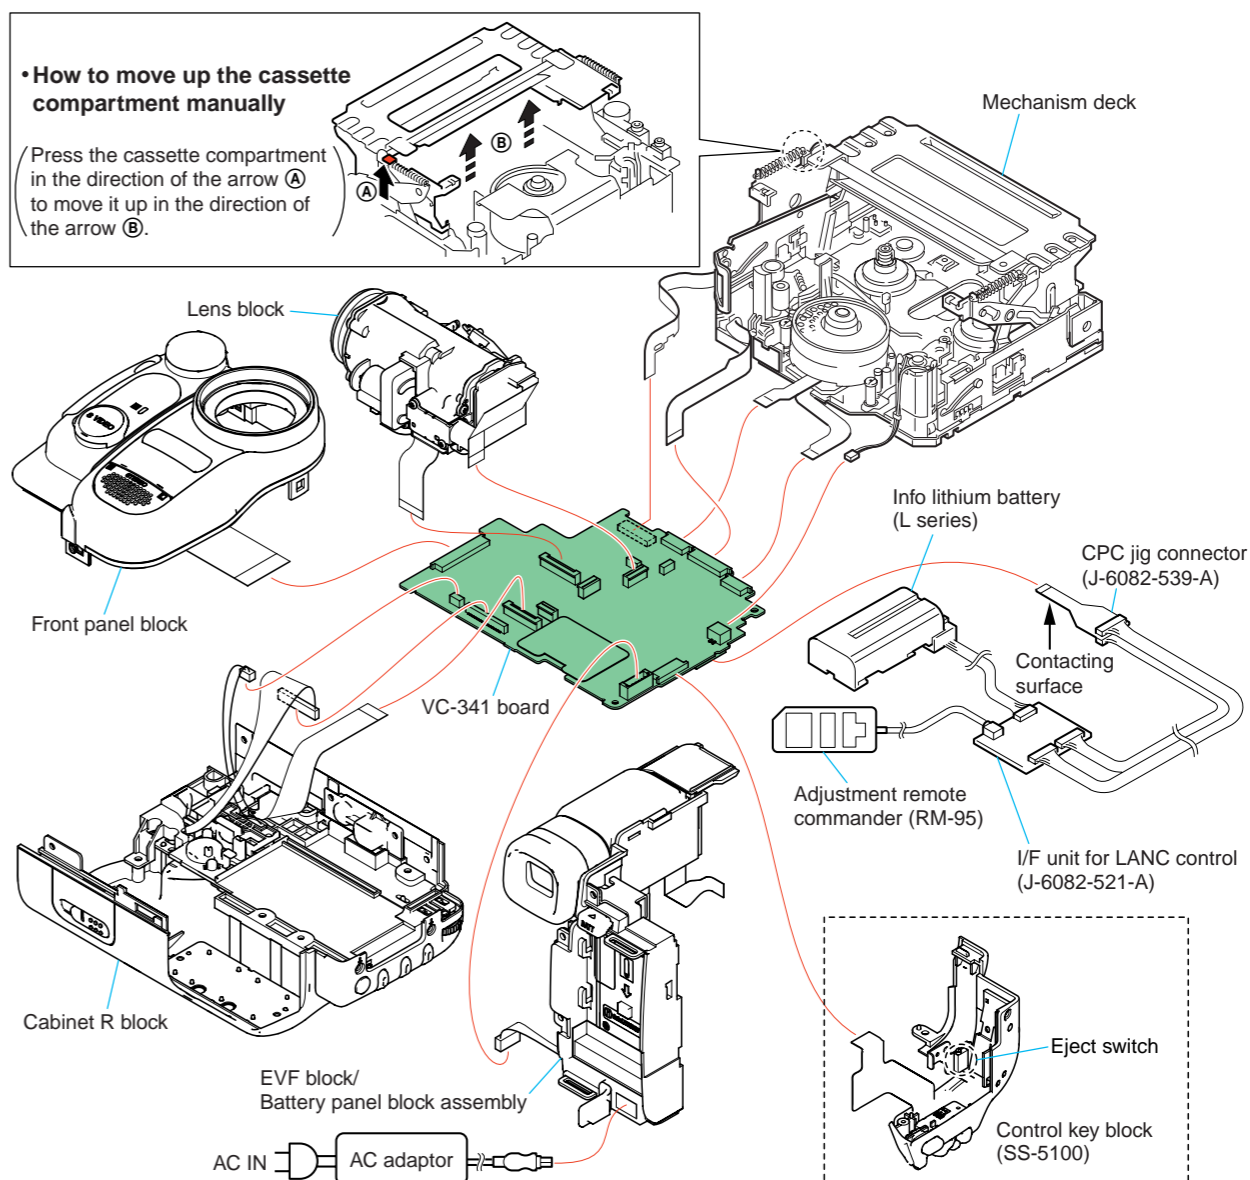


When exiting the "Forced Power ON" mode, connect the control key block (SS-5100) to the CN006 of VC-341 board. Or, when ejecting the cassette, connect the control key block (SS-5100) to the CN006 of VC-341 board. and press the Eject switch.

2-3. LCD SERVICE POSITION

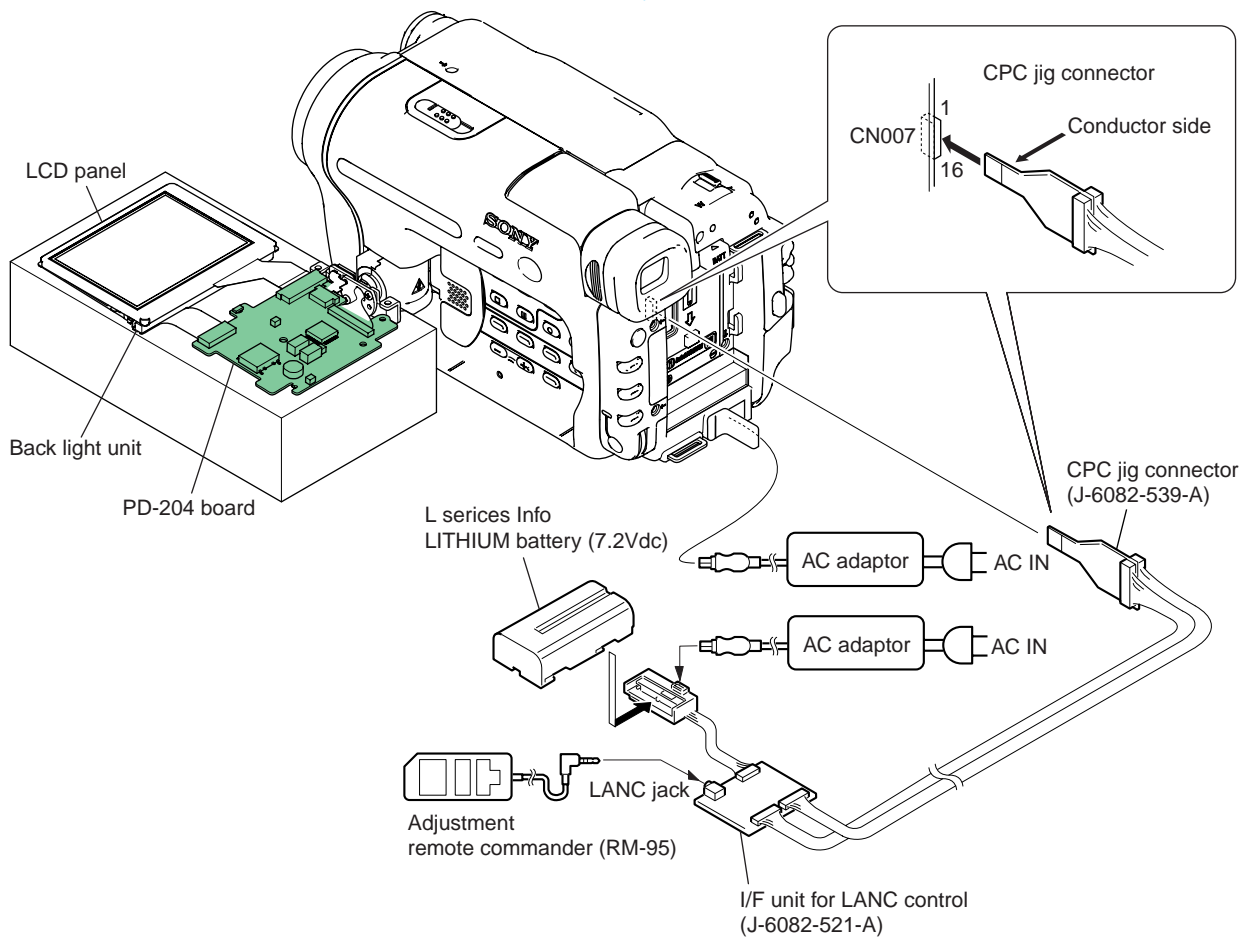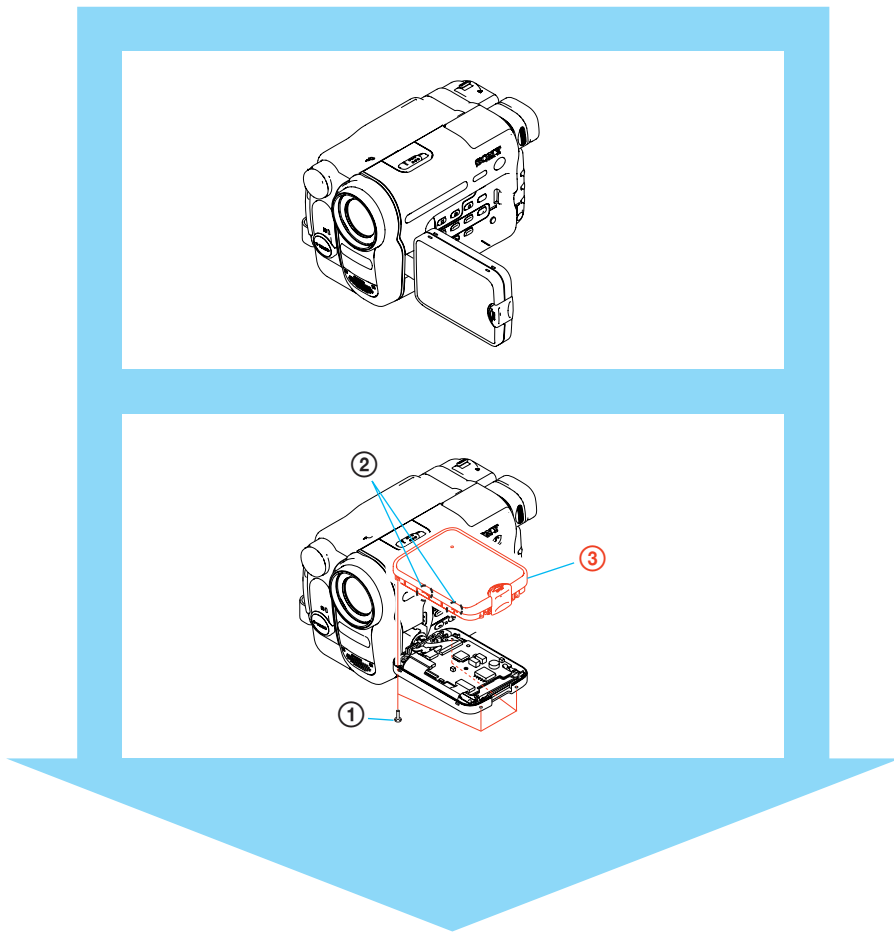


2-4. CIRCUIT BOARDS LOCATION

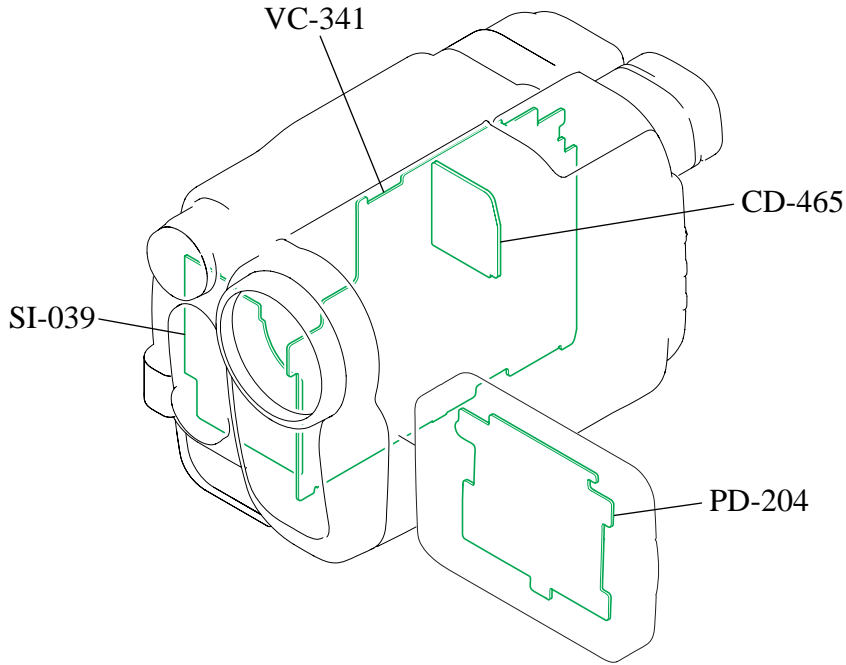


Board Name	Function
CD-465	CCD IMAGER
VC-341	A/D CONVERTER, TIMING GENERATOR, CAMERA/VTR PROCESS, LENS CONTROL, LENS DRIVE, REC/PB AMP, SERVO, CAMERA/MECHA CONTROL, HI CONTROL, AUDIO, VIDEO, DC CONTROL, STEADYSHOT, CONNECTOR
PD-204	LCD DRIVE, BACKLIGHT DRIVE
SI-039	STEADYSHOT, JACK

2-5. FLEXIBLE BOARDS LOCATION

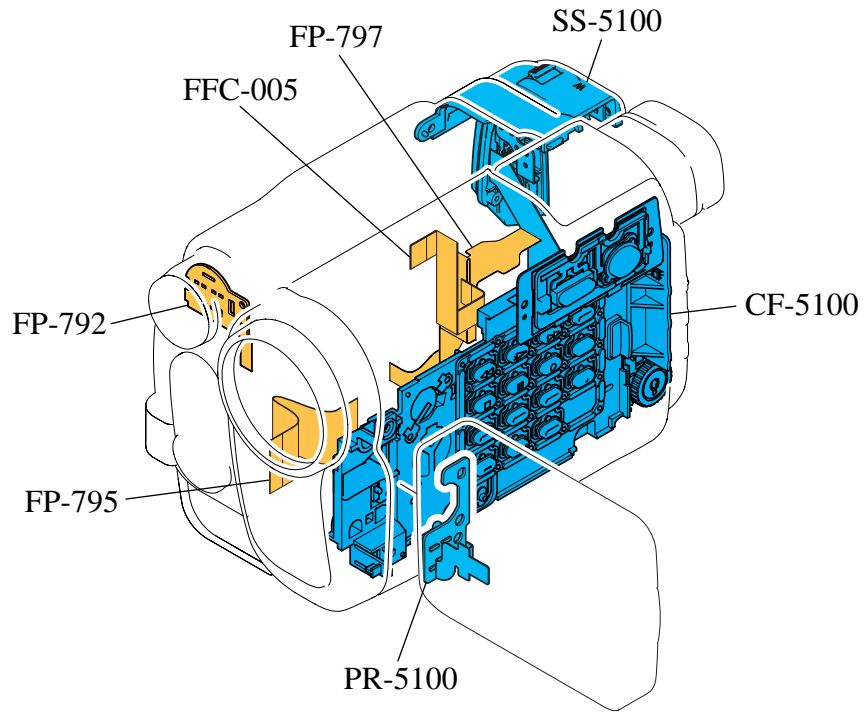

HELP

Sheet attachment positions and procedures of processing the flexible boards/harnesses are shown.

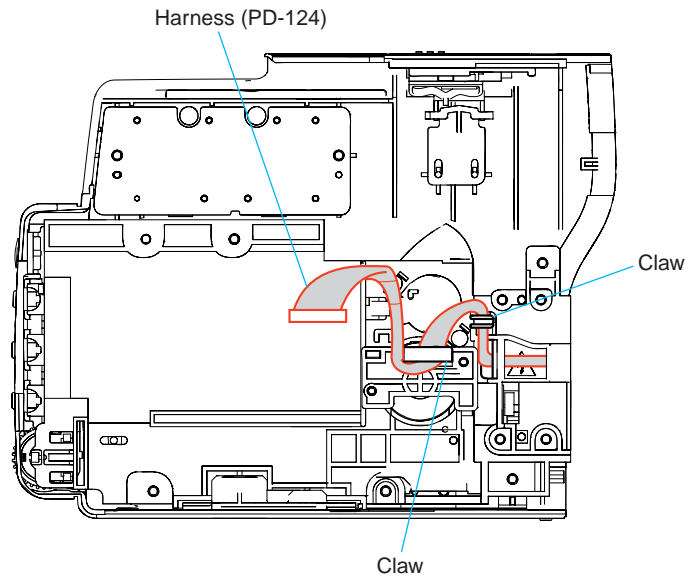

Note: Close the LCD panel, when you work.

3. BLOCK DIAGRAMS


Link

OVERALL BLOCK DIAGRAM (1/5)	OVERALL BLOCK DIAGRAM (5/5)
OVERALL BLOCK DIAGRAM (2/5)	POWER BLOCK DIAGRAM (1/2)
OVERALL BLOCK DIAGRAM (3/5)	POWER BLOCK DIAGRAM (2/2)
OVERALL BLOCK DIAGRAM (4/5)	

**SECTION 3
BLOCK DIAGRAMS**


3. BLOCK DIAGRAMS

3-1. OVERALL BLOCK DIAGRAM (1/5) () : Number in parenthesis () indicates the division number of schematic diagram where the component is located.

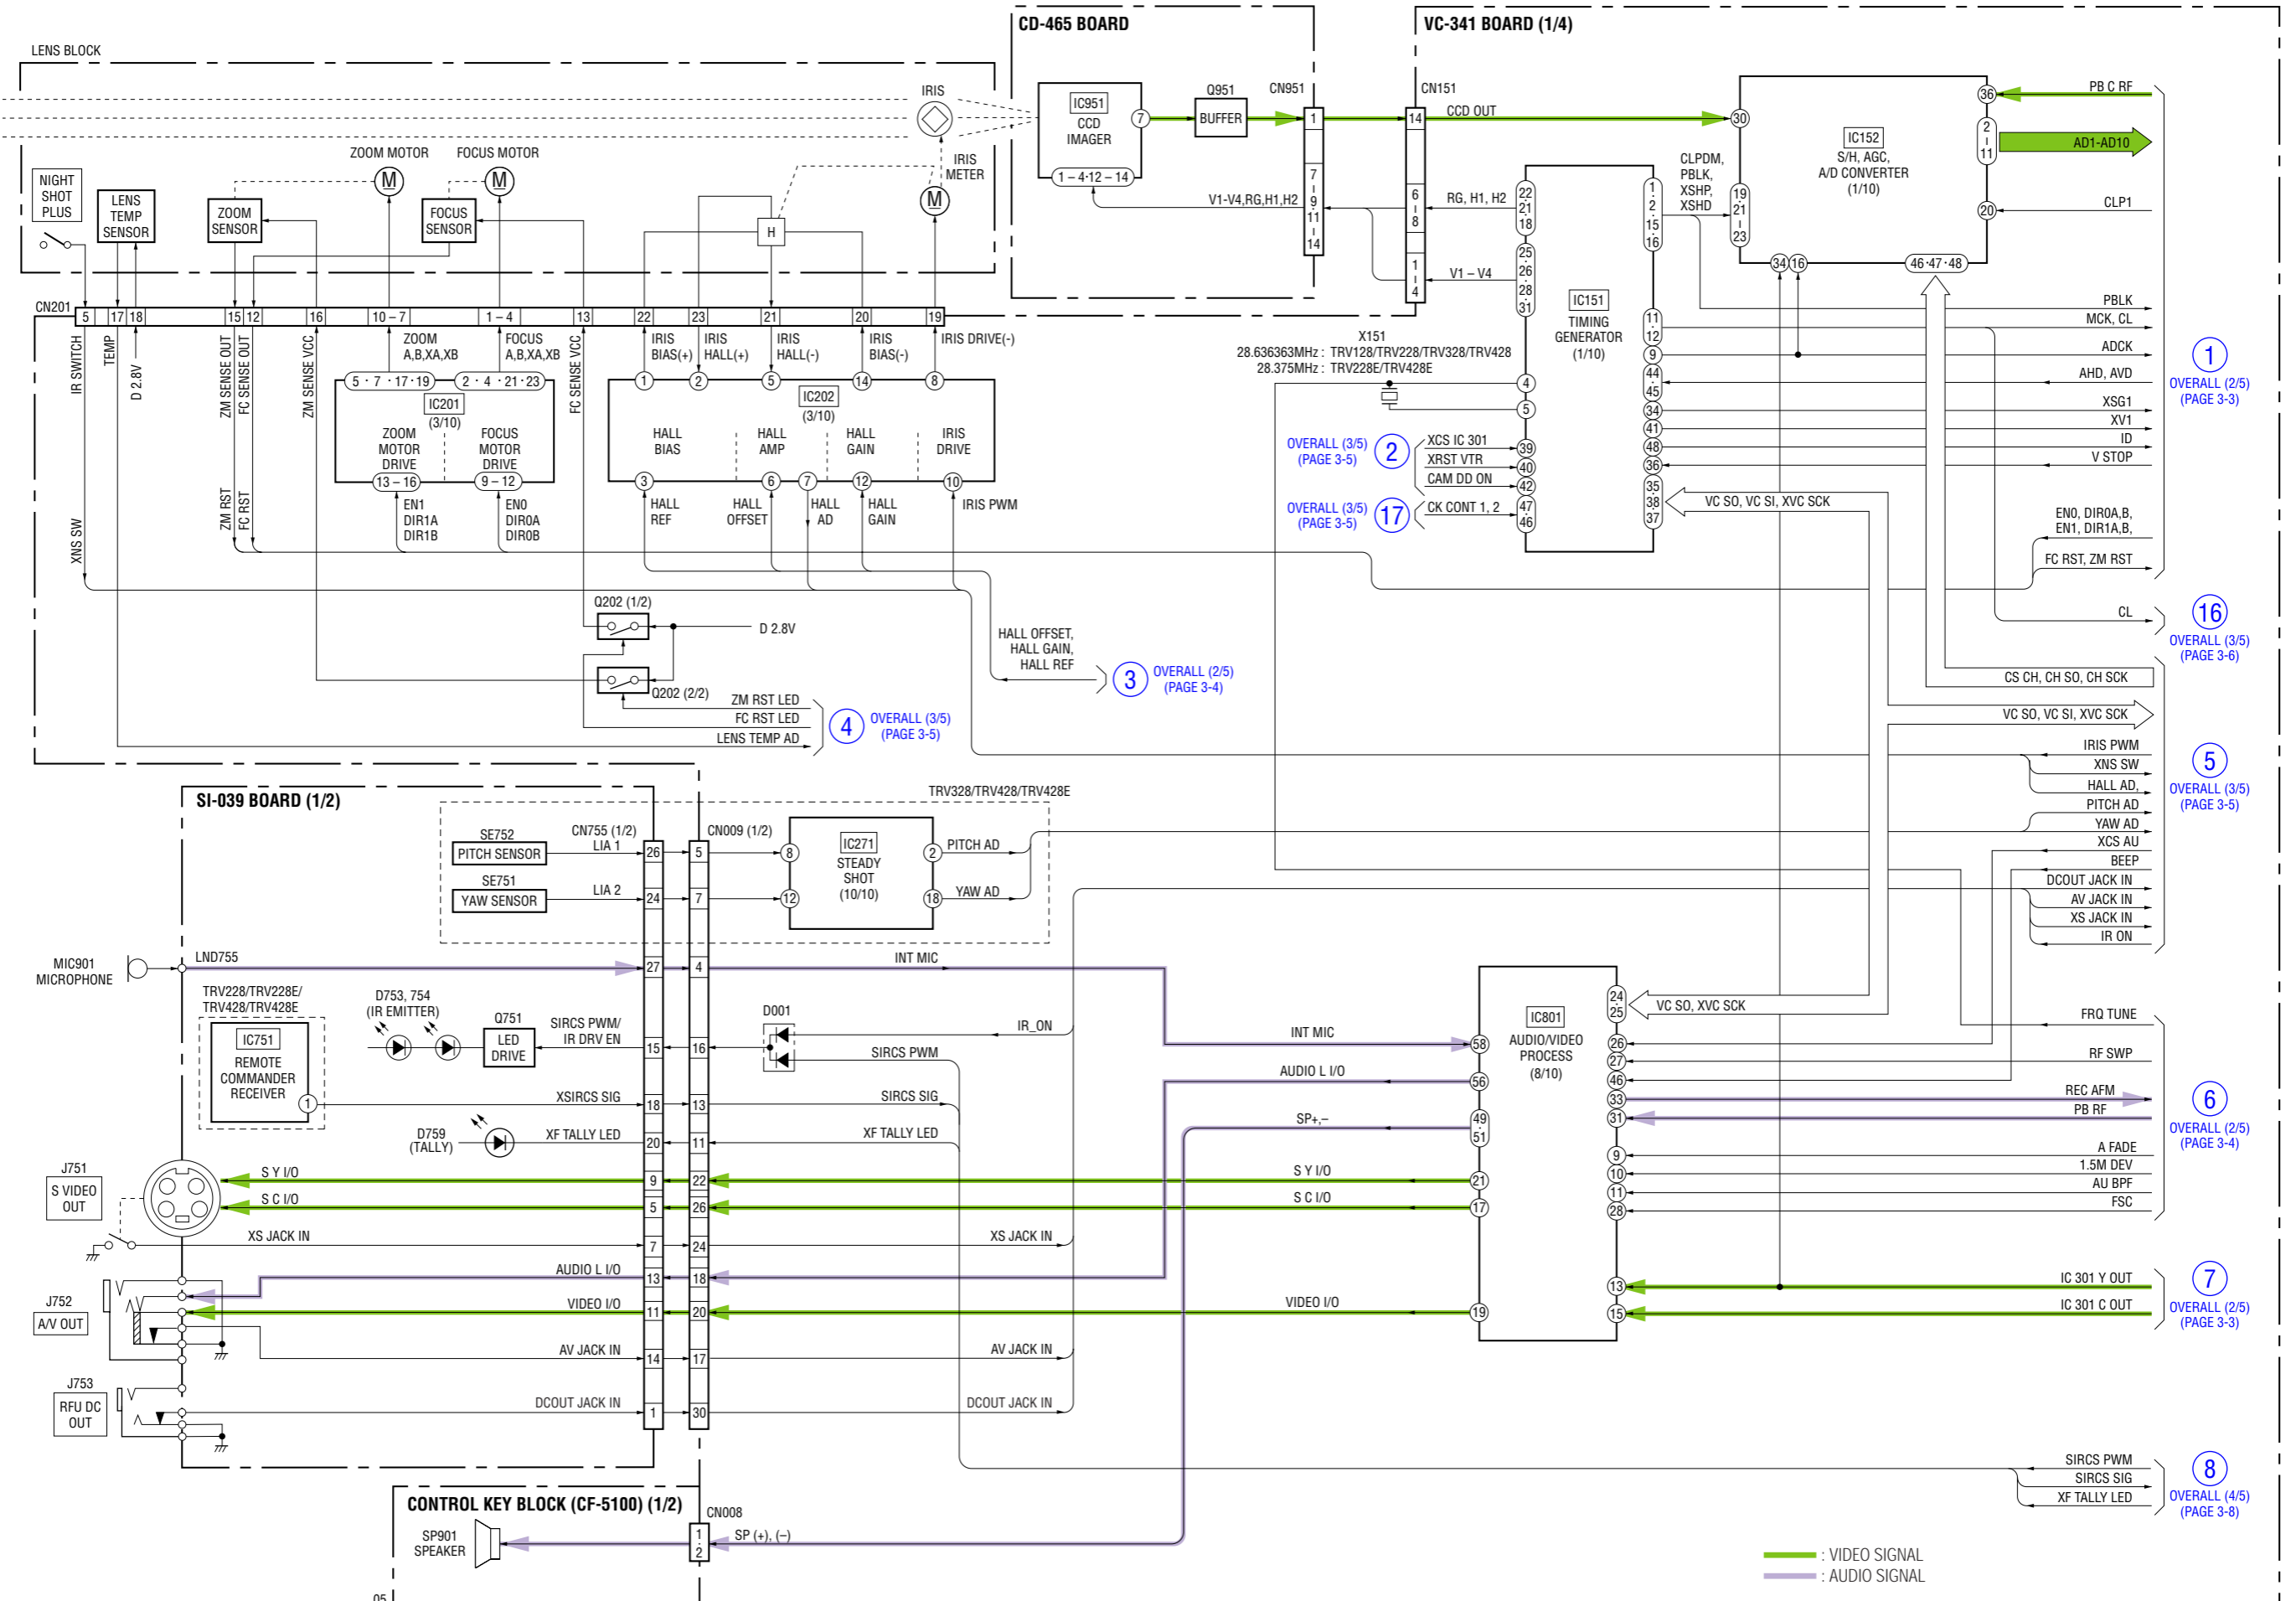


3. BLOCK DIAGRAMS

3-2. OVERALL BLOCK DIAGRAM (2/5) () : Number in parenthesis () indicates the division number of schematic diagram where the component is located.

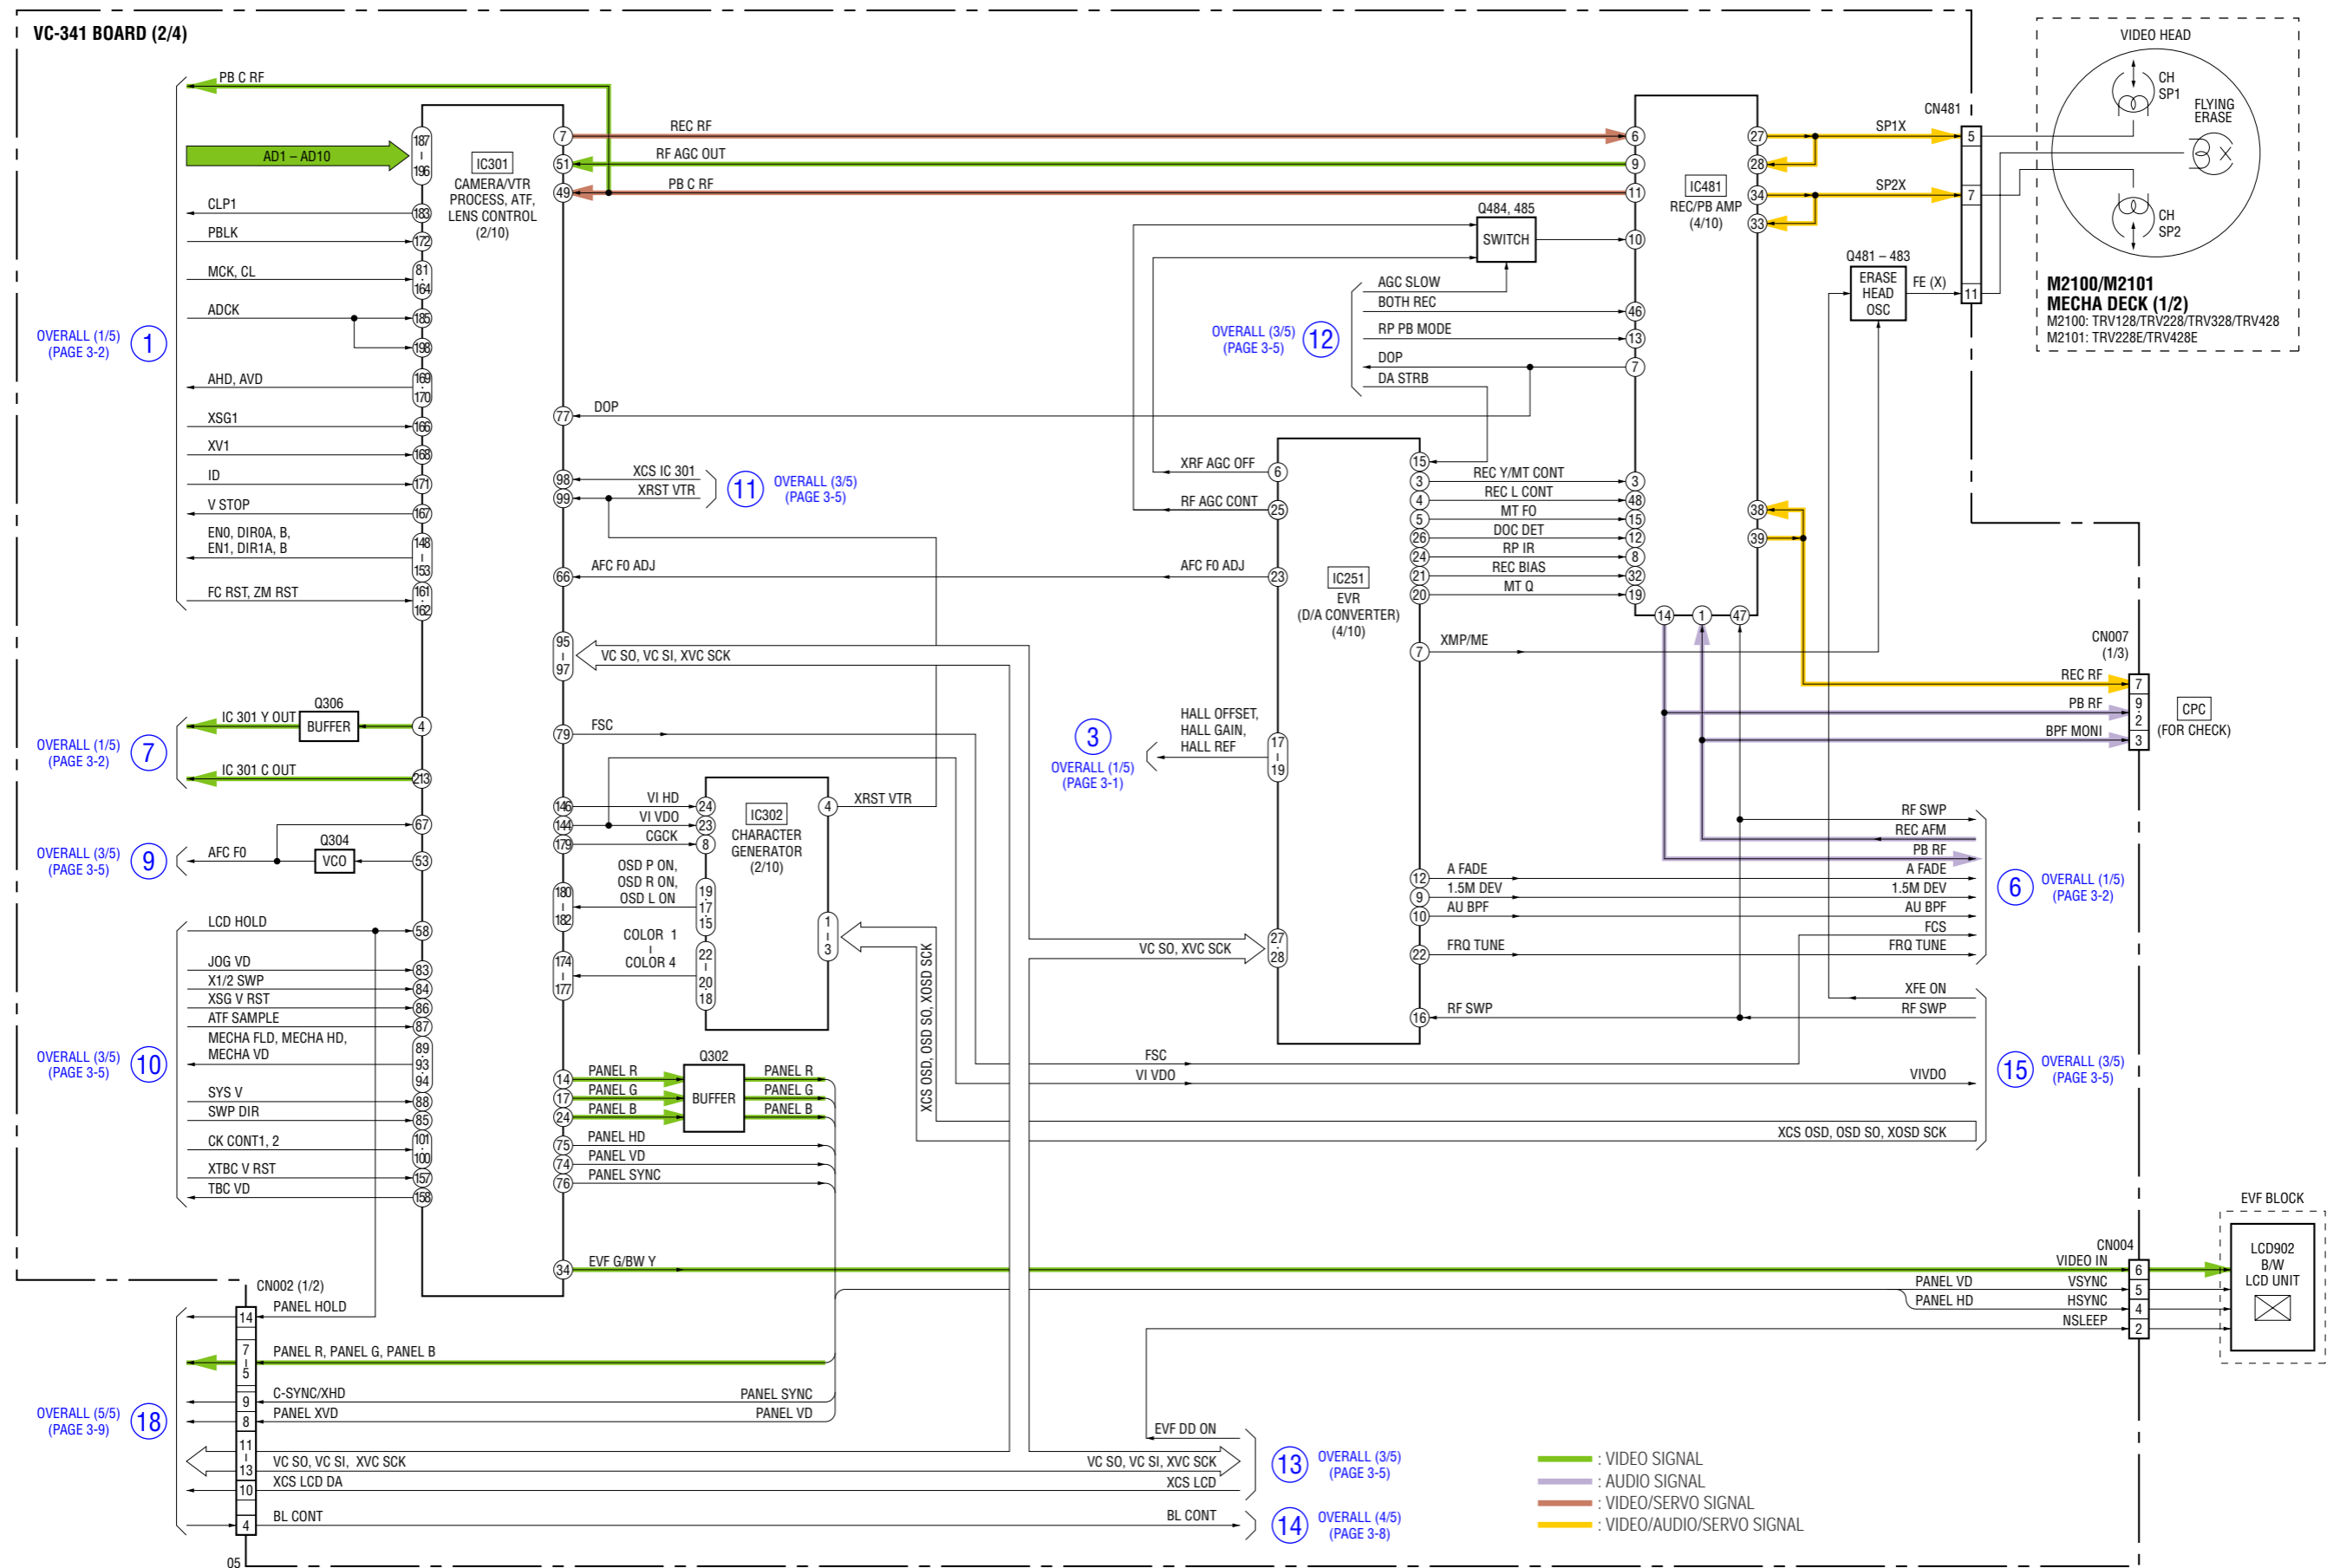

3. BLOCK DIAGRAMS


3-3. OVERALL BLOCK DIAGRAM (3/5) () : Number in parenthesis () indicates the division number of schematic diagram where the component is located.

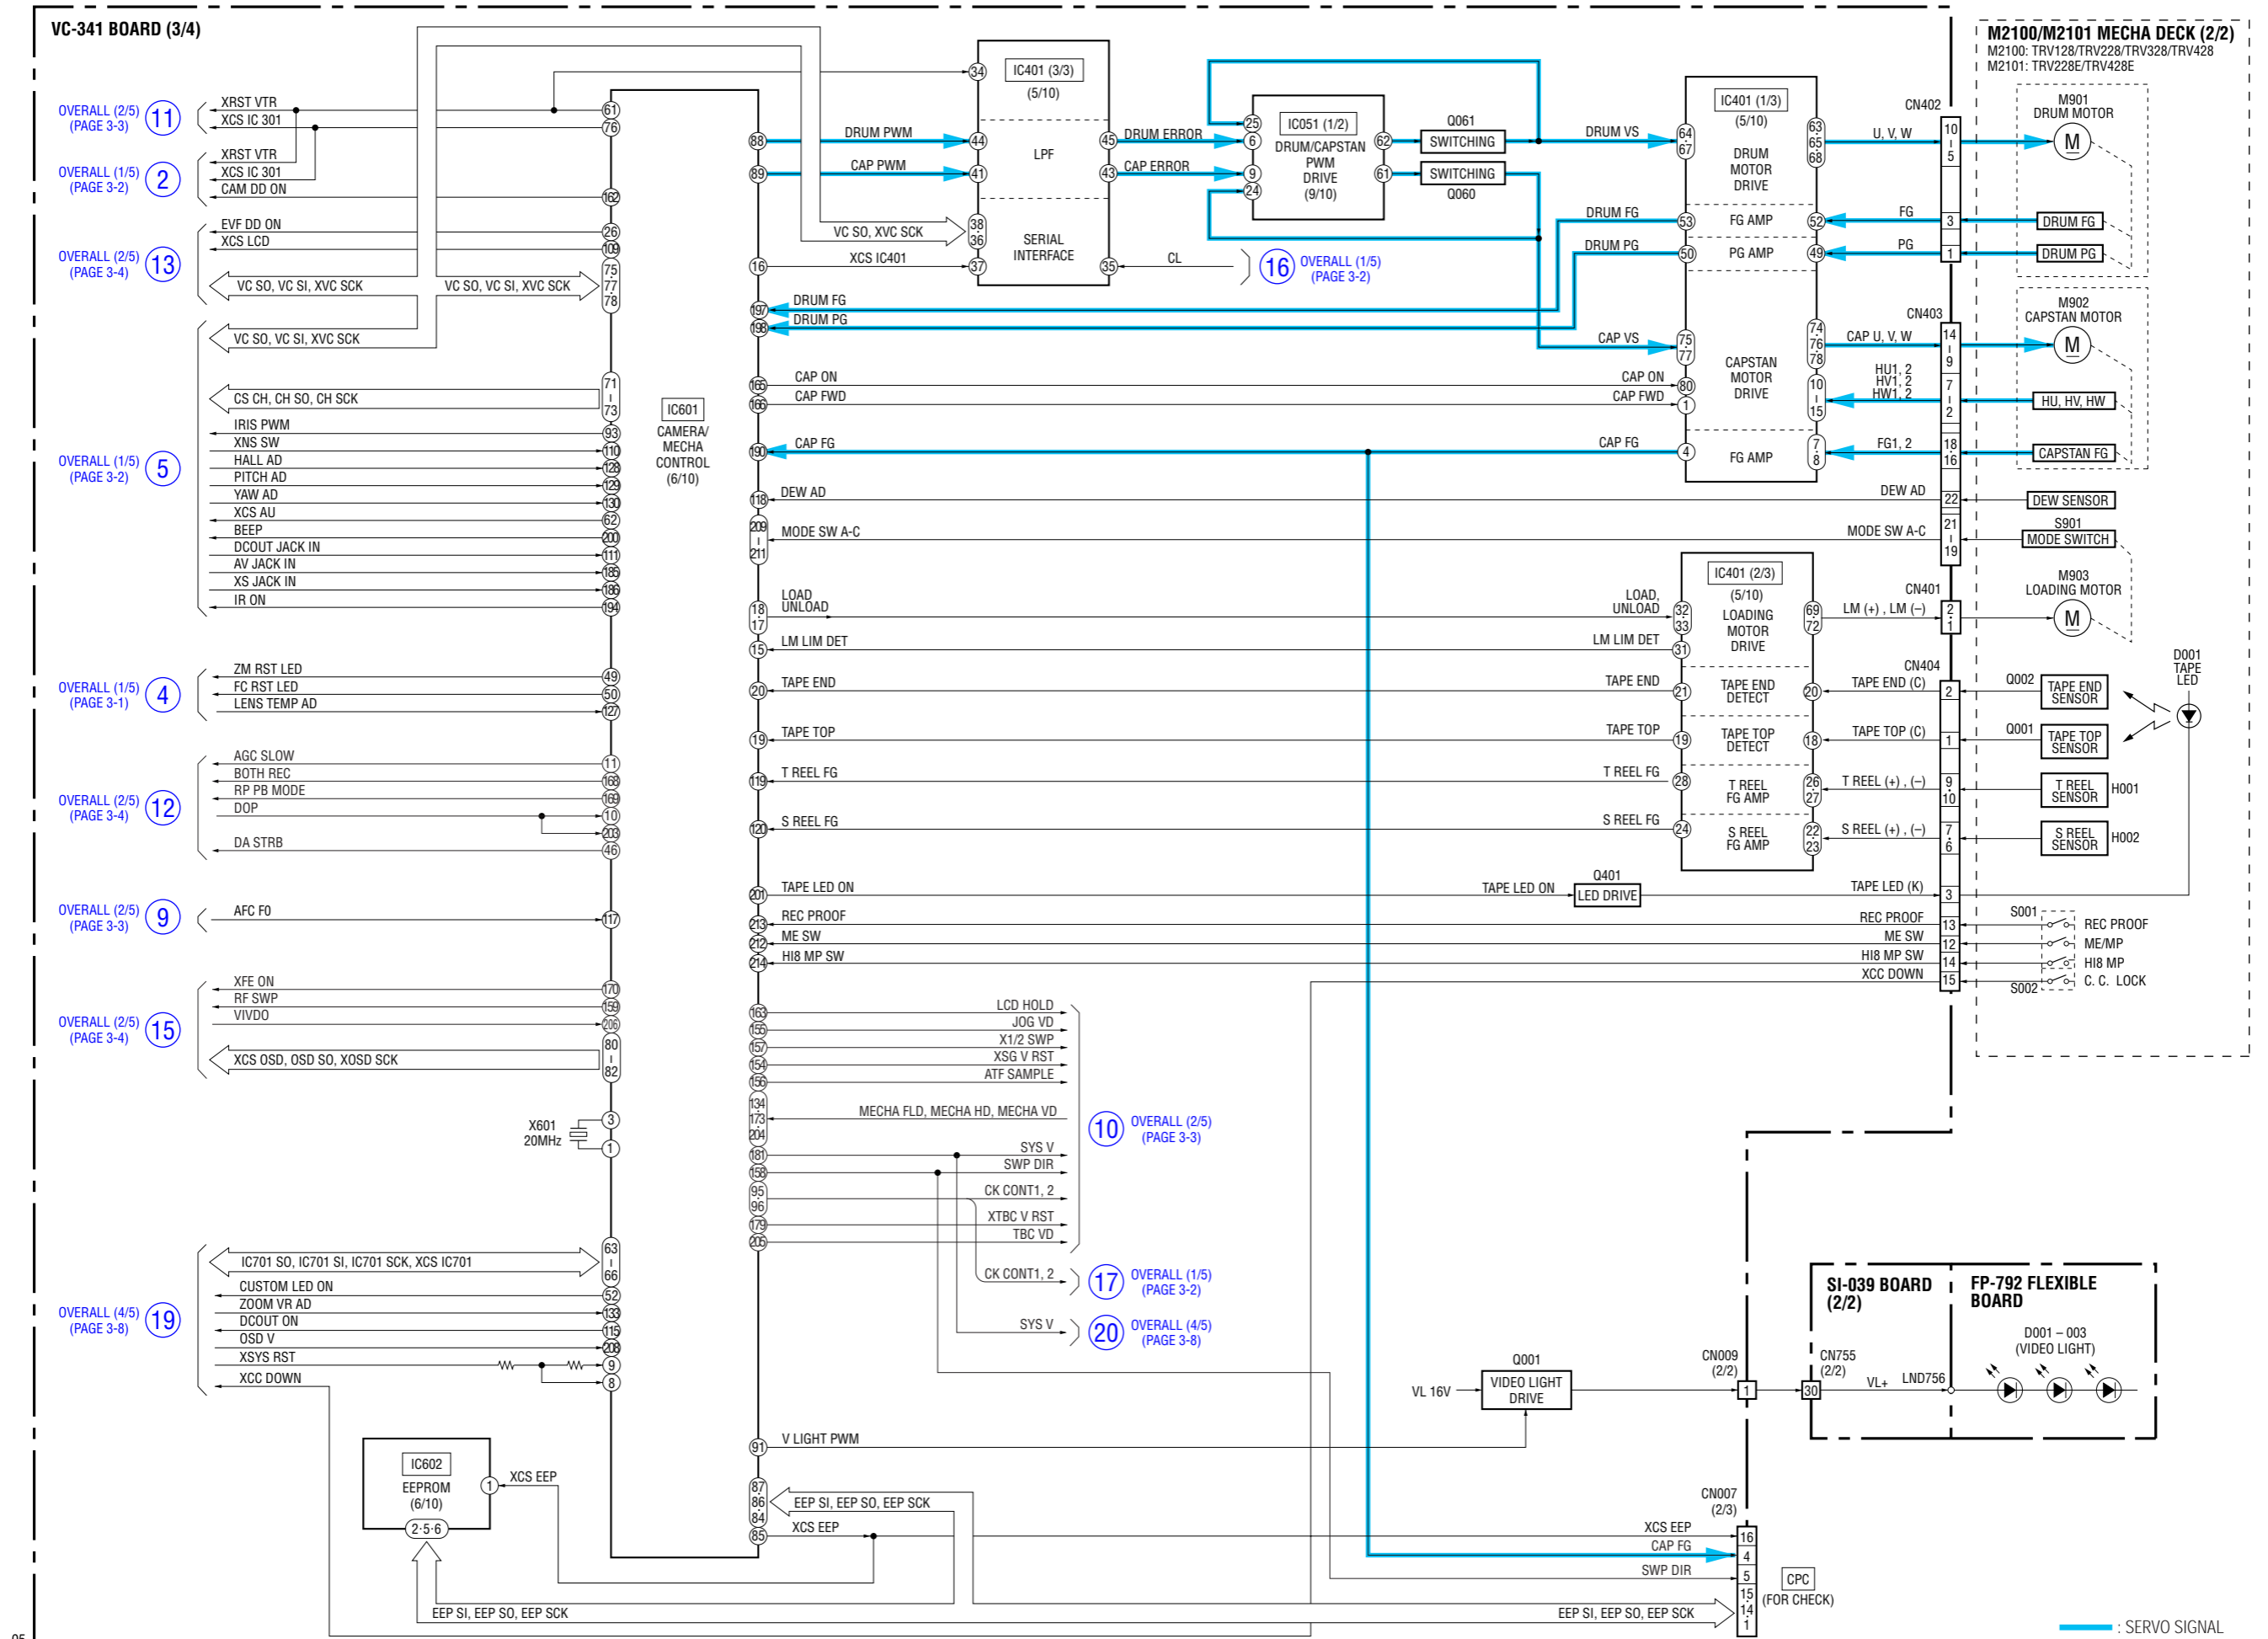

— : SERVO SIGNAL


3. BLOCK DIAGRAMS

3-4. OVERALL BLOCK DIAGRAM (4/5) () : Number in parenthesis () indicates the division number of schematic diagram where the component is located.

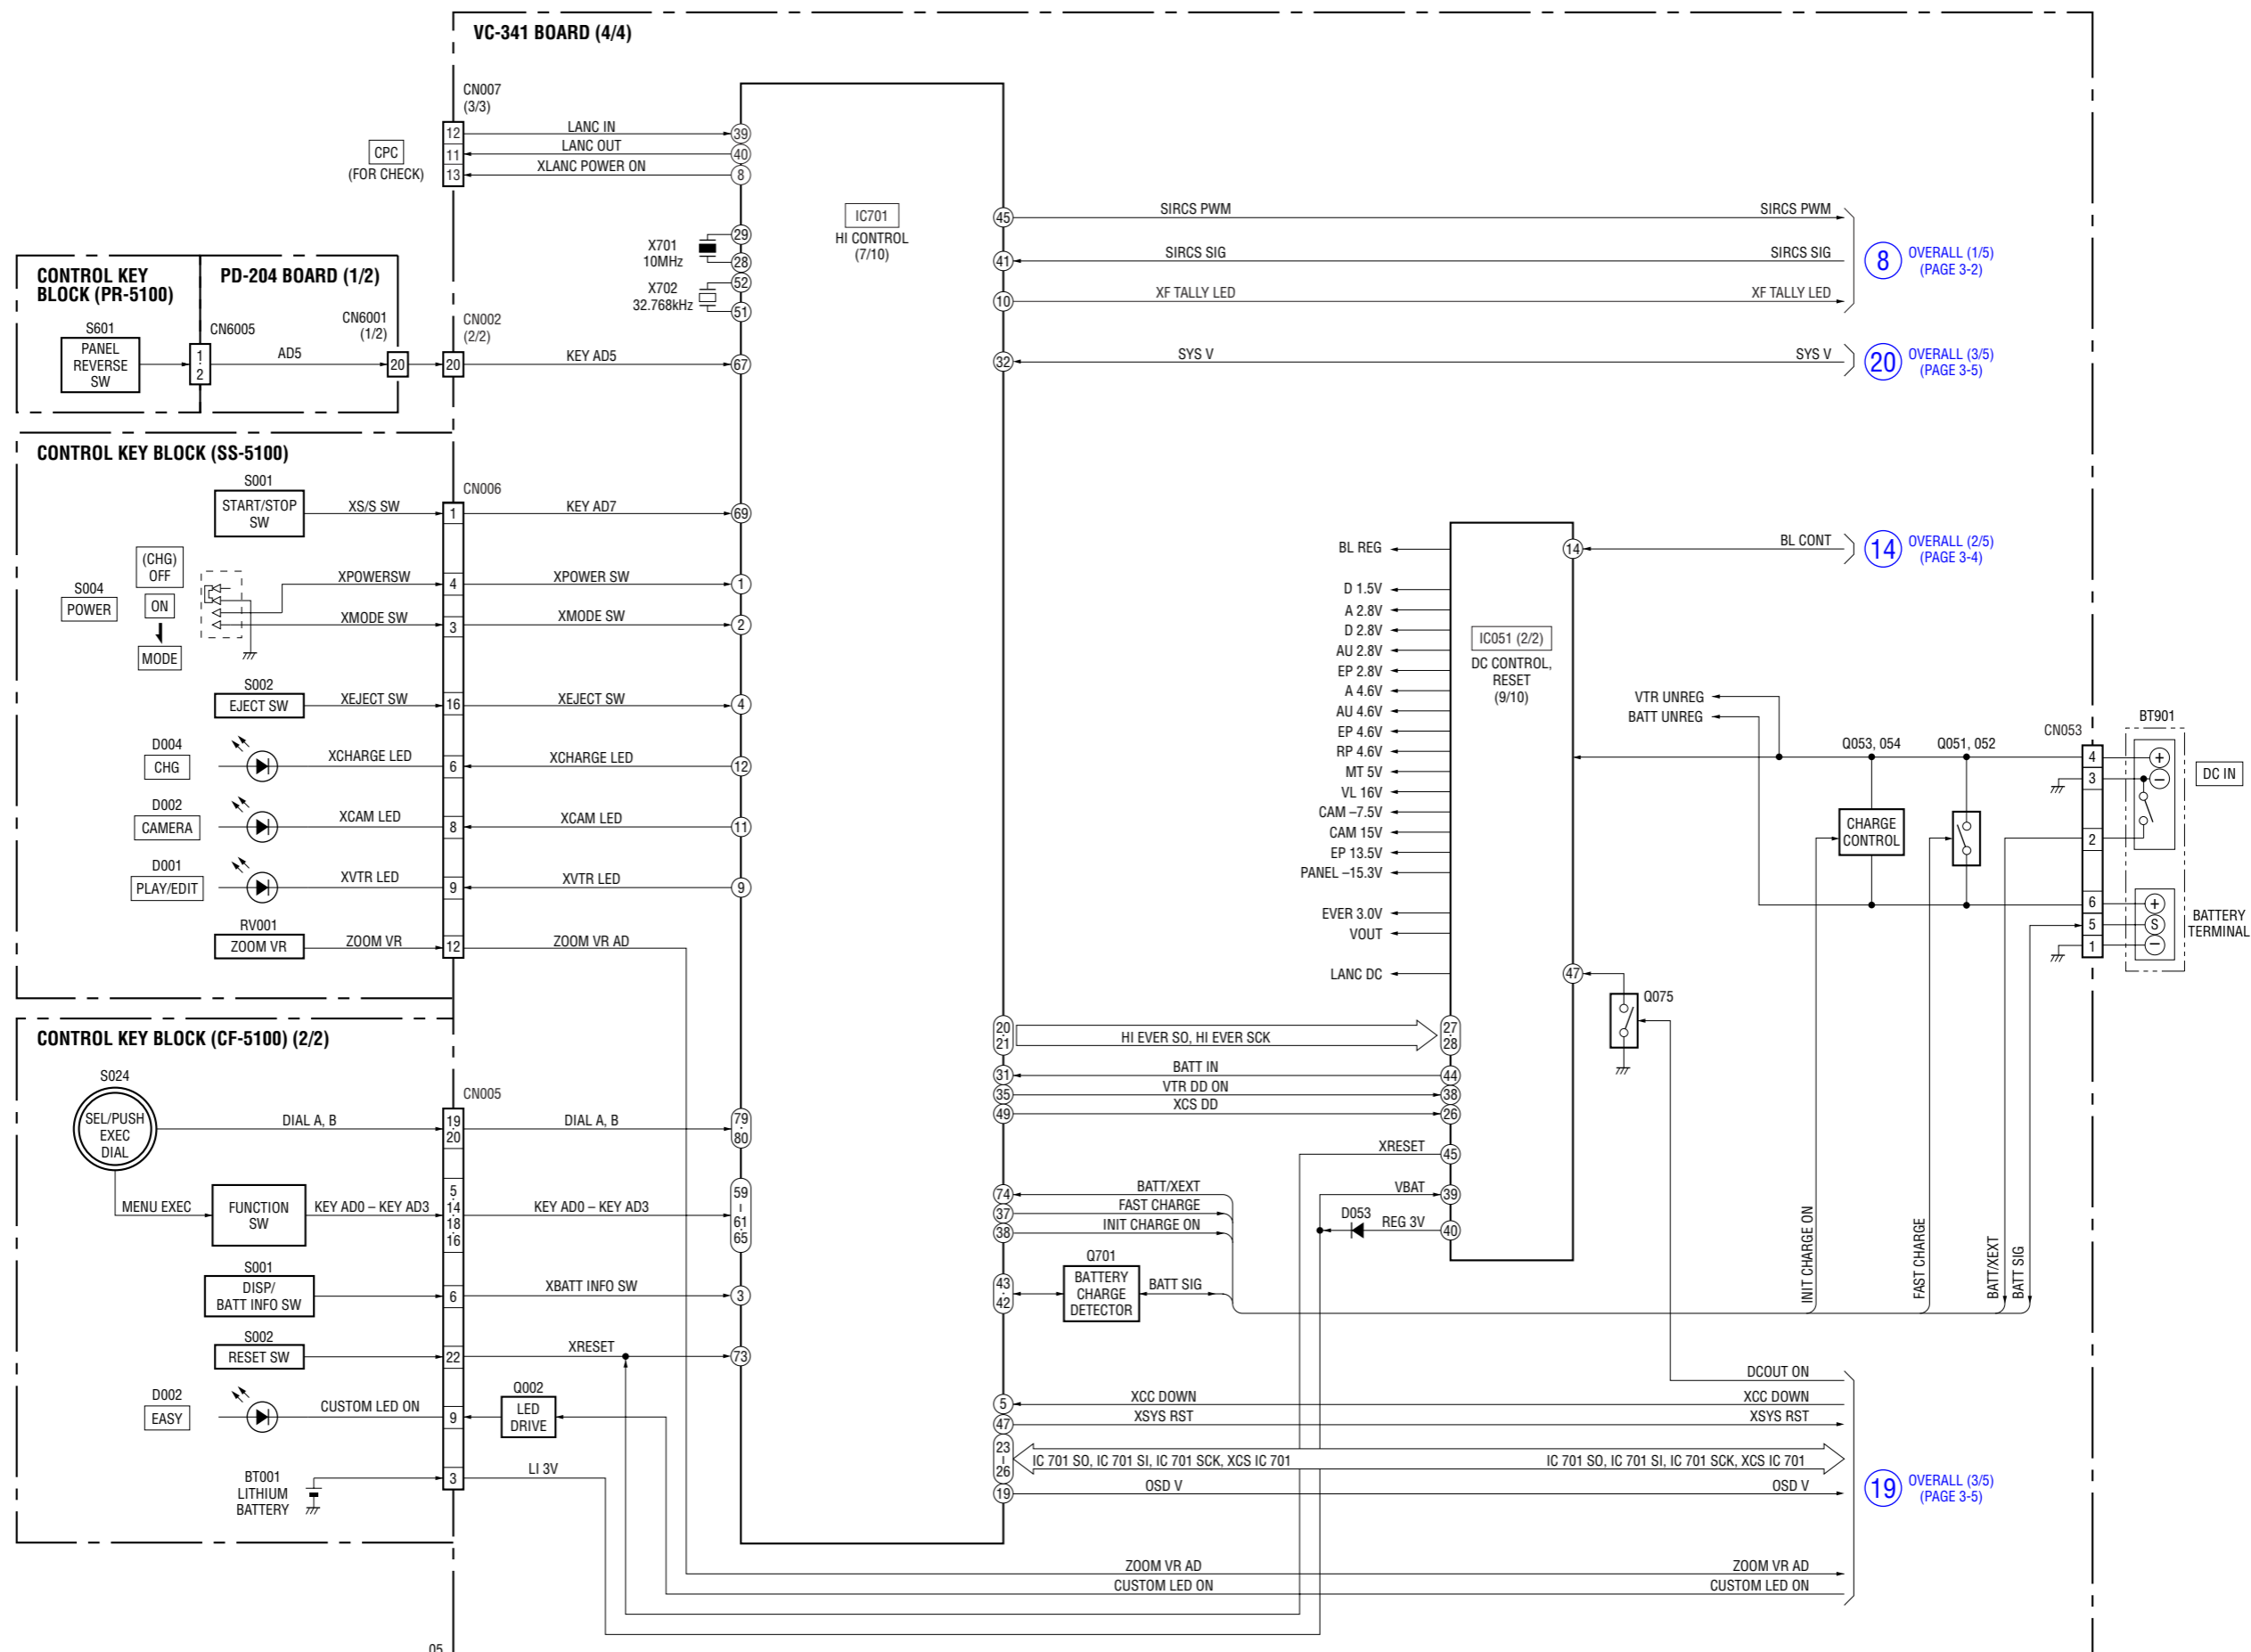

3. BLOCK DIAGRAMS


3-5. OVERALL BLOCK DIAGRAM (5/5) () : Number in parenthesis () indicates the division number of schematic diagram where the component is located.

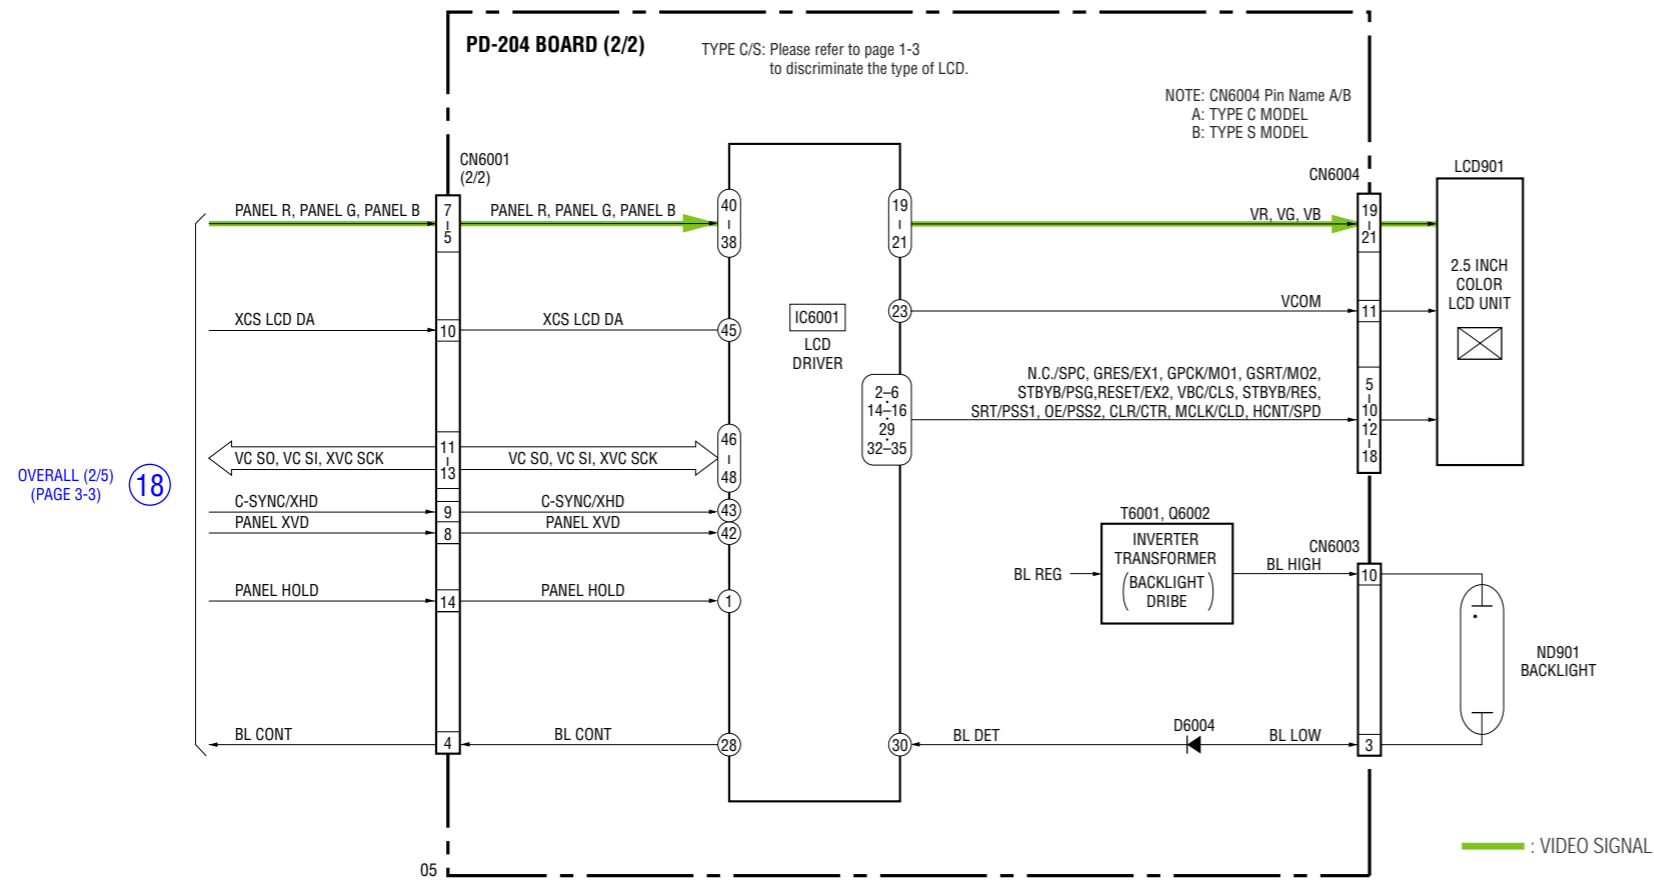


OVERALL (2/5) (PAGE 3-3) 18

3. BLOCK DIAGRAMS

3-6. POWER BLOCK DIAGRAM (1/2) () : Number in parenthesis () indicates the division number of schematic diagram where the component is located.

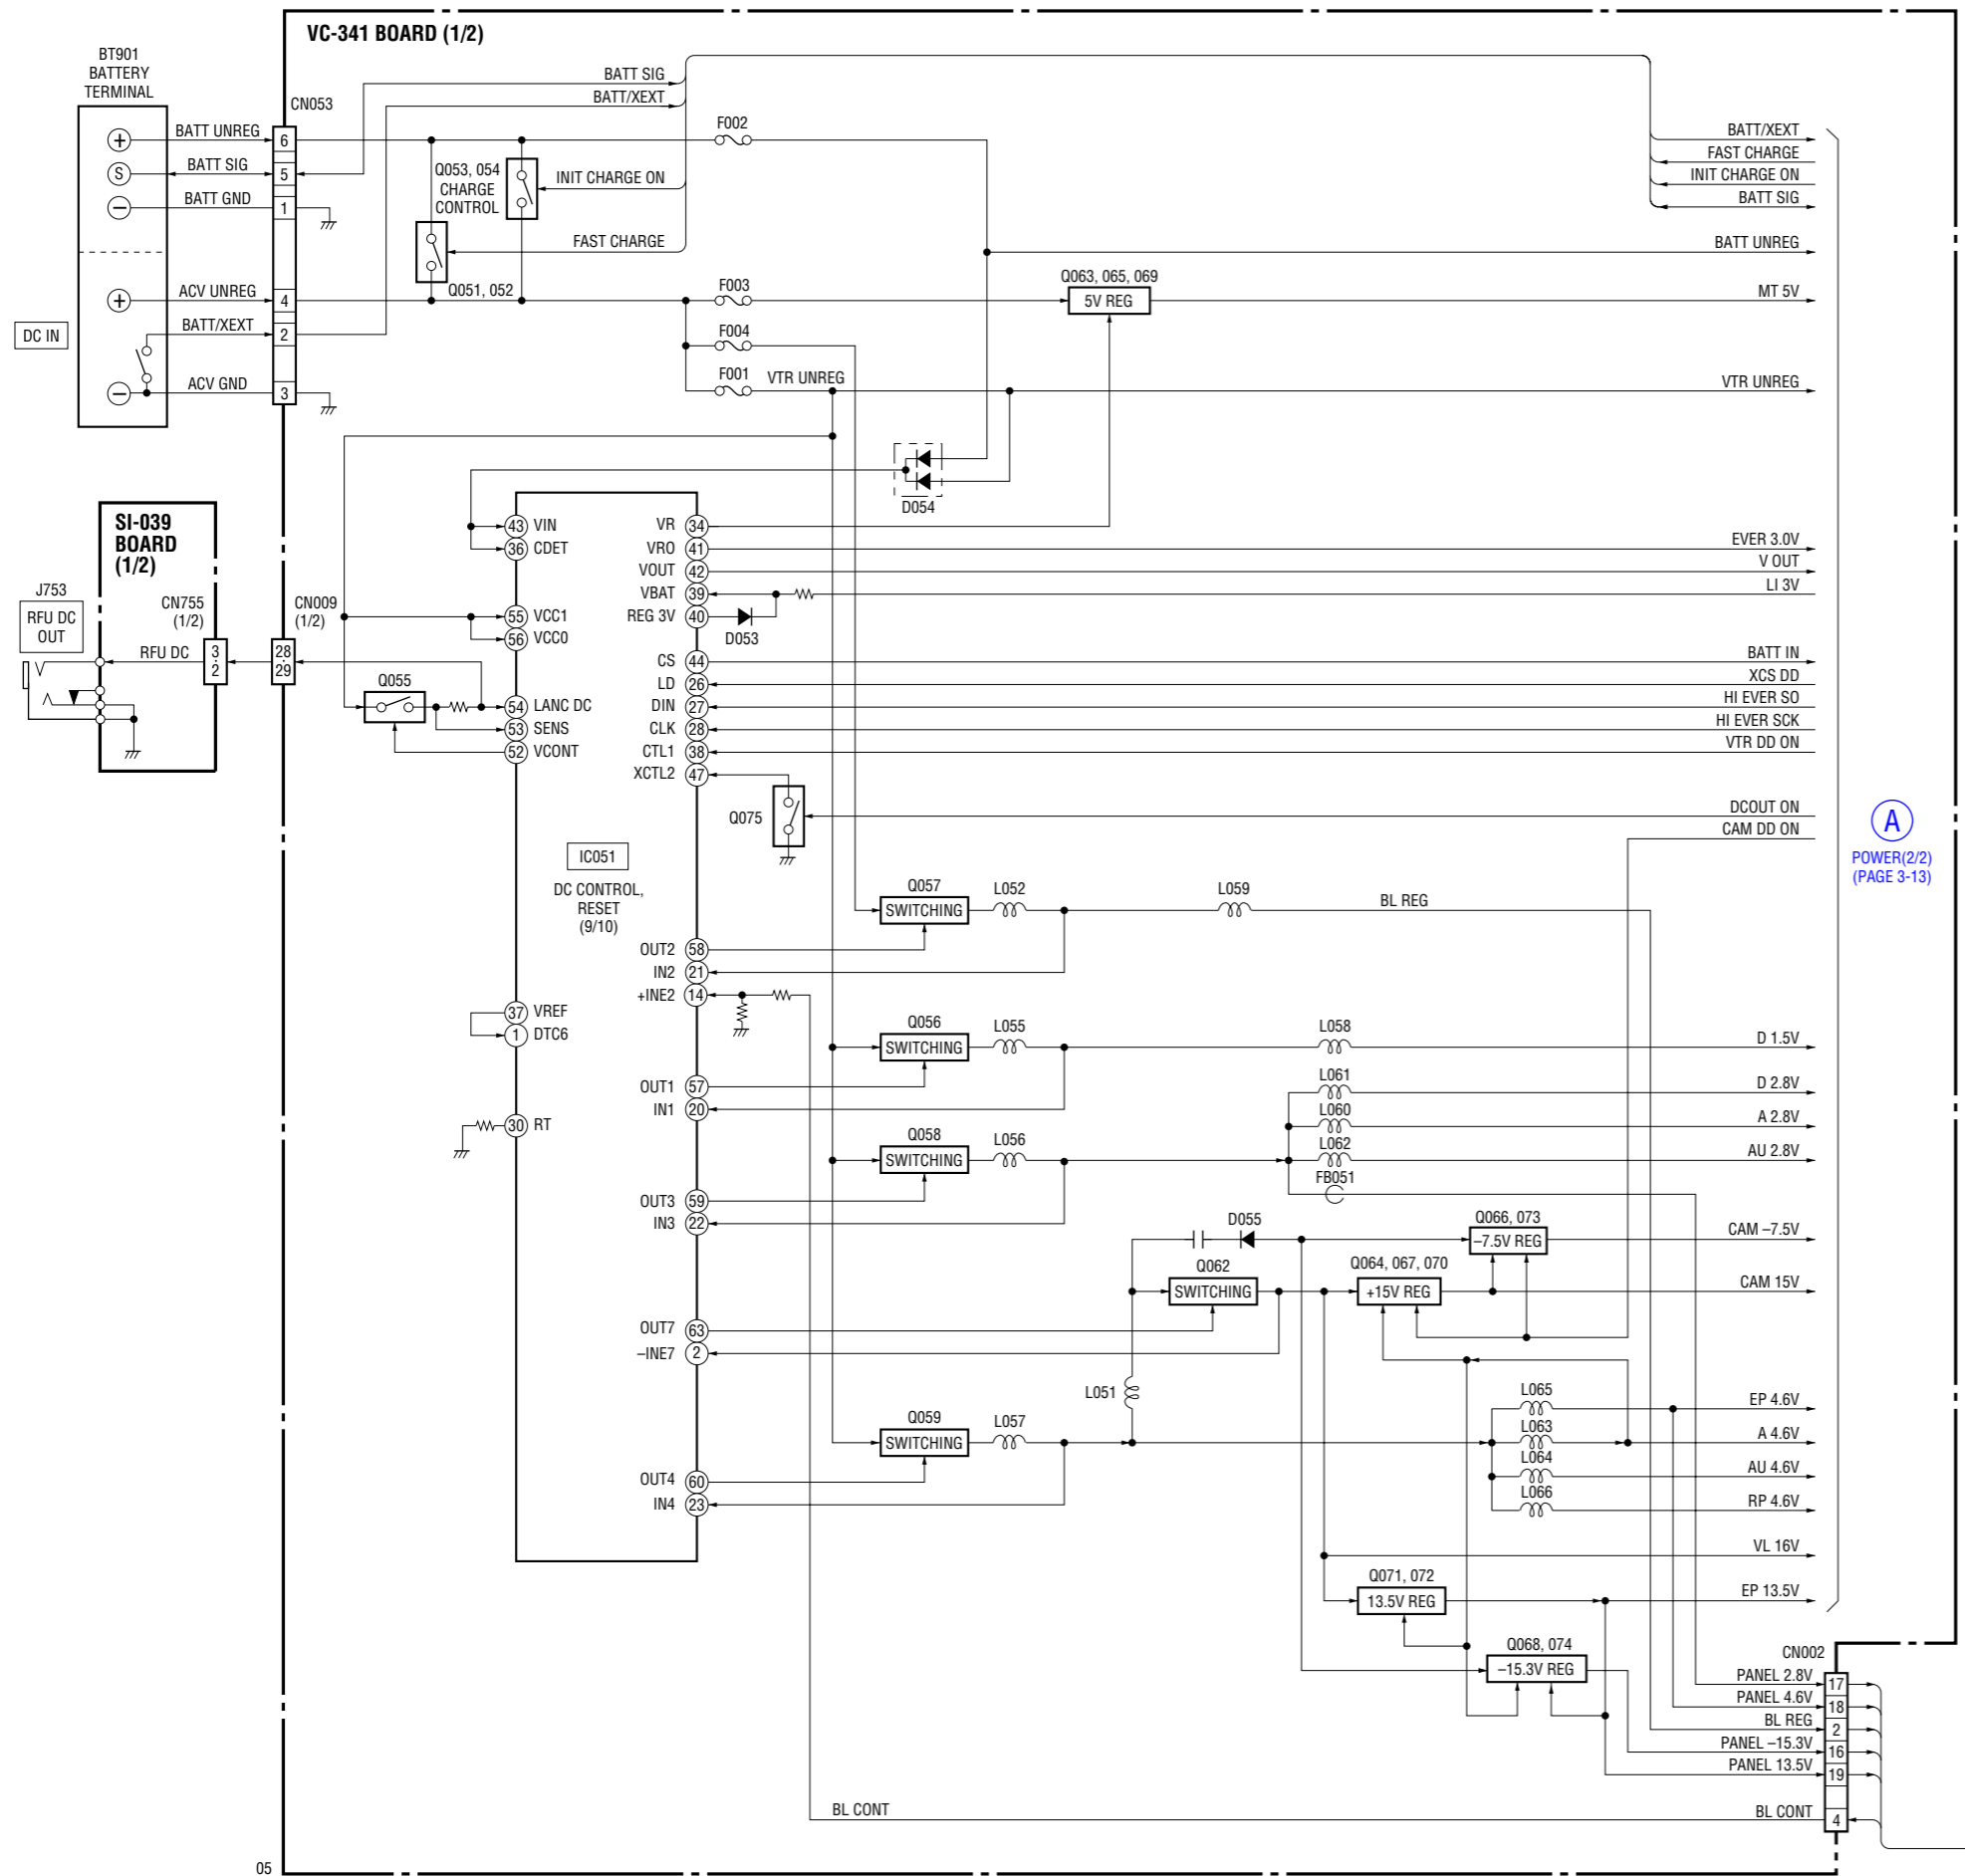


(A)
POWER(2/2)
(PAGE 3-13)

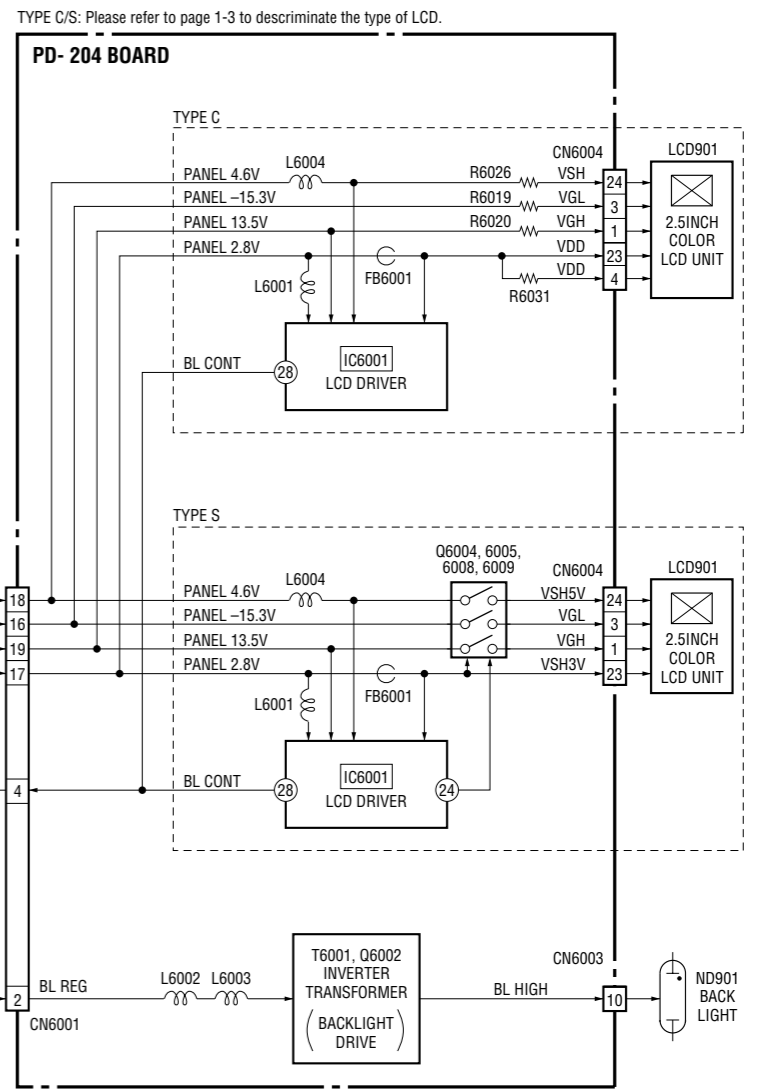

3. BLOCK DIAGRAMS


3-7. POWER BLOCK DIAGRAM (2/2) () : Number in parenthesis () indicates the division number of schematic diagram where the component is located.

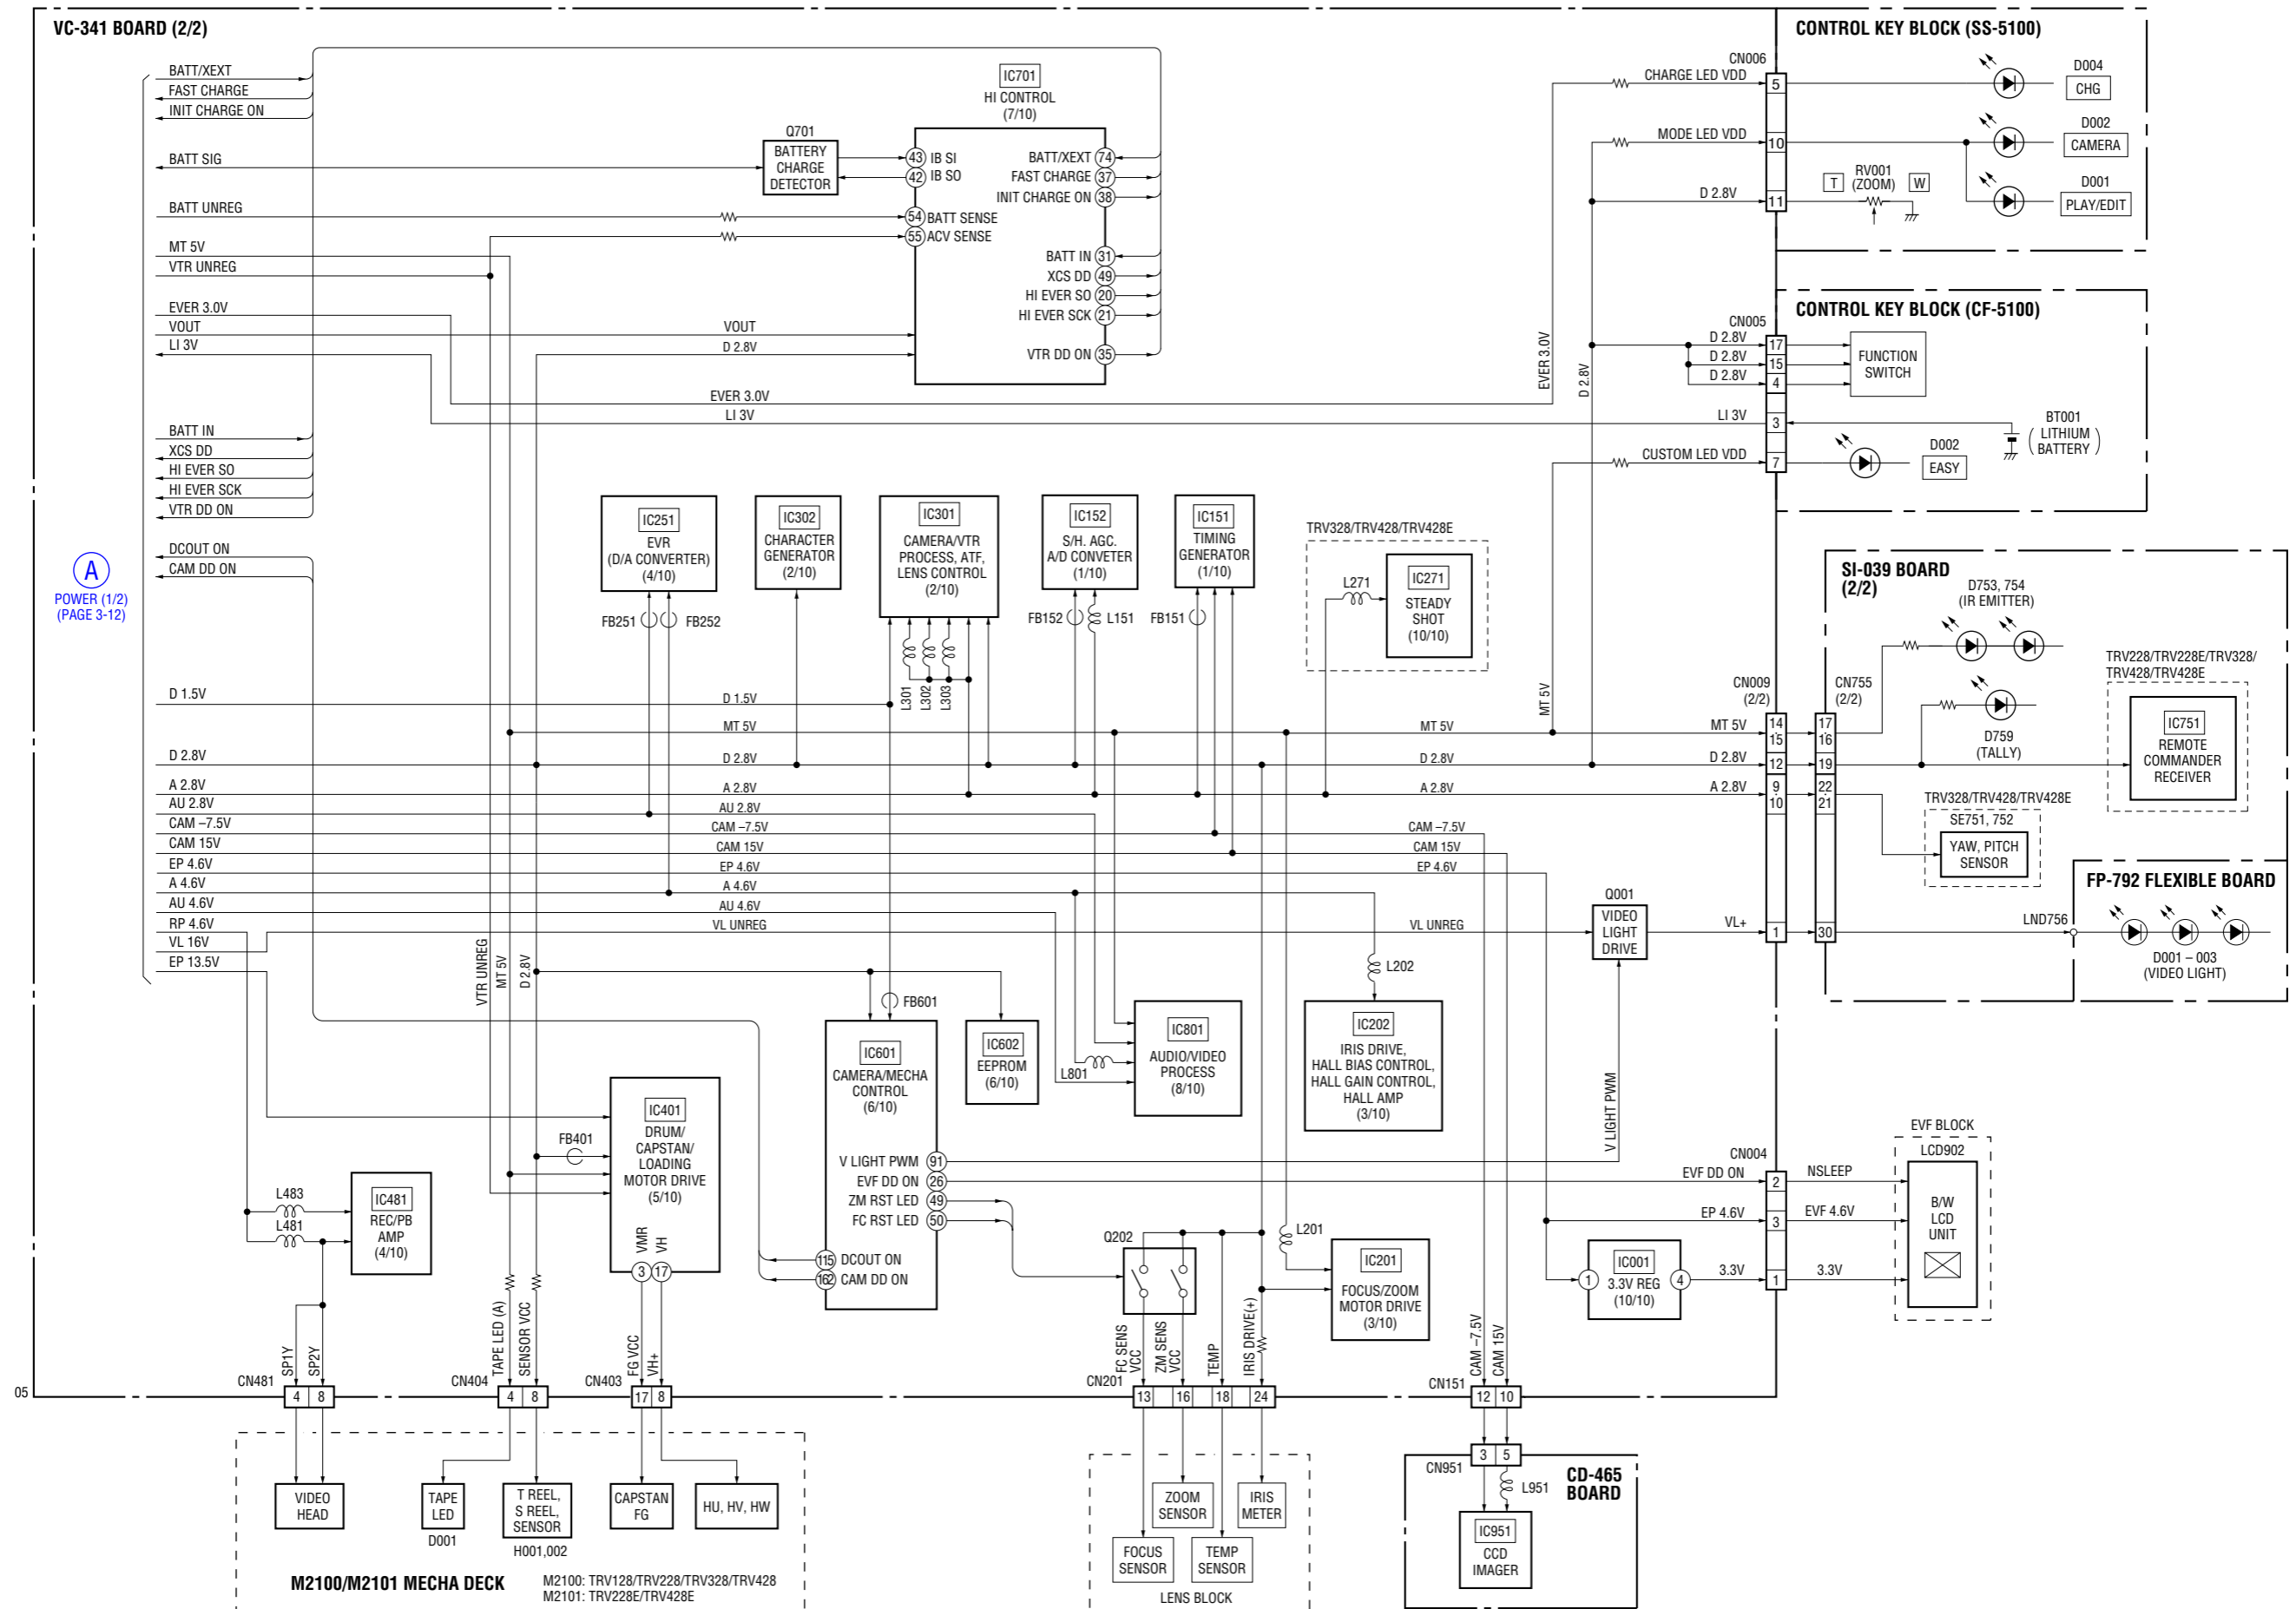

SECTION 4

PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

4-1. FRAME SCHEMATIC DIAGRAMS

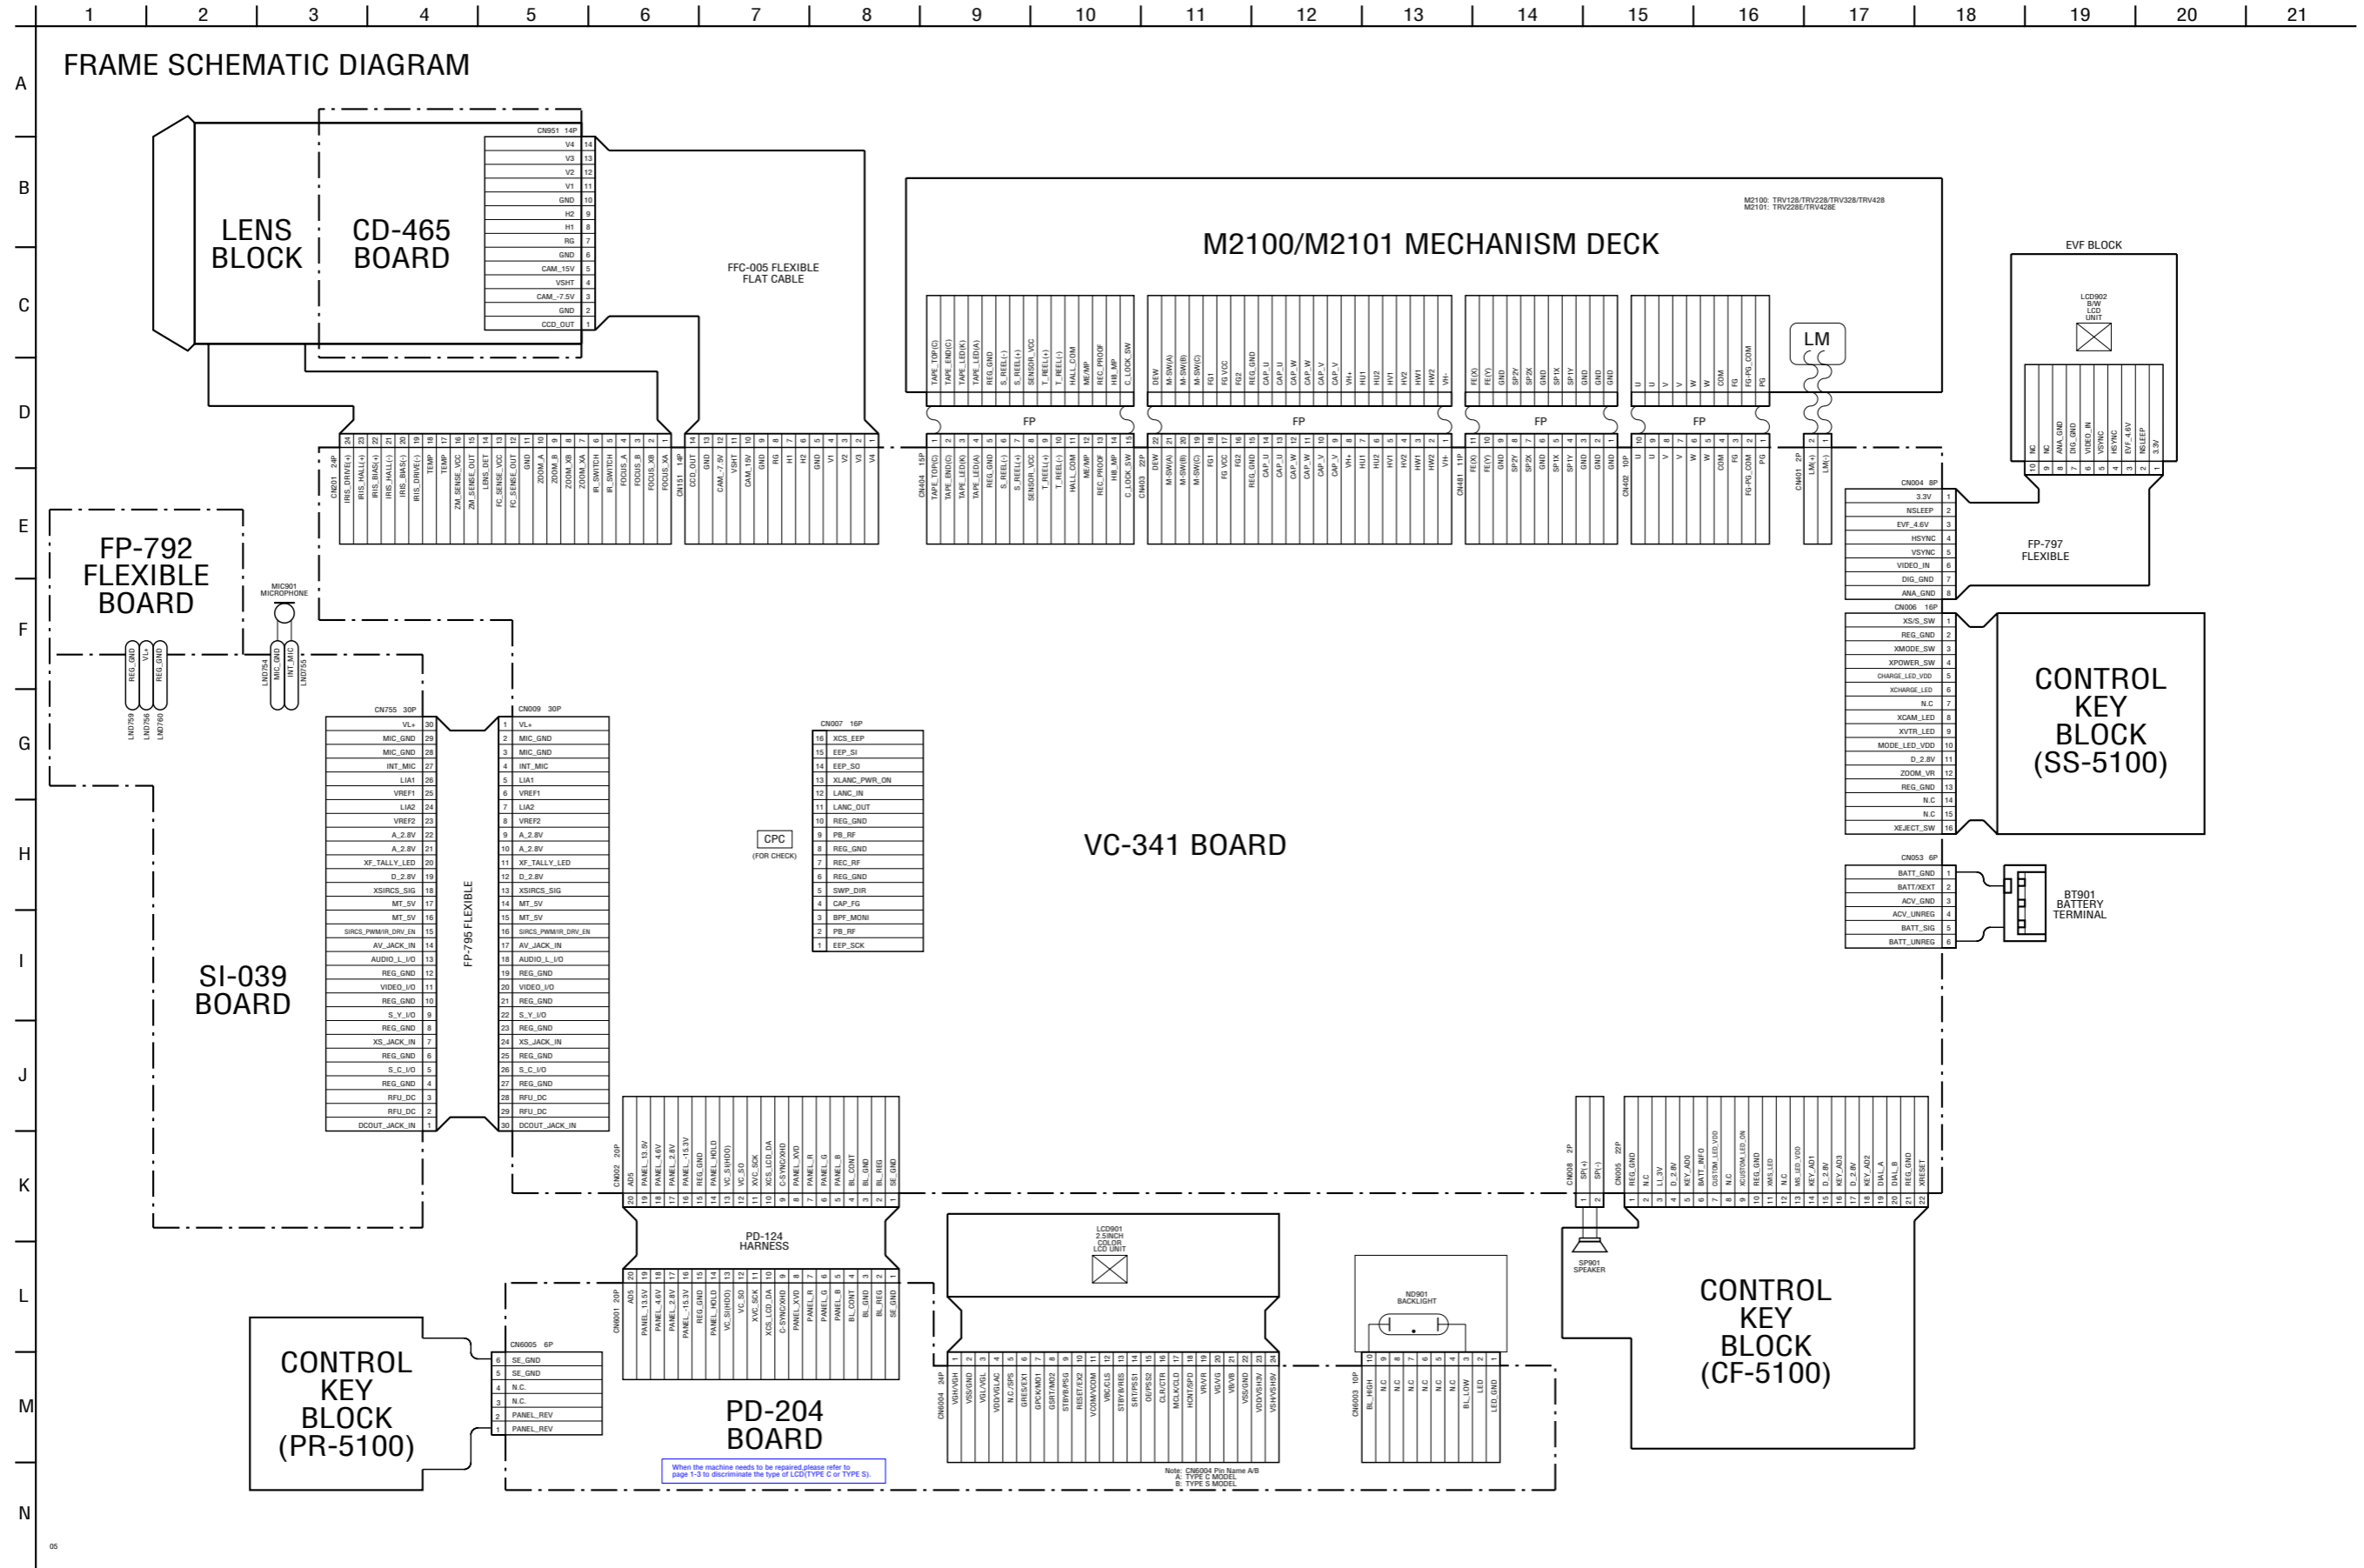

4-2. SCHEMATIC DIAGRAMS

Link

<ul style="list-style-type: none"> • CD-465 BOARD (CCD IMAGER) 	<ul style="list-style-type: none"> • VC-341 BOARD (9/10) (DC CONTROL)
<ul style="list-style-type: none"> • VC-341 BOARD (1/10) (A/D CONVERTER, TIMING GENERATOR) 	<ul style="list-style-type: none"> • VC-341 BOARD (10/10) (STEADYSHOT, CONNECTOR)
<ul style="list-style-type: none"> • VC-341 BOARD (2/10) (CAMERA/VTR PROCESS, LENS CONTROL) 	<ul style="list-style-type: none"> • PD-204 BOARD (LCD DRIVER, BACKLIGHT DRIVE)
<ul style="list-style-type: none"> • VC-341 BOARD (3/10) (LENS DRIVE) 	<ul style="list-style-type: none"> • SI-039 BOARD (STEADYSHOT, JACK) FP-792 FLEXIBLE BOARD
<ul style="list-style-type: none"> • VC-341 BOARD (4/10) (REC/PB AMP) 	<ul style="list-style-type: none"> • FP-228, FP-299, FP-300, FP-301, FP-302, FP-802 FLEXIBLE BOARD
<ul style="list-style-type: none"> • VC-341 BOARD (5/10) (SERVO) 	<ul style="list-style-type: none"> • CONTROL KEY BLOCK (SS-5100)
<ul style="list-style-type: none"> • VC-341 BOARD (6/10) (CAMERA/MECHA CONTROL) 	<ul style="list-style-type: none"> • CONTROL KEY BLOCK (PR-5100)
<ul style="list-style-type: none"> • VC-341 BOARD (7/10) (HI CONTROL) 	<ul style="list-style-type: none"> • CONTROL KEY BLOCK (CF-5100)
<ul style="list-style-type: none"> • VC-341 BOARD (8/10) (AUDIO, VIDEO) 	

• COMMON NOTE FOR SCHEMATIC DIAGRAMS


4-2. SCHEMATIC DIAGRAMS

4-2. SCHEMATIC DIAGRAMS


THIS NOTE IS COMMON FOR SCHEMATIC DIAGRAMS
 (In addition to this, the necessary note is printed in each block)

(For schematic diagrams)

- All capacitors are in μF unless otherwise noted. pF : μF . 50 V or less are not indicated except for electrolytics and tantalums.
- Chip resistors are 1/10 W unless otherwise noted. $\text{k}\Omega=1000 \Omega$, $\text{M}\Omega=1000 \text{k}\Omega$.
- Caution when replacing chip parts.
 New parts must be attached after removal of chip.
 Be careful not to heat the minus side of tantalum capacitor, Because it is damaged by the heat.
- Some chip part will be indicated as follows.

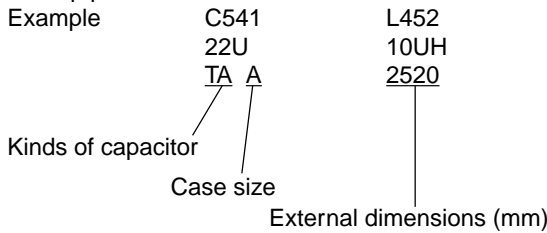

1. Connection

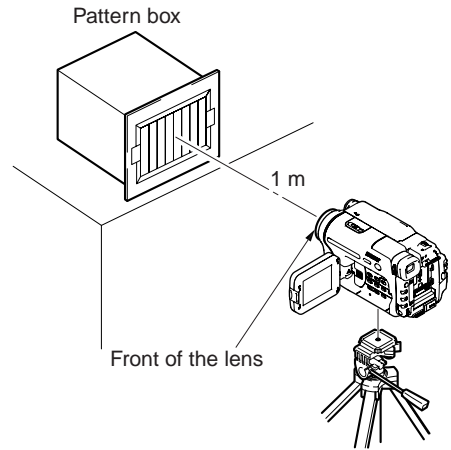

2. Adjust the distance so that the output waveform of Fig. a and the Fig. b can be obtain.

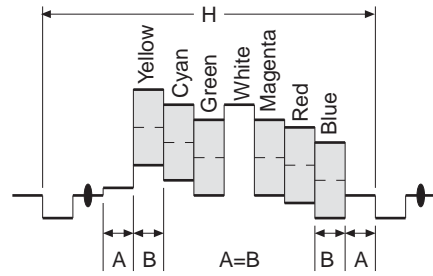


Fig. a (Video output terminal output waveform)

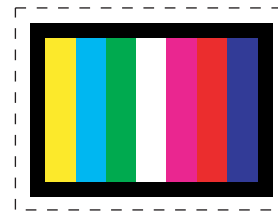


Fig.b (Picture on monitor TV)

- Constants of resistors, capacitors, ICs and etc with XX indicate that they are not used.
 In such cases, the unused circuits may be indicated.
- Parts with ★ differ according to the model/destination. Refer to the mount table for each function.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- Signal name
 XEDIT → $\overline{\text{EDIT}}$ PB/XREC → $\overline{\text{PB/REC}}$
- : non flammable resistor
- : fusible resistor
- : panel designation
- : B+ Line
- : B- Line
- : IN/OUT direction of (+,-) B LINE.
- : adjustment for repair.
- : VIDEO SIGNAL (ANALOG)
- : AUDIO SIGNAL (ANALOG)
- : VIDEO/AUDIO SIGNAL
- : VIDEO/AUDIO/SERVO SIGNAL
- : VIDEO/SERVO SIGNAL
- : SERVO SIGNAL
- Circled numbers refer to waveforms.

(Measuring conditions voltage and waveform)

- Voltages and waveforms are measured between the measurement points and ground when camera shoots color bar chart of pattern box. They are reference values and reference waveforms.
 (VOM of DC 10 M Ω input impedance is used)
- Voltage values change depending upon input impedance of VOM used.)


When indicating parts by reference number, please include the board name.

Note : The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

Note : Les composants identifiés par une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifique.

4-2. SCHEMATIC DIAGRAMS CD-465 BOARD

For Schematic Diagram
 • Refer to page 4-41 for printed wiring board.

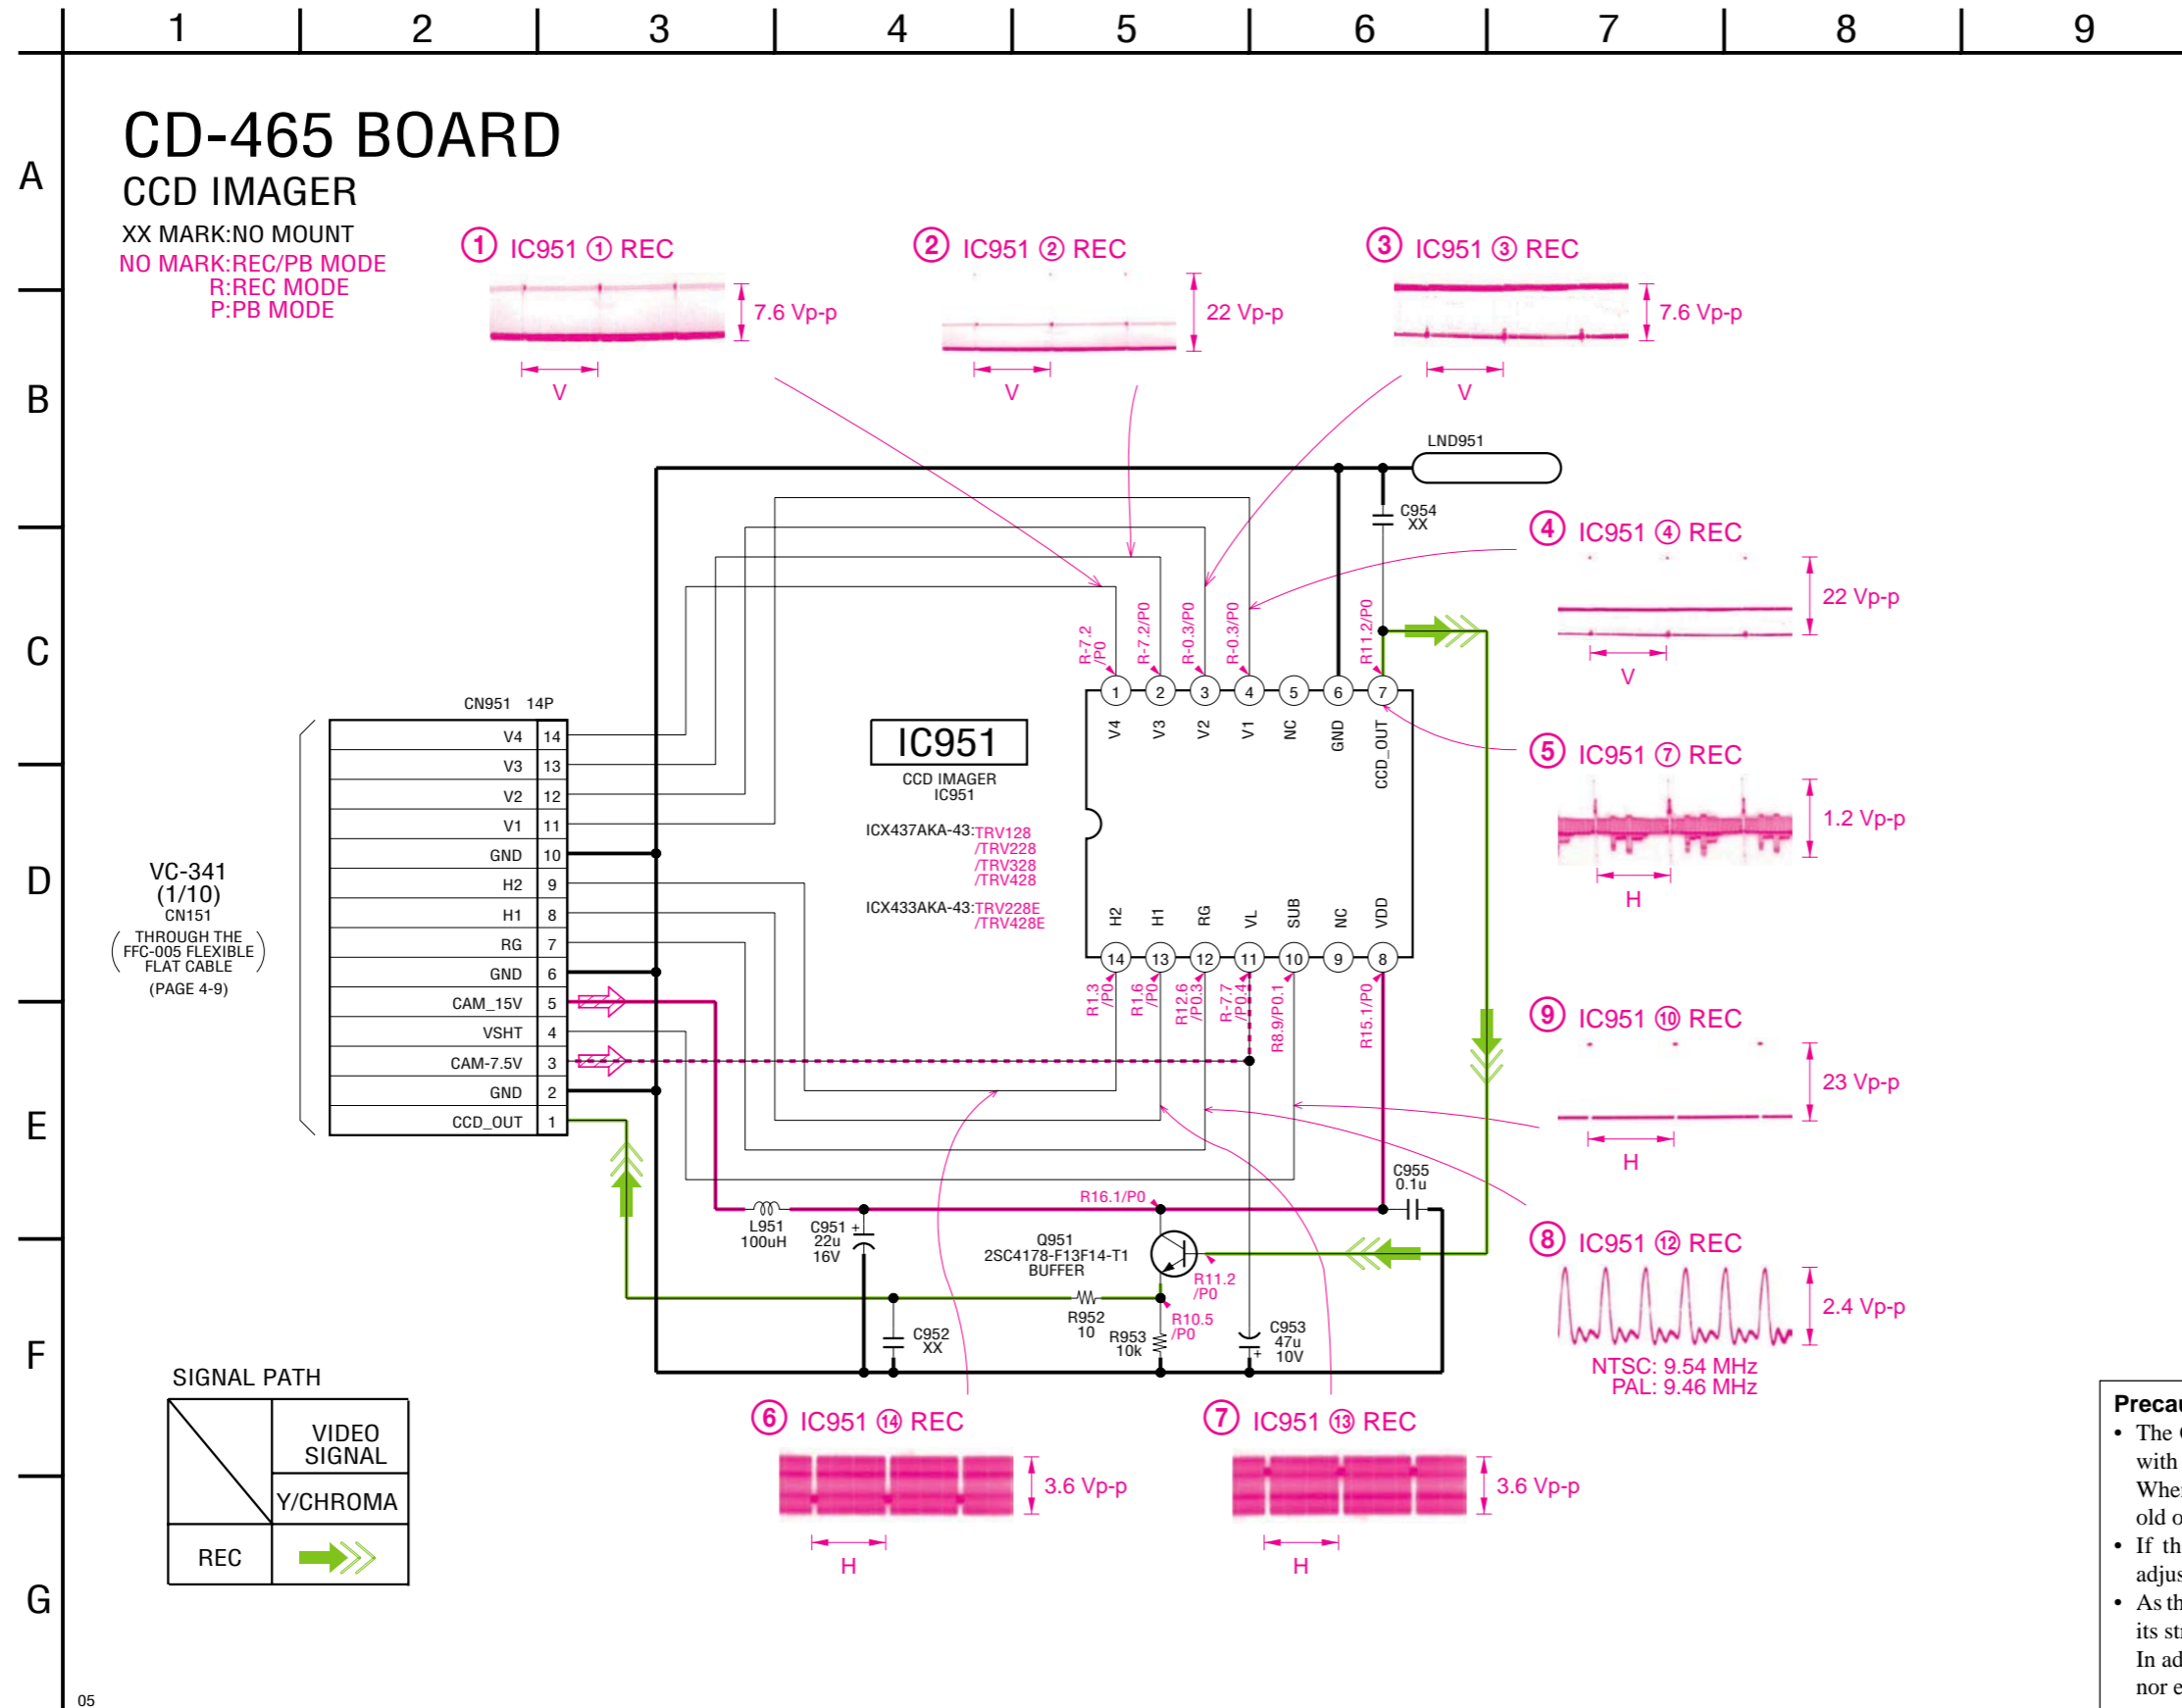


Precautions for Replacement of CCD Imager

- The CD-465 board mounted as a repair part is not equipped with a CCD imager. When replacing this board, remove the CCD imager from the old one and mount it onto the new one.
- If the CCD imager has been replaced, carry out all the adjustments for the camera section.
- As the CCD imager may be damaged by static electricity from its structure, handle it carefully like for the MOS IC. In addition, ensure that the receiver is not covered with dusts nor exposed to strong light.

For Schematic Diagram

• Refer to page 4-43 for printed wiring board.

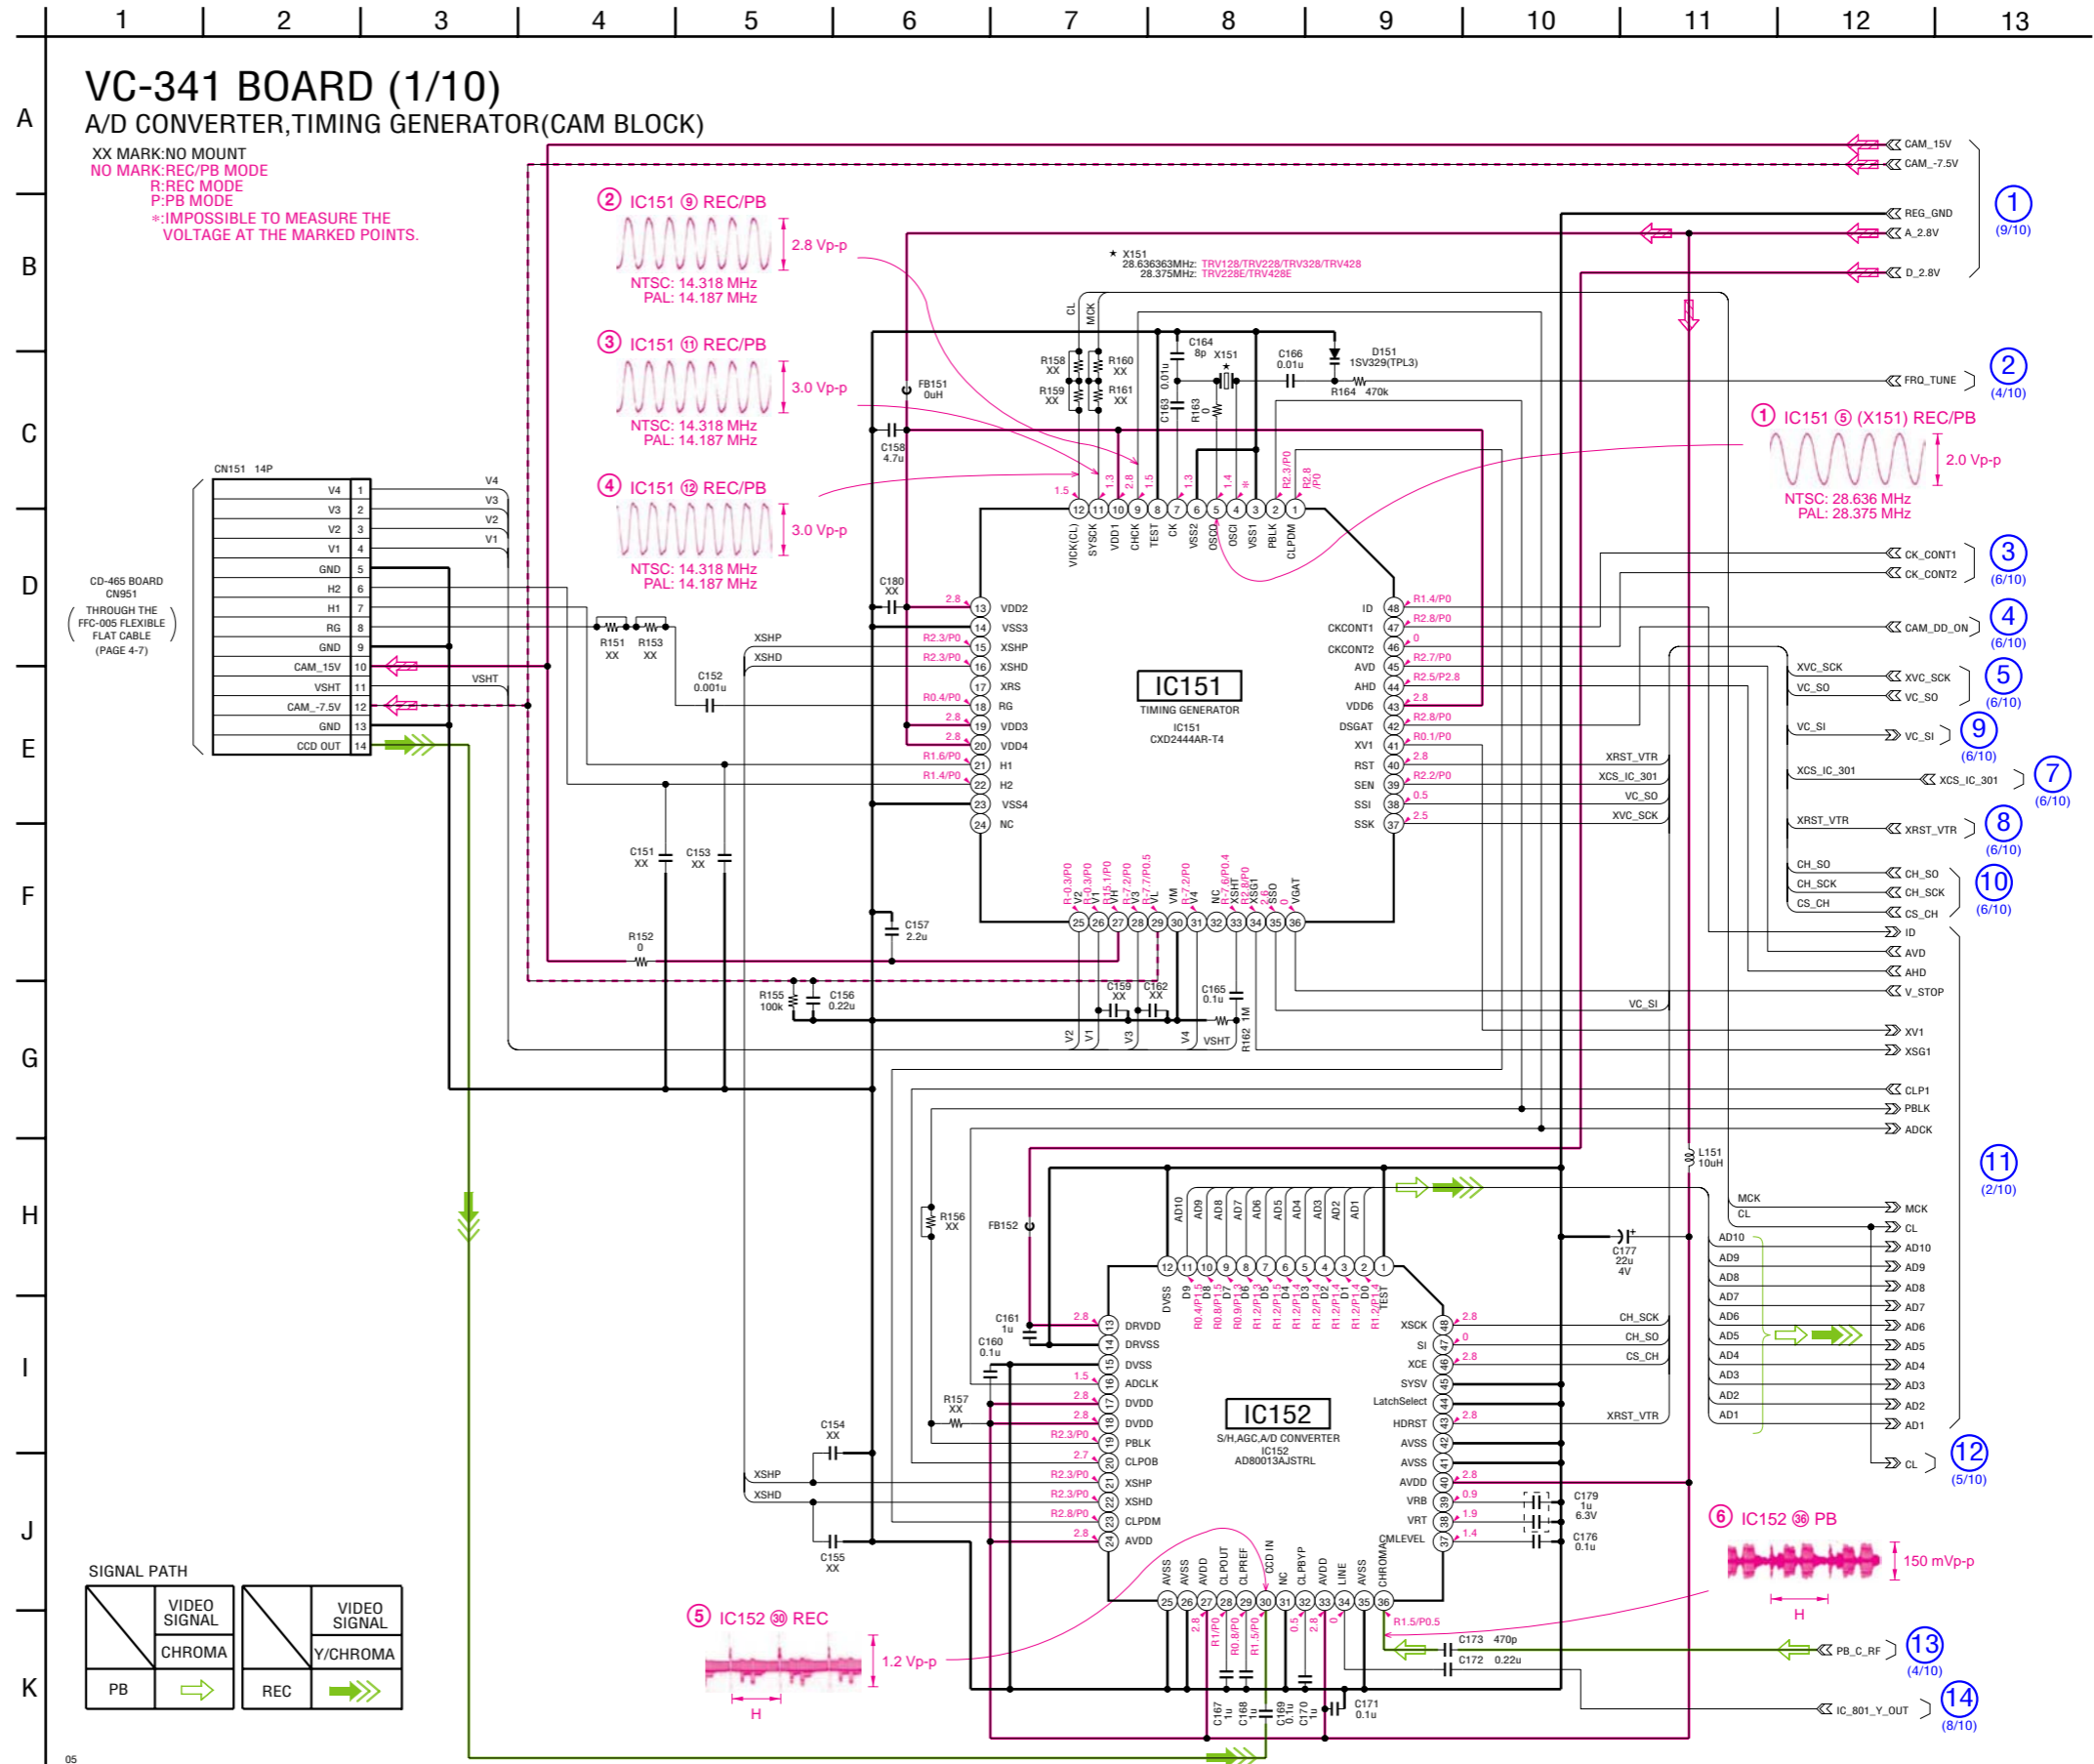


4-2. SCHEMATIC DIAGRAMS

VC-341 BOARD SIDE A

VC-341 BOARD SIDE B

For Schematic Diagram
 • Refer to page 4-43 for printed wiring board.

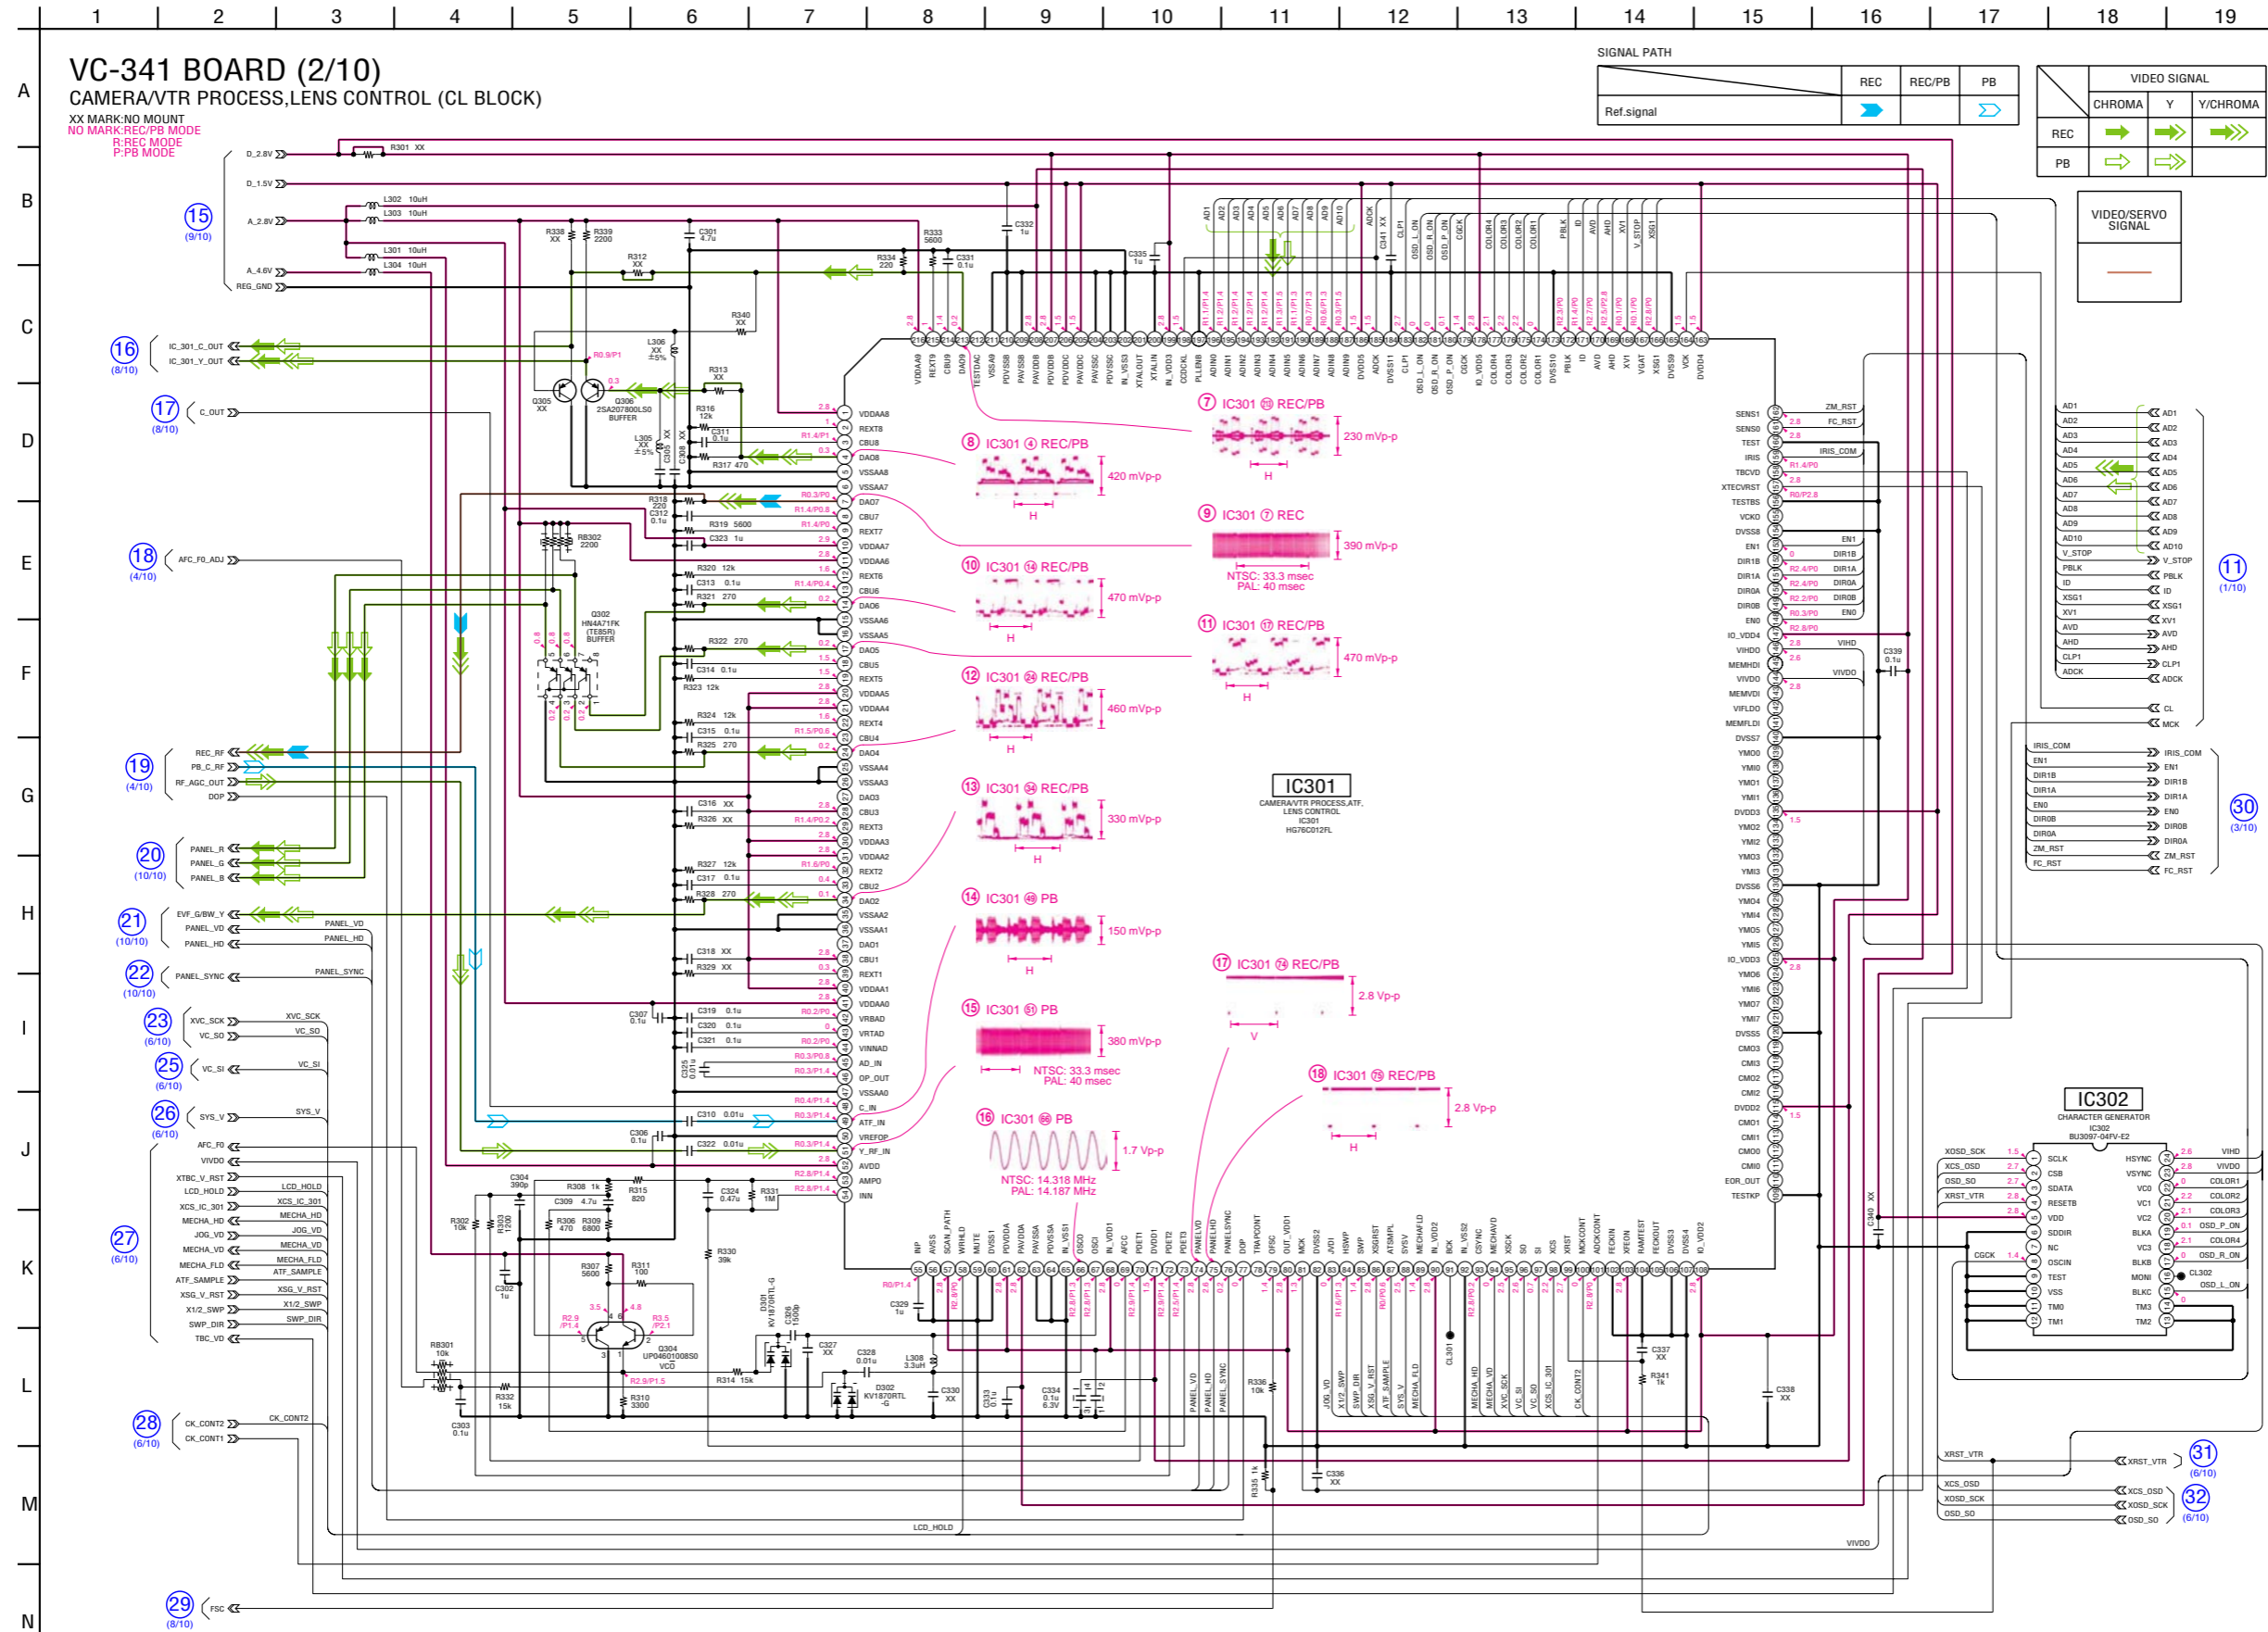


4-2. SCHEMATIC DIAGRAMS

VC-341 BOARD SIDE A

VC-341 BOARD SIDE B

For Schematic Diagram
 • Refer to page 4-43 for printed wiring board.

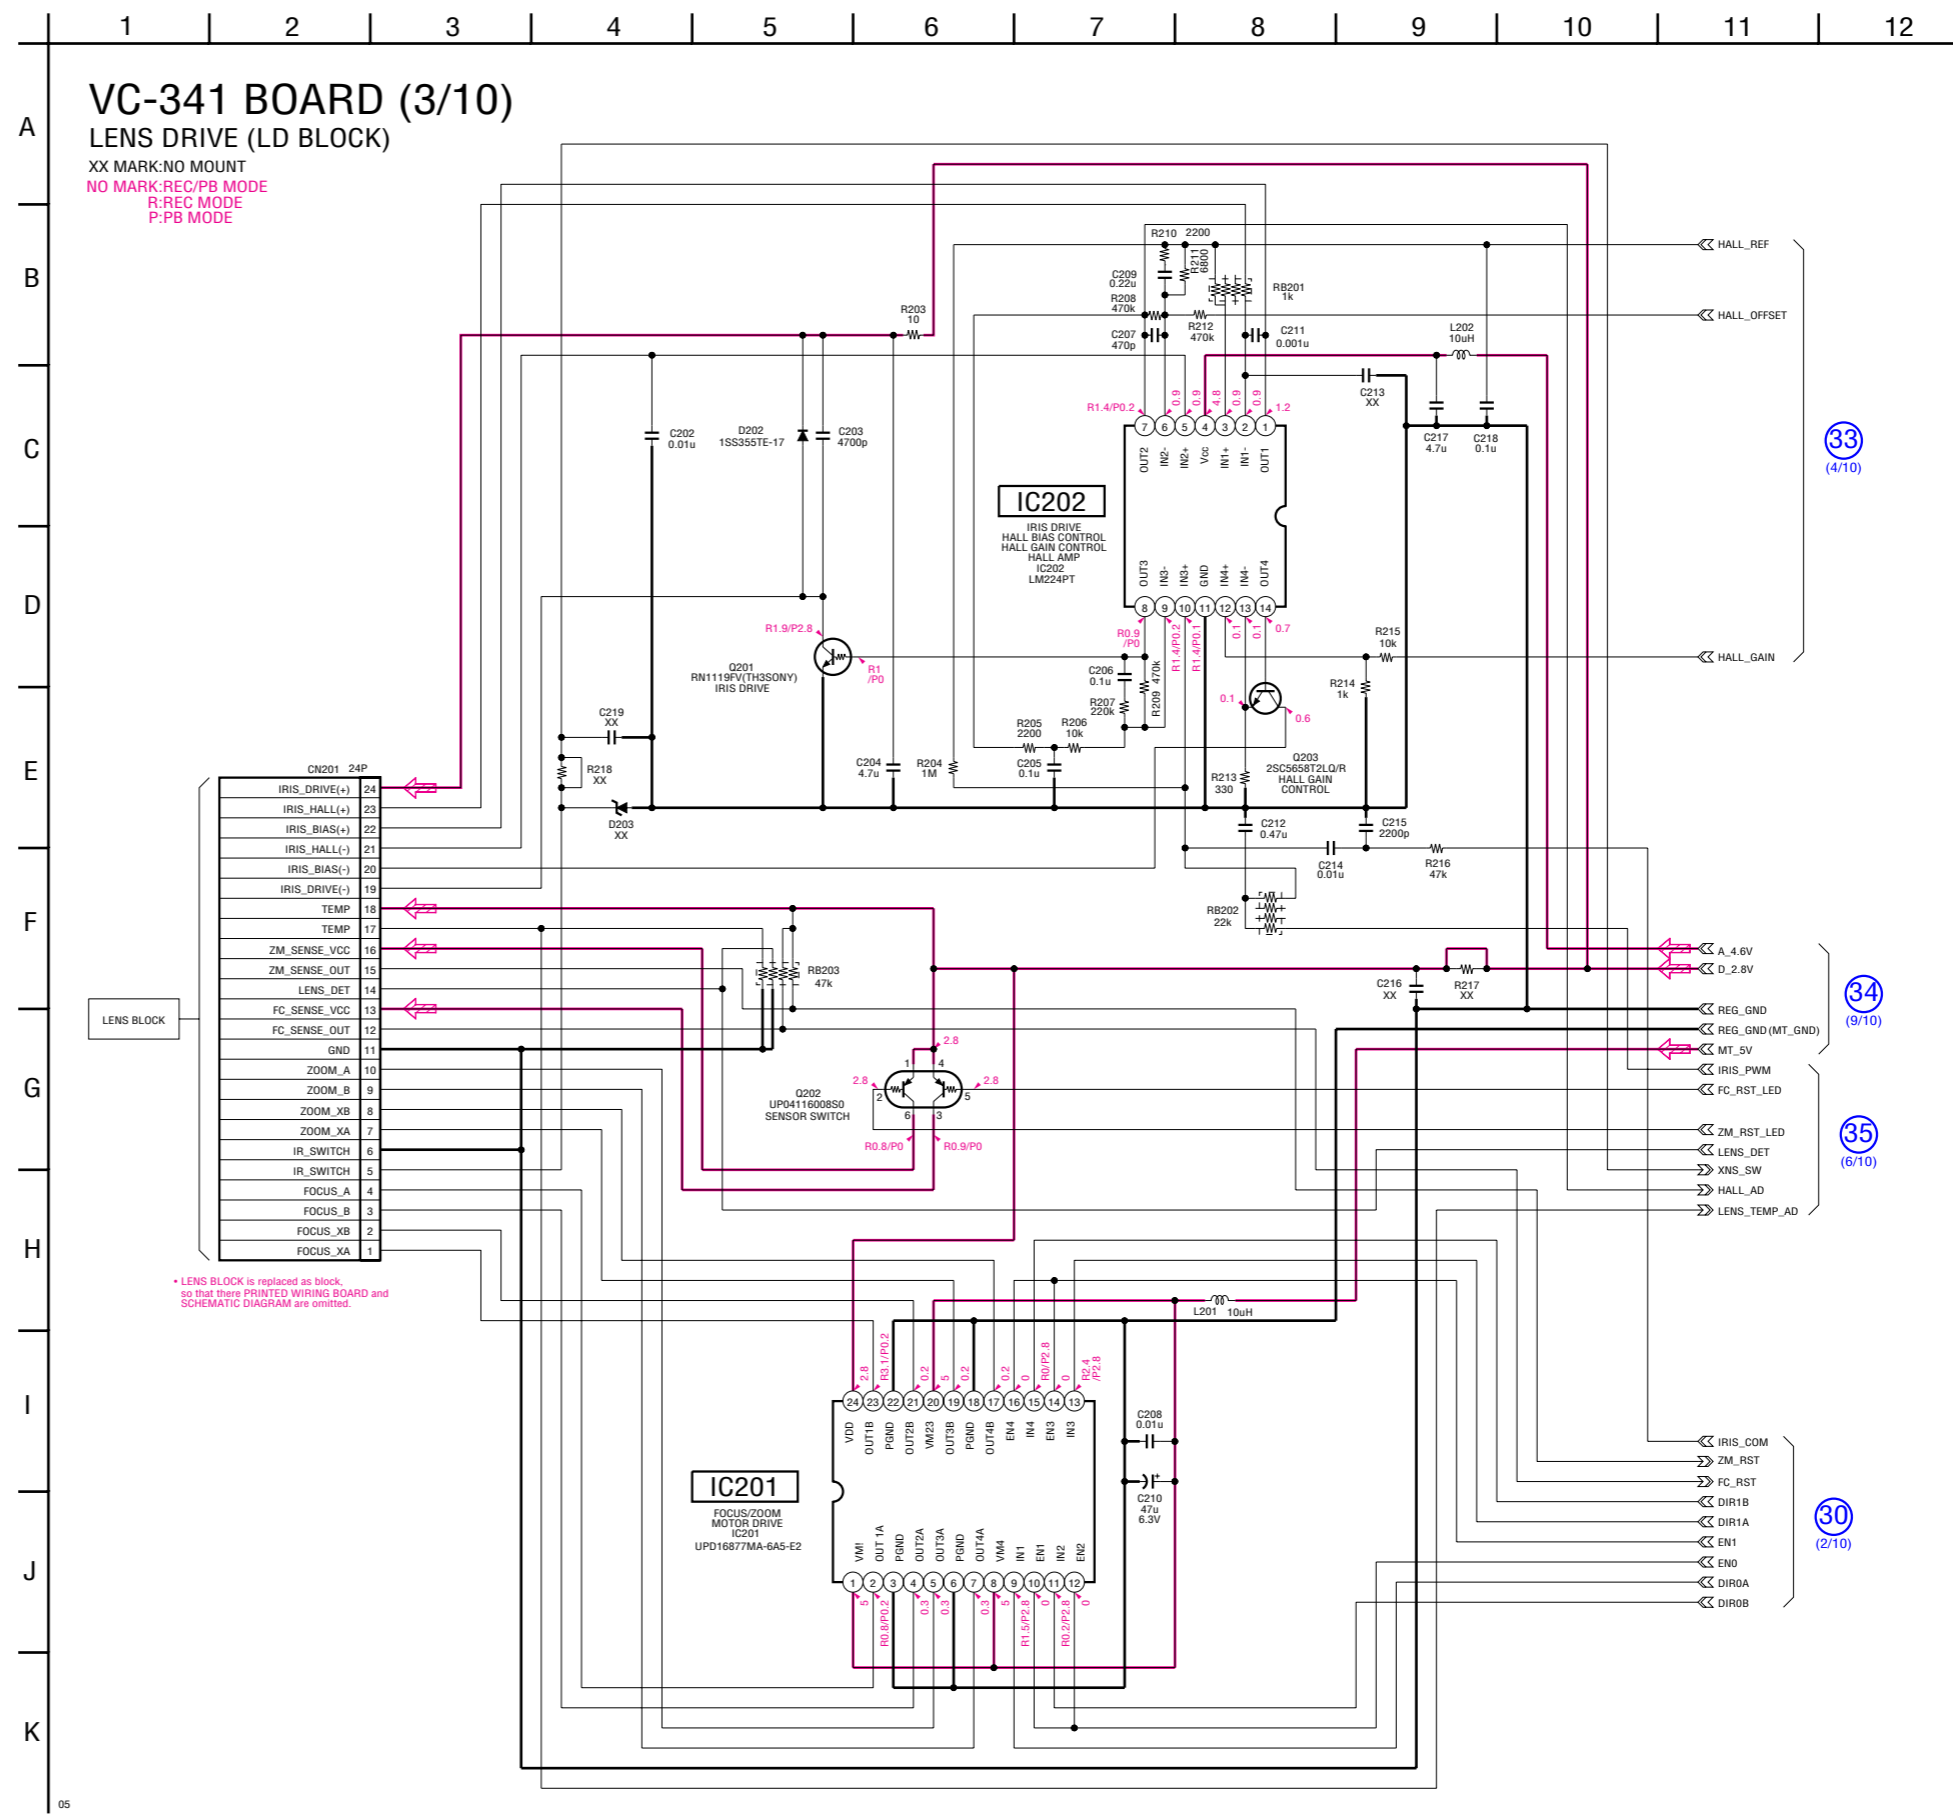


4-2. SCHEMATIC DIAGRAMS


VC-341 BOARD SIDE A

VC-341 BOARD SIDE B

For Schematic Diagram
 • Refer to page 4-43 for printed wiring board.

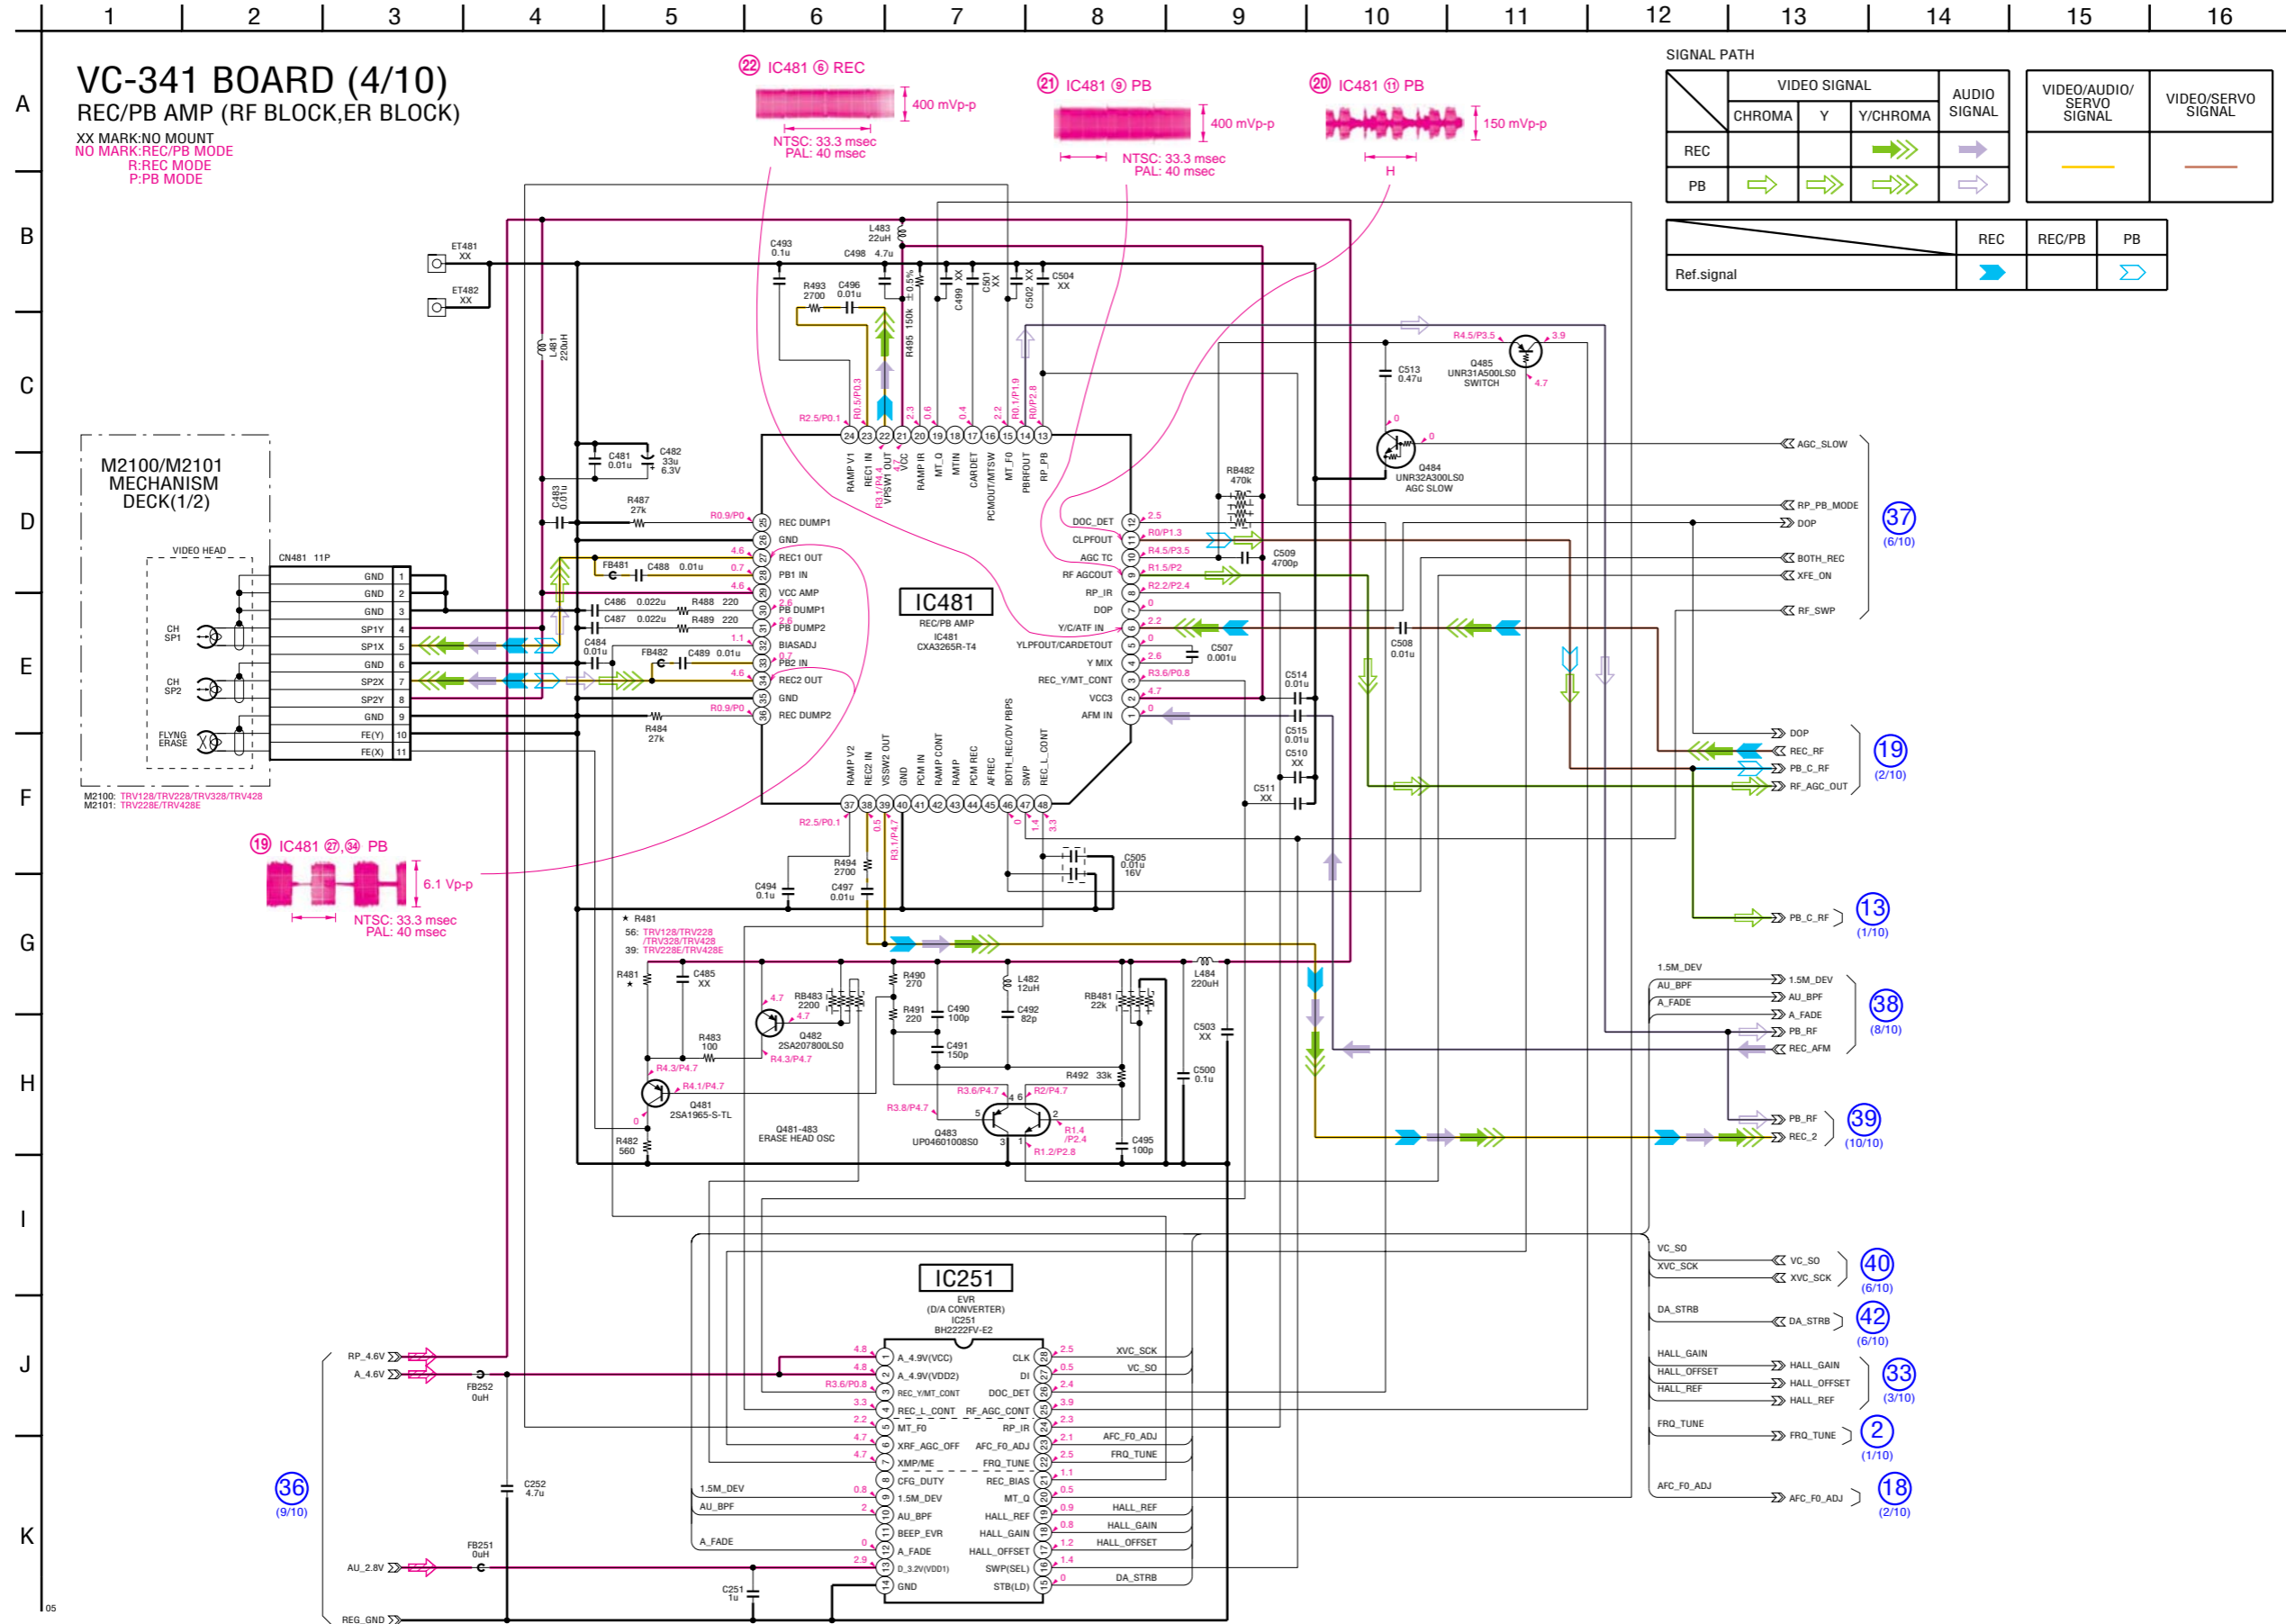

For Schematic Diagram
 • Refer to page 4-43 for printed wiring board.

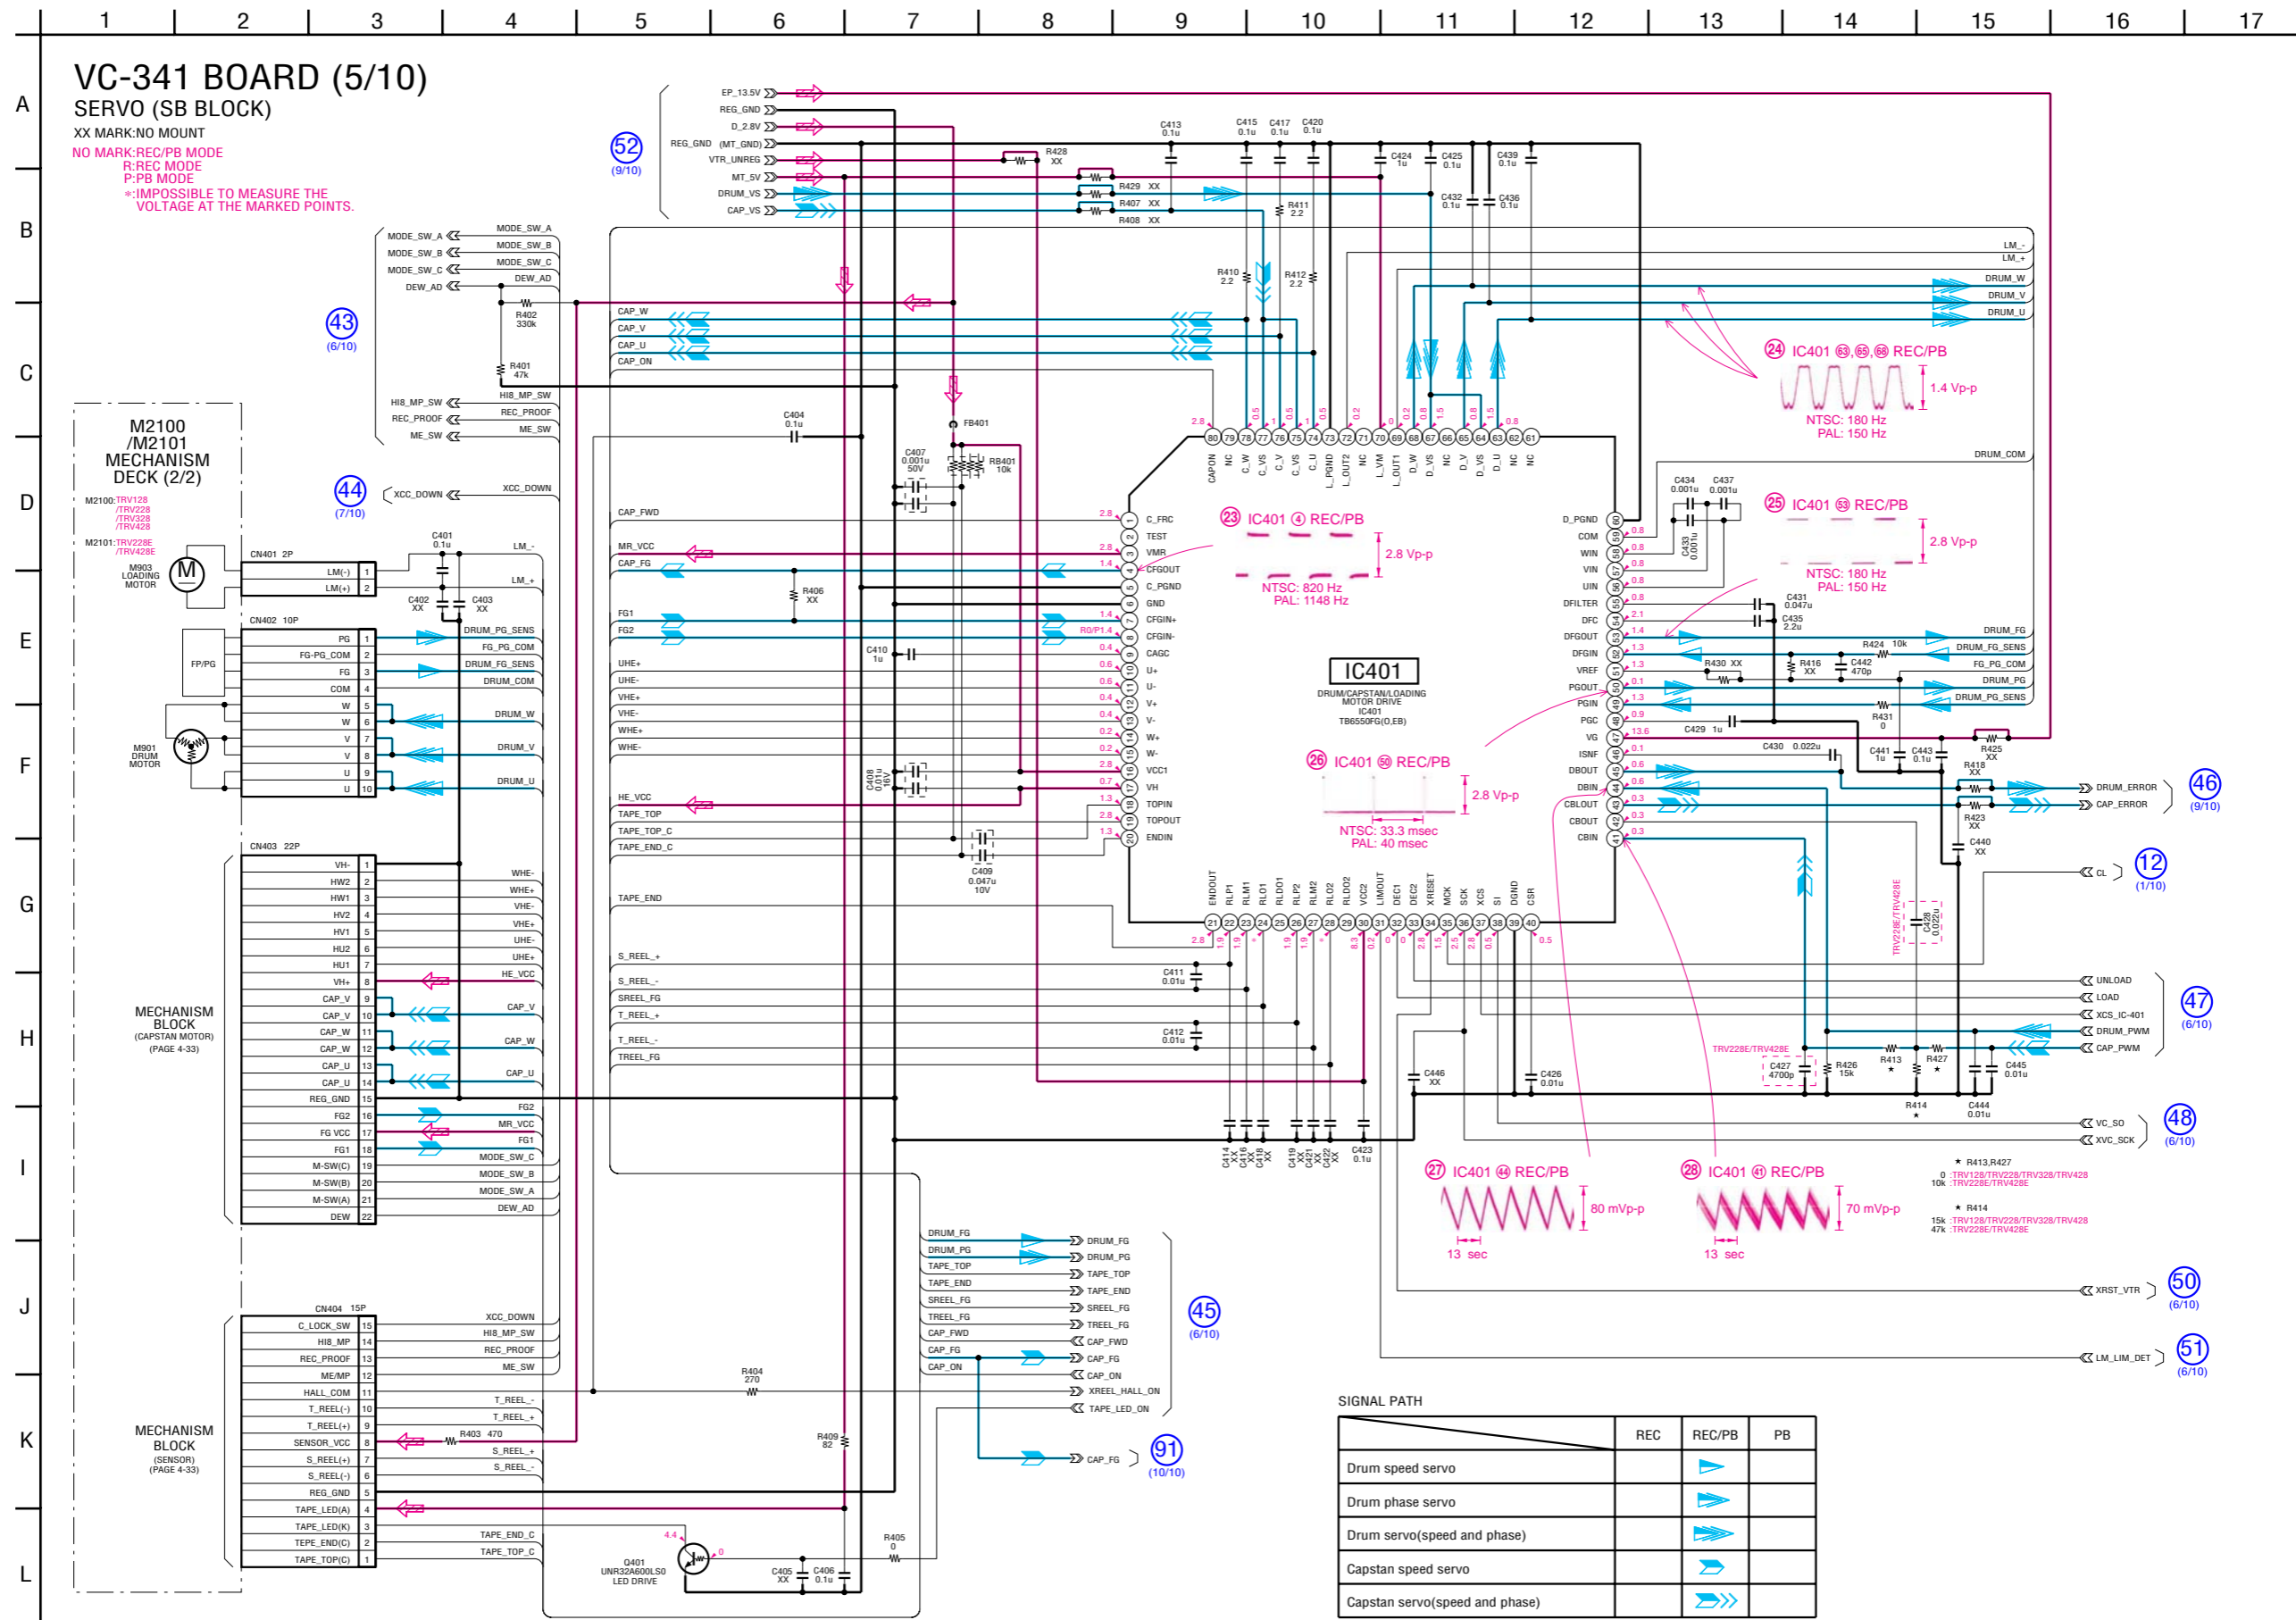


4-2. SCHEMATIC DIAGRAMS


VC-341 BOARD SIDE A

VC-341 BOARD SIDE B

For Schematic Diagram
 • Refer to page 4-43 for printed wiring board.

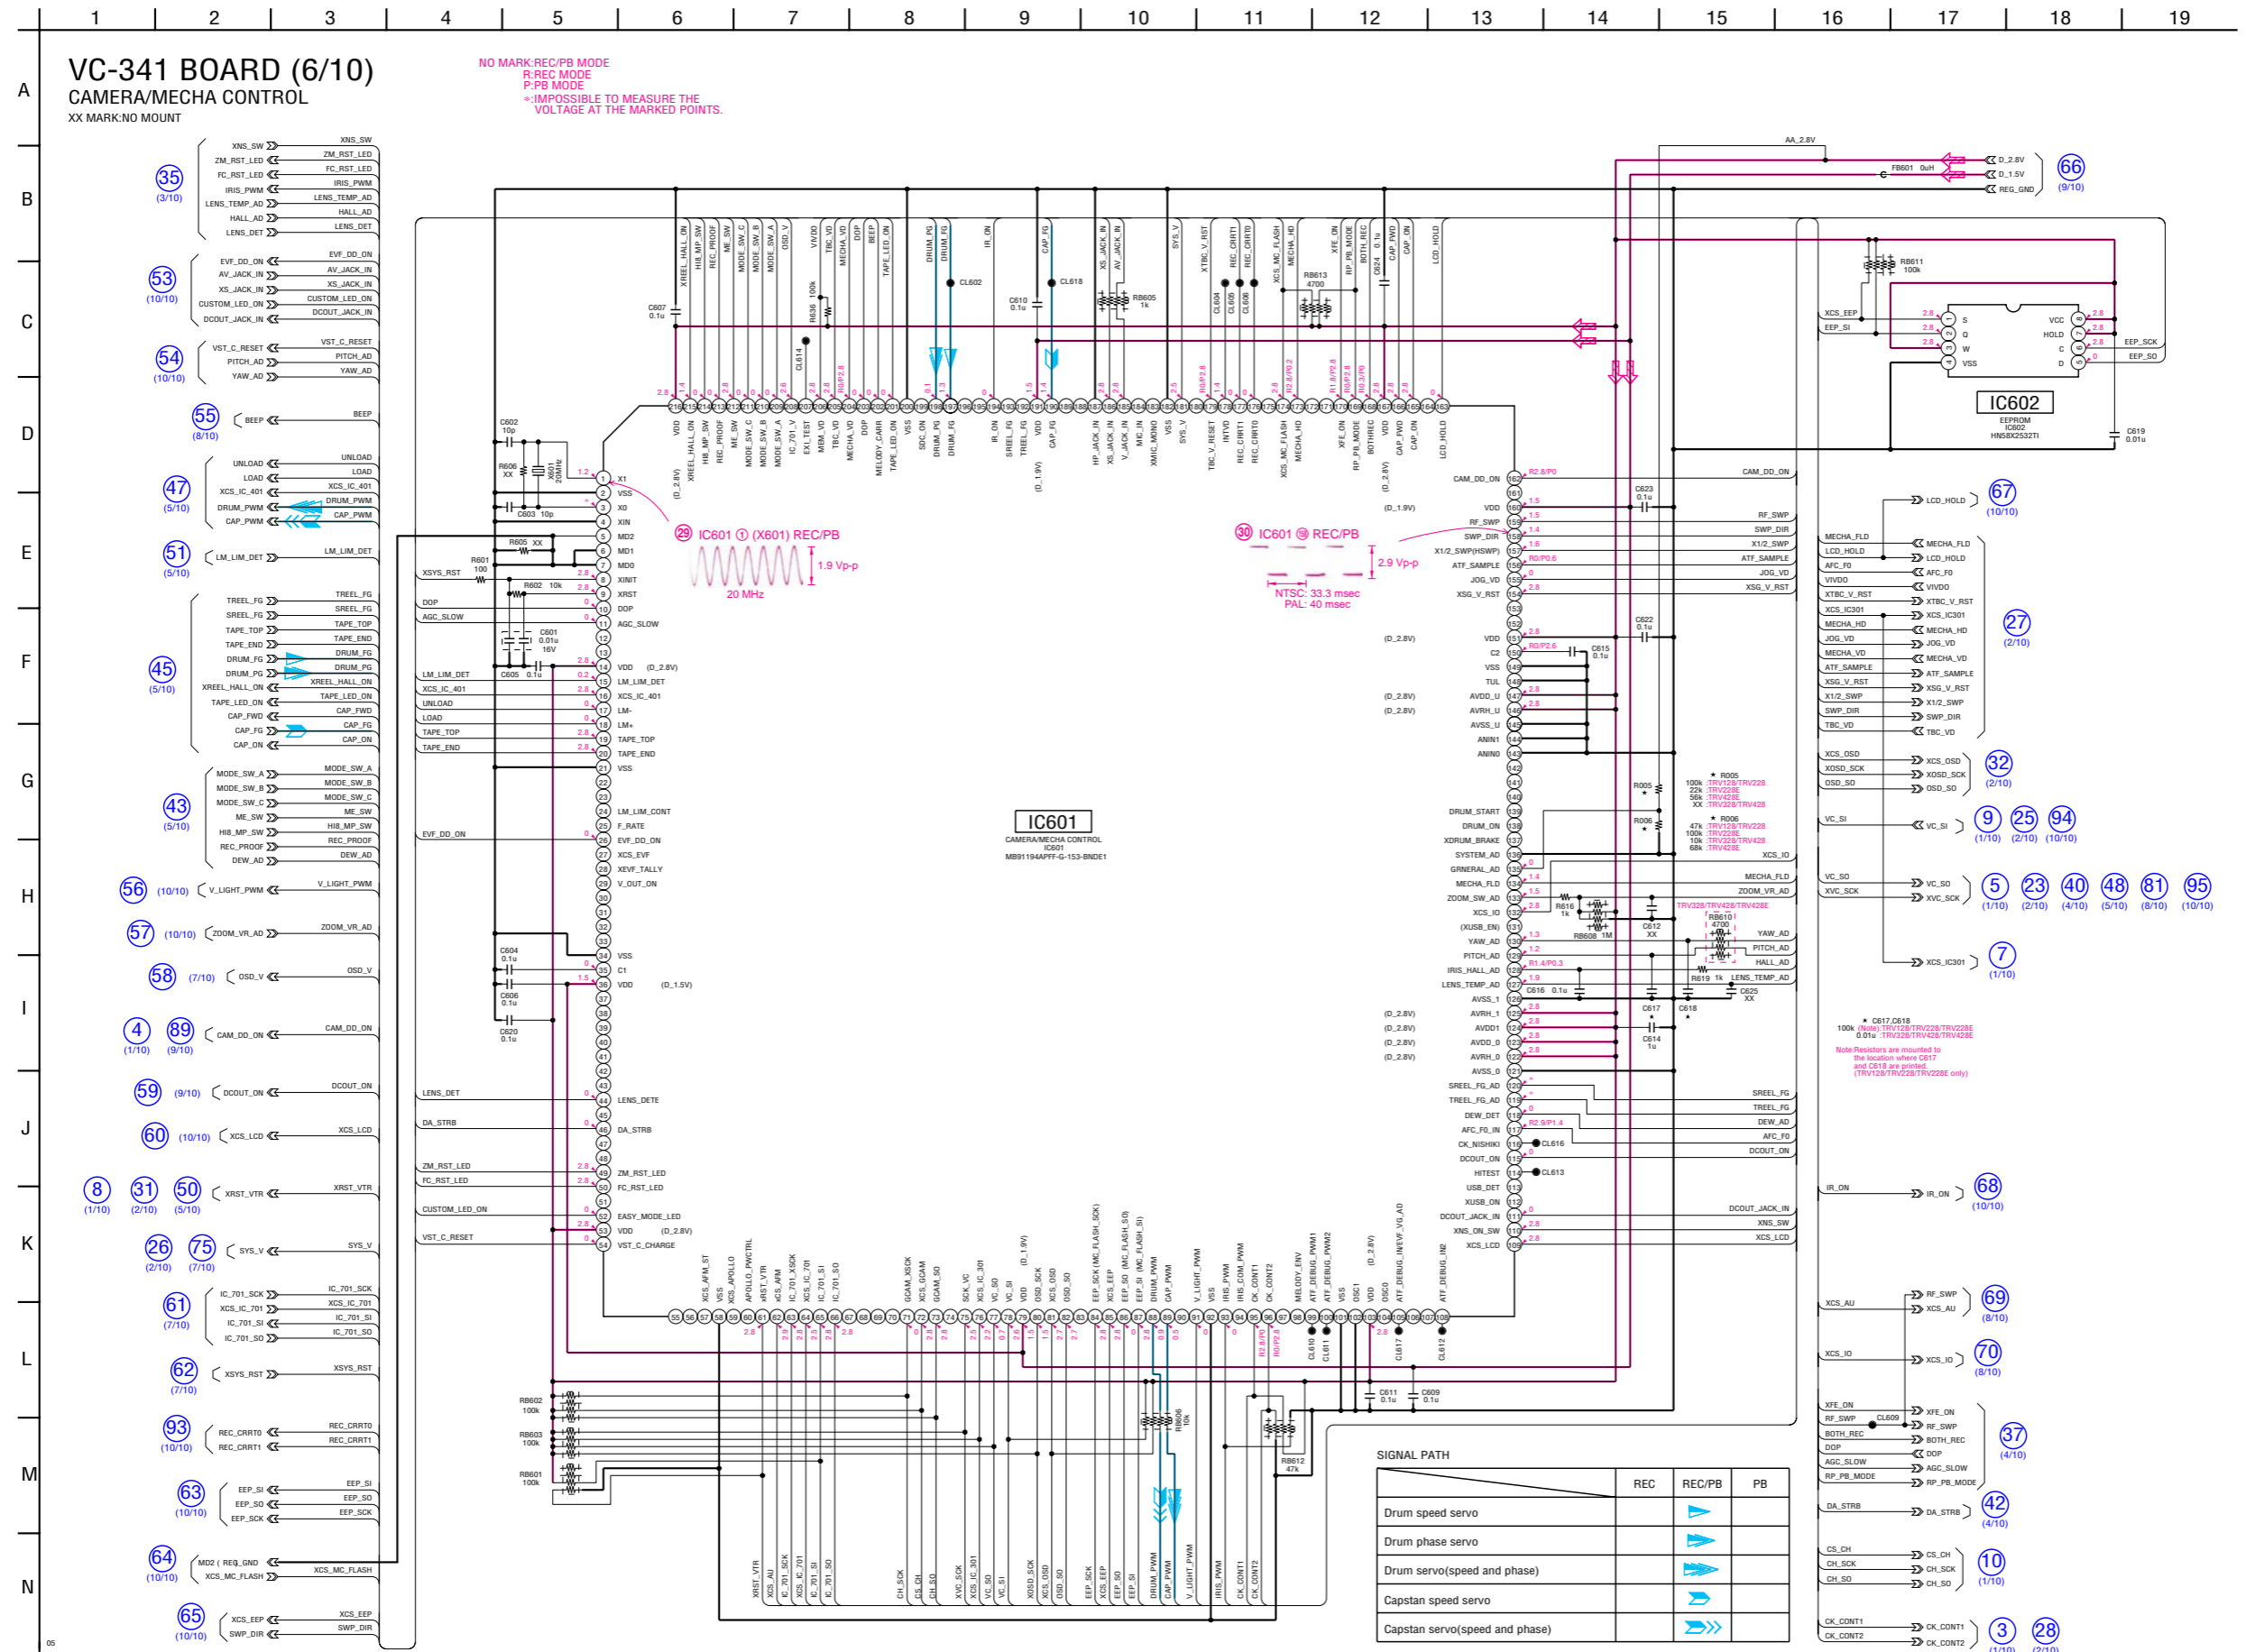

For Schematic Diagram
• Refer to page 4-43 for printed wiring board.

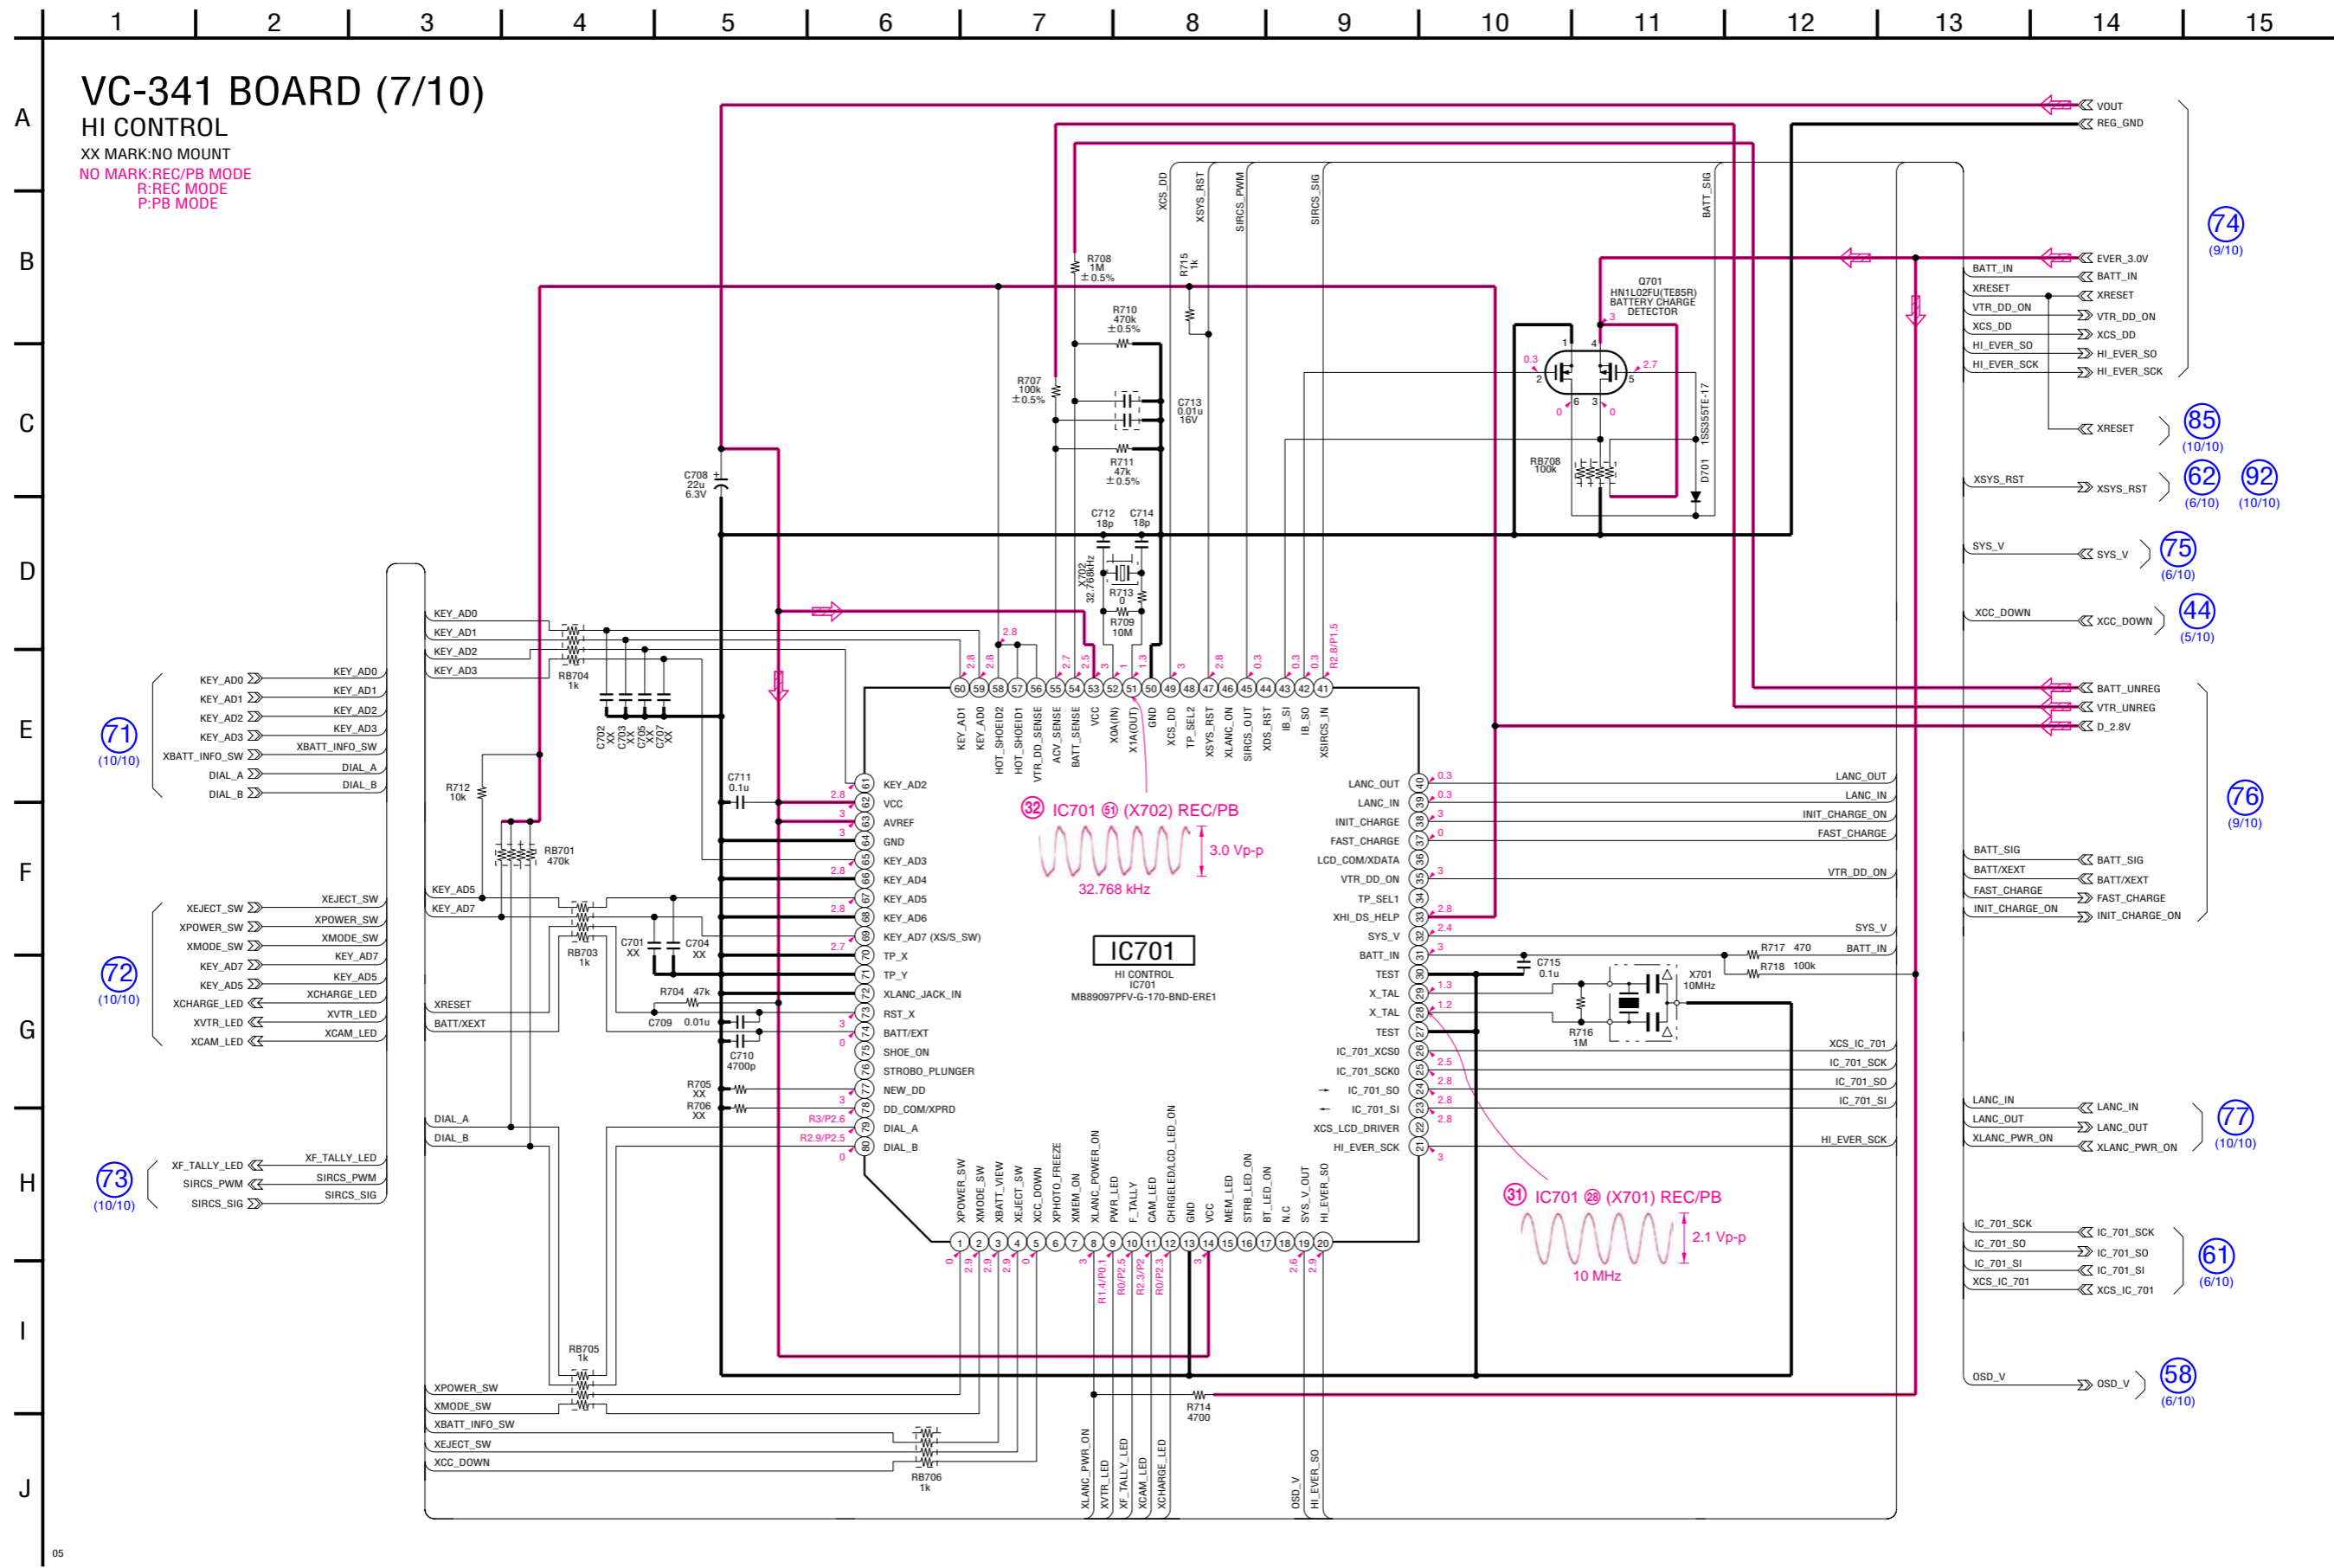

4-2. SCHEMATIC DIAGRAMS VC-341 BOARD SIDE A VC-341 BOARD SIDE B

For Schematic Diagram
 • Refer to page 4-43 for printed wiring board.

1 2 3 4 5 6 7 8 9 10 11 12 13

A VC-341 BOARD (8/10)


AUDIO, VIDEO

XX MARK:NO MOUNT

NO MARK:REC/PB MODE
 R:REC MODE
 P:PB MODE

SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC	→	→→	→→→	→
PB	→	→→	→→→	→

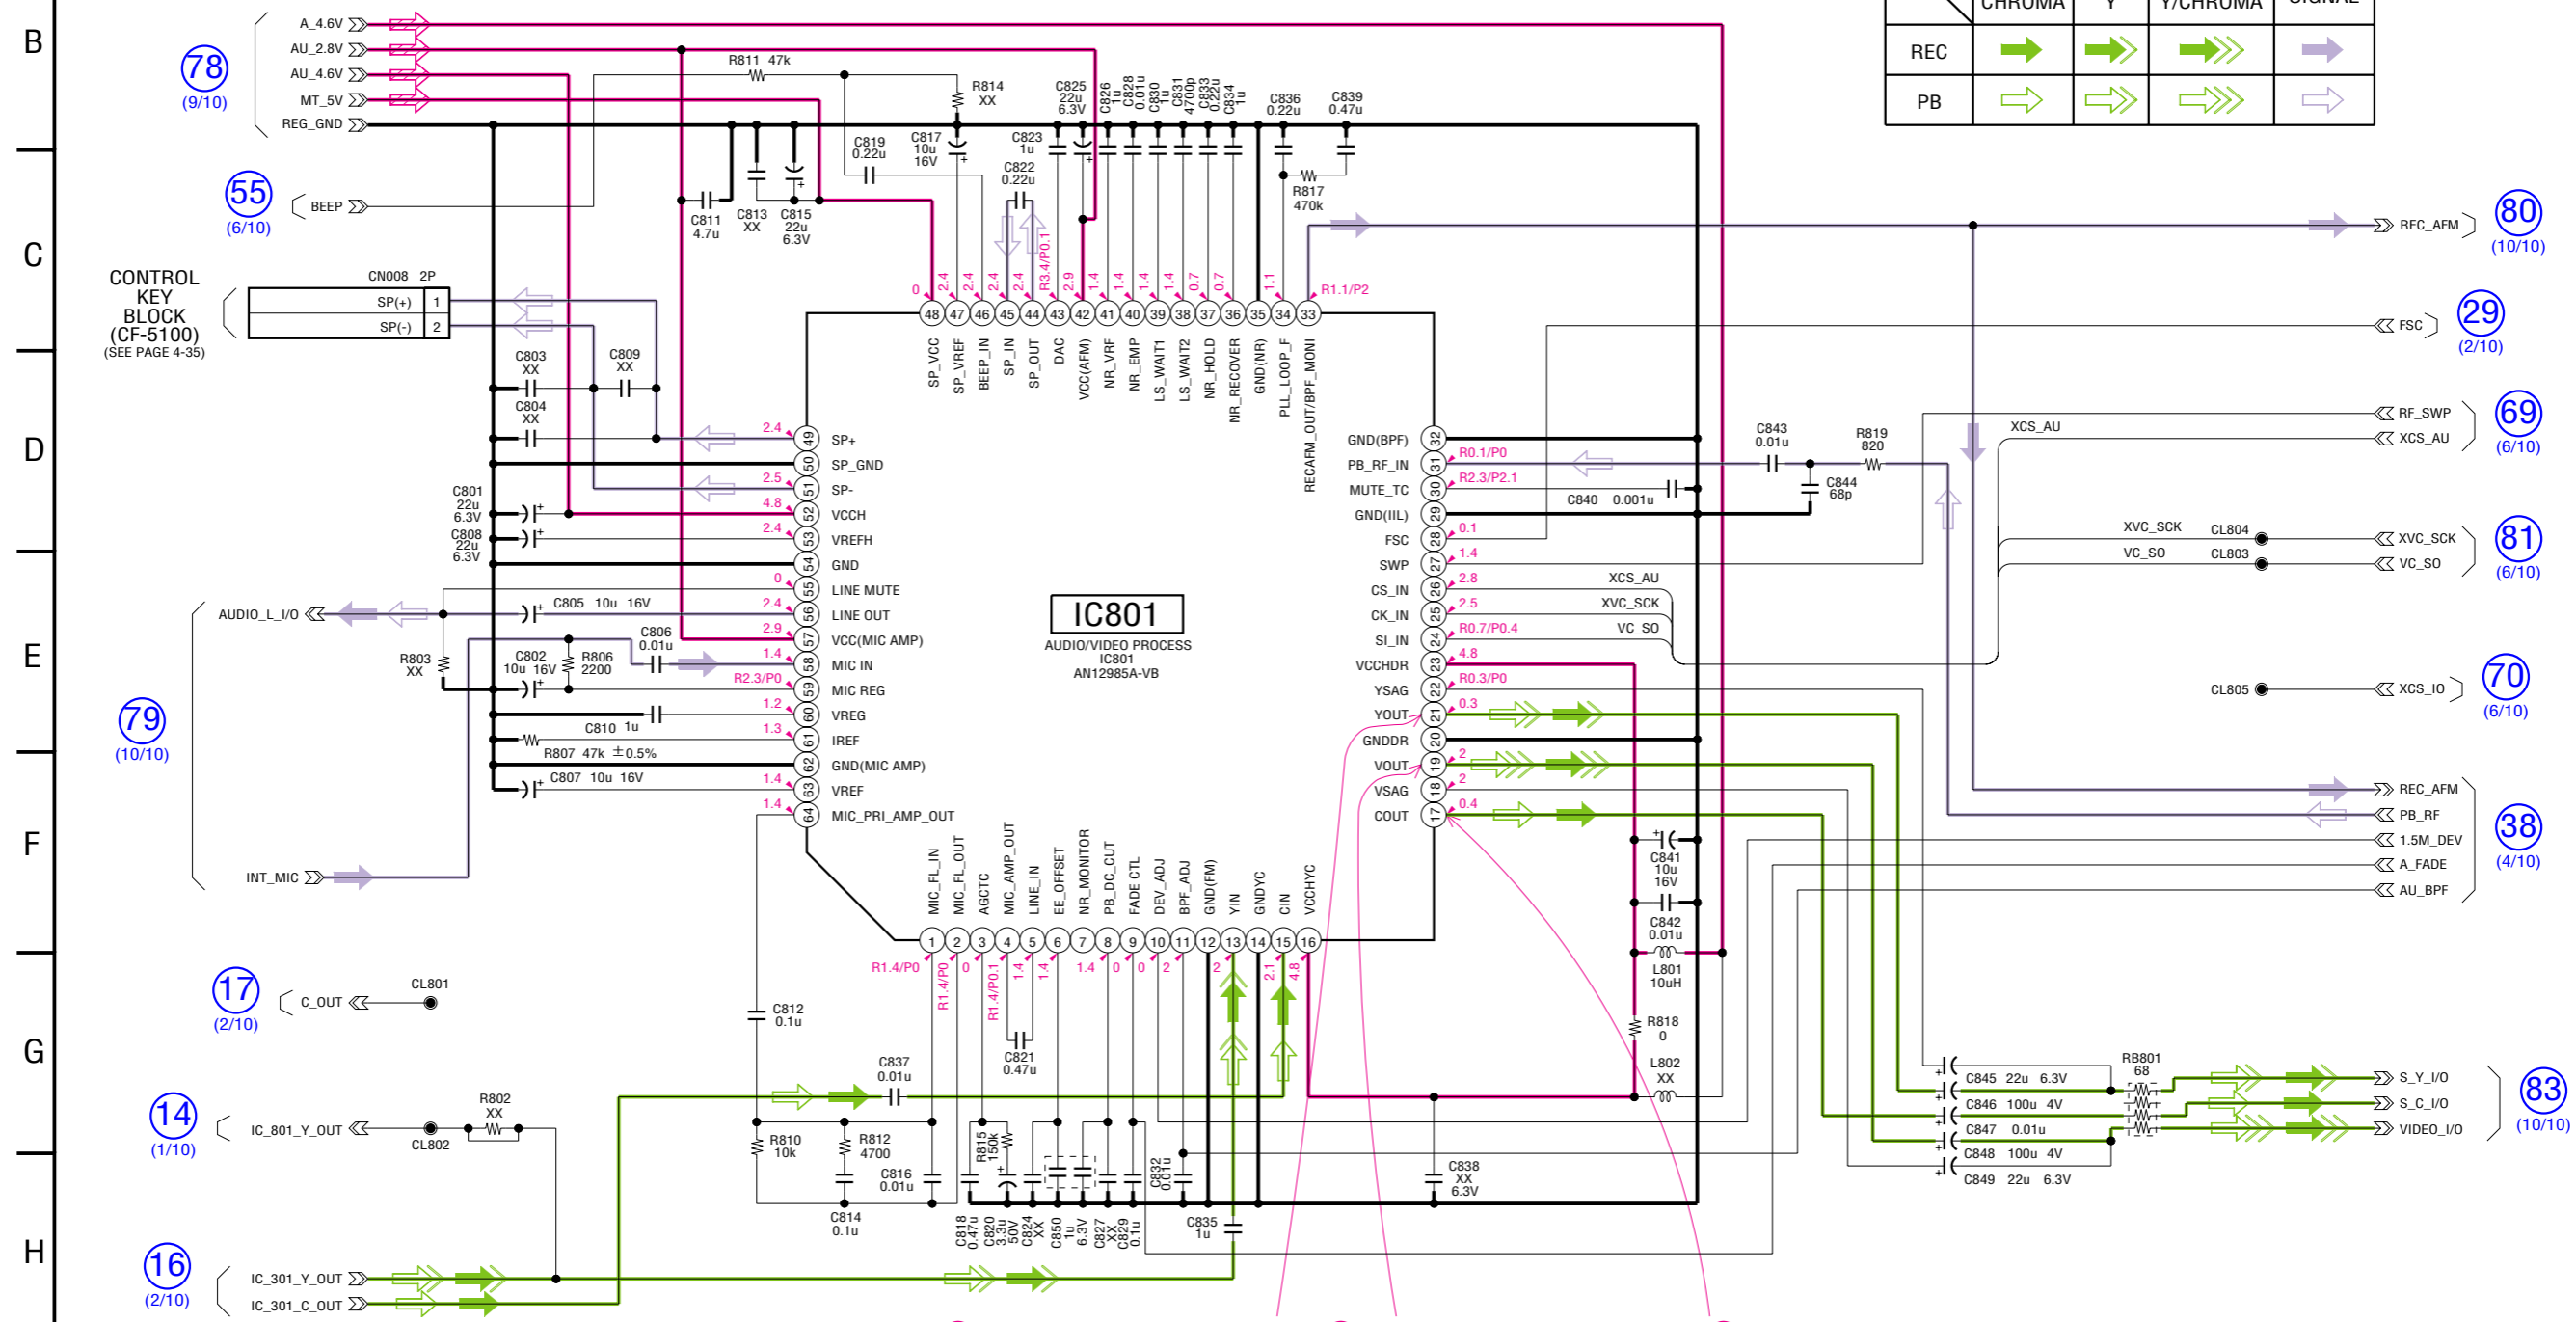


CONTROL KEY BLOCK (CF-5100) (SEE PAGE 4-35)

③③ IC801 ②① REC/PB (S JACK IN) ③④ IC801 ①⑨ REC/PB (AV JACK IN) ③⑤ IC801 ①⑦ REC/PB (S JACK IN)



For Schematic Diagram

• Refer to page 4-43 for printed wiring board.

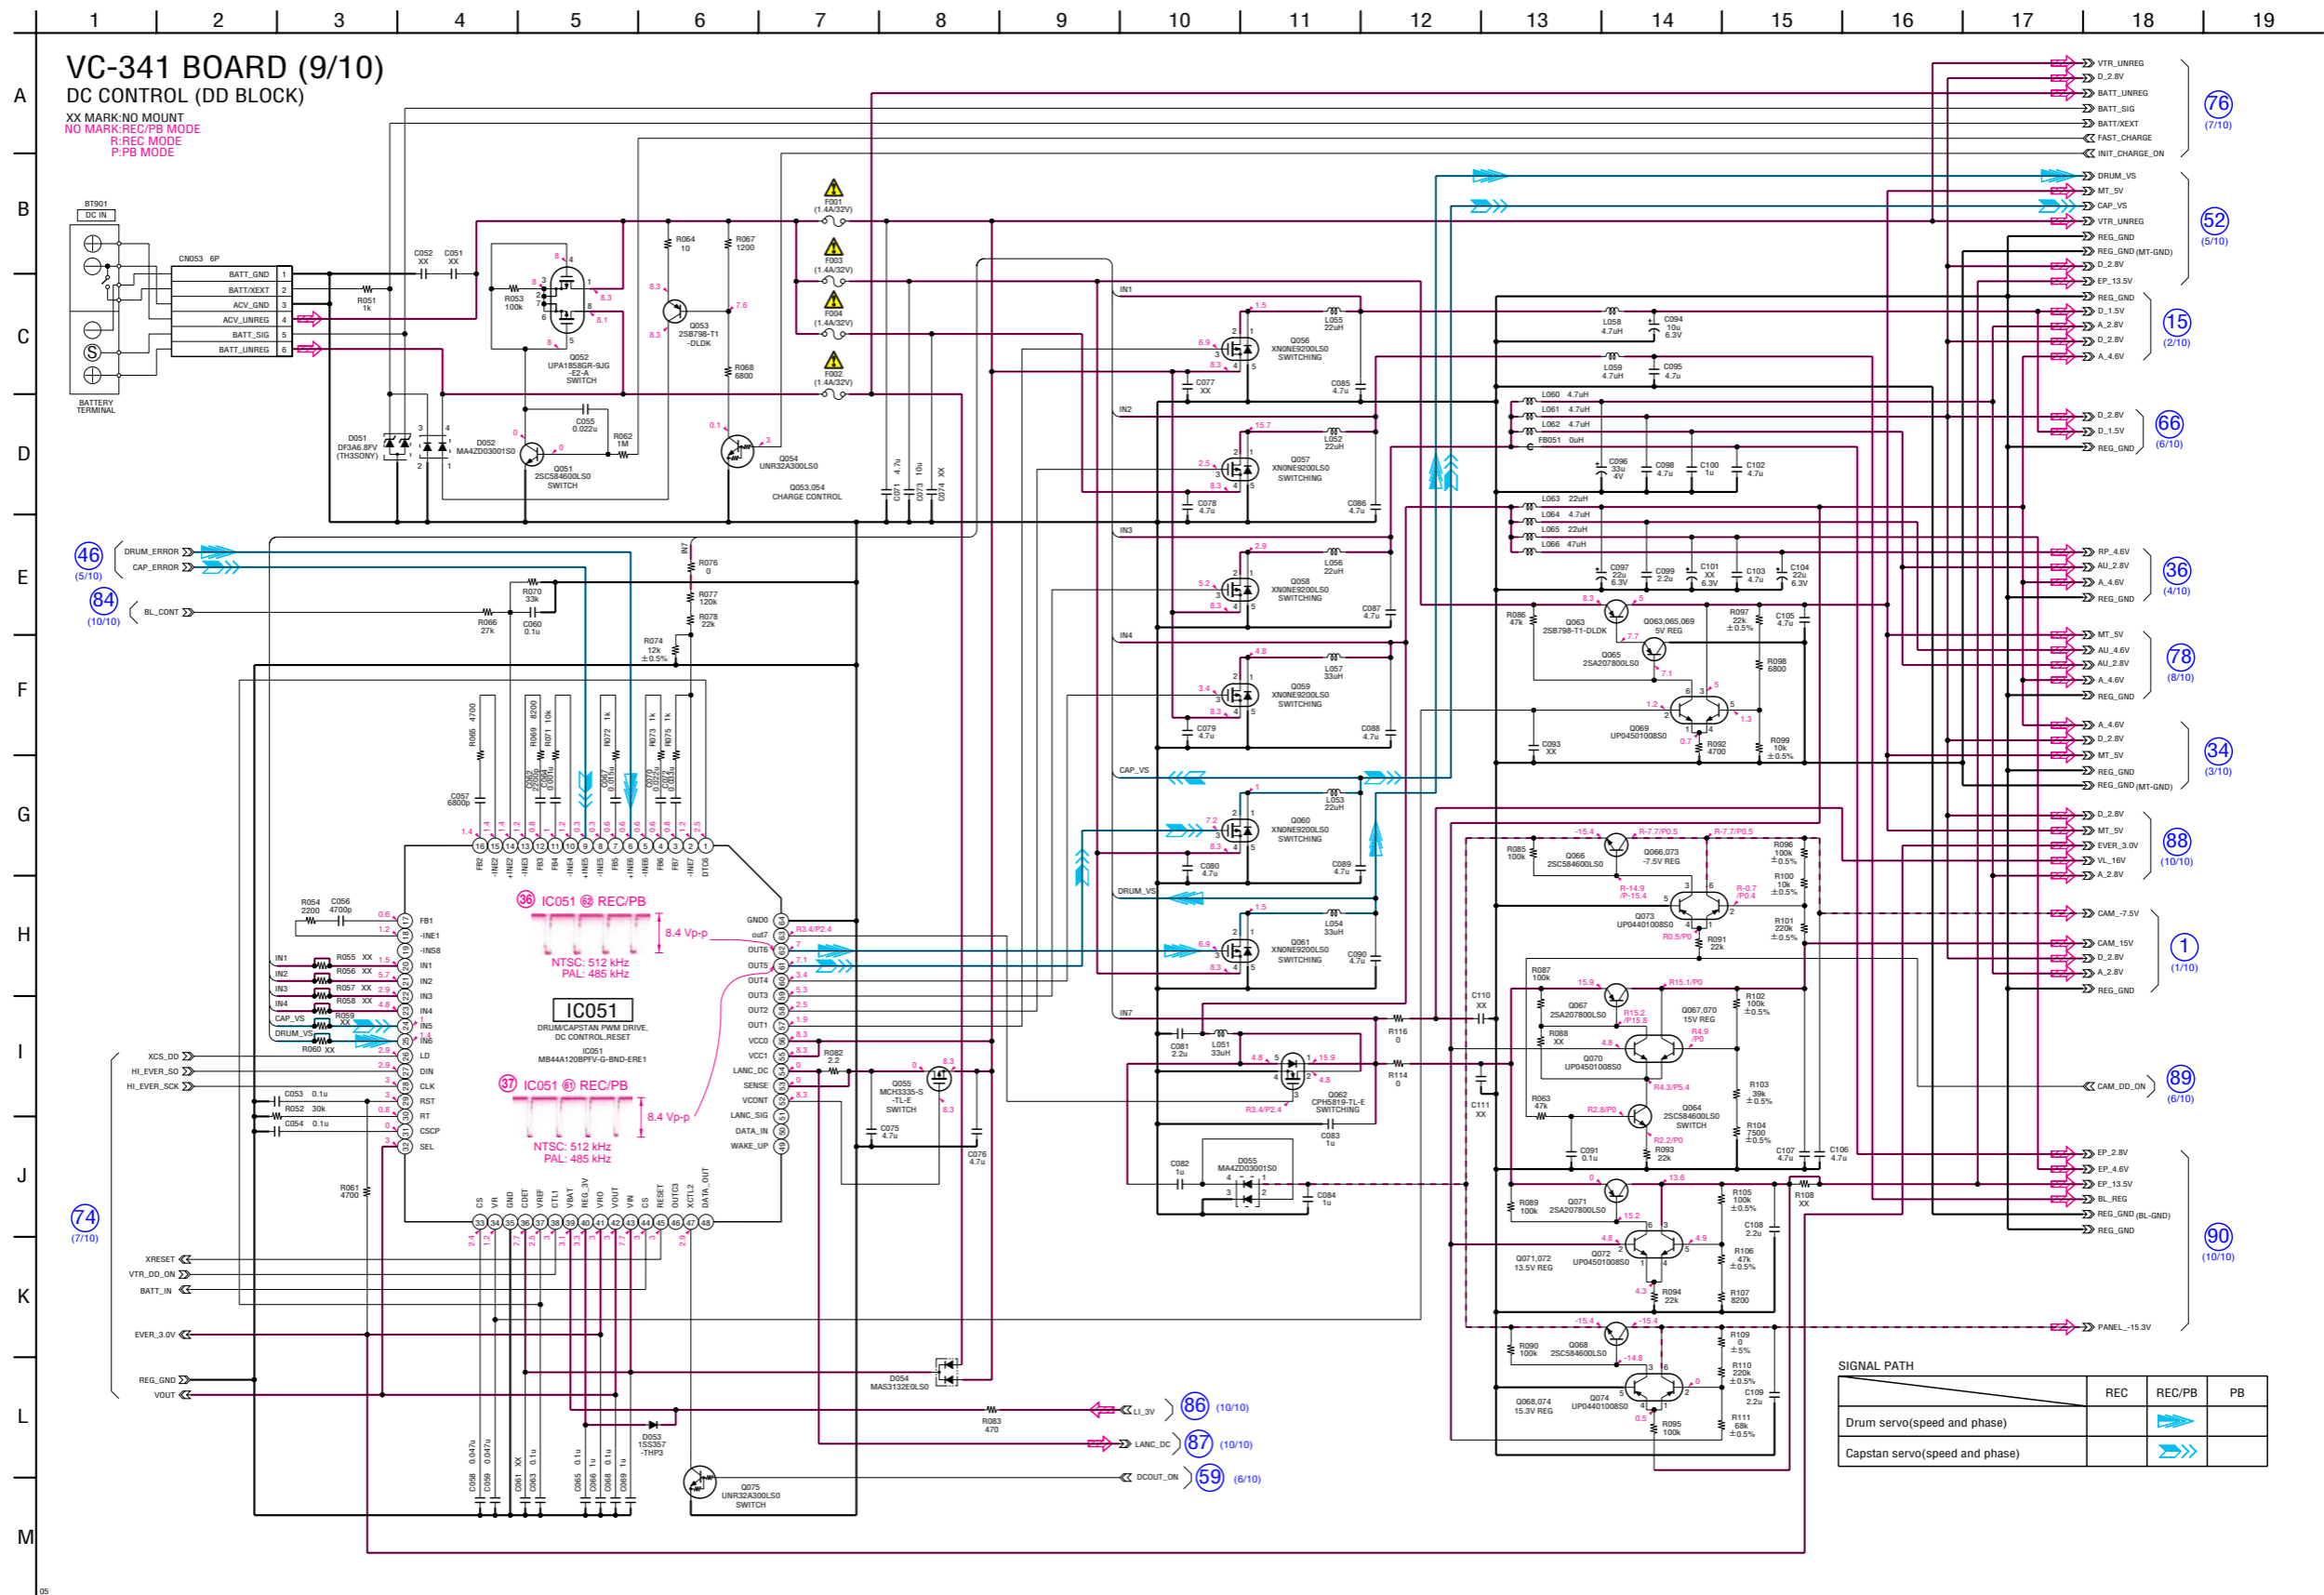

SIGNAL PATH


	REC	REC/PB	PB
Drum servo(speed and phase)		→	→
Capstan servo(speed and phase)		→	→

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


4-2. SCHEMATIC DIAGRAMS VC-341 BOARD SIDE A VC-341 BOARD SIDE B

For Schematic Diagram
• Refer to page 4-43 for printed wiring board.

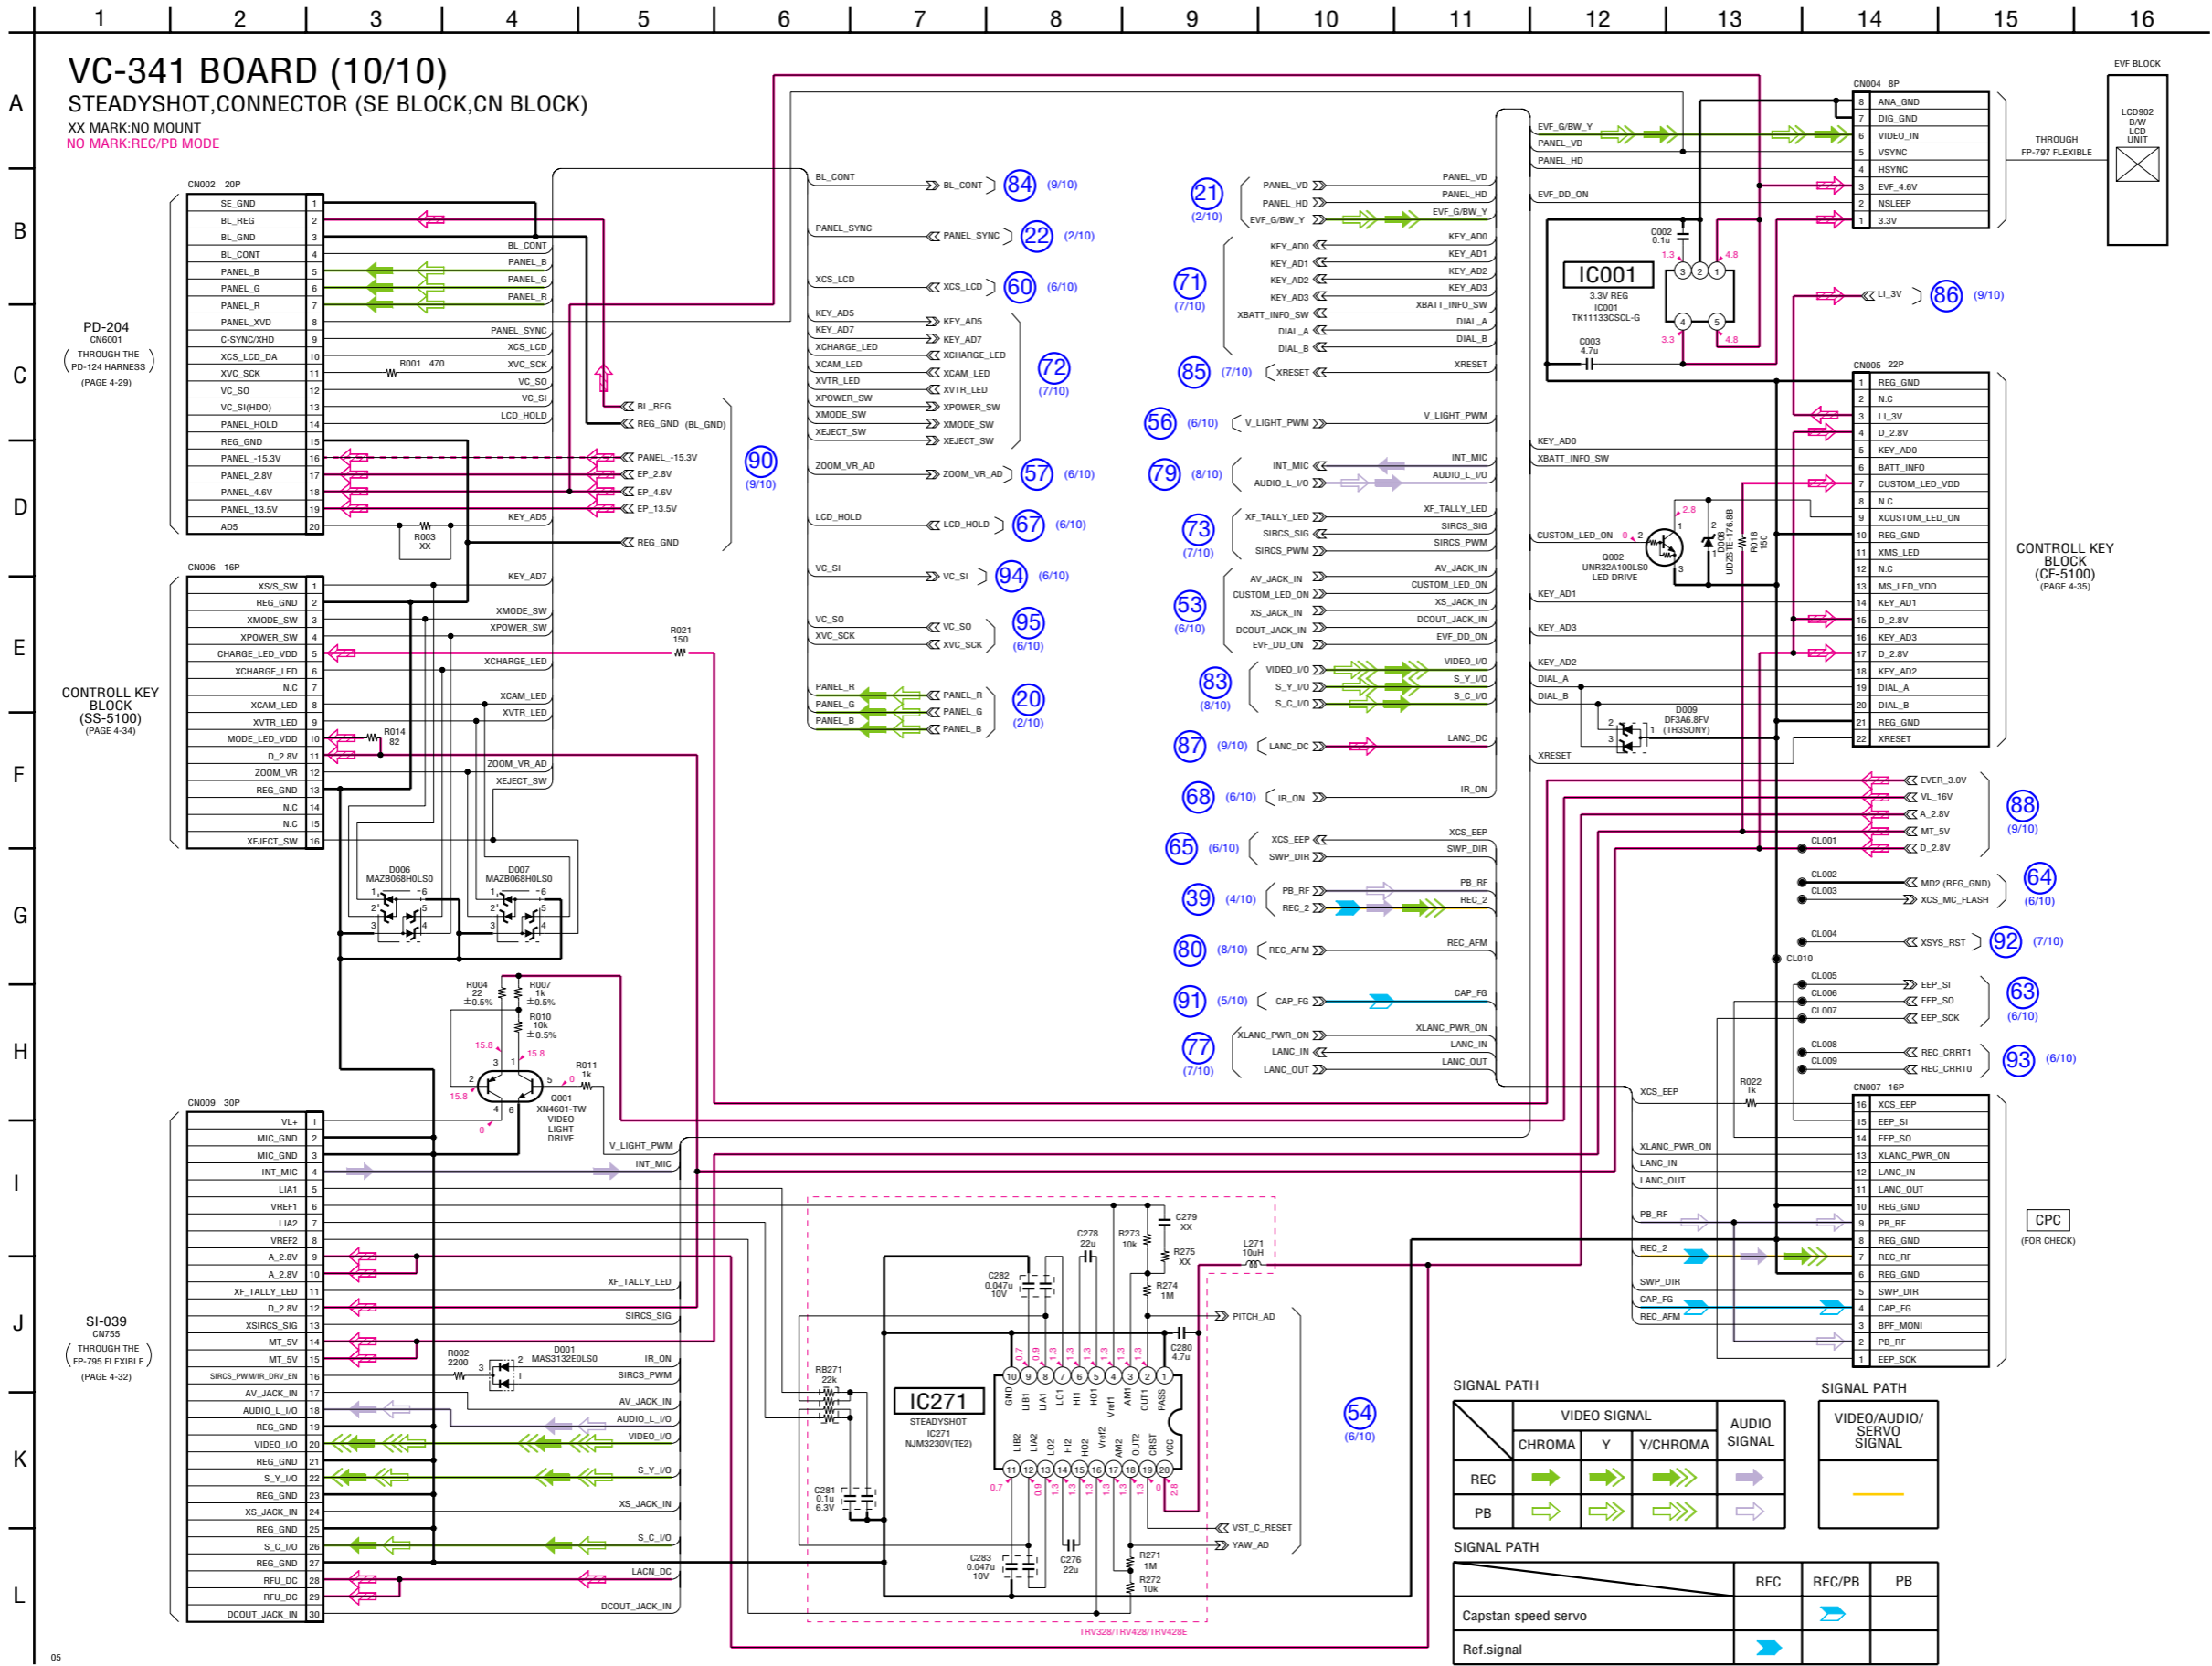

4-2. SCHEMATIC DIAGRAMS PD-204 BOARD

For Schematic Diagram
 • Refer to page 4-47 for printed wiring board.

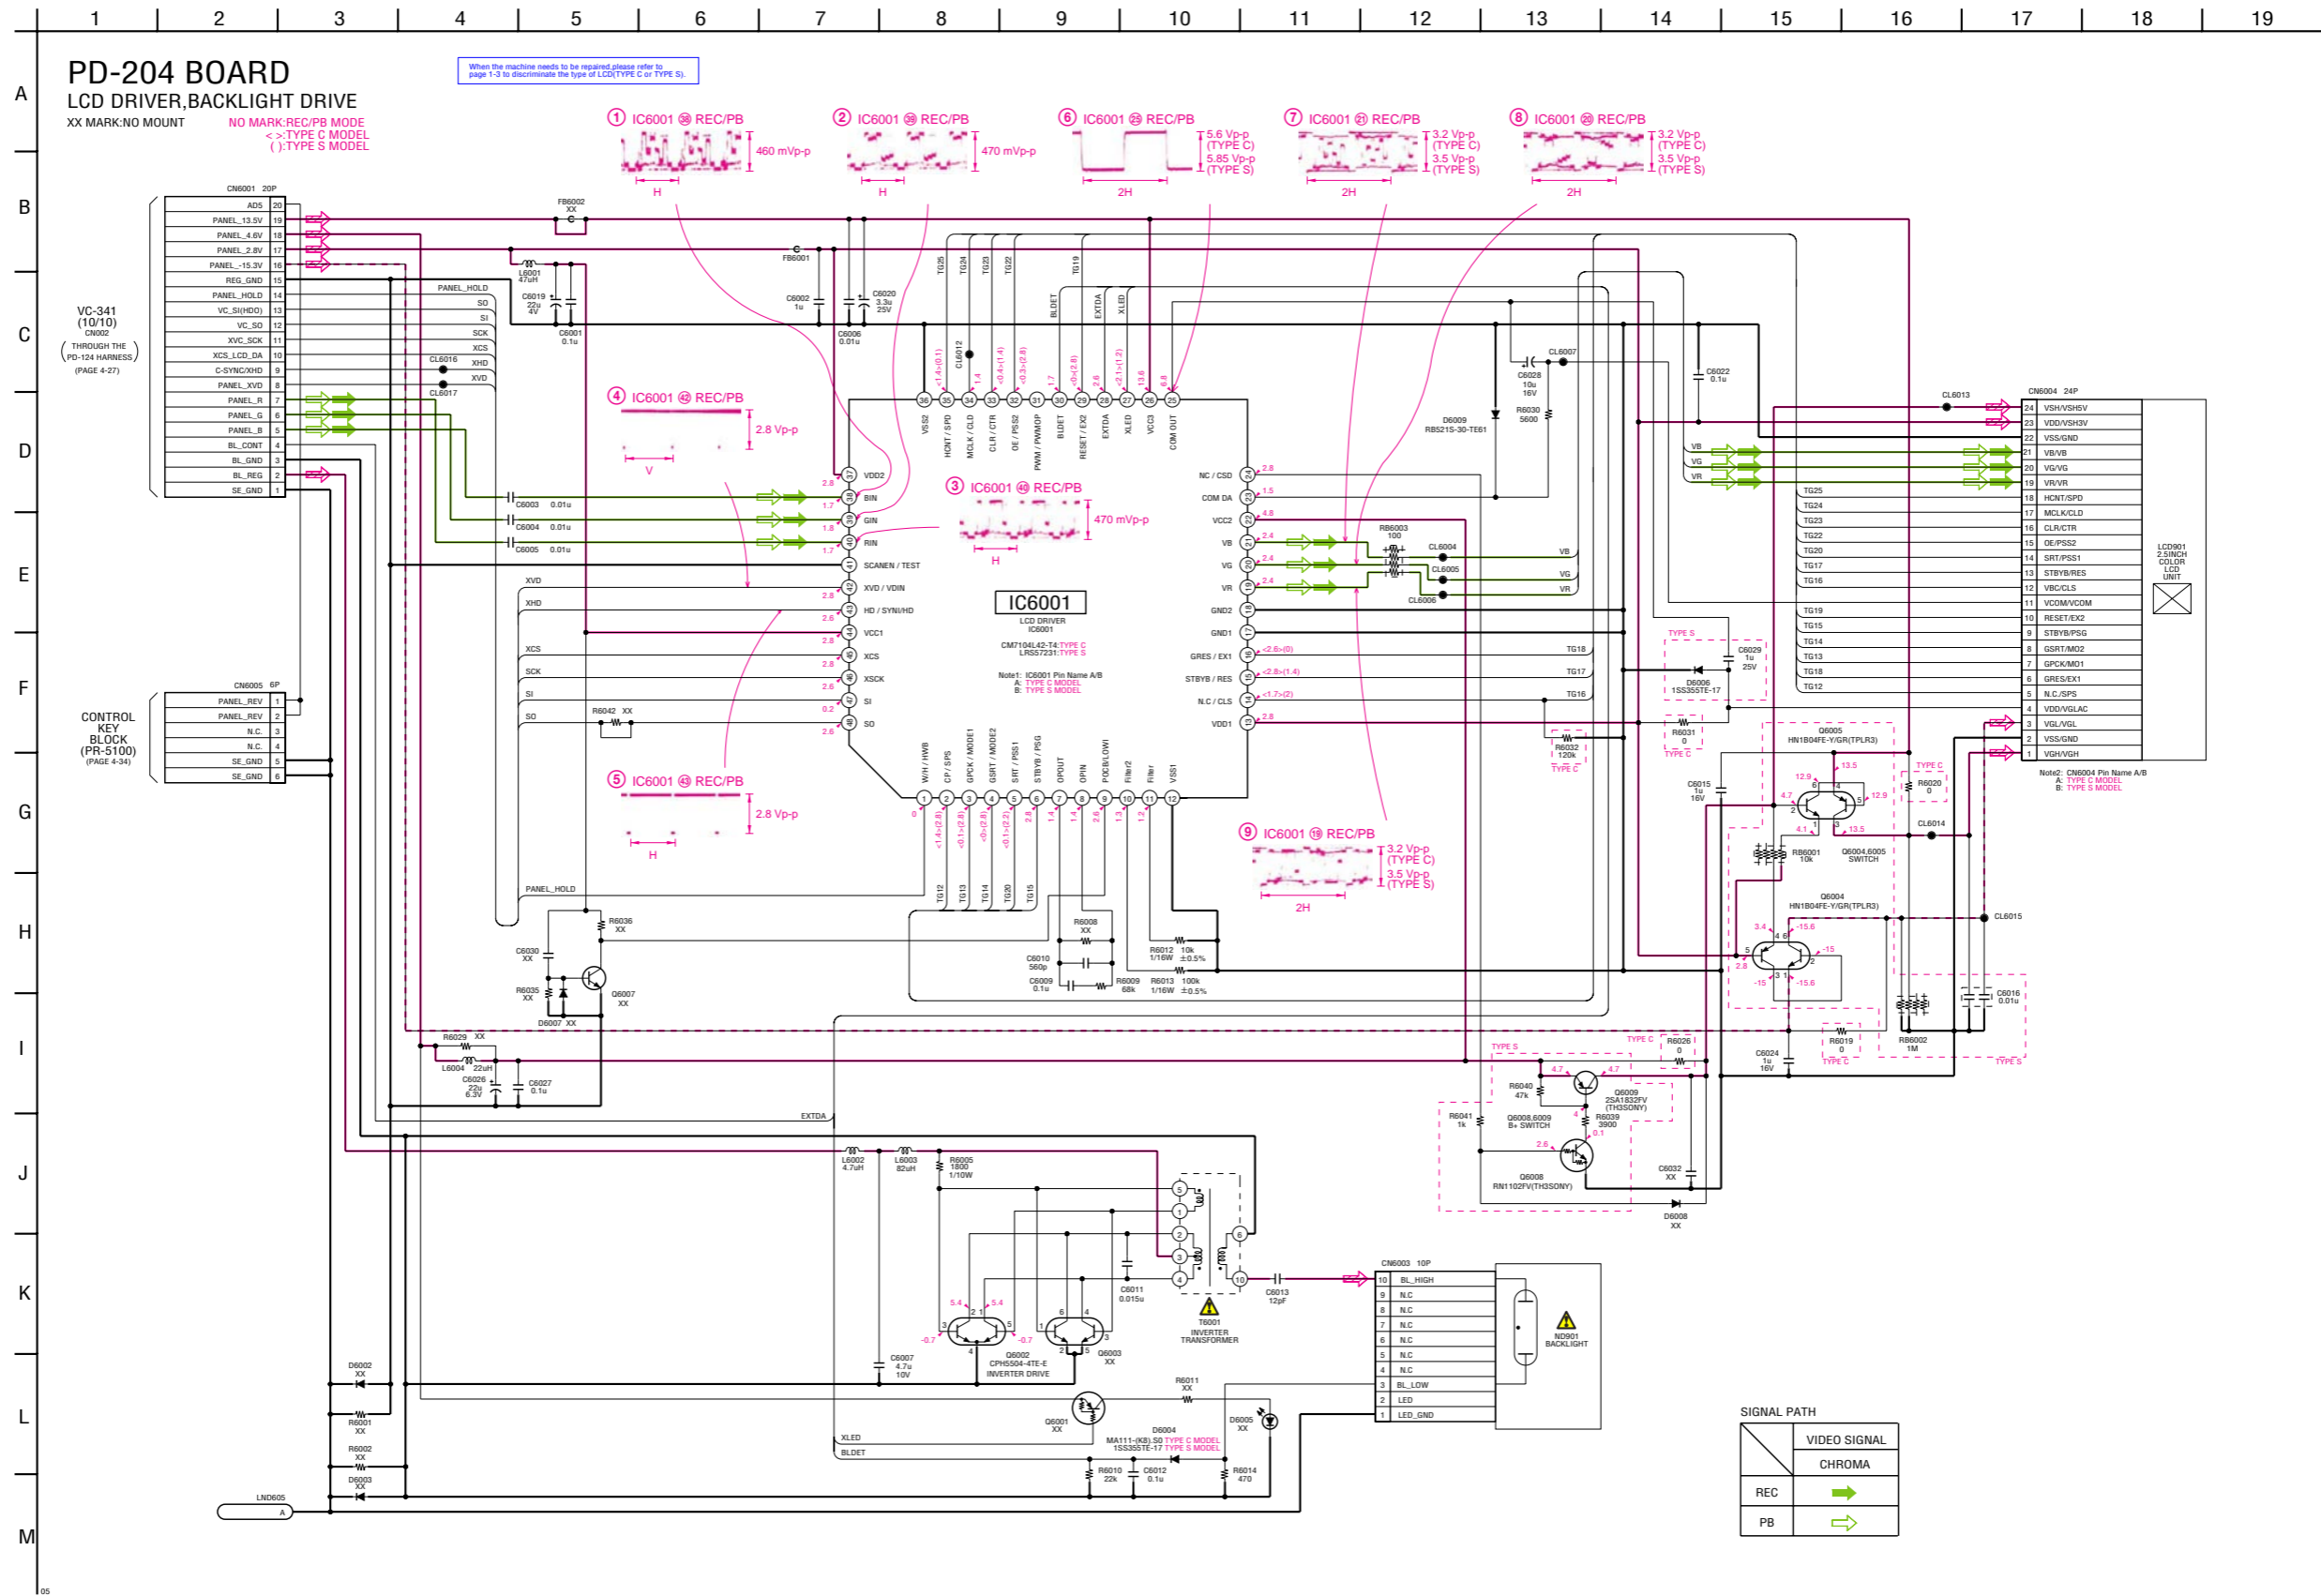


The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


4-2. SCHEMATIC DIAGRAMS SI-039 BOARD, FP-792 FLEXIBLE BOARD

For Schematic Diagram
 • Refer to page 4-49 for printed wiring board.

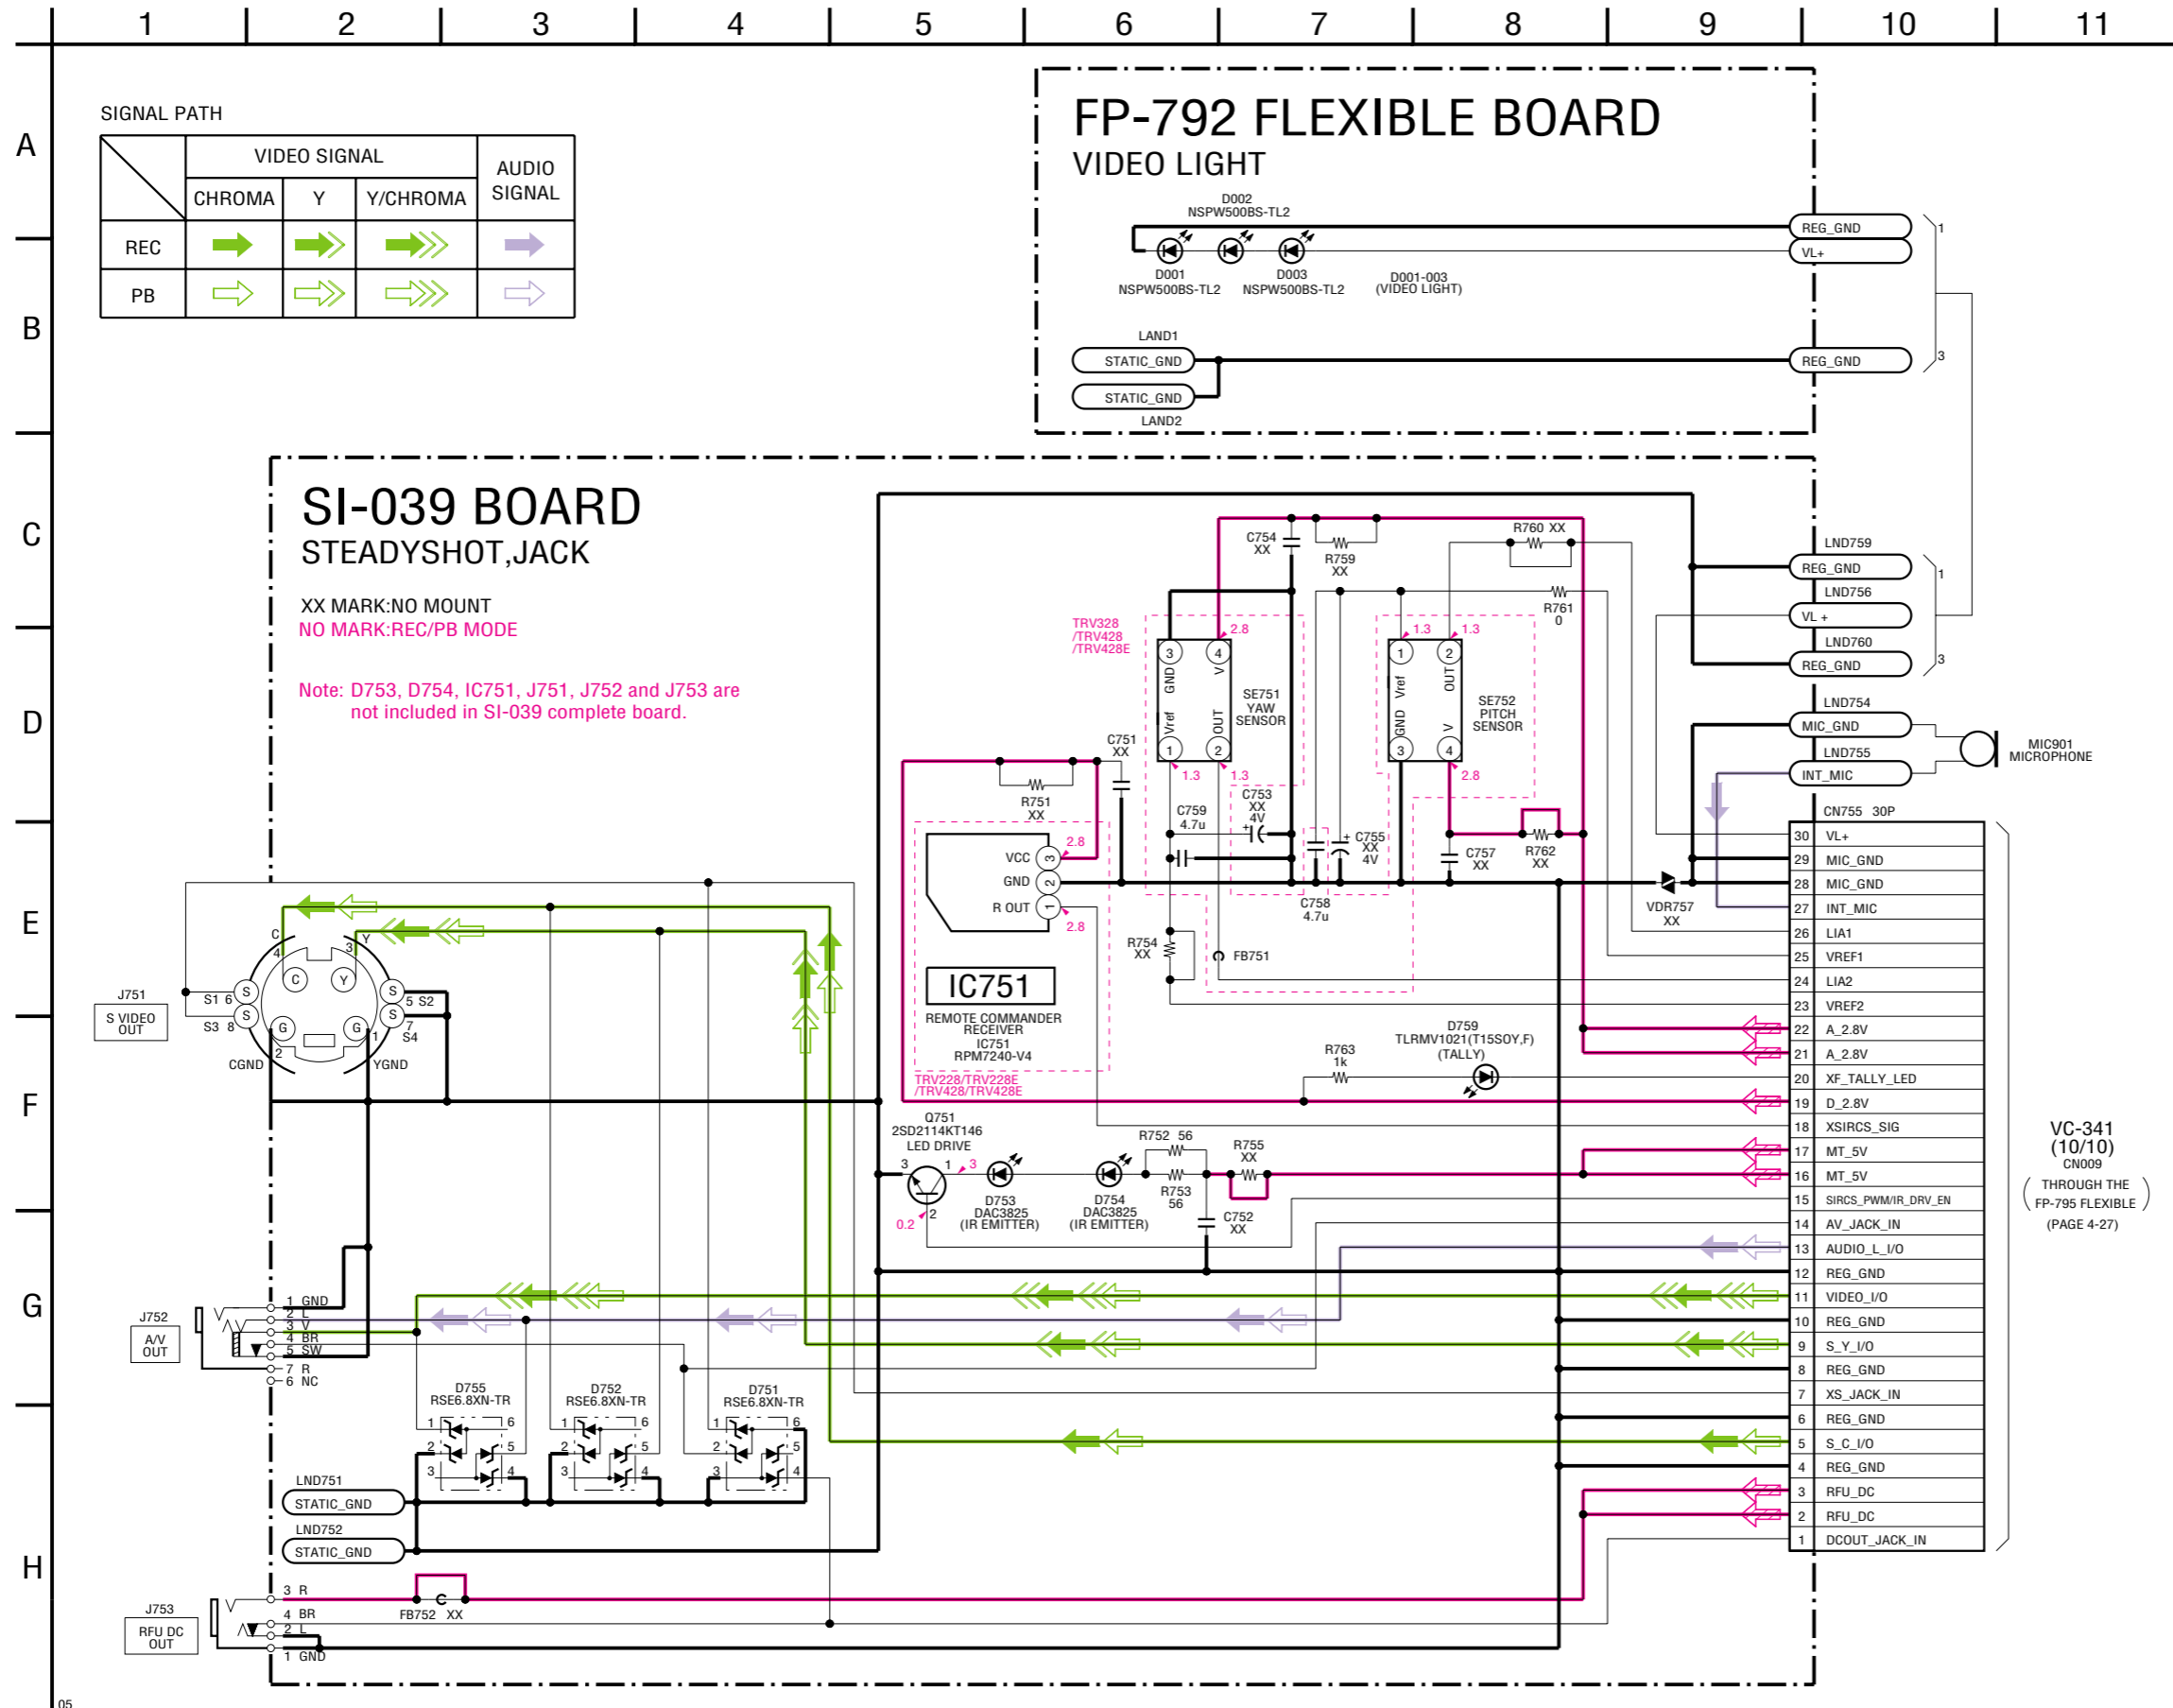



4-2. SCHEMATIC DIAGRAMS FP-228, 299, 300, 301, 302, 802 FLEXIBLE BOARD

For Schematic Diagram
 • Refer to page 4-51 for printed wiring board.

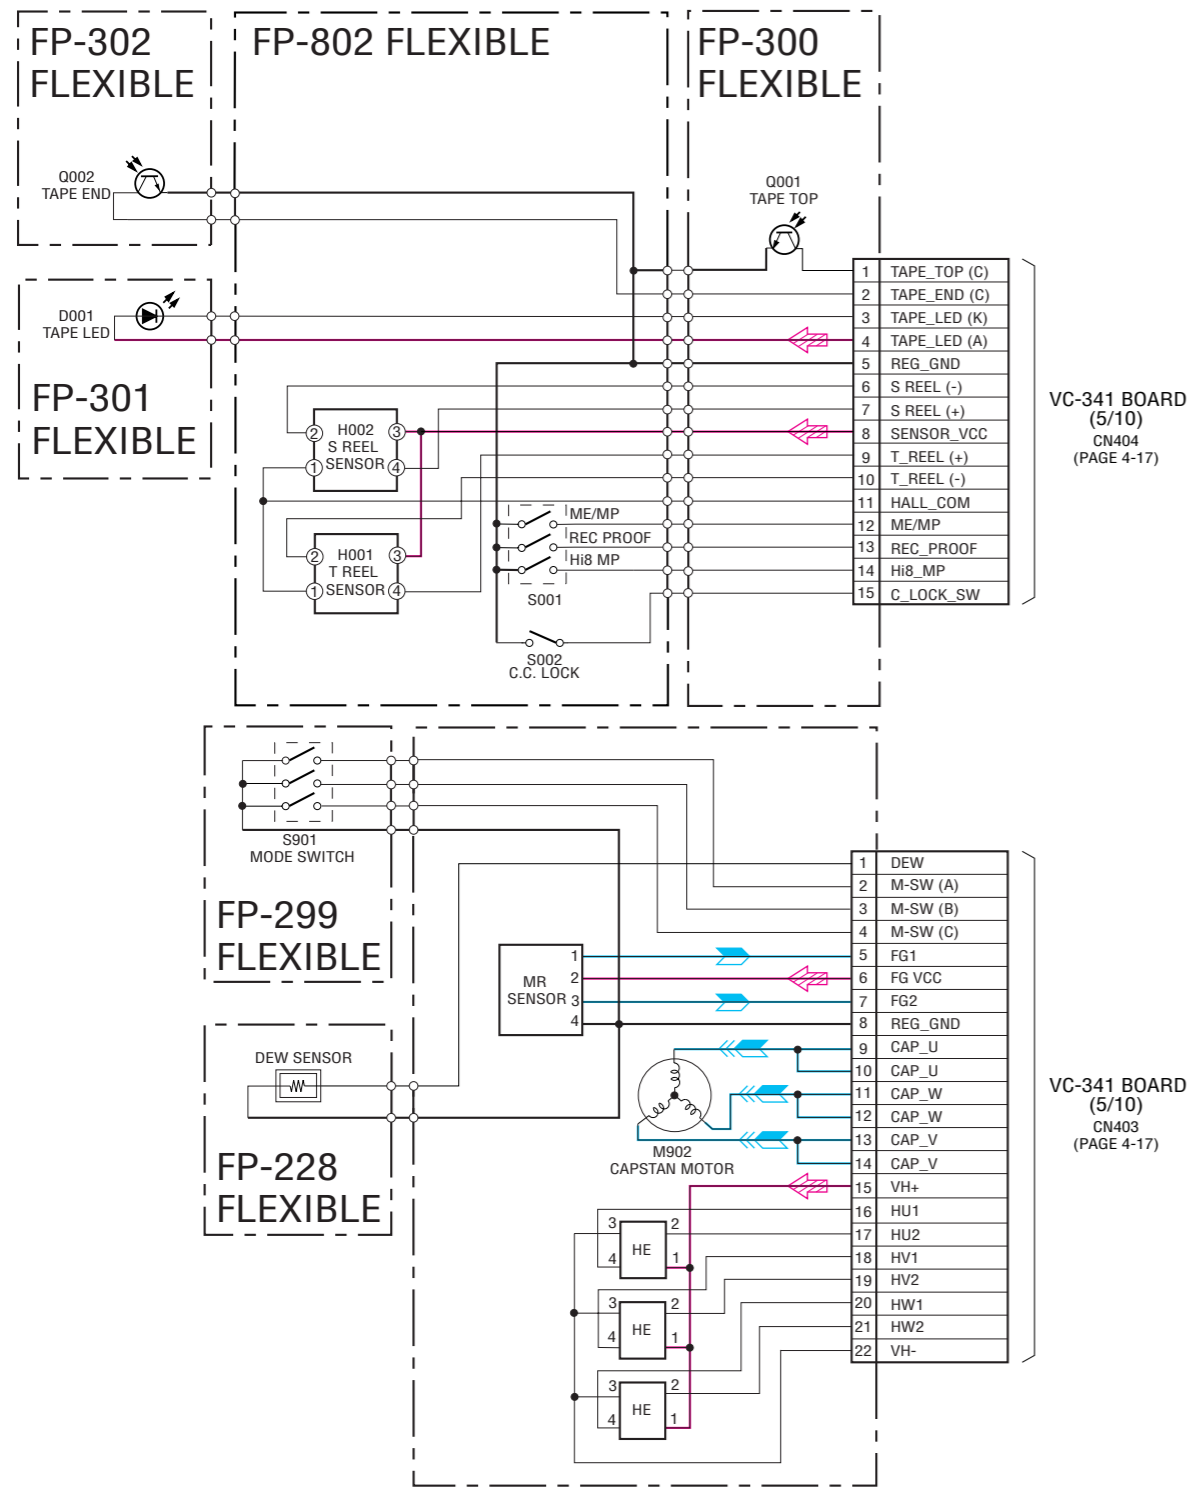

SIGNAL PATH

	REC	REC/PB	PB
Capstan speed servo		➔	
Capstan servo(speed and phase)		➔➔	

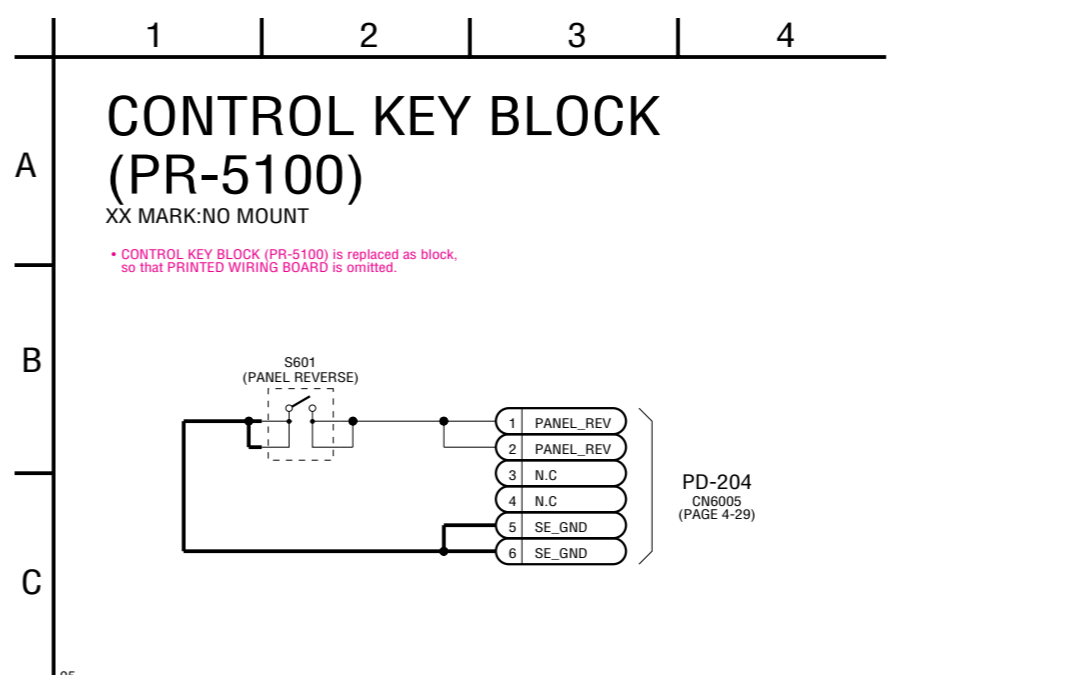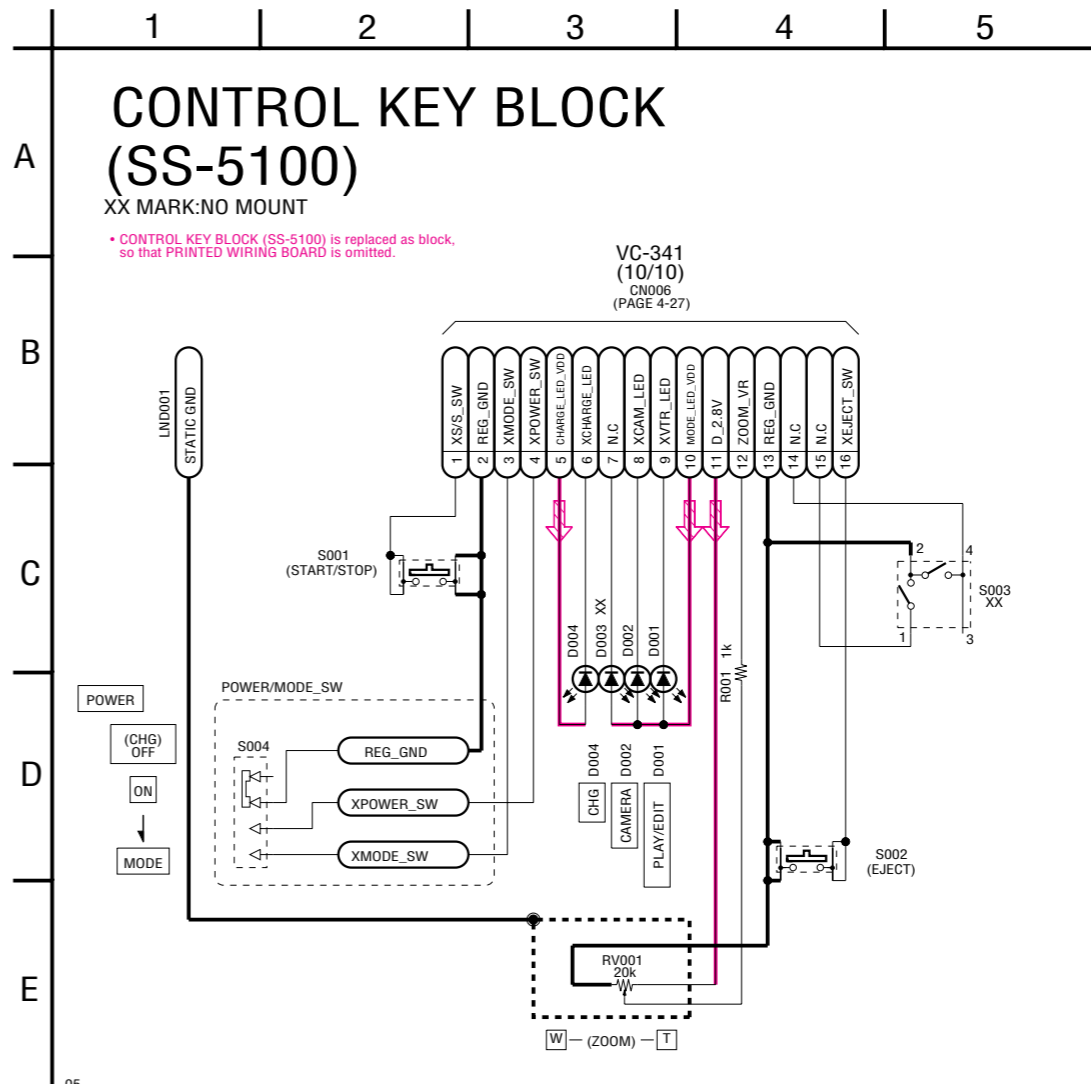


4-2. SCHEMATIC DIAGRAMS

CONTROL KEY BLOCK (CF-5100)

XX MARK:NO MOUNT

• CONTROL KEY BLOCK (CF-5100) is replaced as block, so that PRINTED WIRING BOARD is omitted.

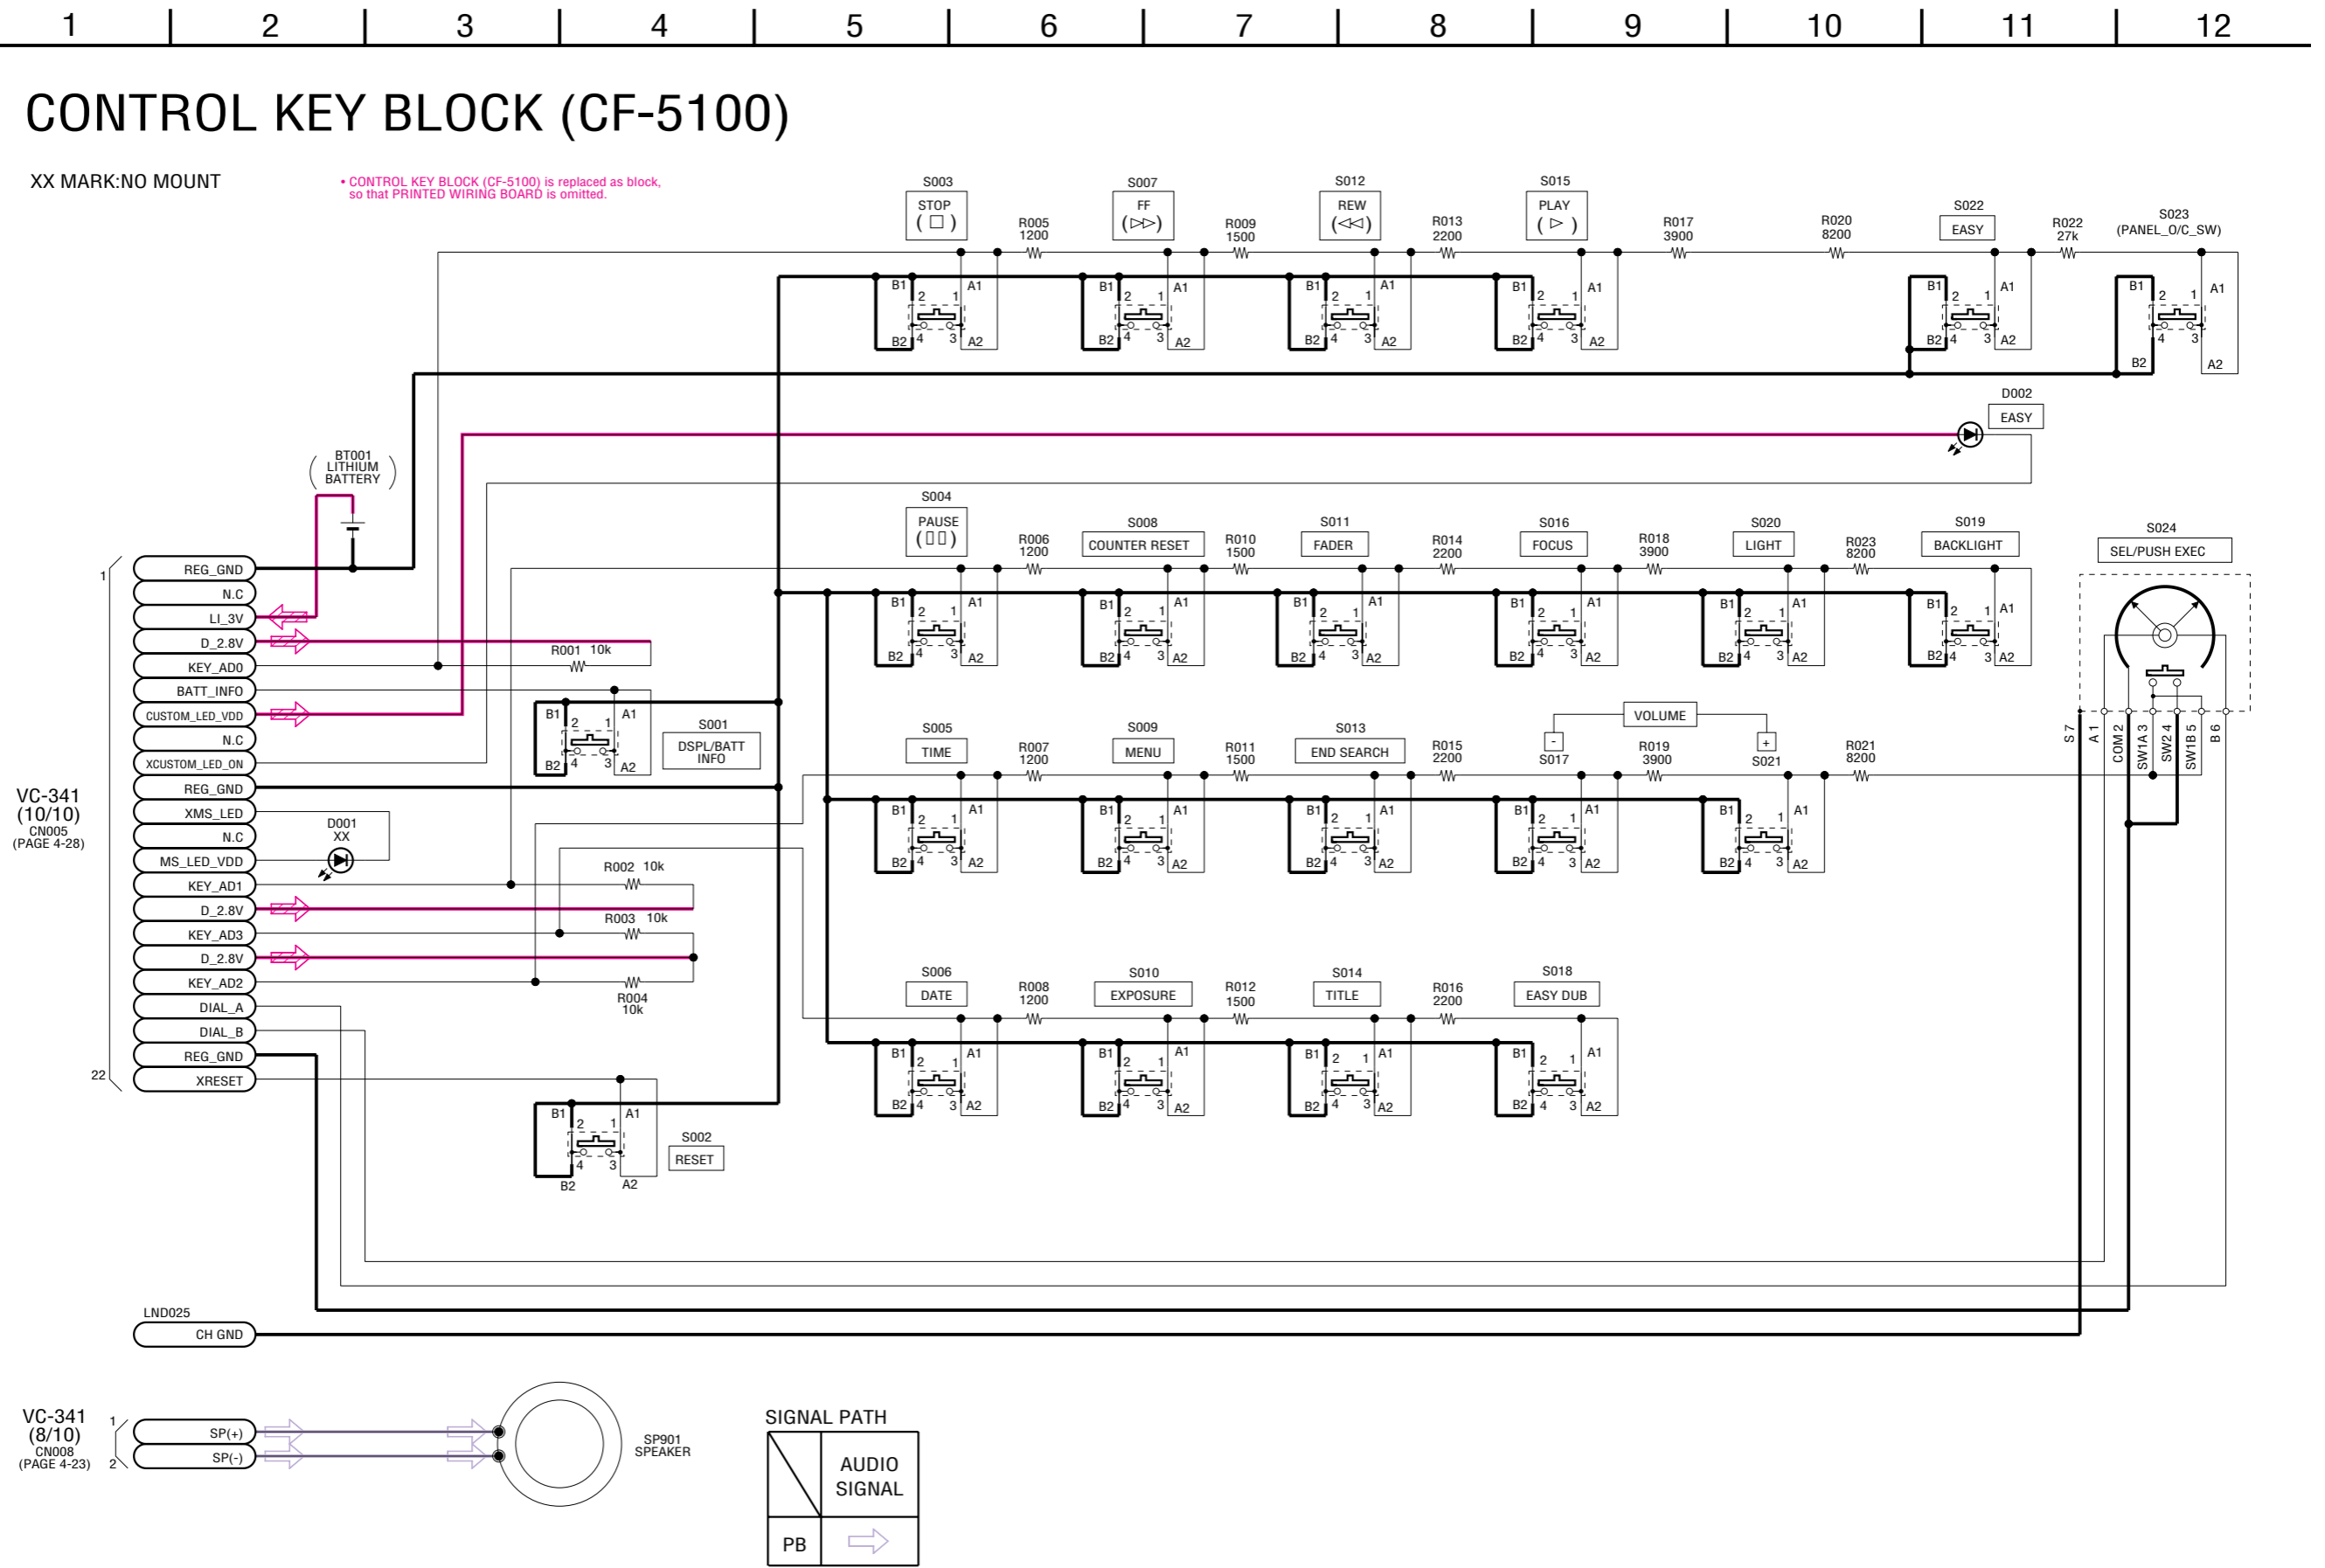

4-3. PRINTED WIRING BOARDS

Link

• CD-465 BOARD	• SI-039 BOARD
• VC-341 BOARD (SIDE A)	• FP-792 FLEXIBLE BOARD
• VC-341 BOARD (SIDE B)	• FP-228, FP-299, FP-300, FP-301, FP-302, FP-802 FLEXIBLE BOARD
• PD-204 BOARD	







• COMMON NOTE FOR PRINTED WIRING BOARDS		
• MOUNTED PARTS LOCATION	• CIRCUIT BOARDS LOCATION	• FLEXIBLE BOARDS LOCATION

Board Name	Function
CD-465	CCD IMAGER
VC-341	A/D CONVERTER, TIMING GENERATOR, CAMERA/VTR PROCESS, LENS CONTROL, LENS DRIVE, REC/PB AMP, SERVO, CAMERA/MECHA CONTROL, HI CONTROL, AUDIO, VIDEO, DC CONTROL, STEADYSHOT, CONNECTOR
PD-204	LCD DRIVE, BACKLIGHT DRIVE
SI-039	STEADYSHOT, JACK


4-3. PRINTED WIRING BOARDS

4-3. PRINTED WIRING BOARDS


THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS

-  : Uses unleaded solder.
-  : Circuit board
-  : Flexible board
-  : Pattern from the side which enables seeing.
-  : pattern of the rear side
(The other layers' patterns are not indicated)
- Through hole is omitted.
- Circled numbers refer to waveforms.
- There are a few cases that the part printed on diagram isn't mounted in this model.
-  : panel designation

- Chip parts.
Transistor

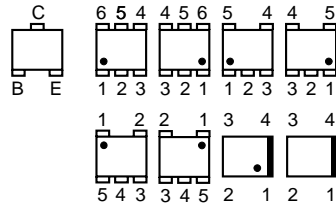

- Diode

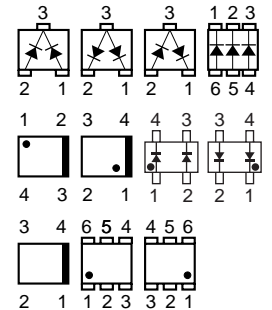


Board Name	Parts Location	Pattern	
		Total Number of Layers	Layers Not Indicated
CD-465	-	4 layers	2 to 3 layers
VC-341	4-53	4 layers	2 to 3 layers
PD-204	4-54	2 layers	-
SI-039	4-54	2 layers	-
FP-792 Flexible	-	1 layer	-
FP-228 Flexible	-	1 layer	-
FP-299 Flexible	-	1 layer	-
FP-300 Flexible	-	1 layer	-
FP-301 Flexible	-	1 layer	-
FP-302 Flexible	-	1 layer	-
FP-802 Flexible	-	1 layer	-

CD-465

Note for Printed Wiring Board (See page 4-39).

 : Uses unleaded solder.

CD-465 BOARD

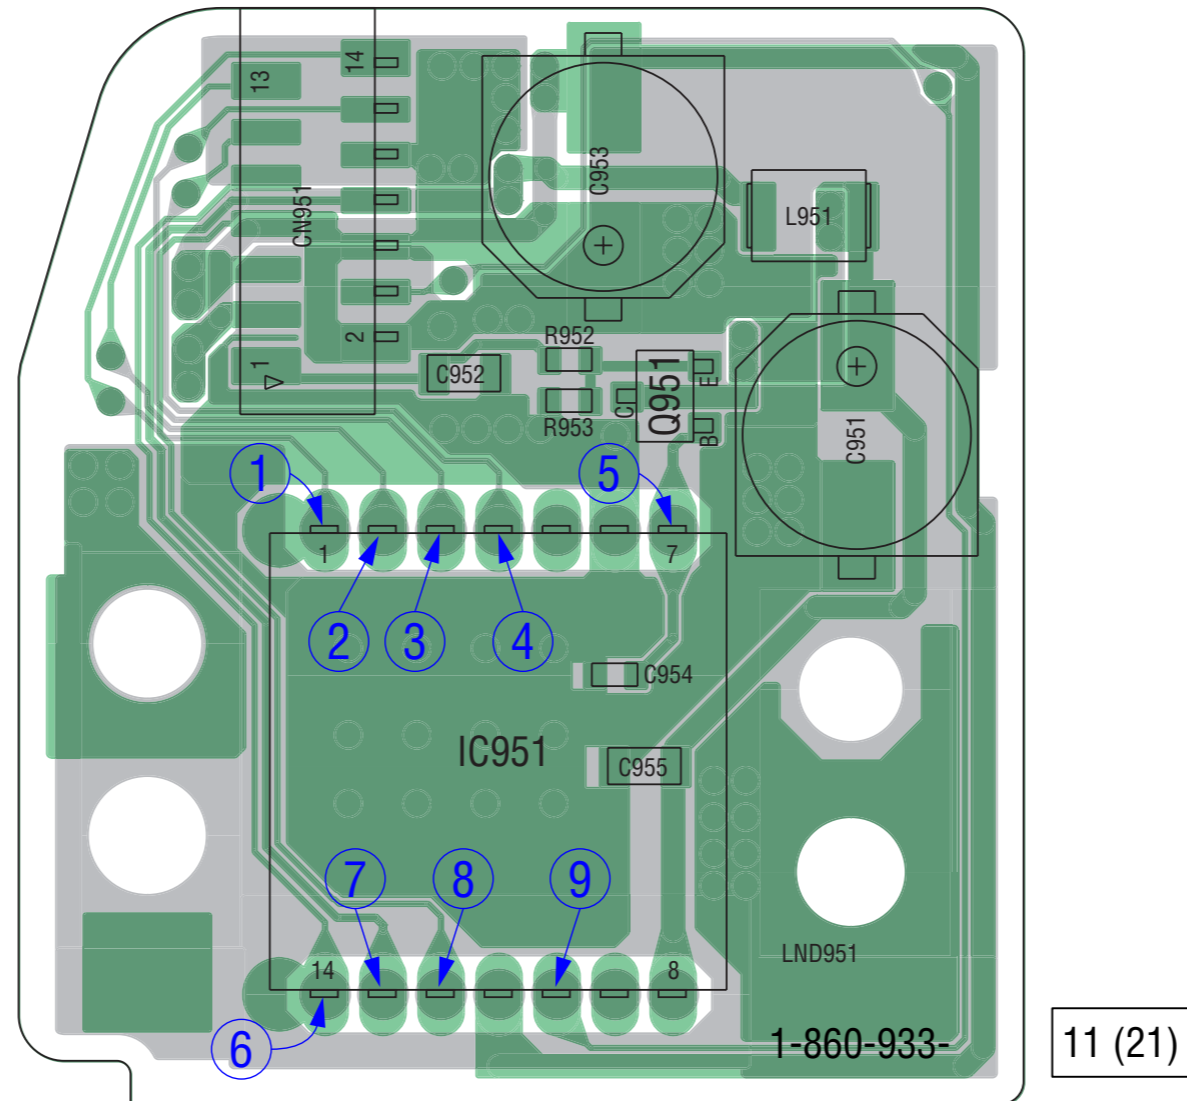

05

4-2. SCHEMATIC DIAGRAMS


4-3. PRINTED WIRING BOARDS

MOUNTED PARTS LOCATION

Note for Printed Wiring Board (See page 4-39).

 : Uses unleaded solder.

VC-341 BOARD (SIDE B)

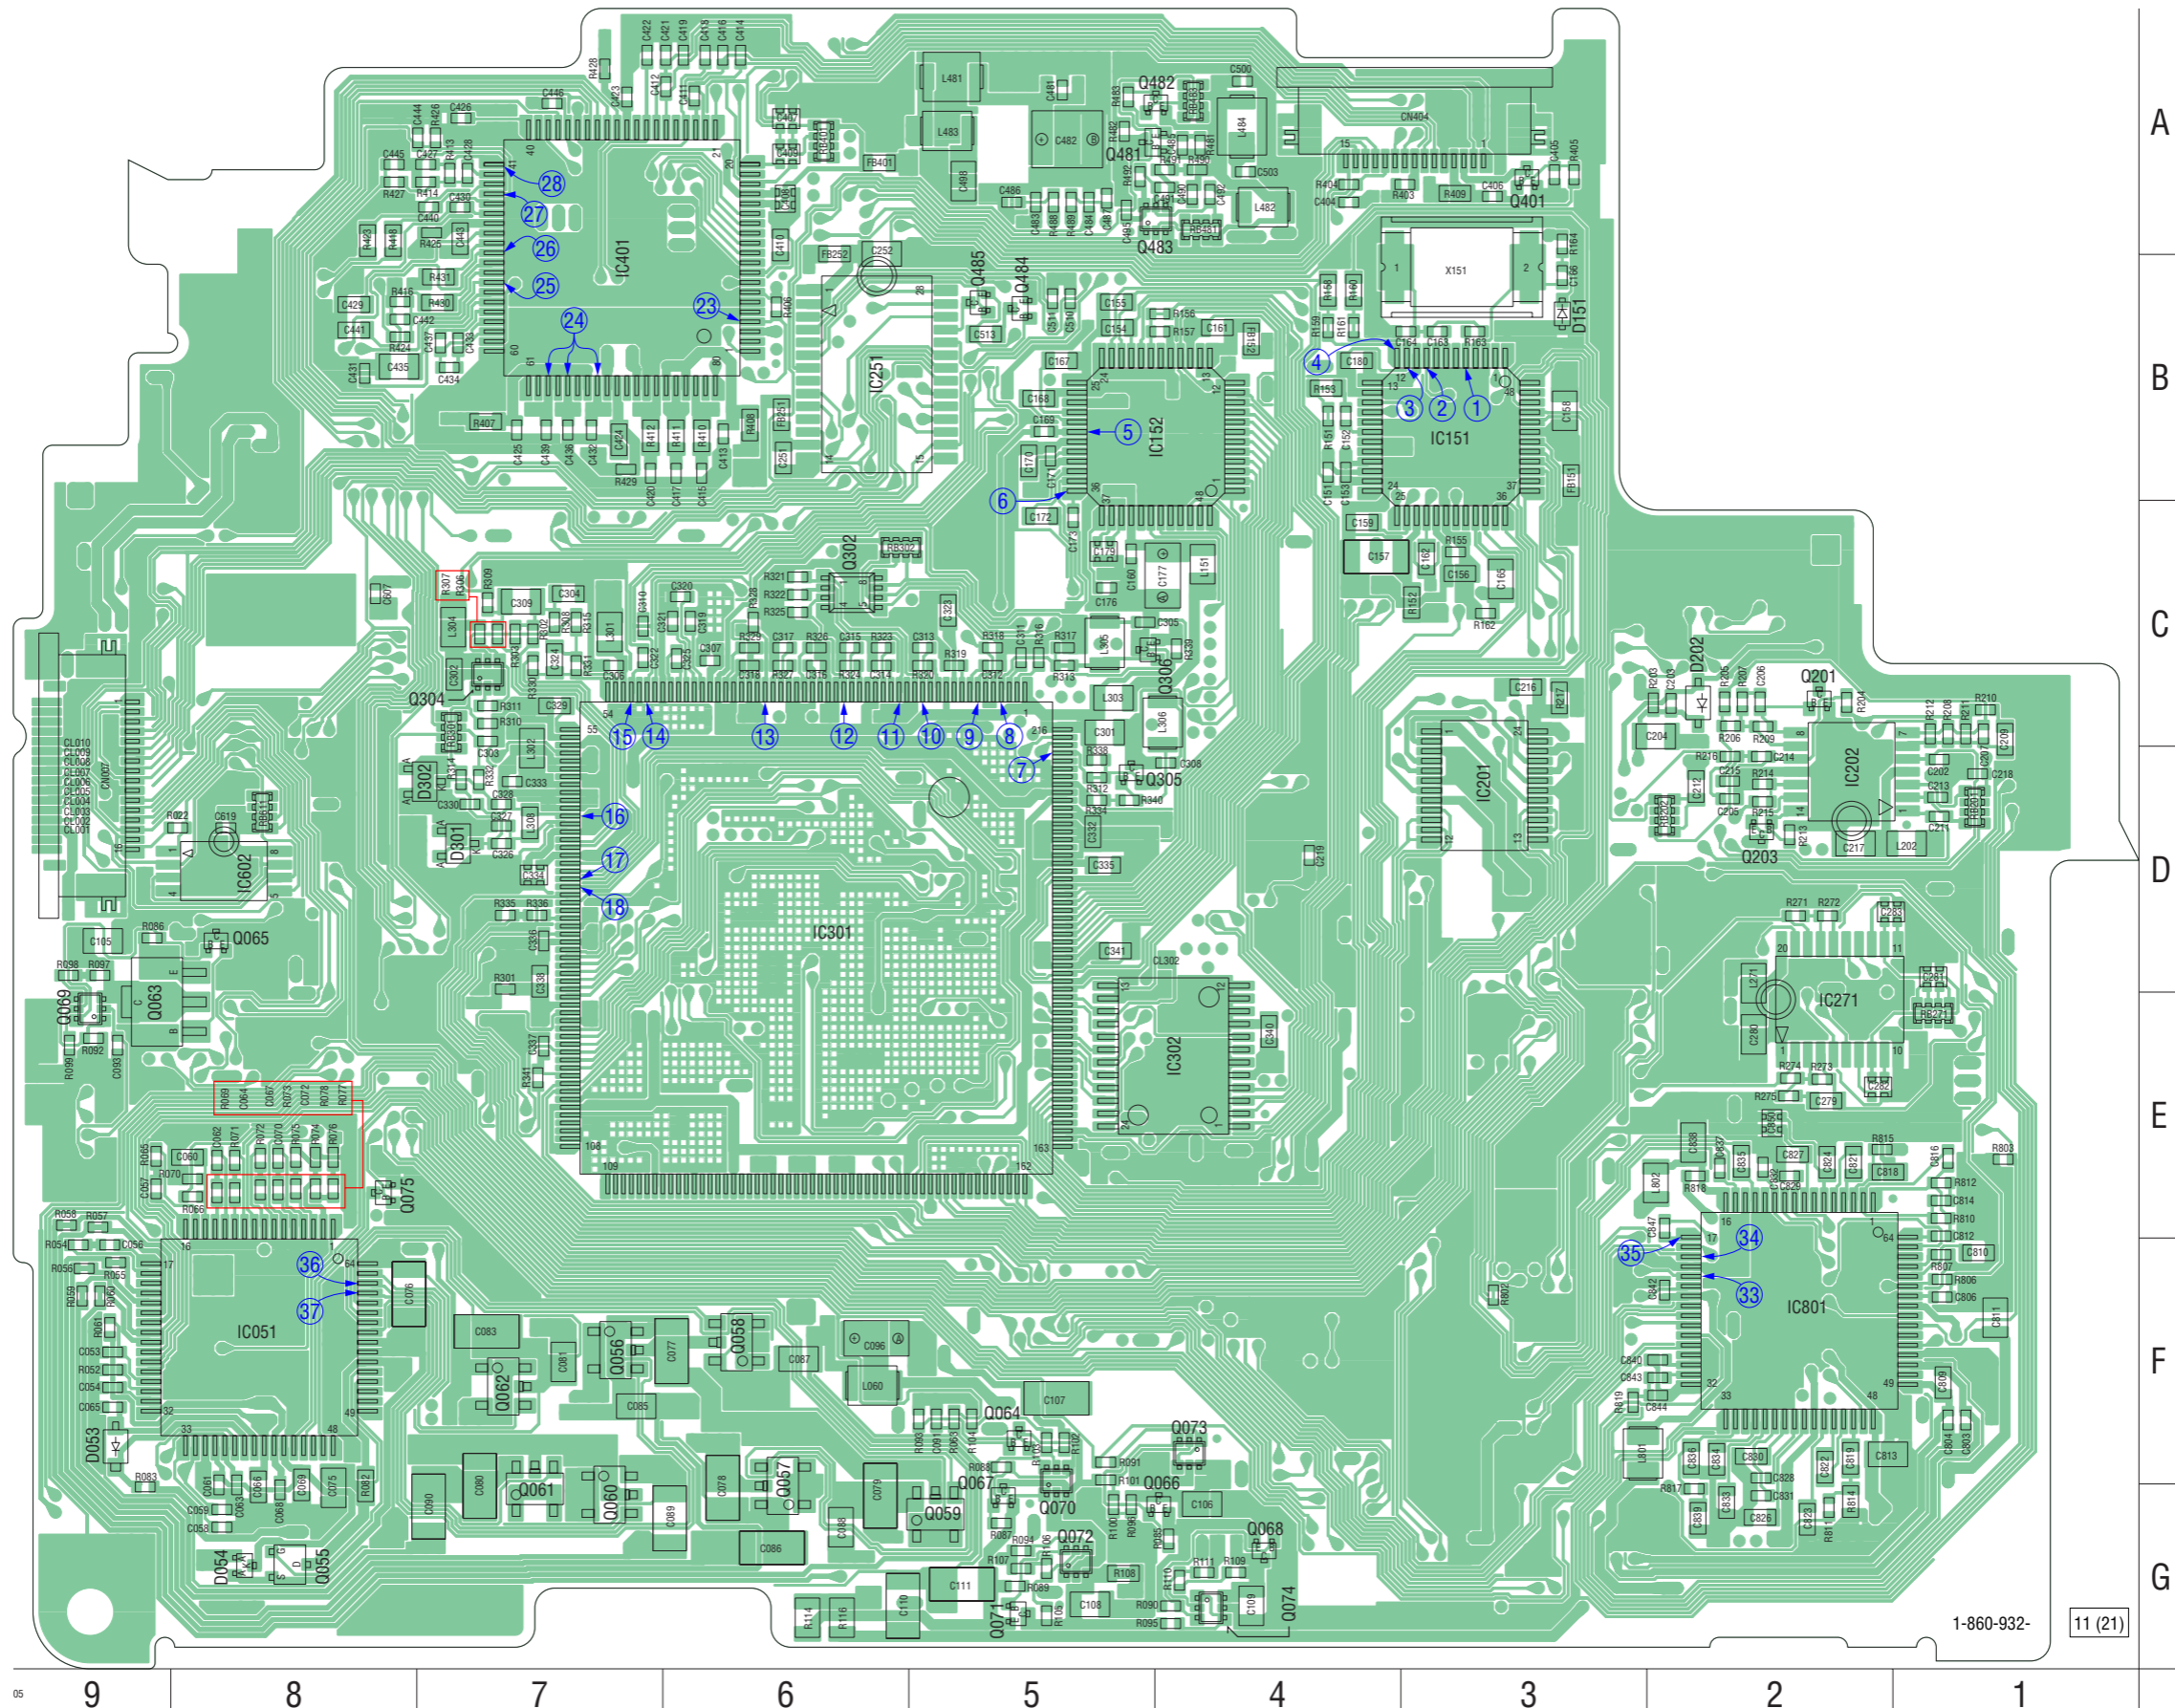


PD-204

Note for Printed Wiring Board (See page 4-39).

 : Uses unleaded solder.

PD-204 BOARD

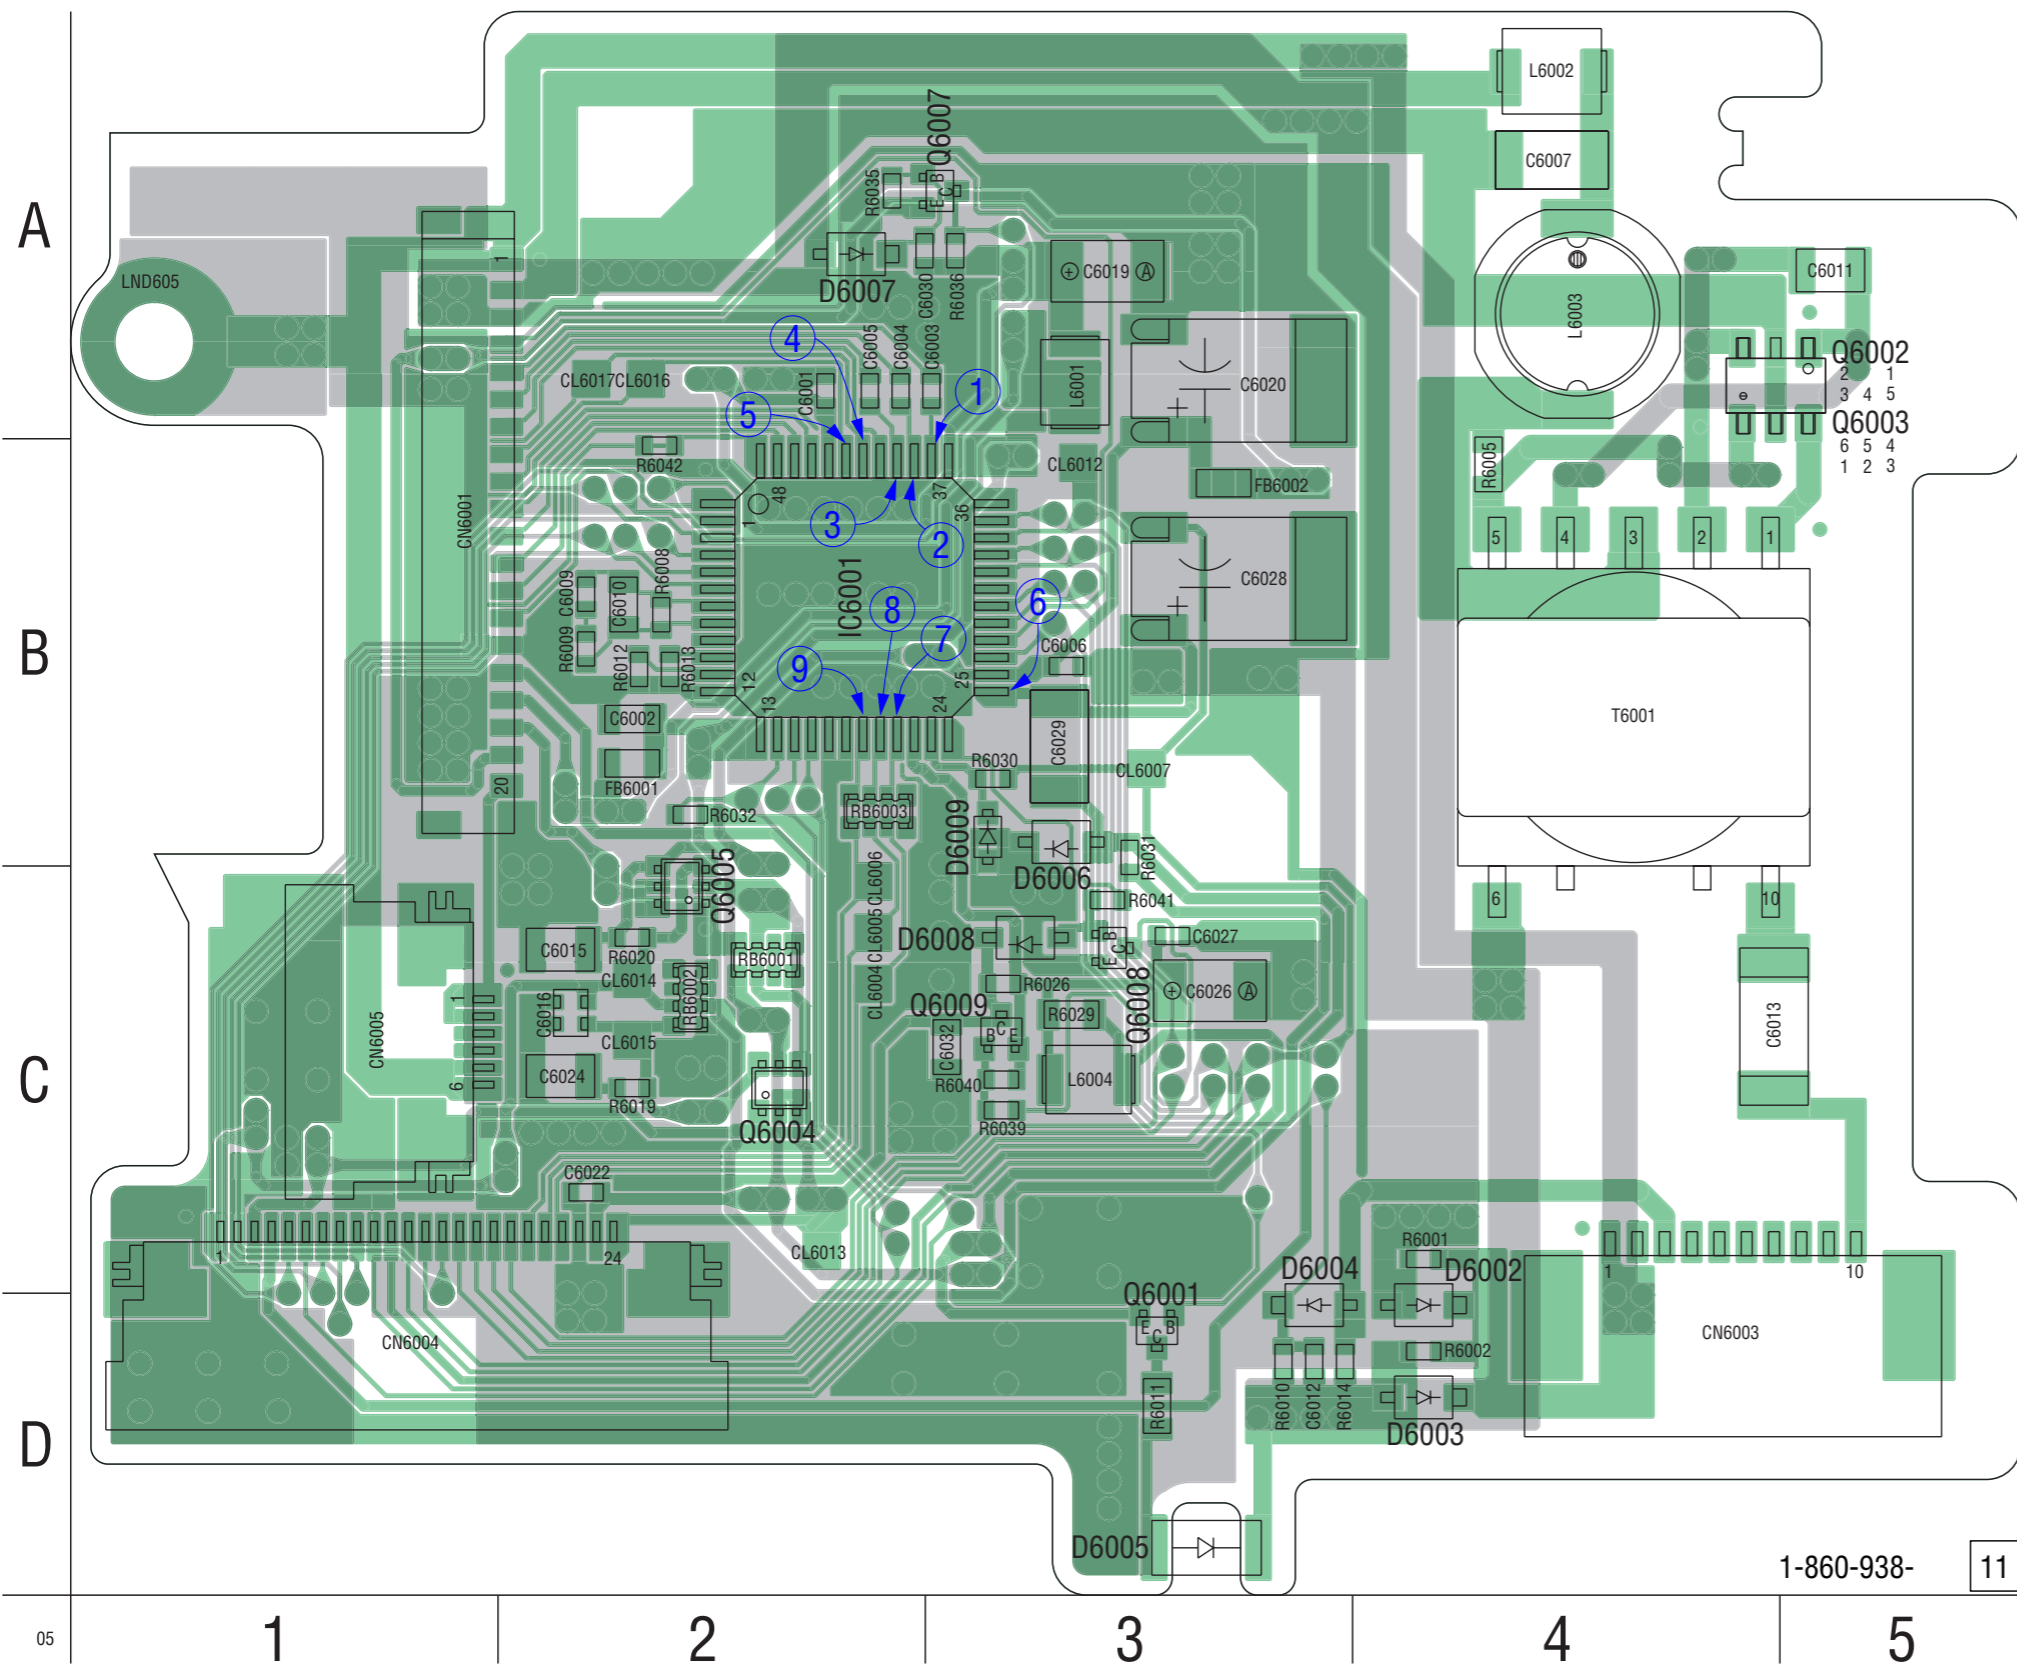

Note: Q6002 and Q6003 have the same mount location. When replacing Q6002 or Q6003, please refer to schematic diagram and electrical parts list.

1-860-938- 11

4-2. SCHEMATIC DIAGRAMS



4-3. PRINTED WIRING BOARDS

MOUNTED PARTS LOCATION

SI-039, FP-792 FLEXIBLE

Note for Printed Wiring Board (See page 4-39).

 : Uses unleaded solder.

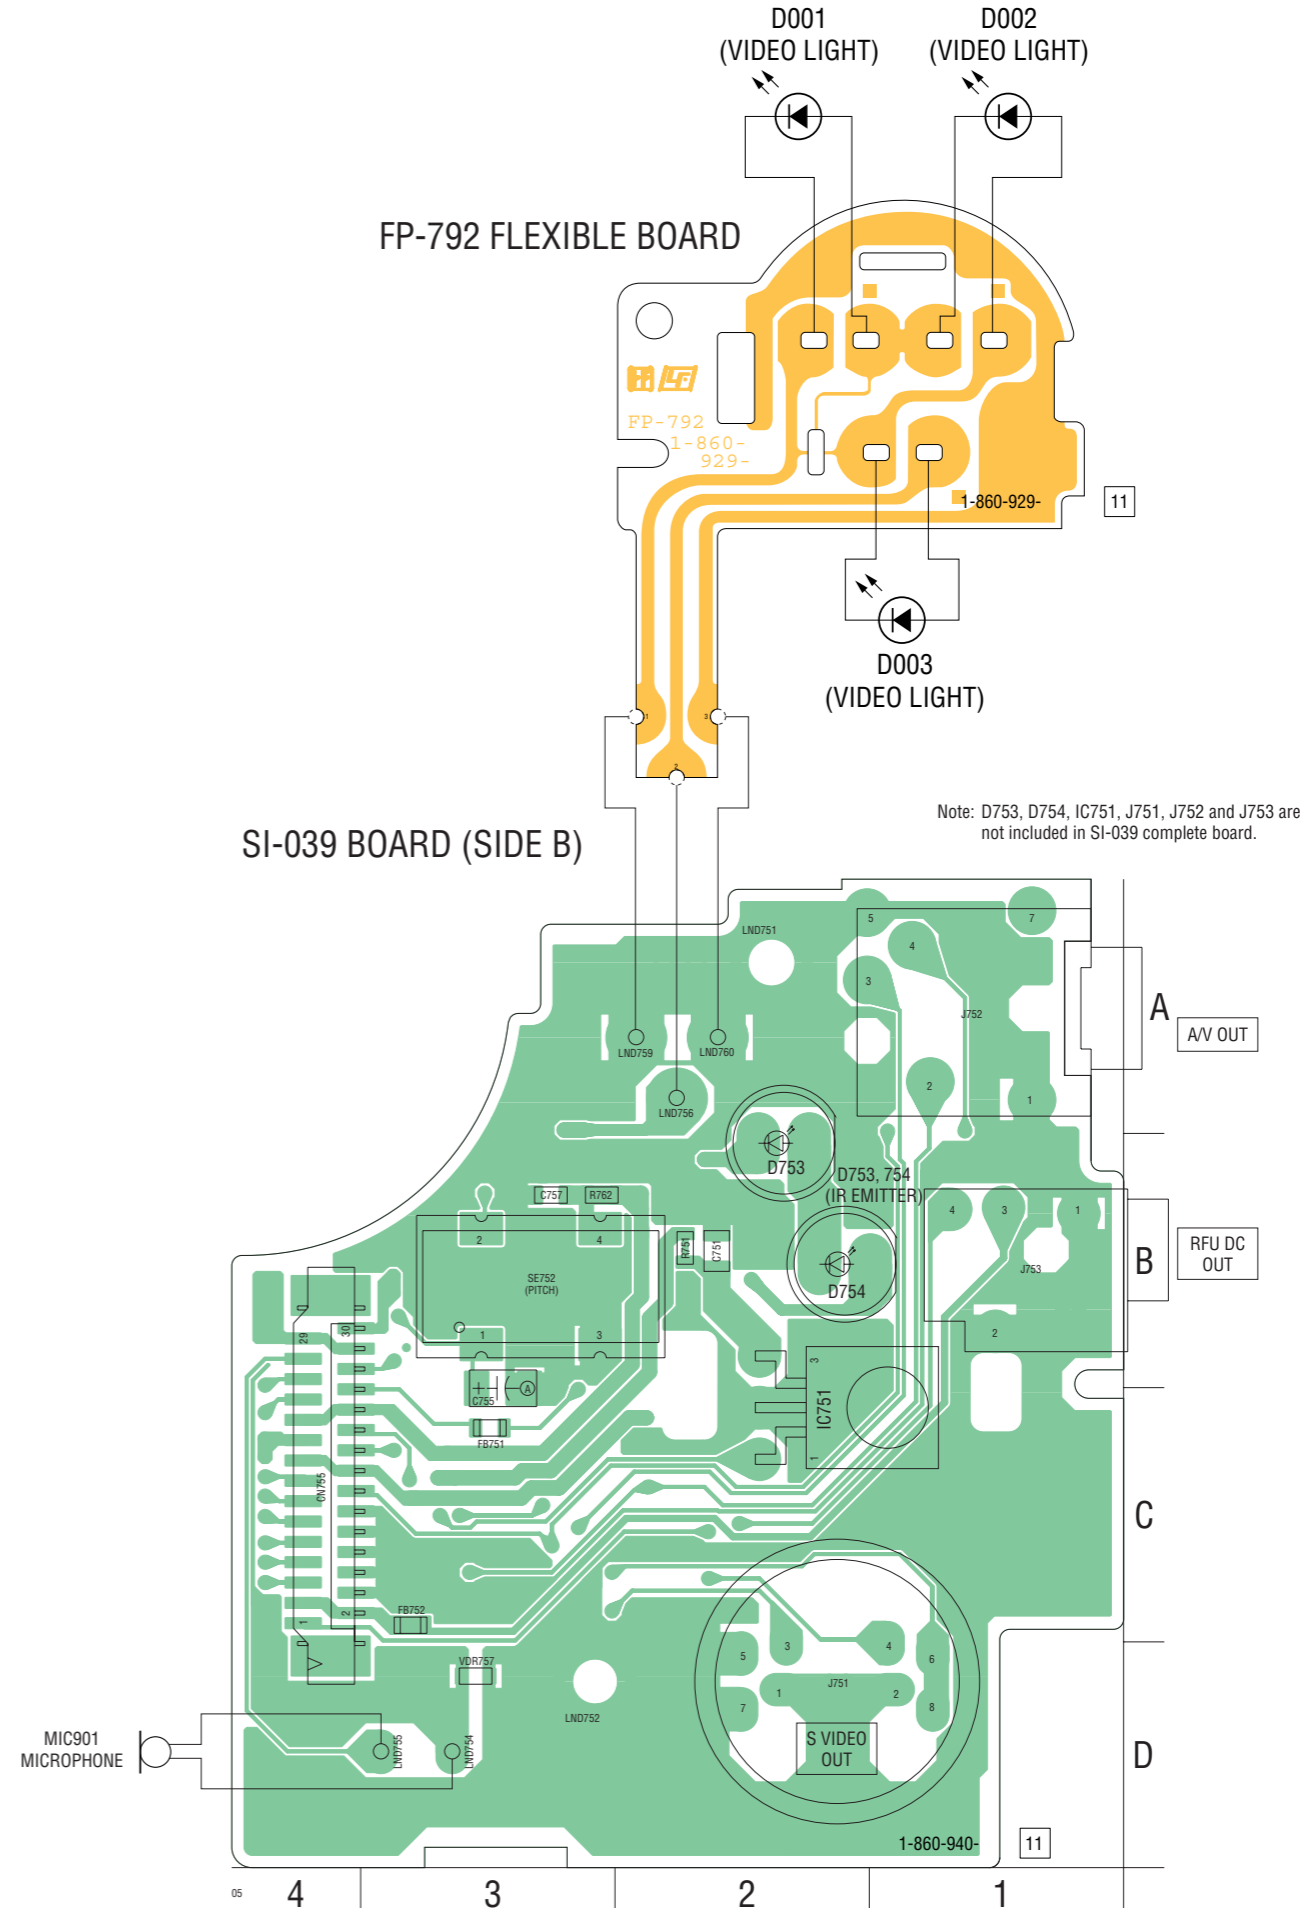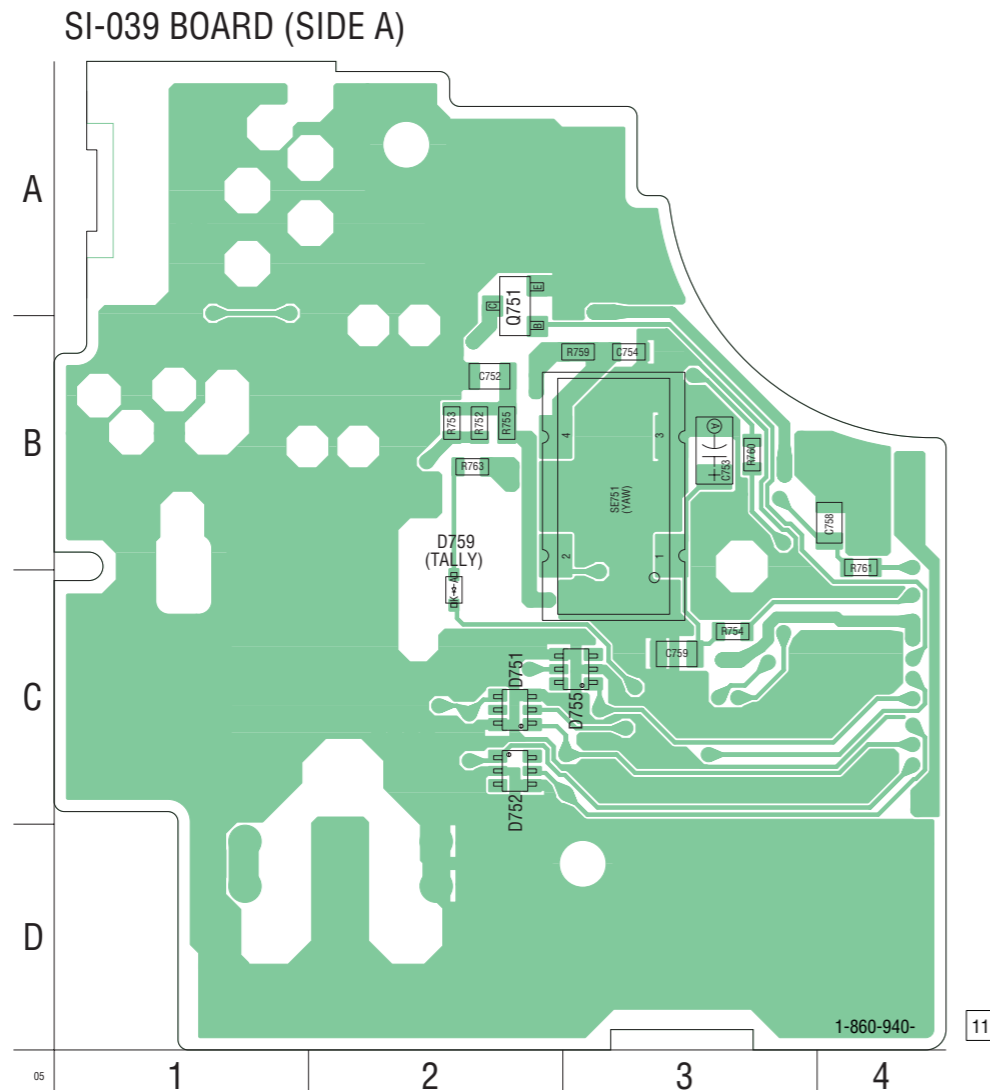



4-2. SCHEMATIC DIAGRAMS

4-3. PRINTED WIRING BOARDS

FP-228, FP-299, FP-300, FP-301, FP-302, FP-802 FLEXIBLE

Note for Printed Wiring Board (See page 4-39).

 : Uses unleaded solder.

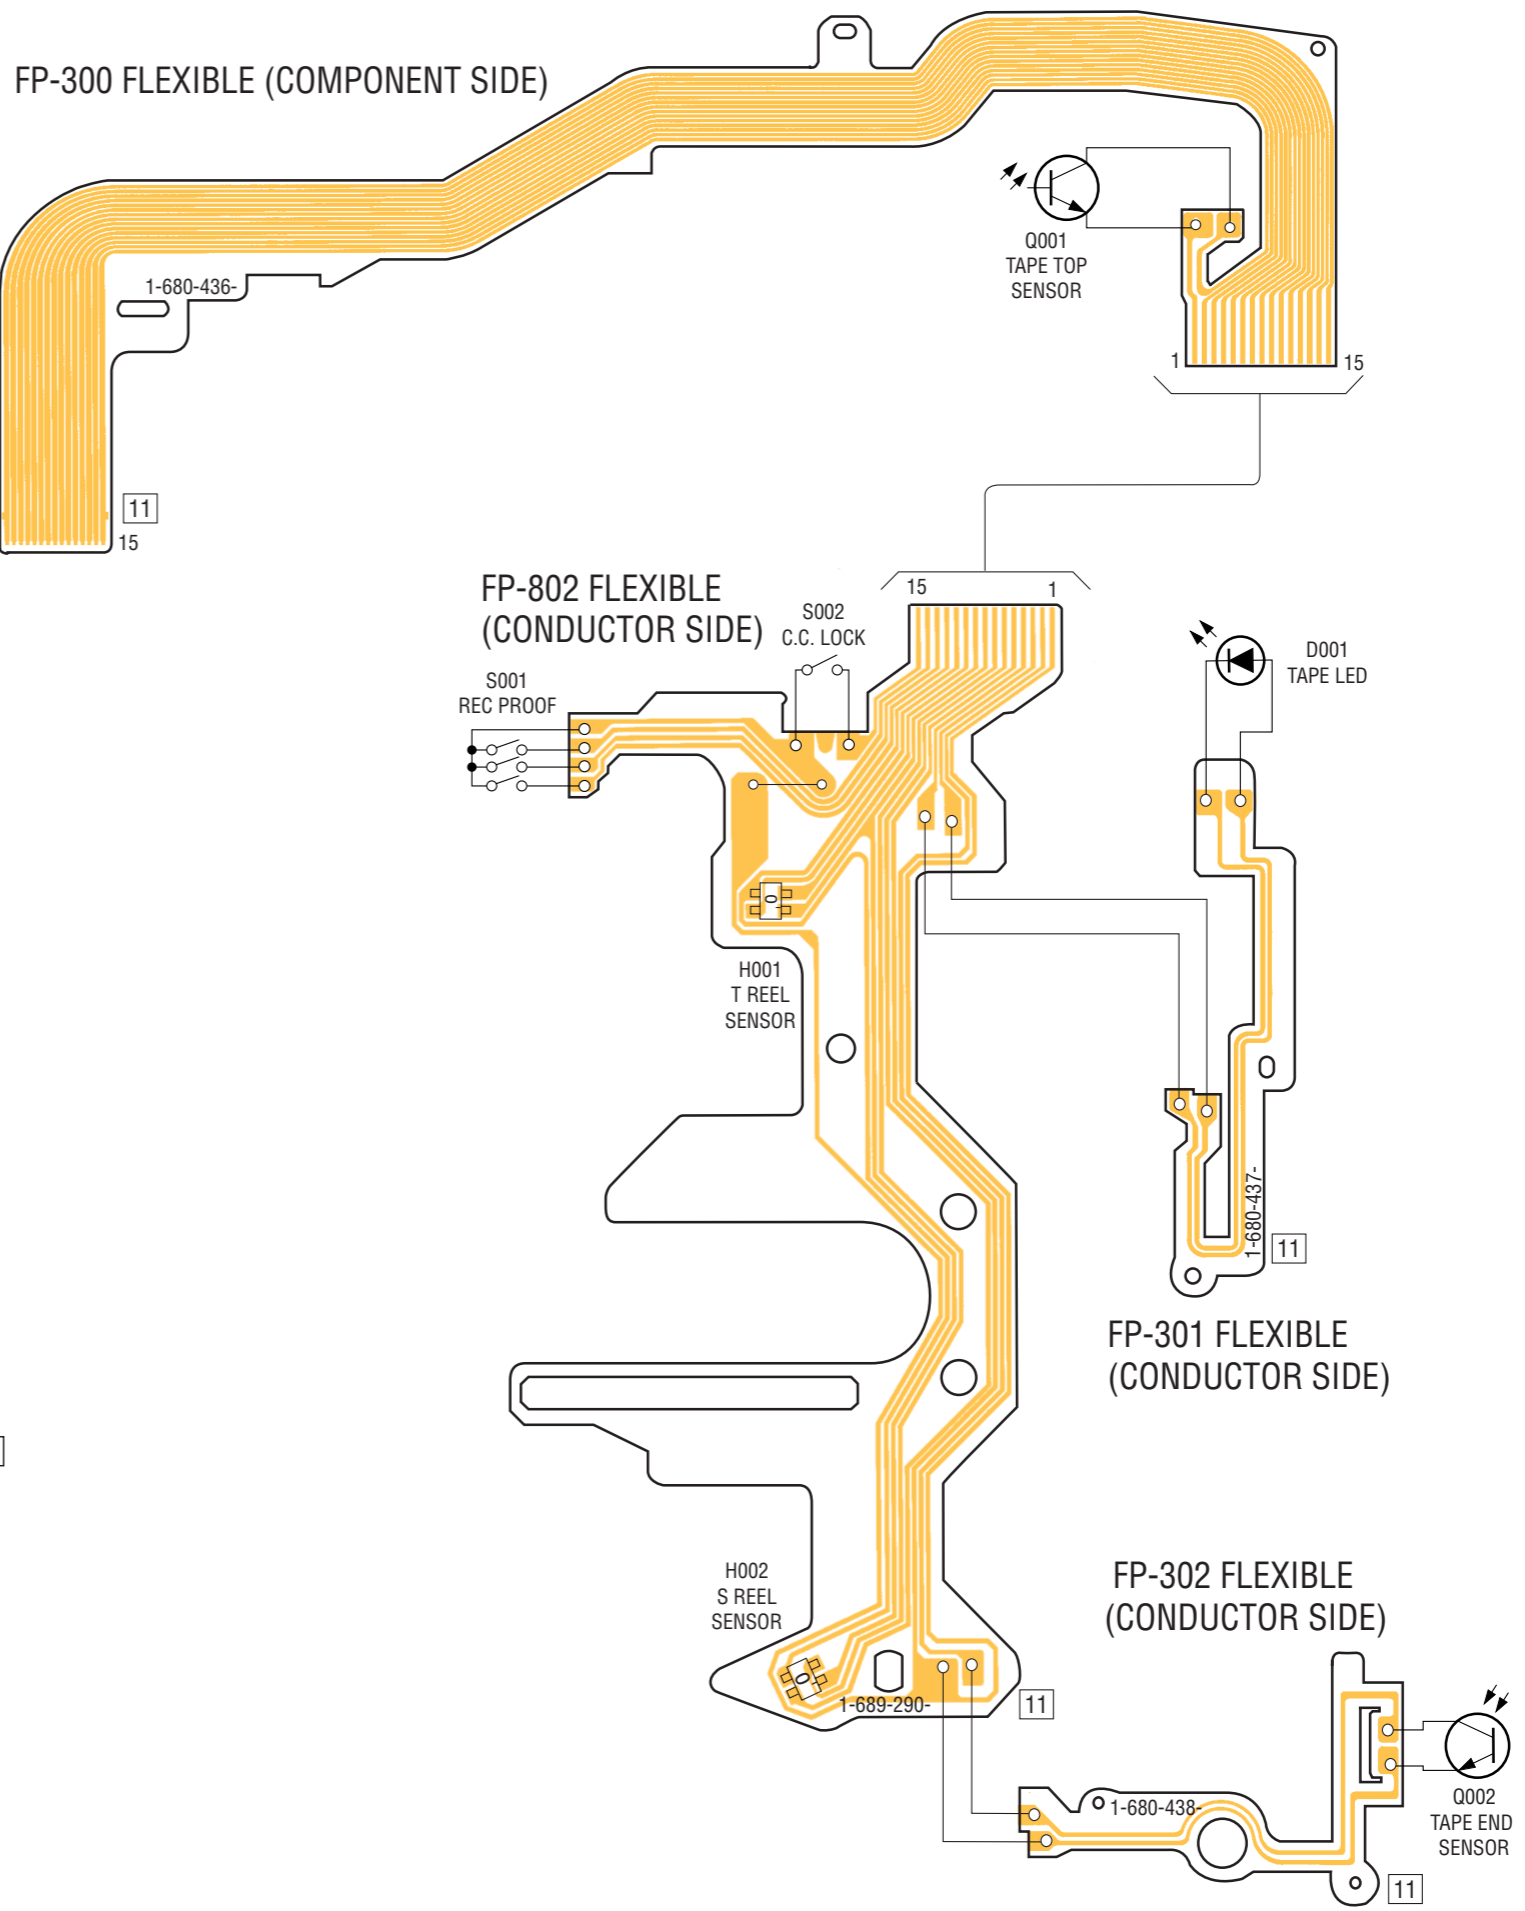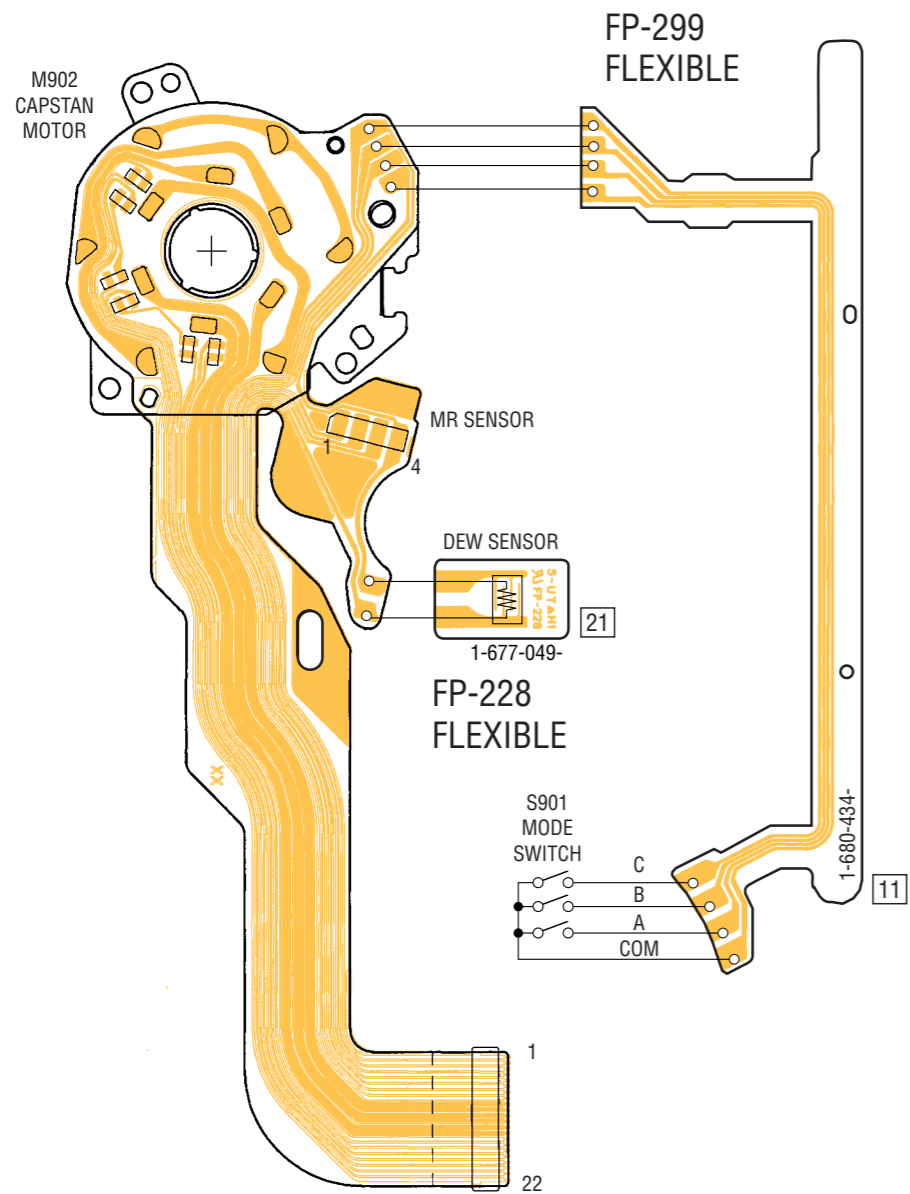

4-3. PRINTED WIRING BOARDS

4-4. MOUNTED PARTS LOCATION

no mark : side A
* mark : side B

VC-341 BOARD

C002	D-5	* C217	D-2	C509	B-5	CN401	C-9	Q002	F-4	* R096	G-5
C003	D-5	* C218	D-1	* C513	B-5	CN402	A-7	Q051	G-8	* R097	D-9
* C053	F-9	* C251	B-6	C514	B-5	CN403	A-6	Q052	F-8	* R098	D-9
* C054	F-9	* C252	A-6	C515	B-5	* CN404	A-3	Q053	G-8	* R099	E-9
C055	G-8	C276	D-2	C601	C-7	CN481	A-5	Q054	G-7	* R100	G-5
* C056	F-9	C278	D-2	C602	C-8			* Q055	G-8	* R101	F-5
* C057	E-9	* C280	E-2	C603	C-8	D001	G-1	* Q056	F-7	* R102	F-5
* C058	G-8	* C281	D-1	C604	C-6	D006	E-9	* Q057	G-6	* R103	F-5
* C059	G-8	* C282	E-2	C605	C-7	D007	E-8	* Q058	F-6	* R104	F-5
* C060	E-8	* C283	D-2	C606	C-6	D008	G-4	* Q059	G-5	* R105	G-5
* C062	E-8	* C301	C-5	* C607	C-8	D009	F-5	* Q060	G-7	* R106	G-5
* C063	G-8	* C302	C-7	C609	D-6	D051	F-9	* Q061	G-7	* R107	G-5
* C064	E-8	* C303	C-7	C610	D-8	D052	G-8	* Q062	F-7	* R109	G-4
* C065	F-9	* C304	C-7	C611	D-6	* D053	F-9	* Q063	E-9	* R110	G-4
* C066	G-8	* C306	C-7	C614	E-6	* D054	G-8	* Q064	F-5	* R111	G-4
* C067	E-8	* C307	C-6	C615	E-7	D055	F-7	* Q065	D-8	* R114	G-6
* C068	G-8	* C309	C-7	C616	E-7	* D151	B-3	* Q066	G-4	* R116	G-6
* C069	G-8	* C310	C-7	C617	E-7	* D202	C-2	* Q067	G-5	* R152	C-3
* C070	E-8	* C320	C-6	C618	E-6	* D301	D-7	* Q068	G-4	* R155	C-3
C071	F-8	* C322	C-7	* C619	D-8	* D302	D-7	* Q069	E-9	* R162	C-3
* C072	E-8	* C323	C-5	C620	C-6	D701	D-3	* Q070	G-5	* R163	B-3
C073	F-8	* C324	C-7	C622	E-7			* Q071	G-5	* R164	A-3
* C075	G-8	* C325	C-6	C623	E-8	F001	F-8	* Q072	G-5	* R203	C-2
* C076	F-8	* C326	D-7	C624	D-8	F002	G-8	* Q073	F-4	* R204	C-2
* C078	G-6	* C328	D-7	C708	E-5	F003	F-8	* Q074	G-4	* R205	C-2
* C079	G-6	* C329	C-7	C709	F-4	F004	F-8	* Q075	E-8	* R206	C-2
* C080	G-7	* C332	D-5	C710	F-4			* Q201	C-2	* R207	C-2
* C081	F-7	* C333	D-7	C711	F-4	FB051	F-6	Q202	D-3	* R208	C-1
C082	F-7	* C334	D-7	C712	E-3	* FB151	B-3	* Q203	D-2	* R209	C-2
* C083	F-7	* C335	D-5	C713	F-3	* FB152	B-4	* Q302	C-6	* R210	C-1
C084	F-7	C339	E-5	C714	E-3	* FB251	B-6	* Q304	C-7	* R211	C-1
* C085	F-7	C401	C-9	C715	D-4	* FB252	A-6	* Q306	C-5	* R212	C-1
* C086	G-6	* C404	A-4	C801	F-2	* FB401	A-6	* Q401	A-3	* R213	D-2
* C087	F-6	* C406	A-3	C802	F-2	FB481	A-5	* Q481	A-5	* R214	D-2
* C088	G-6	* C407	A-6	C805	E-2	FB482	A-5	* Q482	A-4	* R215	D-2
* C089	G-6	* C408	A-6	* C806	F-1	FB601	D-6	* Q483	A-4	* R216	D-2
* C090	G-7	* C409	A-6	C807	E-2			* Q484	B-5	* R271	D-2
* C091	F-5	* C410	A-6	C808	F-2	IC001	D-5	* Q485	B-5	* R272	D-2
C094	F-7	* C411	A-6	* C810	F-1	* IC051	F-8	Q701	E-3	* R273	E-2
C095	G-6	* C412	A-6	* C811	F-1	* IC151	B-3			* R274	E-2
* C096	F-6	* C413	B-6	* C812	E-1	* IC152	B-4	R001	G-4	* R302	C-7
C097	G-5	* C415	B-6	* C814	E-1	* IC201	D-3	R002	F-1	* R303	C-7
C098	F-5	* C417	B-6	C815	E-2	* IC202	D-2	R004	G-1	* R306	C-7
C099	G-5	* C420	B-7	* C816	E-1	* IC251	B-6	R005	E-7	* R307	C-7
C100	F-6	* C423	A-7	C817	E-2	* IC271	E-2	R006	E-7	* R308	C-7
C102	F-6	* C424	B-7	* C818	E-2	* IC301	D-6	R007	G-1	* R309	C-7
C103	F-5	* C425	B-7	* C819	F-2	* IC302	E-4	R010	G-1	* R310	C-7
C104	G-5	* C426	A-7	C820	E-2	* IC401	B-7	R011	G-1	* R311	C-7
* C105	D-9	* C427	A-7	* C821	E-2	IC481	B-5	R014	E-9	* R314	D-7
* C106	G-4	* C428	A-7	* C822	F-2	IC601	D-7	R018	F-4	* R315	C-7
* C107	F-5	* C429	B-8	* C823	G-2	* IC602	D-8	R021	E-9	* R316	C-5
* C108	G-5	* C430	A-7	C825	F-2	IC701	E-4	* R022	D-8	* R317	C-5
* C109	G-4	* C431	B-8	* C826	G-2	* IC801	F-2	R051	F-8	* R318	C-5
* C152	B-4	* C432	B-7	* C828	F-2			* R052	F-9	* R319	C-5
* C156	C-3	* C433	B-7	* C829	E-2	L051	F-7	R053	G-8	* R320	C-5
* C157	C-4	* C434	B-7	* C830	F-2	L052	G-6	* R054	F-9	* R321	C-6
* C158	B-3	* C435	B-8	* C831	G-2	L053	G-7	* R061	F-9	* R322	C-6
* C160	C-5	* C436	B-7	* C832	E-2	L054	G-7	R062	G-8	* R323	C-6
* C161	B-4	* C437	B-7	* C833	G-2	L055	F-7	* R063	F-5	* R324	C-6
* C163	B-3	* C439	B-7	* C834	F-2	L056	F-6	R064	F-8	* R325	C-6
* C164	B-3	* C441	B-8	* C835	E-2	L057	G-6	* R065	E-9	* R327	C-6
* C165	C-3	* C442	B-8	* C836	F-2	L058	F-6	* R066	E-8	* R328	C-6
* C166	B-3	* C443	A-7	* C837	E-2	L059	G-6	R067	F-8	* R330	C-7
* C167	B-5	* C444	A-7	* C839	G-2	* L060	F-6	R068	G-8	* R331	C-7
* C168	B-5	* C445	A-8	* C840	F-3	L061	F-5	* R069	E-8	* R332	D-7
* C169	B-5	* C481	A-5	C841	E-2	L062	F-6	* R070	E-8	R333	C-5
* C170	B-5	* C482	A-5	* C842	F-2	L063	F-5	* R071	E-8	* R334	D-5
* C171	B-5	* C483	A-5	* C843	F-2	L064	G-5	* R072	E-8	* R335	D-7
* C172	C-5	* C484	A-5	* C844	F-2	L065	F-6	* R073	E-8	* R336	D-7
* C173	C-5	* C486	A-5	C845	F-2	L066	G-5	* R074	E-8	* R339	C-4
* C176	C-5	* C487	A-5	C846	G-2	* L151	C-4	* R075	E-8	* R341	E-7
* C177	C-4	C488	A-5	* C847	E-2	L201	D-3	* R076	E-8	R401	A-6
* C179	C-5	C489	A-5	C848	F-3	* L202	D-1	* R077	E-8	R402	A-6
* C202	D-1	* C490	A-4	C849	F-2	* L271	D-2	* R078	E-8	* R403	A-3
* C203	C-2	* C491	A-4	* C850	E-2	* L301	C-7	* R082	G-8	* R404	A-4
* C204	C-2	* C492	A-4			* L302	D-7	* R083	F-9	* R405	A-3
* C205	D-2	C493	A-5	CN002	G-4	* L303	C-5	* R085	G-4	* R409	A-3
* C206	C-2	C494	A-5	CN004	D-5	* L304	C-7	* R086	D-9	* R410	B-6
* C207	C-1	* C495	A-5	CN005	F-5	* L308	D-7	* R087	G-5	* R411	B-6
C208	D-3	C496	A-5	CN006	E-9	* L481	A-5	* R089	G-5	* R412	B-7
* C209	C-1	C497	A-4	* CN007	D-9	* L482	A-4	* R090	G-4	* R413	A-7
C210	E-3	* C498	A-5	CN008	G-3	* L483	A-5	* R091	F-5	* R414	A-7
* C211	D-1	* C500	A-4	CN009	E-1	* L484	A-4	* R092	E-9	* R424	B-8
* C212	D-2	C505	B-4	CN053	F-9	* L801	F-3	* R093	F-5	* R426	A-7
* C214	D-2	C507	B-5	CN151	C-5			* R094	G-5	* R427	A-8
* C215	D-2	C508	B-5	CN201	D-4	Q001	G-1	* R095	G-4	* R431	B-7

4-3. PRINTED WIRING BOARDS

no mark : side A
 * mark : side B













PD-204 BOARD SI-039 BOARD

* R481	A-4	C6001	A-2	C758	B-4
* R482	A-5	C6002	B-2	C759	C-3
* R483	A-5	C6003	A-3		
R484	A-5	C6004	A-2	* CN755	C-4
R487	A-5	C6005	A-2		
* R488	A-5	C6006	B-3	D751	C-2
* R489	A-5	C6007	A-4	D752	C-2
* R490	A-4	C6009	B-2	* D753	B-2
* R491	A-4	C6010	B-2	* D754	B-2
* R492	A-5	C6011	A-5	D755	C-3
R493	A-5	C6012	D-3	D759	C-2
R494	A-4	C6013	C-4		
R495	B-5	C6015	C-2	* FB751	C-3
R601	C-7	C6016	C-2		
R602	C-7	C6019	A-3	* IC751	C-2
R616	E-7	C6020	A-3		
R619	E-6	C6022	C-2	* J751	D-2
R636	C-8	C6024	C-2	* J752	A-1
R704	F-4	C6026	C-3	* J753	B-1
R707	E-3	C6027	C-3		
R708	E-3	C6028	B-3	Q751	A-2
R709	E-3	C6029	B-3		
R710	E-3			R752	B-2
R711	E-3	CN6001	B-1	R753	B-2
R712	F-4	CN6003	D-4	R761	B-4
R713	E-3	CN6004	D-1	R763	B-2
R714	E-5	CN6005	C-1		
R715	E-3			SE751	B-3
R716	D-4	D6004	D-3	* SE752	B-3
R717	D-4	D6006	B-3		
R718	D-4	D6009	B-3		
* R806	F-1				
* R807	F-1	FB6001	B-2		
* R810	E-1				
* R811	G-2	IC6001	B-2		
* R812	E-1				
* R815	E-2	L6001	A-3		
* R817	G-2	L6002	A-4		
* R818	E-2	L6003	A-4		
* R819	F-3	L6004	C-3		
* RB201	D-1	Q6002	A-4		
* RB202	D-2	Q6004	C-2		
RB203	D-4	Q6005	C-2		
* RB271	E-1	Q6008	C-3		
* RB301	C-7	Q6009	C-3		
* RB302	C-6				
* RB401	A-6	R6005	B-4		
* RB481	A-4	R6009	B-2		
RB482	B-5	R6010	D-3		
* RB483	A-4	R6012	B-2		
RB601	C-6	R6013	B-2		
RB605	D-8	R6014	D-3		
RB606	D-6	R6019	C-2		
RB608	E-7	R6020	C-2		
RB610	E-6	R6026	C-3		
* RB611	D-8	R6030	B-3		
RB612	D-6	R6031	B-3		
RB613	D-8	R6032	B-2		
RB701	F-5	R6039	C-3		
RB703	F-4	R6040	C-3		
RB704	F-3	R6041	C-3		
RB705	E-5				
RB706	E-5	RB6001	C-2		
RB708	D-3	RB6002	C-2		
RB801	F-2	RB6003	B-2		
* X151	B-3	T6001	B-4		
X601	C-8				
X701	D-4				
X702	E-3				

NOTE

5. REPAIR PARTS LIST

NOTE: Characters **A** to **L** of the electrical parts list indicate location of exploded views in which the desired part is shown.

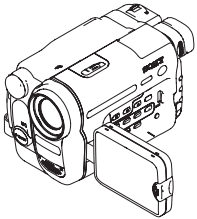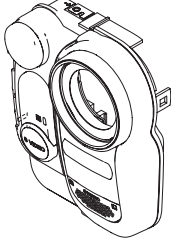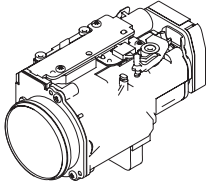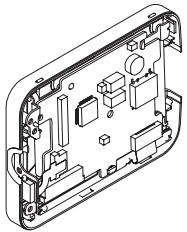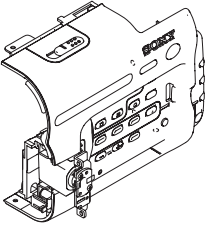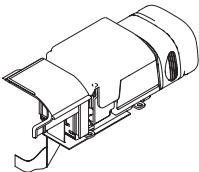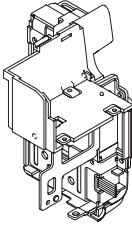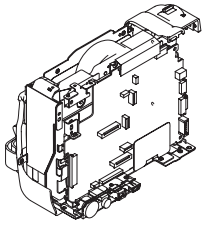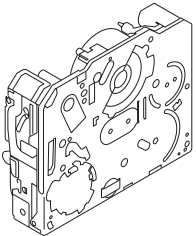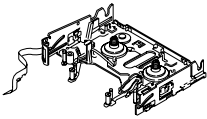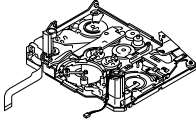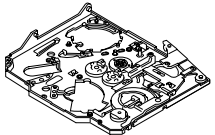Link	EXPLODED VIEWS		
 A	 B	 C	 D
OVERALL ASSEMBLY	FRONT PANEL BLOCK	LENS BLOCK	LCD BLOCK
 E	 F	 G	 H
CABINET R BLOCK	EVF BLOCK	BATTERY PANEL BLOCK	MD FRAME BLOCK
 I	 J	 K	 L
CASSETTE COMPARTMENT ASSEMBLY, DRUM ASSEMBLY	LS CHASSIS BLOCK ASSEMBLY	MECHANICAL CHASSIS BLOCK ASSEMBLY-1	MECHANICAL CHASSIS BLOCK ASSEMBLY-2

Link	ELECTRICAL PARTS LIST		ACCESSORIES
• CD-465 BOARD C	• FP-792 FLEXIBLE BOARD B	• SI-039 BOARD B	
• FP-300 FLEXIBLE BOARD J	• FP-802 FLEXIBLE BOARD J	• VC-341 BOARD H	
• FP-301 FLEXIBLE BOARD J	• PD-204 BOARD (TYPE C) D		
• FP-302 FLEXIBLE BOARD J	• PD-204 BOARD (TYPE S) D		

5. REPAIR PARTS LIST

NOTE:

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- CAPACITORS:
uF: μ F
- COILS
uH: μ H
- RESISTORS
All resistors are in ohms.
METAL: metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable
- SEMICONDUCTORS
In each case, u: μ , for example:
uA...: μ A... , uPA... , μ PA... ,
uPB... , μ PB... , uPC... , μ PC... ,
uPD... , μ PD...
- Abbreviation
AR : Argentine model
AUS : Australian model
BR : Brazilian model
CND: Canadian model
EE : East European model
HK : Hong Kong model
JE : Tourist model
NE : North European model

When indicating parts by reference number, please include the board name.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

About PD-204 board and LCD module, discriminate LCD type on the machine referring to page 1-3, and replace the same type.

5. REPAIR PARTS LIST

5-1. EXPLODED VIEWS

5-1-1. OVERALL ASSEMBLY

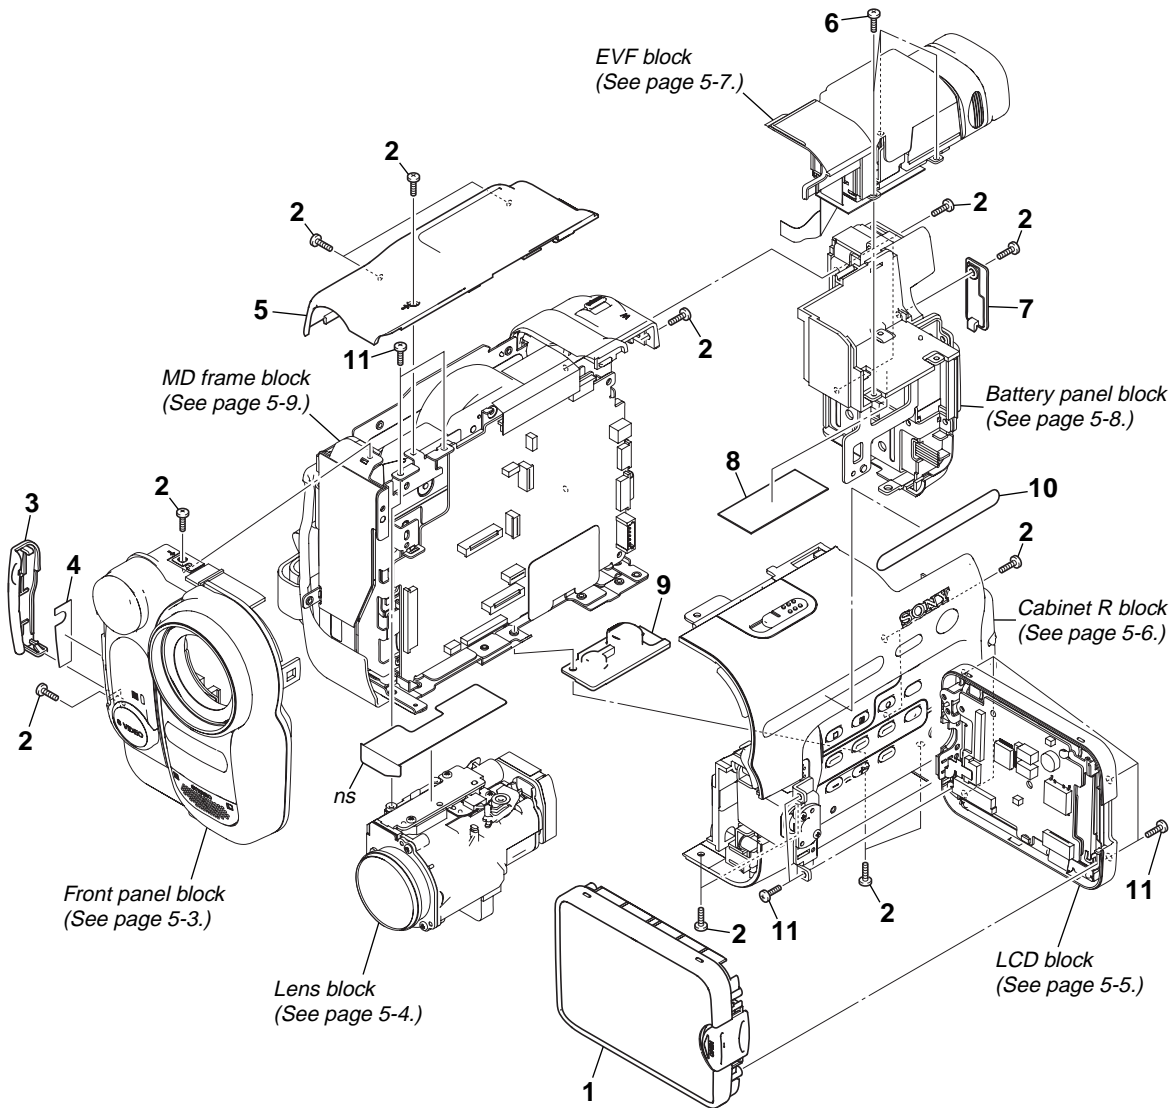

Ref. No.	Part No.	Description
1	X-3953-964-1	CABINET (C) (515) ASSY, P
2	3-080-203-31	SREW (M2), LOCK ACE, P2
3	3-087-813-01	COVER (51), JACK
4	3-087-812-01	SHEET (51), JACK
5	3-087-811-01	CABINET (UPPER) (51)
6	3-078-889-11	SCREW (M1.7)


Ref. No.	Part No.	Description
7	3-087-810-01	LID (51), CPC
8	CAUTION	RETAINER (51), EVF FLEXIBLE
9	3-079-012-01	SCREW (30), TRIPOD
10	3-087-831-01	LABEL (51) (TRV128/TRV228/TRV228E)
10	3-087-831-11	LABEL (51) (TRV328/TRV428/TRV428E)
11	3-080-204-21	SCREW TAPPING, P2

CAUTION :
 For the part of 8 : RETAINER (51), EVF FLEXIBLE (3-088-616-01), cut WOVEN (T0.25), FABRIC NON (3-076-631-01) into the desired length and use it.

5. REPAIR PARTS LIST

5-1-2. FRONT PANEL BLOCK

ns: not supplied

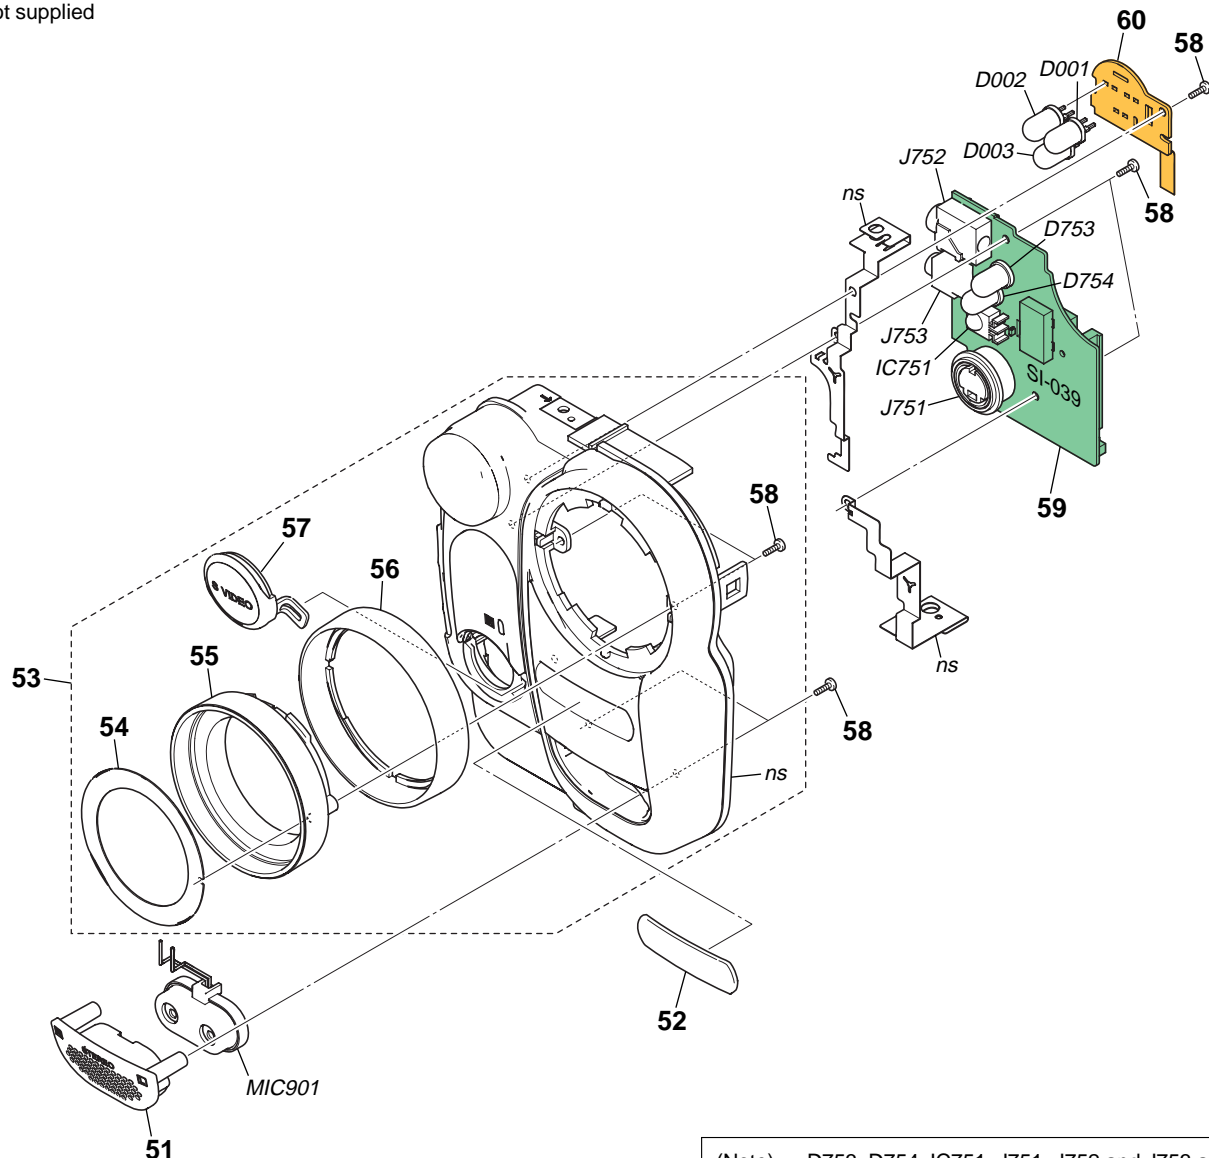


(Note) D753, D754, IC751, J751, J752 and J753 are not included in SI-039 complete board.

Ref. No.	Part No.	Description
51	3-087-738-01	RETAINER (51), MICROPHONE
52	3-087-740-01	PLATE (51), MAGNIFICATION
53	X-3953-959-1	PANEL (515) ASSY, FRONT (TRV228/TRV228E)
53	X-3953-960-1	PANEL (520) ASSY, FRONT (TRV328)
53	X-3953-961-1	PANEL (525) ASSY, FRONT (TRV428E)
53	X-3954-020-1	PANEL (510) ASSY, FRONT (TRV128)
54	3-087-739-01	PLATE (51), NAME
55	3-087-743-01	SCREW (51), FILTER
56	3-087-742-01	RING (51), FRONT
57	3-087-749-01	COVER (51), S TERMINAL
58	3-080-204-21	SCREW, TAPPING, P2
59	A-7111-950-A	SI-039 BOARD, COMPLETE (Note) (TRV128/TRV228/TRV228E)
59	A-7111-951-A	SI-039 BOARD, COMPLETE (Note) (TRV328/TRV428/TRV428E)

Ref. No.	Part No.	Description
60	1-860-929-11	FP-792 FLEXIBLE BOARD
D001	6-500-744-01	DIODE NSPW500BS-TL2 (VIDEO LIGHT)
D002	6-500-744-01	DIODE NSPW500BS-TL2 (VIDEO LIGHT)
D003	6-500-744-01	DIODE NSPW500BS-TL2 (VIDEO LIGHT)
D753	8-719-060-65	DIODE DCC3810 (IR EMITTER) (Note)
D754	8-719-060-65	DIODE DCC3810 (IR EMITTER) (Note)
IC751	6-704-975-01	IC RPM7240-V4 (TRV228/TRV228E/TRV428/TRV428E)
J751	1-778-518-11	CONNECTOR, EXTERNAL (S VIDEO OUT) (Note)
J752	1-778-040-11	JACK, SMALL TYPE (A/V OUT) (Note)
J753	1-817-944-11	JACK, SMALL TYPE (RFU DC OUT) (Note)
MIC901	1-542-567-11	MICROPHONE

5. REPAIR PARTS LIST

5-1-3. LENS BLOCK

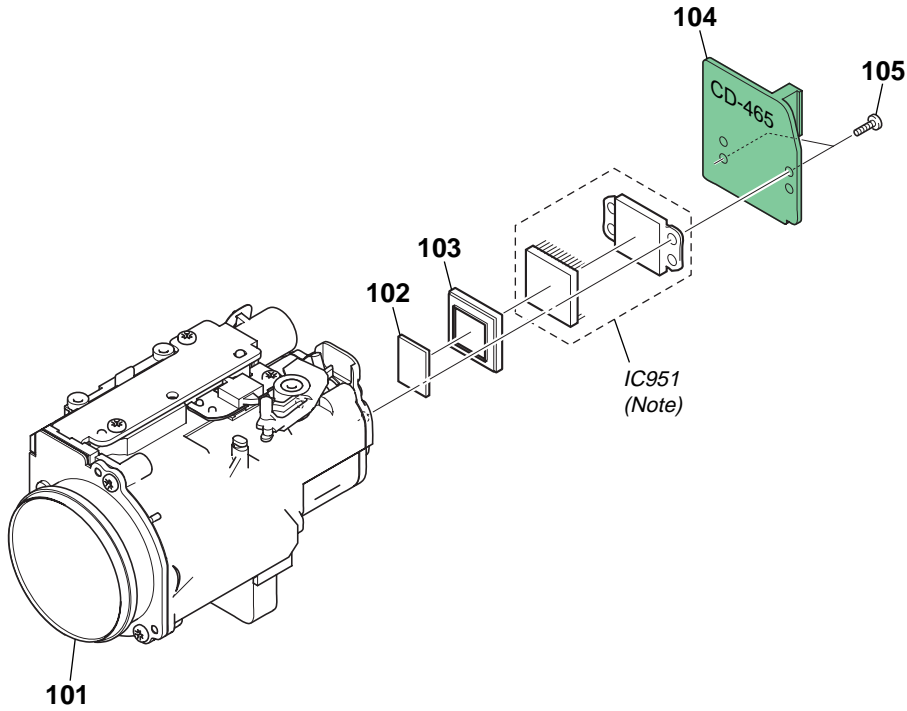


(Note) Be sure to read "Precautions for Replacement of CCD Imager" on page 4-8 when changing the CCD imager.

Ref. No.	Part No.	Description
101	8-848-765-01	DEVICE, LENS LSV-820A
102	1-758-865-11	FILTER BLOCK OPTICS
103	3-053-973-01	RUBBER (W), SEAL
104	A-7111-944-A	CD-465 BOARD, COMPLETE (TRV228E/TRV428E)
104	A-7111-945-A	CD-465 BOARD, COMPLETE (TRV128/TRV228/TRV328/TRV428)

Ref. No.	Part No.	Description
105	3-080-204-21	SCREW, TAPPING, P2
IC951	A-7013-219-A	CCD BLOCK ASSY (CCD IMAGER) (TRV128/TRV228/TRV328/TRV428) (Note)
IC951	A-7013-276-A	CCD BLOCK ASSY (CCD IMAGER) (TRV228E/TRV428E) (Note)

5. REPAIR PARTS LIST

5-1-4. LCD BLOCK

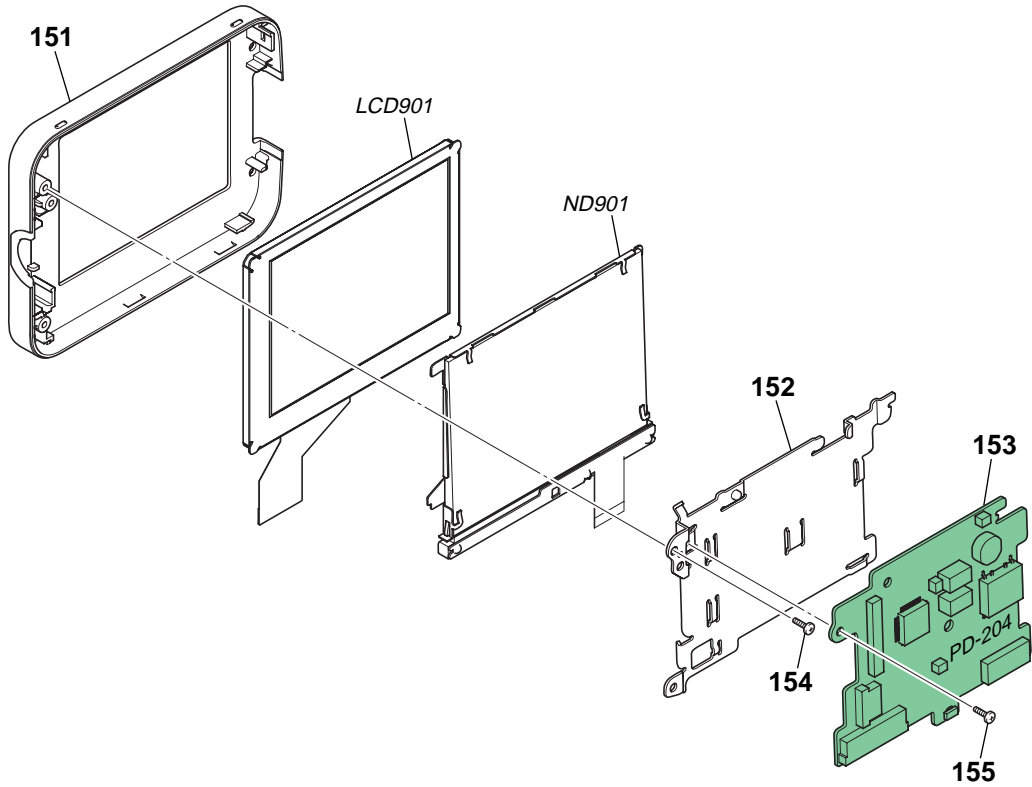

(Note) About PD-204 board and LCD module, discriminate LCD type on the machine referring to page 1-3, and replace the same type.

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description
151	3-087-780-01	CABINET (M) (51), P
152	3-087-781-01	FRAME (51), PANEL
153	A-7111-949-A	PD-204 BOARD, COMPLETE (TYPE C) (Note)
153	A-7111-948-A	PD-204 BOARD, COMPLETE (TYPE S) (Note)
154	3-080-204-21	SCREW, TAPPING, P2
155	3-078-889-11	SCREW (M1.7)

Ref. No.	Part No.	Description
LCD901	1-805-137-51	INDICATOR MODULE LIQUID CRYSTAL (TYPE S) (Note)
LCD901	1-805-138-21	INDICATOR MODULE LIQUID CRYSTAL (TYPE C) (Note)
\triangle ND901	1-518-951-11	TUBE, FLUORESCENT, COLD CATHODE

5. REPAIR PARTS LIST

5-1-5. CABINET R BLOCK

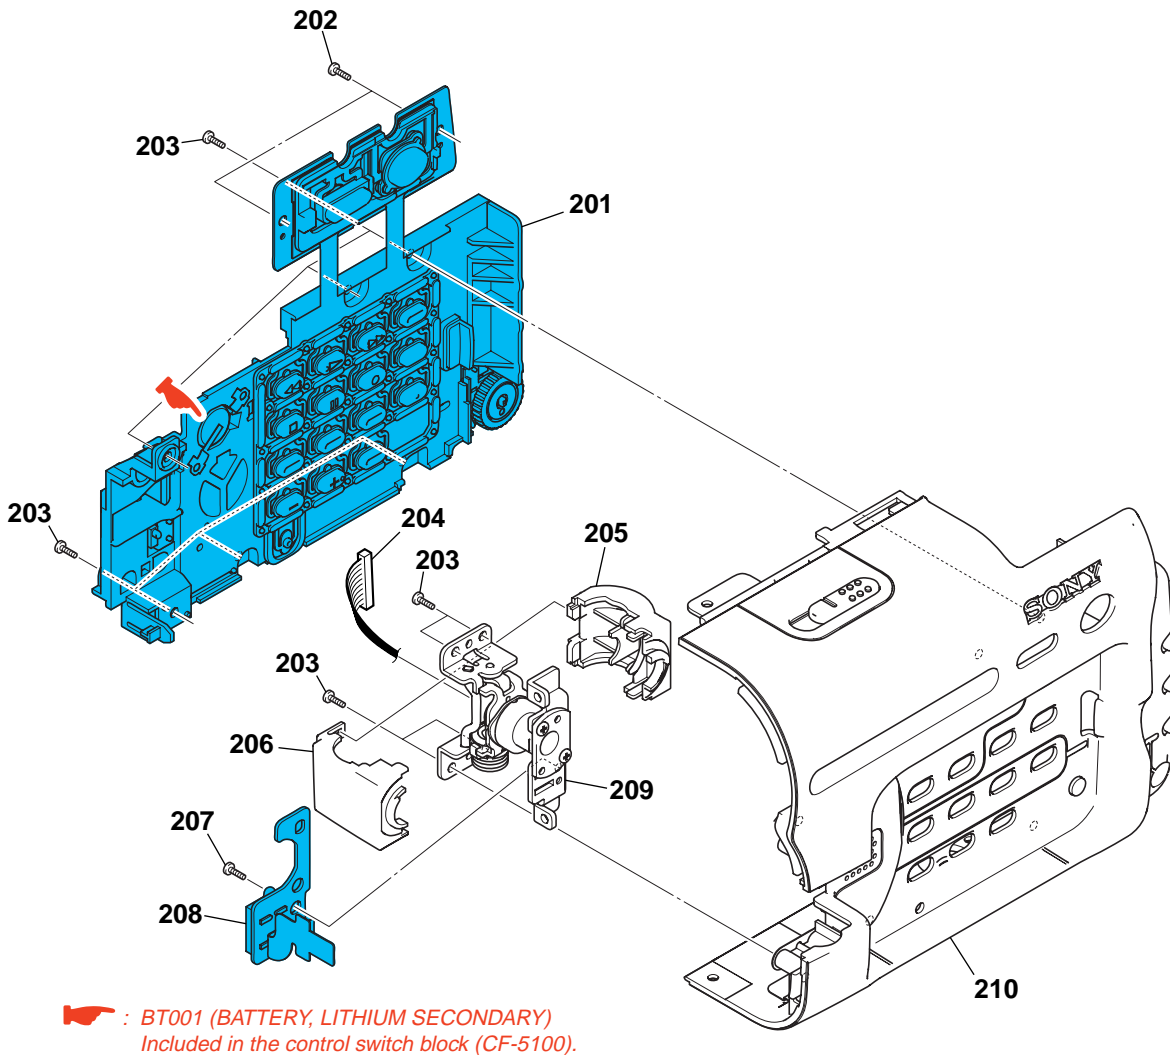


 : BT001 (BATTERY, LITHIUM SECONDARY)
Included in the control switch block (CF-5100).

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
201	1-478-416-11	KEY BLOCK, CONTROL (CF-5100)	206	3-087-825-01	COVER (C) (51), HINGE
202	3-080-206-11	SCREW, TAPPING, P2	207	3-078-889-11	SCREW (M1.7)
203	3-080-205-21	SCREW, TAPPING, P2	208	1-478-418-11	KEY BLOCK, CONTROL (PR-5100)
204	1-962-648-11	HARNESS (PD-124)	209	X-3953-962-1	HINGE (51) ASSY
205	3-087-826-01	COVER (M) (51), HINGE	210	X-3953-963-1	CABINET (R) (515) ASSY

5. REPAIR PARTS LIST

5-1-6. EVF BLOCK

ns: not supplied

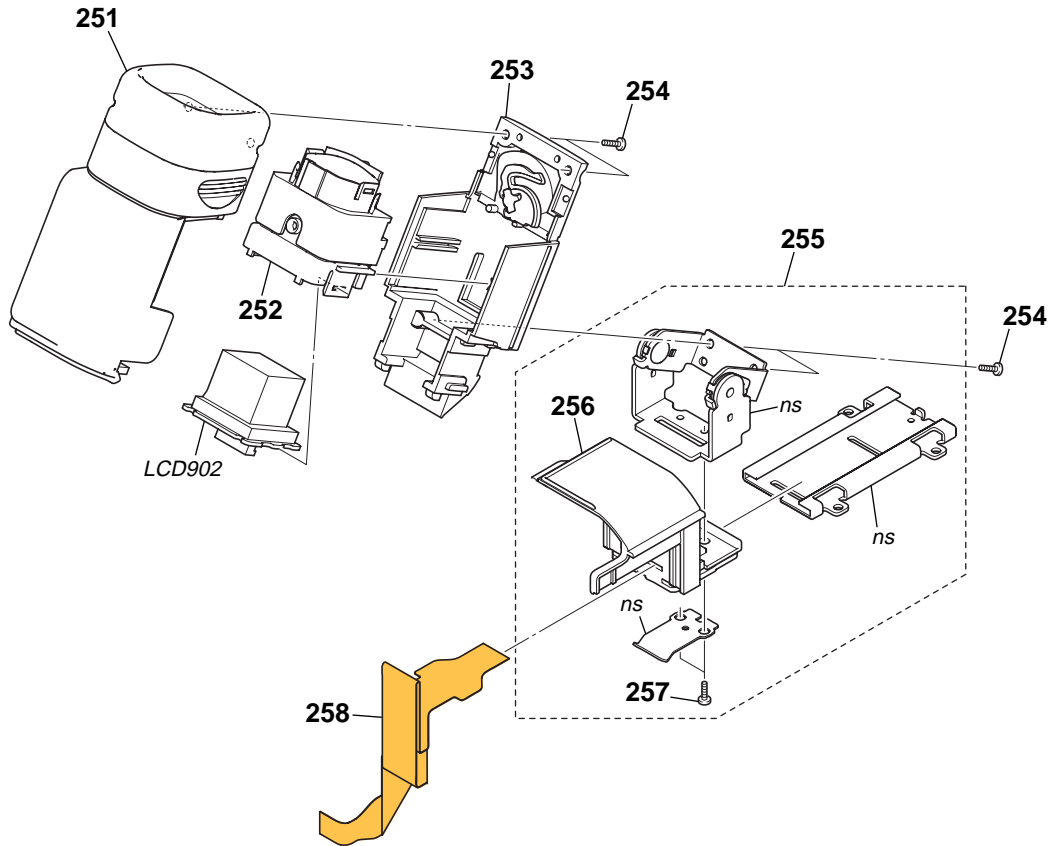


Ref. No.	Part No.	Description
251	X-3953-965-1	CABINET (UPPER) (515) ASSY, EVF
252	X-3951-166-1	LENS (M) ASSY, VF
253	X-3953-966-1	CABINET (LOWER) (515) ASSY, EVF
254	3-080-204-21	SCREW, TAPPING, P2
255	X-3953-967-1	BASE (51) ASSY, SLIDE
256	3-087-788-01	BASE (51), SLIDE

Ref. No.	Part No.	Description
257	3-080-203-31	SCREW (M2), LOCK ACE, P2
258	1-860-928-11	FP-797 FLEXIBLE BOARD
LCD902	1-805-465-61	INDICATOR MODULE LIQUID CRYSTAL (TRV128/TRV228/TRV328/TRV428)
LCD902	1-805-465-81	INDICATOR MODULE LIQUID CRYSTAL (TRV228E/TRV428E)

5. REPAIR PARTS LIST

5-1-7. BATTERY PANEL BLOCK

ns: not supplied

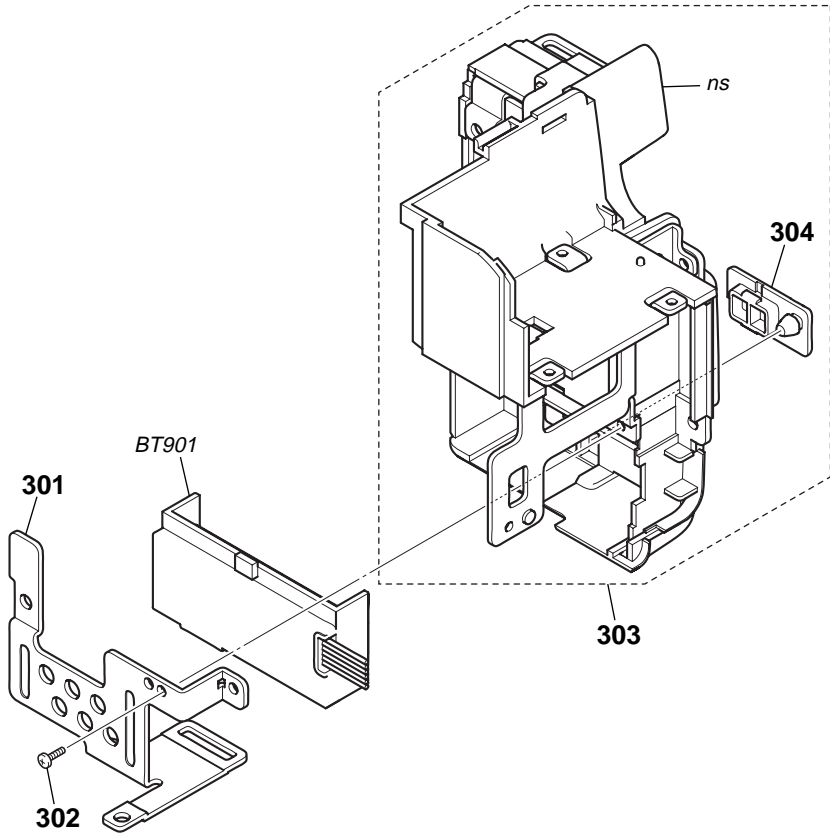


Ref. No.	Part No.	Description
301	3-087-799-01	SHEET METAL (LOWER) (51), STRAP
302	3-078-889-11	SCREW (M1.7)
303	X-3953-968-1	PANEL (515) ASSY, BATTERY

Ref. No.	Part No.	Description
304	3-072-305-01	LID (2500), JACK
BT901	1-694-772-11	TERMINAL BOARD, BATTERY

5. REPAIR PARTS LIST

5-1-8. MD FRAME BLOCK

ns: not supplied

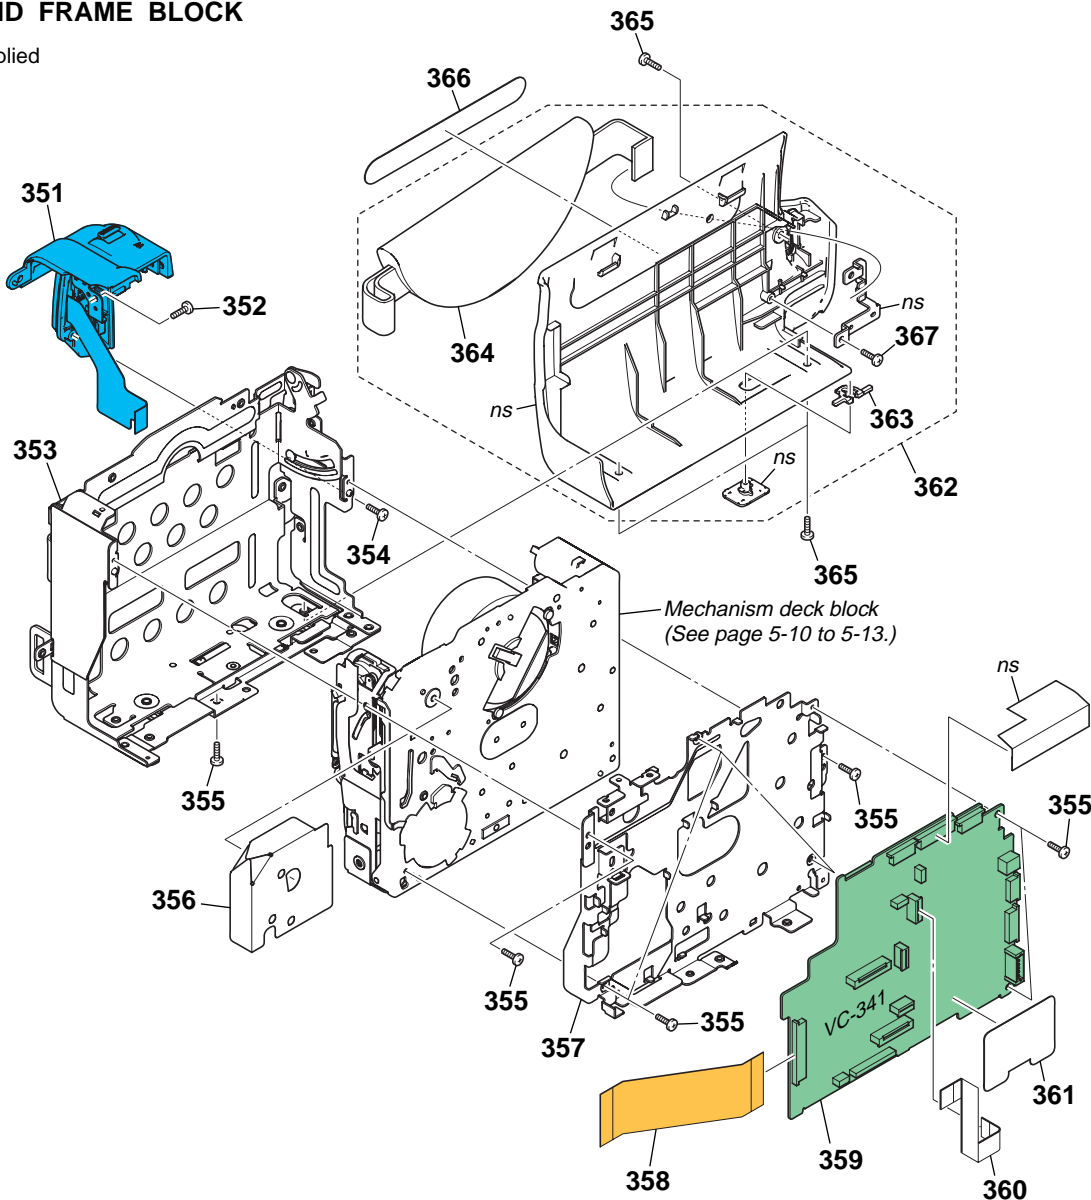


Ref. No.	Part No.	Description
351	1-478-417-11	KEY BLOCK, CONTROL (SS-5100)
352	3-080-253-01	SCREW (M1.7), LOCK ACE, P2
353	X-3953-958-1	FRAME (51) ASSY, CS
354	3-080-204-21	SCREW, TAPPING, P2
355	3-078-889-11	SCREW (M1.7)
356	3-066-169-01	SHEET (30), MD
357	3-087-809-01	FRAME (51), MD
358	1-860-926-12	FP-795 FLEXIBLE BOARD
359	A-7112-396-A	VC-341 BOARD, COMPLETE (SERVICE) (TRV428E)
359	A-7112-394-A	VC-341 BOARD, COMPLETE (SERVICE) (TRV228E)
359	A-7112-393-A	VC-341 BOARD, COMPLETE (SERVICE) (TRV128/TRV228)
359	A-7112-395-A	VC-341 BOARD, COMPLETE (SERVICE) (TRV328/TRV428)

Ref. No.	Part No.	Description
360	1-827-980-11	CABLE, FLEXIBLE FLAT (FFC-005)
361	3-088-391-01	SHEET (51), SHIELD, DD
362	X-3953-957-1	CABINET (L) (51) ASSY
363	3-978-765-01	SLIDER, G LOCK
364	3-087-802-01	BELT (51), GRIP
365	3-080-203-31	SREW (M2), LOCK ACE, P2
366	3-087-832-01	LABEL (L) (51) (TRV128)
366	3-087-832-11	LABEL (L) (51) (TRV228)
366	3-087-832-21	LABEL (L) (51) (TRV228E)
366	3-087-832-31	LABEL (L) (51) (TRV328)
366	3-087-832-51	LABEL (L) (51) (TRV428)
366	3-087-832-61	LABEL (L) (51) (TRV428E)
367	3-080-204-11	SCREW, TAPPING, P2

5. REPAIR PARTS LIST

5-1-9. CASSETTE COMPARTMENT ASSEMBLY, DRUM ASSEMBLY

ns: not supplied

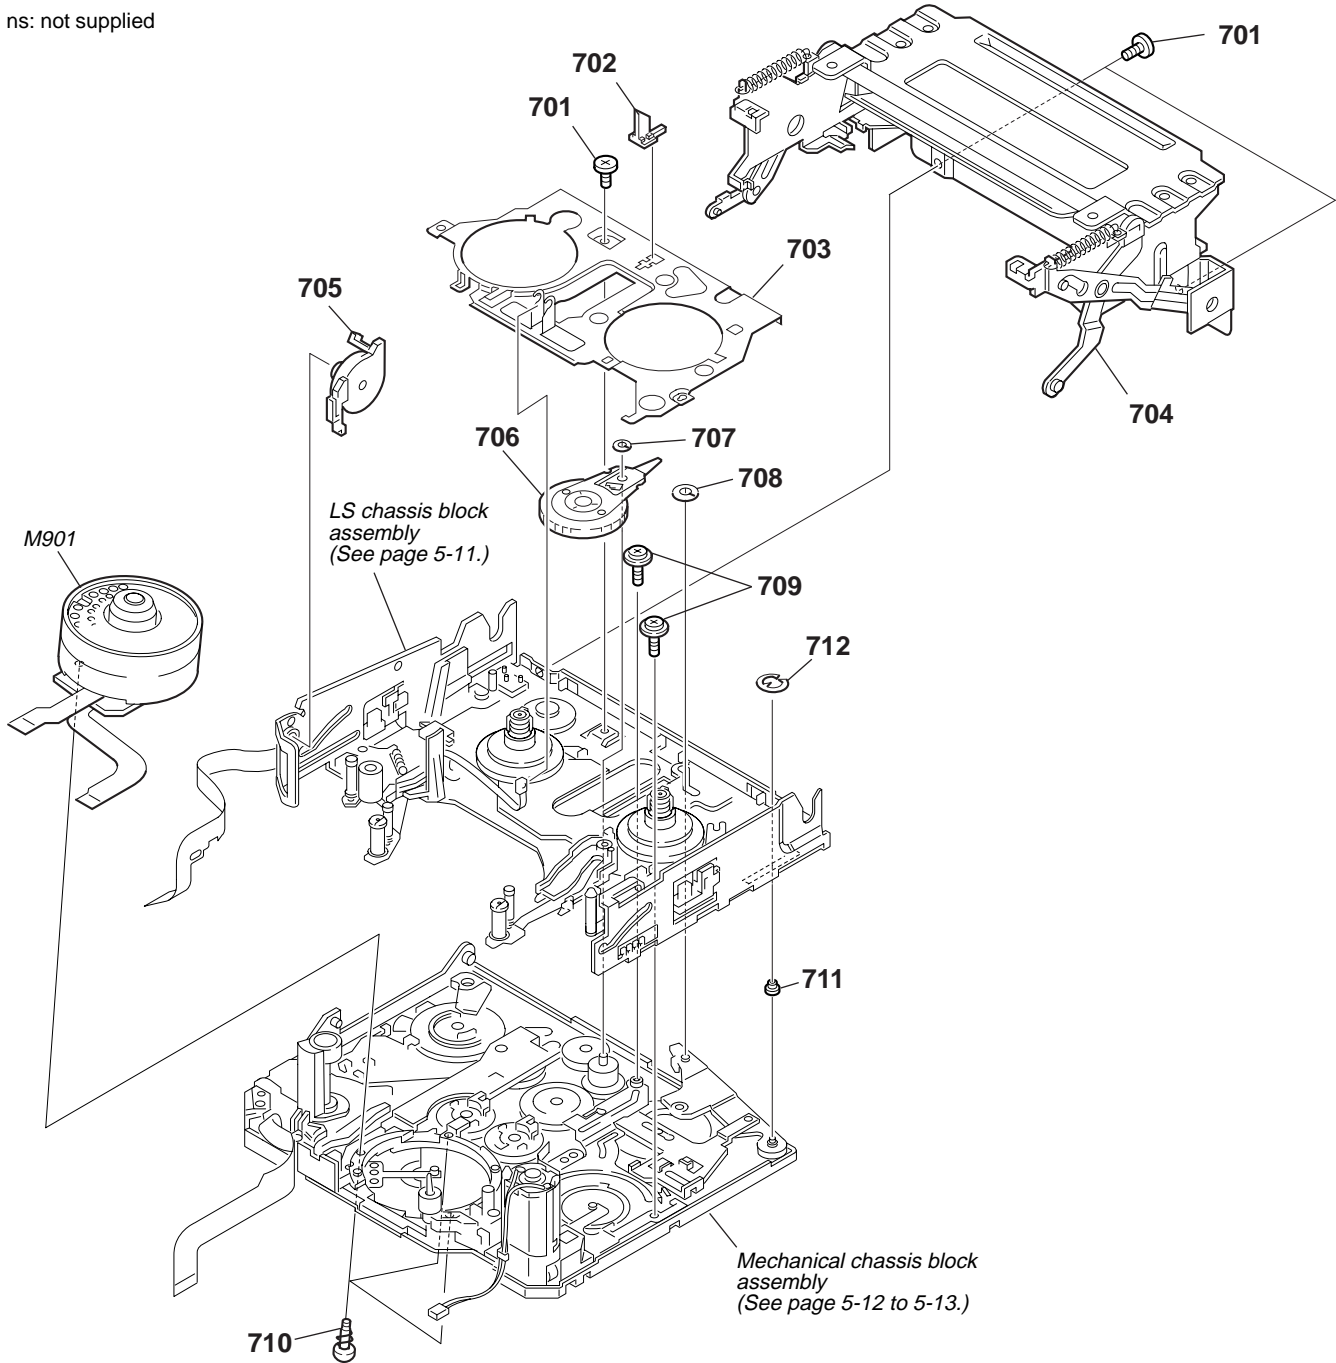


Ref. No.	Part No.	Description
701	3-065-932-01	PAN (2 MAIN M1.4X1.6), CAMERA
702	3-065-895-01	LEVER, REEL RELEASE
703	3-065-896-01	PLATE, BLIND
704	X-3951-298-1	CASSETTE COMPARTMENT ASSY
705	X-3951-302-1	DAMPER ASSY
706	X-3951-297-1	GEAR ASSY, R DRIVE
707	3-065-840-01	CUT (0.98X3X0.13), LUMILER (W)
708	3-065-935-01	HLC CUT 1.8X4X0.5

Ref. No.	Part No.	Description
709	3-947-503-01	SCREW (M1.4)
710	X-3951-299-1	SCREW ASSY, DRUM FITTING
711	3-074-309-01	ROLLER A, LS GUIDE
712	7-624-101-04	STOP RING 1.2 (E TYPE)
M901	A-7048-988-A	DRUM (DGH-0F3B-R) (SERVICE) (MDX-M2100) (TRV128/TRV228/TRV328/TRV428)
M901	A-7048-990-A	DRUM (DGH-0F4B-R) (SERVICE) (MDX-M2101) (TRV228E/TRV428E)

5. REPAIR PARTS LIST

5-1-10. LS CHASSIS BLOCK ASSEMBLY

ns: not supplied

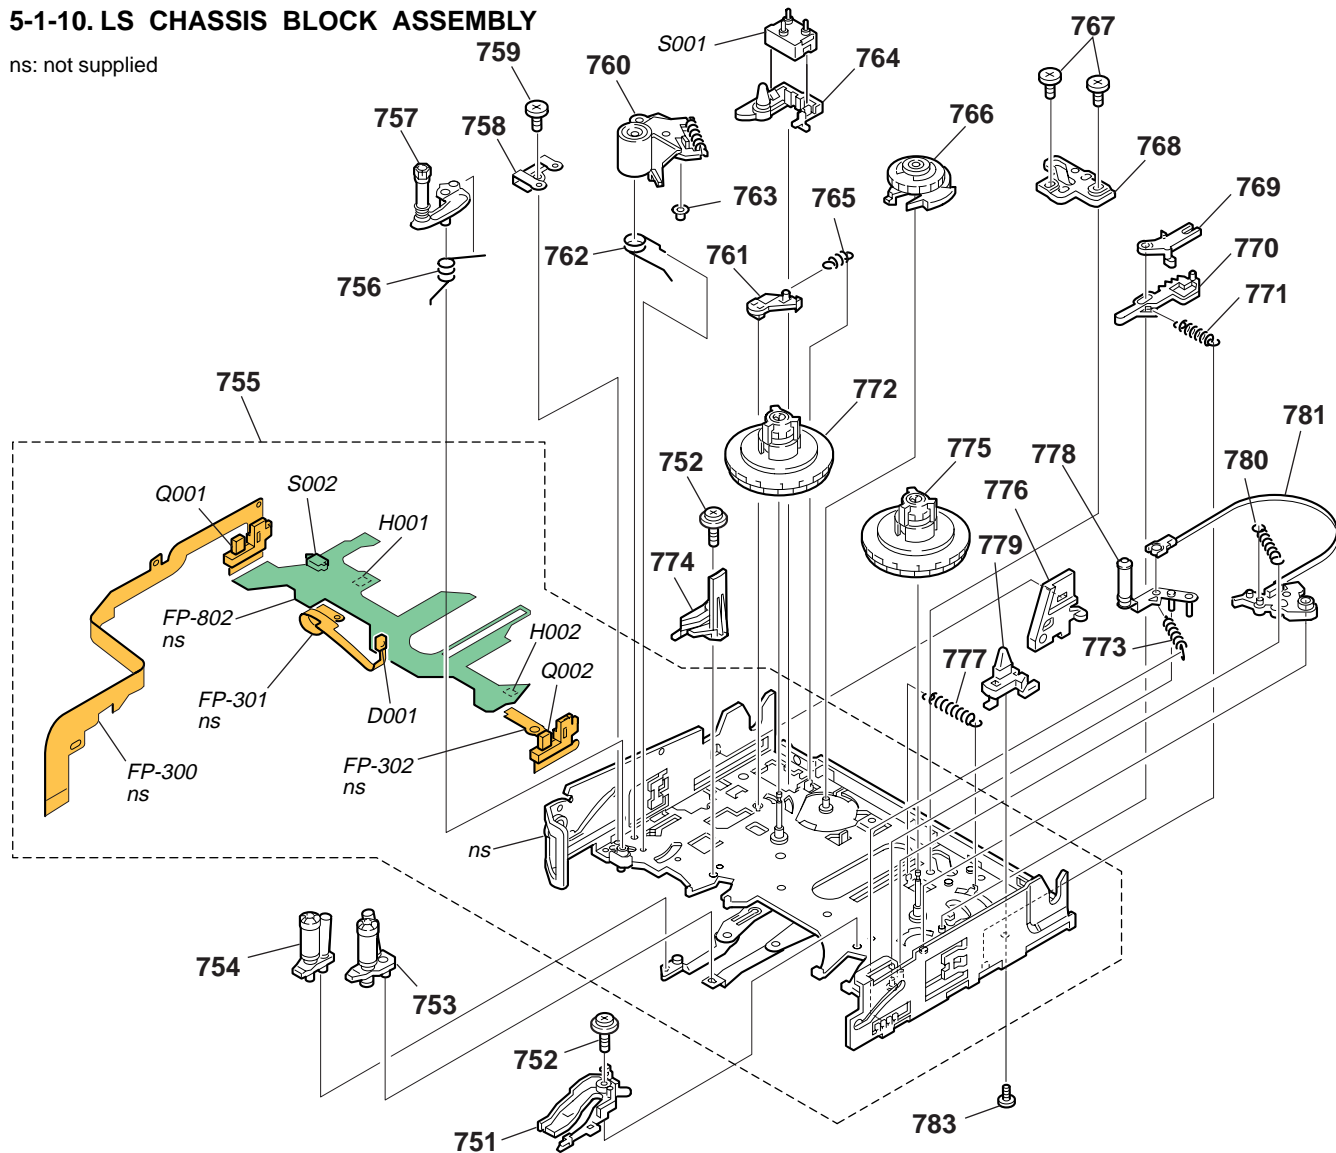


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
751	3-065-822-02	RAIL (S), GUIDE	771	3-065-830-01	SPRING, S RATCHET
752	3-947-503-01	SCREW (M1.4)	772	X-3951-288-1	TABLE (T) ASSY, REEL
753	A-7096-416-B	BASE (S) BLOCK ASSY, GUIDE	773	3-065-819-01	SPRING, TG1 ARM
754	A-7096-415-A	BASE (T) BLOCK ASSY, GUIDE	774	3-065-821-01	RAIL (T), GUIDE
755	A-7096-426-A	CHASSIS ASSY, LS	775	X-3951-289-1	TABLE (S) ASSY, REEL
756	3-065-802-01	SPRING, TG7 ARM	776	3-065-833-01	GUIDE, LOCK
757	A-7096-414-A	ARM BLOCK ASSY, TG7	777	3-065-831-01	PLATE (SPR), RE RETURN
758	3-065-801-01	RETAINER, TG7	778	X-3951-304-1	ARM ASSY, TG1
759	3-065-932-01	PAN (2 MAIN M1.4X1.6), CAMERA	779	3-065-835-01	GUIDE (S), CASSETTE
760	X-3951-303-1	ARM ASSY, PINCH	780	3-065-820-01	SPRING, RVS ARM
761	3-065-823-01	ARM, T RATCHET	781	X-3951-296-1	BAND (ASSY), BT
762	3-065-794-01	ROAD (SPR), PINCH ARM	783	3-067-167-01	SCREW (M1.4X2), CAMERA TAPPING
763	3-065-792-01	ROLLER, P LIM ARM	D001	8-719-988-42	DIODE GL453 (TAPE LED)
764	3-065-834-01	GUIDE (T), CASSETTE	H001	8-719-033-37	ELEMENT, HALL HW-105C (T REEL)
765	3-065-824-01	SPRING, T RATCHET	H002	8-719-033-37	ELEMENT, HALL HW-105C (S REEL)
766	A-7096-417-A	SOFT ASSY, T	Q001	8-729-907-25	PHOTO TRANSISTOR PT4850F (TAPE TOP)
767	3-071-650-01	SCREW (M1.7) (S)	Q002	8-729-907-25	PHOTO TRANSISTOR PT4850F (TAPE END)
768	3-065-832-01	PLATE, LS CAM	S001	1-692-614-11	SWITCH, PUSH (3 KEY) (REC PROOF)
769	3-065-828-01	ARM, S RATCHET	S002	1-572-688-11	SWITCH, PUSH LEVER (1 KEY) (C. C. LOCK)
770	3-065-829-01	PLATE, S RATCHET (RE)			

5. REPAIR PARTS LIST

5-1-11. MECHANICAL CHASSIS BLOCK ASSEMBLY-1

ns: not supplied

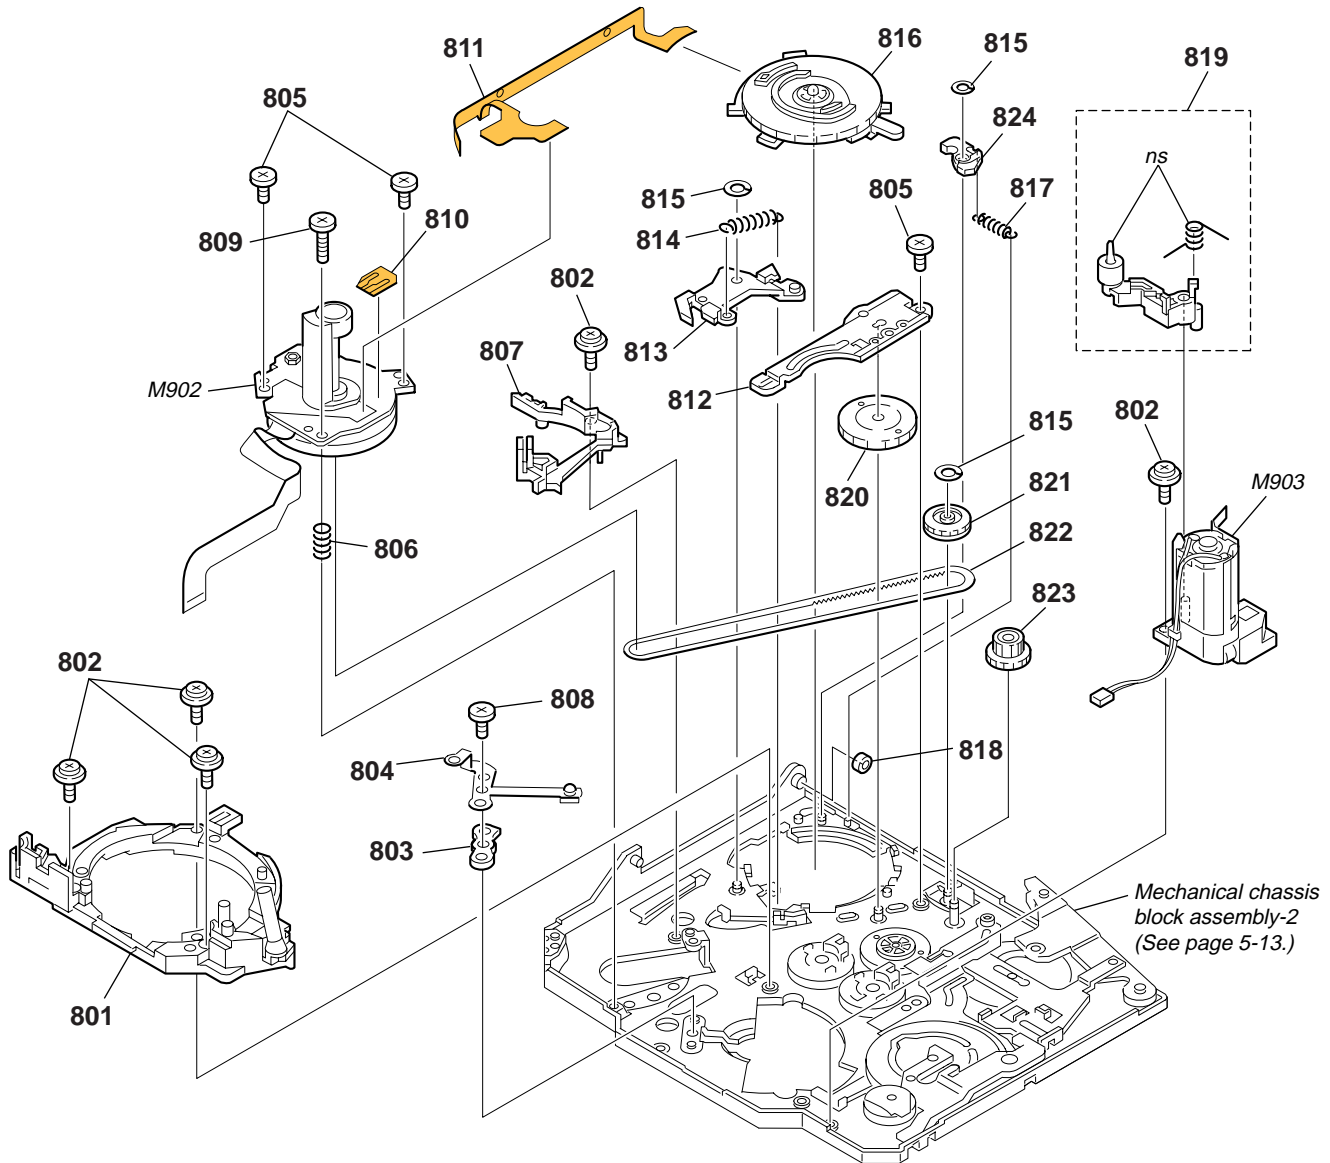


Ref. No.	Part No.	Description
801	A-7096-422-A	BASE ASSY, DRUM
802	3-947-503-01	SCREW (M1.4)
803	3-065-928-01	SPACER, GROUND
804	3-065-927-01	GROUND, DRUM
805	3-065-932-01	PAN (2 MAIN M1.4X1.6), CAMERA
806	3-067-154-01	SPRING, CAPSTAN
807	3-065-931-01	RAIL (T2), GUIDE
808	X-3947-398-1	SCREW ASSY, M1.7 PW
809	3-065-933-01	PAN (2 MAIN 1.4X4.5), CAMERA
810	1-677-049-11	FP-228 FLEXIBLE BOARD
811	1-680-434-11	FP-299 FLEXIBLE BOARD
812	3-065-877-01	PLATE (T), GUIDE LOCK
813	X-3951-301-1	PLATE ASSY, PINCH PRESSURE

Ref. No.	Part No.	Description
814	3-065-881-01	SPRING, P PRESSURE PLATE
815	3-065-934-01	HLW CUT 0.98X3X0.25
816	1-786-096-11	SWITCH, ROTARY
817	3-065-898-01	SPRING, EJECT ARM
818	3-065-870-01	ROLLER, LS GUIDE
819	A-7096-421-A	ARM ASSY, HCL
820	3-065-918-01	GEAR (2), CAM RELAY
821	A-7096-419-A	GEAR ASSY, CHANGE
822	3-065-902-01	BELT, TIMING
823	3-065-905-01	GEAR, RELAY
824	3-065-882-01	ARM, EJECT
M902	8-835-701-01	MOTOR, DC SCE13A/C-NP (CAPSTAN)
M903	A-7096-420-A	MOTOR ASSY, LD (LOADING)

5. REPAIR PARTS LIST

5-1-12. MECHANICAL CHASSIS BLOCK ASSEMBLY-2

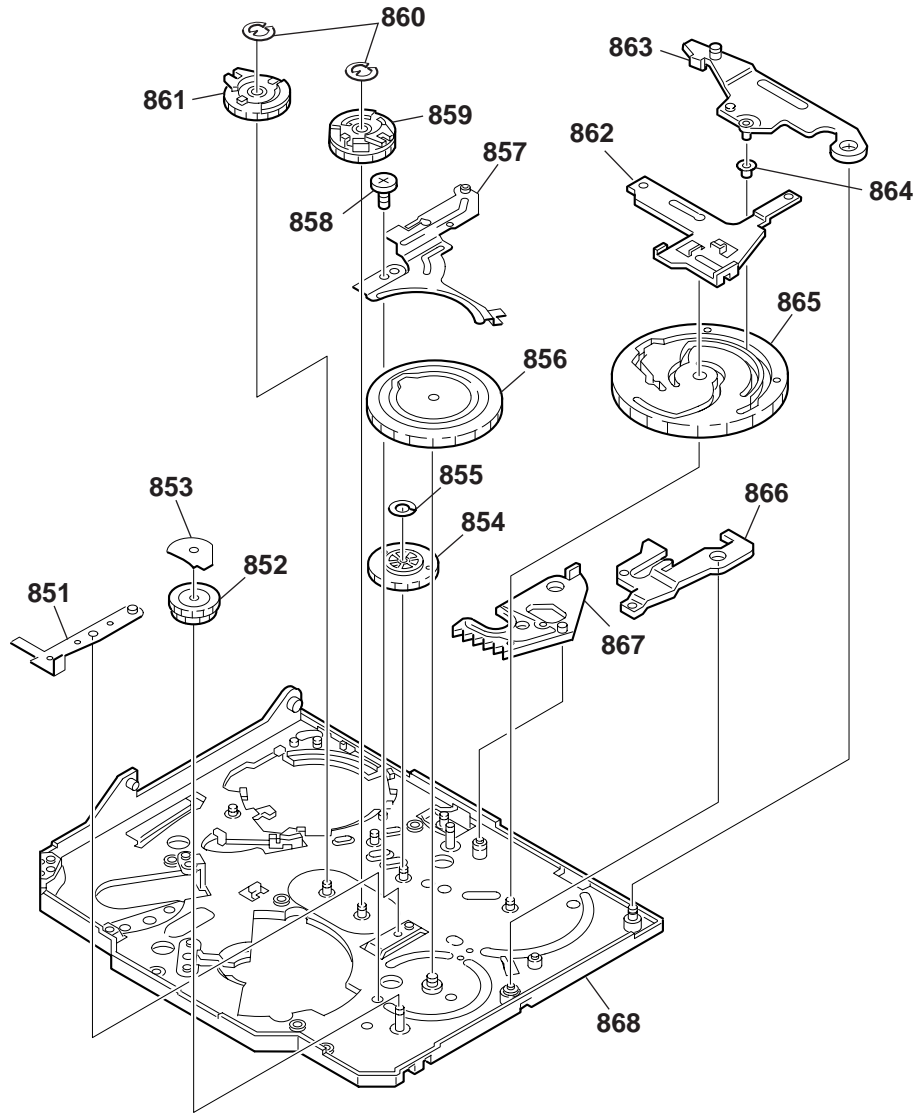

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
851	3-065-920-01	ARM, HC DRIVE	860	7-624-101-04	STOP RING 1.2 (E TYPE)
852	3-065-913-01	GEAR (4), LD	861	A-7096-412-A	GEAR (T) ASSY, GUIDE
853	3-065-914-01	SHEET, COVER	862	X-3951-307-1	PLATE ASSY, M SLIDE
854	3-065-917-01	GEAR (1), CAM RELAY	863	X-3951-305-1	ARM ASSY, LS
855	3-065-934-01	HLW CUT 0.98X3X0.25	864	3-065-901-01	ROLLER, LS ARM
856	3-065-915-01	GEAR (1), CAM	865	3-065-916-01	GEAR (2), CAM
857	3-065-878-01	PLATE (S), GUIDE LOCK	866	3-065-919-01	ARM, T1 LIMITTER
858	3-065-932-01	PAN (2 MAIN M1.4X1.6), CAMERA	867	X-3951-308-1	ARM ASSY, GL
859	A-7096-413-A	GEAR (S) ASSY, GUIDE	868	X-3951-300-2	CHASSIS ASSY, MECHANICAL

CCD-TRV128/TRV228/TRV228E/TRV328/TRV428/TRV428E

- | | | | | | | |
|---------------|---------------|---------------|---------------|---------------|---------------|------------------------|
| CD-465 | FP-300 | FP-301 | FP-302 | FP-792 | FP-802 | PD-204 (TYPE C) |
|---------------|---------------|---------------|---------------|---------------|---------------|------------------------|

5-2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
A-7111-944-A	CD-465 BOARD, COMPLETE	(TRV228E/TRV428E)
A-7111-945-A	CD-465 BOARD, COMPLETE	(TRV128/TRV228/TRV328/TRV428)

(IC951 is not included in this complete board.)		
< CAPACITOR >		
C951	1-126-395-11	ELECT CHIP 22uF 20% 16V
C953	1-128-994-21	ELECT CHIP 47uF 20% 10V
C955	1-164-360-11	CERAMIC CHIP 0.1uF 16V
< CONNECTOR >		
CN951	1-779-331-11	FFC/CONNECTOR, FPC (LIF (NON-ZIF)) 14P
< IC >		
IC951	A-7013-219-A	CCD BLOCK ASSY (CCD IMAGER) (Note)
(TRV128/TRV228/TRV328/TRV428)		
IC951	A-7013-276-A	CCD BLOCK ASSY (CCD IMAGER) (Note)
(TRV228E/TRV428E)		
< COIL >		
L951	1-469-528-91	INDUCTOR 100uH
< TRANSISTOR >		
Q951	8-729-117-73	TRANSISTOR 2SC4178-F14
< RESISTOR >		
R952	1-208-635-11	METAL CHIP 10 0.5% 1/16W
R953	1-218-965-11	RES-CHIP 10K 5% 1/16W

FP-300 FLEXIBLE BOARD (Not Supplied)		

< PHOTO TRANSISTOR >		
Q001	8-729-907-25	PHOTO TRANSISTOR PT4850F (TAPE TOP)

FP-301 FLEXIBLE BOARD (Not Supplied)		

< DIODE >		
D001	8-719-988-42	DIODE GL453S (TAPE LED)

FP-302 FLEXIBLE BOARD (Not Supplied)		

< PHOTO TRANSISTOR >		
Q002	8-729-907-25	PHOTO TRANSISTOR PT4850F (TAPE END)

Ref. No.	Part No.	Description
1-860-929-11	FP-792 FLEXIBLE BOARD	*****
(D001, D002 and D003 are not included in this flexible board.)		
< DIODE >		
D001	6-500-744-01	DIODE NSPW500BS-TL2 (VIDEO LIGHT)
D002	6-500-744-01	DIODE NSPW500BS-TL2 (VIDEO LIGHT)
D003	6-500-744-01	DIODE NSPW500BS-TL2 (VIDEO LIGHT)

FP-802 FLEXIBLE BOARD (Not Supplied)		

< HOLE ELEMENT >		
H001	8-719-033-37	ELEMENT, HALL HW-105C (T REEL)
H002	8-719-033-37	ELEMENT, HALL HW-105C (S REEL)
< SWITCH >		
S001	1-692-614-11	SWITCH, PUSH (3 KEY) (REC PROOF)
S002	1-572-688-11	SWITCH, PUSH LEVER (1 KEY) (C.C. LOCK)

A-7111-949-A	PD-204 BOARD, COMPLETE (TYPE C)	*****
< CAPACITOR >		
C6001	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6002	1-125-837-91	CERAMIC CHIP 1uF 10% 6.3V
C6003	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V
C6004	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V
C6005	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V
C6006	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V
C6007	1-115-566-11	CERAMIC CHIP 4.7uF 10% 10V
C6009	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6010	1-164-739-11	CERAMIC CHIP 560PF 5% 50V
C6011	1-163-023-00	CERAMIC CHIP 0.015uF 10% 50V
C6012	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6013	1-100-371-11	CERAMIC CHIP 12PF 5% 3.15KV
C6015	1-127-573-11	CERAMIC CHIP 1uF 10% 16V
C6019	1-104-847-11	TANTAL. CHIP 22uF 20% 4V
C6020	1-110-457-11	ELECT CHIP 3.3uF 20% 25V
C6022	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6024	1-127-573-11	CERAMIC CHIP 1uF 10% 16V
C6026	1-119-750-11	TANTAL. CHIP 22uF 20% 6.3V
C6027	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6028	1-115-407-11	ELECT CHIP 10uF 16V
< CONNECTOR >		
CN6001	1-794-997-11	PIN, CONNECTOR 20P
CN6003	1-764-709-11	FFC/CONNECTOR, FPC (LIF) 10P
CN6004	1-815-031-11	CONNECTOR, FFC/FPC (ZIF) 24P
CN6005	1-816-176-11	CONNECTOR, FFC/FPC (ZIF) 6P
< DIODE >		
D6004	8-719-073-01	DIODE MA111-(K8).S0
D6009	8-719-071-34	DIODE RB521S-30-TE61

Note: Be sure to read "Precautions for Replacement of CCD Imager" on page 4-8 when changing the CCD imager.

PD-204 (TYPE C)

PD-204 (TYPE S)

Ref. No.	Part No.	Description
		< FERRITE BEAD >
FB6001	1-414-760-21	FERRITE, EMI (SMD) (1608)
		< IC >
IC6001	6-705-329-01	IC CM7104L42-T4
		< COIL >
L6001	1-469-527-91	INDUCTOR 47uH
L6002	1-412-056-11	INDUCTOR 4.7uH
L6003	1-428-878-11	INDUCTOR 82uH
L6004	1-469-526-91	INDUCTOR 22uH
		< TRANSISTOR >
Q6002	6-550-065-01	TRANSISTOR CPH5504-TL-E
		< RESISTOR >
R6005	1-216-824-11	METAL CHIP 1.8K 5% 1/10W
R6009	1-218-975-11	RES-CHIP 68K 5% 1/16W
R6010	1-218-969-11	RES-CHIP 22K 5% 1/16W
R6012	1-208-707-11	METAL CHIP 10K 0.5% 1/16W
R6013	1-208-935-11	METAL CHIP 100K 0.5% 1/16W
R6014	1-218-949-11	RES-CHIP 470 5% 1/16W
R6019	1-218-990-11	SHORT CHIP 0
R6020	1-218-990-11	SHORT CHIP 0
R6026	1-218-990-11	SHORT CHIP 0
R6030	1-218-962-11	RES-CHIP 5.6K 5% 1/16W
R6031	1-218-990-11	SHORT CHIP 0
R6032	1-218-978-11	RES-CHIP 120K 5% 1/16W
		< COMPOSITION CIRCUIT BLOCK >
RB6003	1-234-372-21	RES, NETWORK 100 x 4 (1005)
		< TRANSFORMER >
<u>△</u> T6001	1-435-786-31	TRANSFORMER, INVERTER
	A-7111-948-A	PD-204 BOARD, COMPLETE (TYPE S) *****
		< CAPACITOR >
C6001	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6002	1-125-837-91	CERAMIC CHIP 1uF 10% 6.3V
C6003	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V
C6004	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V
C6005	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V
C6006	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V
C6007	1-115-566-11	CERAMIC CHIP 4.7uF 10% 10V
C6009	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6010	1-164-739-11	CERAMIC CHIP 560PF 5% 50V
C6011	1-163-023-00	CERAMIC CHIP 0.015uF 10% 50V
C6012	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6013	1-100-371-11	CERAMIC CHIP 12PF 5% 3.15KV
C6015	1-127-573-11	CERAMIC CHIP 1uF 10% 16V
C6016	1-100-249-11	CERAMIC CHIP 0.01uF 10% 16V
C6019	1-104-847-11	TANTAL. CHIP 22uF 20% 4V
C6020	1-110-457-11	ELECT CHIP 3.3uF 20% 25V

Ref. No.	Part No.	Description
C6022	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6024	1-127-573-11	CERAMIC CHIP 1uF 10% 16V
C6026	1-119-750-11	TANTAL. CHIP 22uF 20% 6.3V
C6027	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6028	1-115-407-11	ELECT CHIP 10uF 16V
C6029	1-125-827-91	CERAMIC CHIP 1uF 10% 25V
		< CONNECTOR >
CN6001	1-794-997-11	PIN, CONNECTOR 20P
CN6003	1-764-709-11	CONNECTOR, FFC/FPC (LIF) 10P
CN6004	1-815-031-11	FFC/CONNECTOR, FPC (ZIF) 24P
CN6005	1-816-176-11	CONNECTOR, FFC/FPC (ZIF) 6P
		< DIODE >
D6004	8-719-988-61	DIODE 1SS355TE-17
D6006	8-719-988-61	DIODE 1SS355TE-17
D6009	8-719-071-34	DIODE RB521S-30-TE61
		< FERRITE BEAD >
FB6001	1-414-760-21	FERRITE, EMI (SMD)(1608)
		< IC >
IC6001	6-705-330-01	IC LRS57231
		< COIL >
L6001	1-469-527-91	INDUCTOR 47uH
L6002	1-412-056-11	INDUCTOR 4.7uH
L6003	1-428-878-11	INDUCTOR 82uH
L6004	1-469-526-91	INDUCTOR 22uH
		< TRANSISTOR >
Q6002	6-550-065-01	TRANSISTOR CPH5504-TL-E
Q6004	8-729-054-48	TRANSISTOR UP04601008S0
Q6005	8-729-054-48	TRANSISTOR UP04601008S0
Q6008	6-550-242-01	TRANSISTOR DTC114EMT2L
Q6009	6-550-232-01	TRANSISTOR 2SA2029T2LQ/R
		< RESISTOR >
R6005	1-216-824-11	METAL CHIP 1.8K 5% 1/10W
R6009	1-218-975-11	RES-CHIP 68K 5% 1/16W
R6010	1-218-969-11	RES-CHIP 22K 5% 1/16W
R6012	1-208-707-11	METAL CHIP 10K 0.5% 1/16W
R6013	1-208-935-11	METAL CHIP 100K 0.5% 1/16W
R6014	1-218-949-11	RES-CHIP 470 5% 1/16W
R6030	1-218-962-11	RES-CHIP 5.6K 5% 1/16W
R6039	1-218-960-11	RES-CHIP 3.9K 5% 1/16W
R6040	1-218-973-11	RES-CHIP 47K 5% 1/16W
R6041	1-218-953-11	RES-CHIP 1K 5% 1/16W
		< COMPOSITION CIRCUIT BLOCK >
RB6001	1-234-378-21	RES, NETWORK 10K x 4 (1005)
RB6002	1-234-384-11	RES, NETWORK 1M x 4 (1005)
RB6003	1-234-372-21	RES, NETWORK 100 x 4 (1005)
		< TRANSFORMER >
<u>△</u> T6001	1-435-786-31	TRANSFORMER, INVERTER

The components identified by mark <u>△</u> or dotted line with mark <u>△</u> are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque <u>△</u> sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	---

CCD-TRV128/TRV228/TRV228E/TRV328/TRV428/TRV428E

SI-039

VC-341

Ref. No.	Part No.	Description
	A-7111-950-A	SI-039 BOARD, COMPLETE (TRV128/TRV228/TRV228E)
	A-7111-951-A	SI-039 BOARD, COMPLETE (TRV328/TRV428/TRV428E)

(D753, D754, IC751, J751, J752 and J753 are not included in this complete board.)		
< CAPACITOR >		
C758	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V (TRV328/TRV428/TRV428E)
C759	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V (TRV328/TRV428/TRV428E)
< CONNECTOR >		
CN755	1-750-361-21	CONNECTOR, FFC/FPC (ZIF) 30P
< DIODE >		
D751	6-500-044-01	DIODE DF6A6.8FU (TE85R)
D752	6-500-044-01	DIODE DF6A6.8FU (TE85R)
D753	8-719-060-65	DIODE DCC3810 (IR EMITTER)
D754	8-719-060-65	DIODE DCC3810 (IR EMITTER)
D755	6-500-044-01	DIODE DF6A6.8FU (TE85R)
D759	6-500-506-01	DIODE TLRMV1021 (T15SOY, F) (TALLY)
< FERRITE BEAD >		
FB751	1-414-760-21	INDUCTOR, FERRITE BEAD (TRV328/TRV428/TRV428E)
< IC >		
IC751	6-704-975-01	IC RPM7240-V4 (TRV228/TRV228E/TRV428/TRV428E)
< JACK >		
J751	1-778-518-11	CONNECTOR, EXTERNAL (S VIDEO OUT)
J752	1-778-040-11	JACK, SMALL TYPE (A/V OUT)
J753	1-817-944-11	JACK, SMALL TYPE (RFU DC OUT)
< TRANSISTOR >		
Q751	8-729-023-22	TRANSISTOR 2SD2114K
< RESISTOR >		
R752	1-216-806-11	METAL CHIP 56 5% 1/10W
R753	1-216-806-11	METAL CHIP 56 5% 1/10W
R761	1-216-864-11	SHORT CHIP 0
R763	1-216-821-11	METAL CHIP 1K 5% 1/10W
< SENSOR >		
SE751	1-476-807-41	SENSOR, ANGULAR VELOCITY (YAW) (TRV328/TRV428/TRV428E)
SE752	1-476-807-31	SENSOR, ANGULAR VELOCITY (PITCH) (TRV328/TRV428/TRV428E)

Ref. No.	Part No.	Description
	A-7112-393-A	VC-341 BOARD, COMPLETE (SERVICE) (TRV128/TRV228)
	A-7112-394-A	VC-341 BOARD, COMPLETE (SERVICE) (TRV228E)
	A-7112-395-A	VC-341 BOARD, COMPLETE (SERVICE) (TRV328/TRV428)
	A-7112-396-A	VC-341 BOARD, COMPLETE (SERVICE) (TRV428E)

< CAPACITOR >		
C002	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C003	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C053	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C054	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C055	1-107-819-11	CERAMIC CHIP 0.022uF 10% 16V
C056	1-164-941-11	CERAMIC CHIP 0.0047uF 10% 16V
C057	1-164-942-11	CERAMIC CHIP 0.0068uF 10% 16V
C058	1-119-923-11	CERAMIC CHIP 0.047uF 10% 10V
C059	1-119-923-11	CERAMIC CHIP 0.047uF 10% 10V
C060	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V
C062	1-164-939-11	CERAMIC CHIP 0.0022uF 10% 50V
C063	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C064	1-164-937-11	CERAMIC CHIP 0.001uF 10% 50V
C065	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C066	1-125-837-91	CERAMIC CHIP 1uF 10% 6.3V
C067	1-127-988-81	CERAMIC CHIP 15000PF 10% 16V
C068	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C069	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C070	1-107-819-11	CERAMIC CHIP 0.022uF 10% 16V
C071	1-115-566-11	CERAMIC CHIP 4.7uF 10% 10V
C072	1-127-772-81	CERAMIC CHIP 33000PF 10% 10V
C073	1-165-875-11	CERAMIC CHIP 10uF 10% 10V
C075	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C076	1-115-566-11	CERAMIC CHIP 4.7uF 10% 10V
C078	1-115-566-11	CERAMIC CHIP 4.7uF 10% 10V
C079	1-115-566-11	CERAMIC CHIP 4.7uF 10% 10V
C080	1-115-566-11	CERAMIC CHIP 4.7uF 10% 10V
C081	1-125-838-11	CERAMIC CHIP 2.2uF 10% 6.3V
C082	1-127-573-11	CERAMIC CHIP 1uF 10% 16V
C083	1-125-827-91	CERAMIC CHIP 1uF 10% 25V
C084	1-125-827-91	CERAMIC CHIP 1uF 10% 25V
C085	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C086	1-115-566-11	CERAMIC CHIP 4.7uF 10% 10V
C087	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C088	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C089	1-115-566-11	CERAMIC CHIP 4.7uF 10% 10V
C090	1-115-566-11	CERAMIC CHIP 4.7uF 10% 10V
C091	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C094	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V
C095	1-115-566-11	CERAMIC CHIP 4.7uF 10% 10V
C096	1-119-749-11	TANTAL. CHIP 33uF 20% 4V
C097	1-119-750-11	TANTAL. CHIP 22uF 20% 6.3V
C098	1-115-566-11	CERAMIC CHIP 4.7uF 10% 10V
C099	1-125-838-11	CERAMIC CHIP 2.2uF 10% 6.3V
C100	1-125-837-91	CERAMIC CHIP 1uF 10% 6.3V
C102	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C103	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C104	1-119-750-11	TANTAL. CHIP 22uF 20% 6.3V

Ref. No.	Part No.	Description				Ref. No.	Part No.	Description			
C105	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V	C306	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C106	1-117-720-11	CERAMIC CHIP	4.7uF		10V	C307	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C107	1-164-506-11	CERAMIC CHIP	4.7uF		16V	C309	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C108	1-164-505-11	CERAMIC CHIP	2.2uF		16V	C310	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C109	1-164-505-11	CERAMIC CHIP	2.2uF		16V	C320	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C152	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V	C322	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C156	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V	C323	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C157	1-127-861-11	CERAMIC CHIP	2.2uF	10%	16V	C324	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V
C158	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V	C325	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C160	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C326	1-164-938-11	CERAMIC CHIP	0.0015uF	10%	50V
C161	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V	C328	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C163	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C329	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C164	1-164-848-11	CERAMIC CHIP	8PF	0.5PF	50V	C332	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C165	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V	C333	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C166	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C334	1-100-252-11	CERAMIC CHIP	0.1uF	10%	6.3V
C167	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V	C335	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C168	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V	C339	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C169	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C401	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C170	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V	C404	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C171	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C406	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C172	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V	C407	1-100-246-11	CERAMIC CHIP	0.001uF	10%	50V
C173	1-164-935-11	CERAMIC CHIP	470PF	10%	50V	C408	1-100-249-11	CERAMIC CHIP	0.01uF	10%	16V
C176	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C409	1-100-251-11	CERAMIC CHIP	0.047uF	10%	10V
C177	1-104-847-11	TANTAL. CHIP	22uF	20%	4V	C410	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C179	1-100-696-91	CERAMIC CHIP	1uF	10%	6.3V	C411	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C202	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C412	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C203	1-164-941-11	CERAMIC CHIP	0.0047uF	10%	16V	C413	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C204	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V	C415	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C205	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C417	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C206	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C420	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C207	1-164-935-11	CERAMIC CHIP	470PF	10%	50V	C423	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C208	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C424	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C209	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V	C425	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C210	1-165-708-11	ELECT	47uF	20%	6.3V	C426	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C211	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V	C427	1-164-941-11	CERAMIC CHIP	0.0047uF	10%	16V
C212	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V						(TRV228E/TRV428E)
C214	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C428	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V
C215	1-164-939-11	CERAMIC CHIP	0.0022uF	10%	50V						(TRV228E/TRV428E)
C217	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V	C429	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C218	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C430	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V
C251	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V	C431	1-119-923-11	CERAMIC CHIP	0.047uF	10%	10V
C252	1-117-720-11	CERAMIC CHIP	4.7uF		10V	C432	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C276	1-110-666-11	ELECT CHIP	22uF	20%	6.3V	C433	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
					(TRV328/TRV428/TRV428E)	C434	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
C278	1-110-666-11	ELECT CHIP	22uF	20%	6.3V	C435	1-125-838-11	CERAMIC CHIP	2.2uF	10%	6.3V
					(TRV328/TRV428/TRV428E)	C436	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C280	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V	C437	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
					(TRV328/TRV428/TRV428E)	C439	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C281	1-100-252-11	CERAMIC CHIP	0.1uF	10%	6.3V	C441	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
					(TRV328/TRV428/TRV428E)	C442	1-164-935-11	CERAMIC CHIP	470PF	10%	50V
C282	1-100-251-11	CERAMIC CHIP	0.047uF	10%	10V	C443	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
					(TRV328/TRV428/TRV428E)	C444	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C283	1-100-251-11	CERAMIC CHIP	0.047uF	10%	10V	C445	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
					(TRV328/TRV428/TRV428E)	C481	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C301	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V	C482	1-104-752-11	TANTAL. CHIP	33uF	20%	6.3V
C302	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V	C483	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C303	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C484	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C304	1-164-392-11	CERAMIC CHIP	390PF	5%	50V	C486	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V

CCD-TRV128/TRV228/TRV228E/TRV328/TRV428/TRV428E

VC-341

Ref. No.	Part No.	Description			
C487	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V
C488	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C489	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C490	1-164-874-11	CERAMIC CHIP	100PF	5%	50V
C491	1-164-878-11	CERAMIC CHIP	150PF	5%	50V
C492	1-164-872-11	CERAMIC CHIP	82PF	5%	50V
C493	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C494	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C495	1-164-874-11	CERAMIC CHIP	100PF	5%	50V
C496	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C497	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C498	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C500	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C505	1-100-249-11	CERAMIC CHIP	0.01uF	10%	16V
C507	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
C508	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C509	1-164-941-11	CERAMIC CHIP	0.0047uF	10%	16V
C513	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V
C514	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C515	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C601	1-100-249-11	CERAMIC CHIP	0.01uF	10%	16V
C602	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	50V
C603	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	50V
C604	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C605	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C606	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C607	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C609	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C610	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C611	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C614	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C615	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C616	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C617	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
(TRV328/TRV428/TRV428E)					
C617	1-218-977-11	RES-CHIP	100K	5%	1/16W
(Note) (TRV128/TRV228/TRV228E)					
C618	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
(TRV328/TRV428/TRV428E)					
C618	1-218-977-11	RES-CHIP	100K	5%	1/16W
(Note) (TRV128/TRV228/TRV228E)					
C619	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C620	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C622	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C623	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C624	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C708	1-124-778-00	ELECT CHIP	22uF	20%	6.3V
C709	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C710	1-164-941-11	CERAMIC CHIP	0.0047uF	10%	16V
C711	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C712	1-164-856-81	CERAMIC CHIP	18PF	5%	50V
C713	1-100-249-11	CERAMIC CHIP	0.01uF	10%	16V
C714	1-164-856-81	CERAMIC CHIP	18PF	5%	50V
C715	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C801	1-124-778-00	ELECT CHIP	22uF	20%	6.3V
C802	1-124-779-00	ELECT CHIP	10uF	20%	16V
C805	1-124-779-00	ELECT CHIP	10uF	20%	16V
C806	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V

Ref. No.	Part No.	Description			
C807	1-124-779-00	ELECT CHIP	10uF	20%	16V
C808	1-124-778-00	ELECT CHIP	22uF	20%	6.3V
C810	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C811	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C812	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C814	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C815	1-124-778-00	ELECT CHIP	22uF	20%	6.3V
C816	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C817	1-124-779-00	ELECT CHIP	10uF	20%	16V
C818	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V
C819	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C820	1-126-602-11	ELECT CHIP	3.3uF	20%	50V
C821	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V
C822	1-127-715-91	CERAMIC CHIP	0.22uF	10%	16V
C823	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C825	1-124-778-00	ELECT CHIP	22uF	20%	6.3V
C826	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C828	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C829	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C830	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C831	1-164-941-11	CERAMIC CHIP	0.0047uF	10%	16V
C832	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C833	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C834	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C835	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C836	1-127-715-91	CERAMIC CHIP	0.22uF	10%	16V
C837	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C839	1-125-891-11	CERAMIC CHIP	0.47uF	10%	10V
C840	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
C841	1-124-779-00	ELECT CHIP	10uF	20%	16V
C842	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C843	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C844	1-164-870-11	CERAMIC CHIP	68PF	5%	50V
C845	1-124-778-00	ELECT CHIP	22uF	20%	6.3V
C846	1-126-209-11	ELECT CHIP	100uF	20%	4V
C847	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C848	1-126-209-11	ELECT CHIP	100uF	20%	4V
C849	1-124-778-00	ELECT CHIP	22uF	20%	6.3V
C850	1-100-696-91	CERAMIC CHIP	1uF	10%	6.3V
< CONNECTOR >					
CN002	1-794-998-31	PIN, CONNECTOR 20P			
CN004	1-779-328-21	CONNECTOR, FFC/FPC 8P			
CN005	1-779-335-21	CONNECTOR, FFC/FPC 22P			
CN006	1-766-677-21	CONNECTOR, FFC/FPC 16P			
CN007	1-766-677-21	CONNECTOR, FFC/FPC 16P			
CN008	1-794-057-21	PIN, CONNECTOR (PC BOARD) 2P			
CN009	1-818-072-11	CONNECTOR, FFC/FPC (ZIF) 30P			
CN053	1-573-806-21	PIN, CONNECTOR (1.5MM)(SMD) 6P			
CN151	1-779-331-11	FFC/CONNECTOR, FPC (LIF (NON-ZIF)) 14P			
CN201	1-750-360-21	CONNECTOR, FFC/FPC (ZIF) 24P			
* CN401	1-580-055-21	PIN, CONNECTOR (SMD) 2P			
CN402	1-766-646-21	CONNECTOR, FFC/FPC 10P			
CN403	1-816-179-11	FFC/CONNECTOR, FPC (ZIF) 22P			
CN404	1-766-345-21	CONNECTOR, FFC/FPC 15P			
CN481	1-766-647-21	CONNECTOR, FFC/FPC 11P			

Note: Resistors are mounted to the location where C617, C618 are printed. (TRV128/TRV228/TRV228E only)

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
		< DIODE >			
D001	6-500-314-01	DIODE DAN222MT2L	L055	1-416-669-11	INDUCTOR 22uH
D006	6-500-044-01	DIODE DF6A6.8FU (TE85R)	L056	1-416-669-11	INDUCTOR 22uH
D007	6-500-044-01	DIODE DF6A6.8FU (TE85R)	L057	1-416-670-11	INDUCTOR 33uH
D008	8-719-978-33	DIODE DTZ-TT11-6.8B	L058	1-469-524-91	INDUCTOR 4.7uH
D009	6-500-776-01	DIODE MAZW068H0LS0	L059	1-412-056-11	INDUCTOR 4.7uH
			L060	1-469-524-91	INDUCTOR 4.7uH
D051	6-500-776-01	DIODE MAZW068H0LS0	L061	1-469-524-91	INDUCTOR 4.7uH
D052	8-719-074-08	DIODE MA4ZD03001S0	L062	1-469-524-91	INDUCTOR 4.7uH
D053	8-719-027-76	DIODE 1SS357-TPH3	L063	1-469-526-91	INDUCTOR 22uH
D054	6-500-314-01	DIODE DAN222MT2L	L064	1-469-524-91	INDUCTOR 4.7uH
D055	8-719-074-08	DIODE MA4ZD03001S0	L065	1-469-526-91	INDUCTOR 22uH
D151	8-719-082-63	DIODE 1SV329 (TPL3)	L066	1-410-389-31	INDUCTOR 47uH
D202	8-719-988-61	DIODE 1SS355TE-17	L151	1-400-588-11	INDUCTOR, LAMINATE CHIP 10uH
D301	6-500-818-01	DIODE KV1870RTL-G	L201	1-414-398-11	INDUCTOR 10uH
D302	6-500-818-01	DIODE KV1870RTL-G	L202	1-400-588-11	INDUCTOR, LAMINATE CHIP 10uH
D701	8-719-988-61	DIODE 1SS355TE-17	L271	1-400-588-11	INDUCTOR, LAMINATE CHIP 10uH
					(TRV328/TRV428/TRV428E)
		< FUSE >			
△F001	1-576-406-21	FUSE (1.4A/32V)	L301	1-400-588-11	INDUCTOR, LAMINATE CHIP 10uH
△F002	1-576-406-21	FUSE (1.4A/32V)	L302	1-400-588-11	INDUCTOR, LAMINATE CHIP 10uH
△F003	1-576-406-21	FUSE (1.4A/32V)	L303	1-400-588-11	INDUCTOR, LAMINATE CHIP 10uH
△F004	1-576-406-21	FUSE (1.4A/32V)	L304	1-400-588-11	INDUCTOR, LAMINATE CHIP 10uH
			L308	1-412-985-31	INDUCTOR 3.3uH
		< FERRITE BEAD >			
FB051	1-414-760-21	FERRITE, EMI (SMD) (1608)	L481	1-414-406-41	INDUCTOR 220uH
FB151	1-414-760-21	FERRITE, EMI (SMD) (1608)	L482	1-400-197-11	INDUCTOR 12uH
FB152	1-414-760-21	FERRITE, EMI (SMD) (1608)	L483	1-469-526-91	INDUCTOR 22uH
FB251	1-414-760-21	FERRITE, EMI (SMD) (1608)	L484	1-414-406-41	INDUCTOR 220uH
FB252	1-414-760-21	FERRITE, EMI (SMD) (1608)	L801	1-400-588-11	INDUCTOR, LAMINATE CHIP 10uH
					< TRANSISTOR >
FB401	1-414-760-21	FERRITE, EMI (SMD) (1608)	Q001	8-729-402-84	TRANSISTOR XN4601
FB481	1-414-228-11	INDUCTOR, FERRITE BEAD	Q002	6-550-242-01	TRANSISTOR DTC114EMT2L
FB482	1-414-228-11	INDUCTOR, FERRITE BEAD	Q051	6-550-237-01	TRANSISTOR 2SC5658T2LQ/R
FB601	1-414-760-21	FERRITE, EMI (SMD) (1608)	Q052	6-550-404-01	TRANSISTOR UPA1858GR-9JG-E2-A
			Q053	8-729-101-07	TRANSISTOR 2SB798-DL
		< IC >			
IC001	6-702-302-01	IC TK11133CSCL-G	Q054	6-550-234-01	TRANSISTOR UNR32A300LS0
IC051	6-705-264-01	IC MB44A120BPFV-G-BND-ERE1	Q055	6-550-406-01	TRANSISTOR MCH3335-S-TL-E
IC151	8-752-417-70	IC CXD2444AR-T4	Q056	6-550-559-01	TRANSISTOR XN0NE9200LS0
IC152	8-759-699-92	IC AD80013AJSTRL	Q057	6-550-559-01	TRANSISTOR XN0NE9200LS0
IC201	8-759-637-96	IC uPD16877MA-6A5-E2	Q058	6-550-559-01	TRANSISTOR XN0NE9200LS0
IC202	8-759-681-42	IC NJM12902V (TE2)	Q059	6-550-559-01	TRANSISTOR XN0NE9200LS0
IC251	8-759-713-19	IC BH2222FV-E2	Q060	6-550-559-01	TRANSISTOR XN0NE9200LS0
IC271	8-759-489-19	IC uPC6756GR-8JG-E2	Q061	6-550-559-01	TRANSISTOR XN0NE9200LS0
		(TRV328/TRV428/TRV428E)	Q062	6-550-560-01	TRANSISTOR CPH5819-TL-E
IC301	8-759-677-85	IC MB87M1011PFF-G-BND	Q063	8-729-101-07	TRANSISTOR 2SB798-DL
IC302	6-705-530-01	IC BU3097-03FV-E2			
			Q064	6-550-237-01	TRANSISTOR 2SC5658T2LQ/R
IC401	6-705-676-01	IC TB6550FG (O, EB)	Q065	6-550-232-01	TRANSISTOR 2SA2029T2LQ/R
IC481	8-752-093-69	IC CXA3265R-T4	Q066	6-550-237-01	TRANSISTOR 2SC5658T2LQ/R
IC601	6-803-730-01	IC MB91194APFF-G-153-BNDE1	Q067	6-550-232-01	TRANSISTOR 2SA2029T2LQ/R
IC602	6-705-122-01	IC BR25C320FV-WE2	Q068	6-550-237-01	TRANSISTOR 2SC5658T2LQ/R
IC701	6-803-798-01	IC MB89097PFV-G-170-BND-ERE1			
			Q069	8-729-053-52	TRANSISTOR HN1C01FE-Y/GR (TPLR3)
IC801	6-704-790-01	IC AN12985A-VB	Q070	8-729-053-52	TRANSISTOR HN1C01FE-Y/GR (TPLR3)
		< COIL >	Q071	6-550-232-01	TRANSISTOR 2SA2029T2LQ/R
L051	1-416-670-11	INDUCTOR 33uH	Q072	8-729-053-52	TRANSISTOR HN1C01FE-Y/GR (TPLR3)
L052	1-416-669-11	INDUCTOR 22uH	Q073	8-729-053-54	TRANSISTOR HN1A01FE-Y/GR (TPLR3)
L053	1-416-669-11	INDUCTOR 22uH			
L054	1-416-670-11	INDUCTOR 33uH	Q074	8-729-053-54	TRANSISTOR HN1A01FE-Y/GR (TPLR3)
			Q075	6-550-234-01	TRANSISTOR UNR32A300LS0
			Q201	6-550-758-01	TRANSISTOR DTC113TMT2L
			Q202	8-729-054-51	TRANSISTOR UP04116008S0

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

CCD-TRV128/TRV228/TRV228E/TRV328/TRV428/TRV428E

VC-341

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description						
Q203	6-550-237-01	TRANSISTOR	2SC5658T2LQ/R	R082	1-216-789-11	METAL CHIP	2.2	5%	1/10W		
Q302	6-550-383-01	TRANSISTOR	HN4A71FK (TE85R)	R083	1-218-949-11	RES-CHIP	470	5%	1/16W		
Q304	8-729-054-48	TRANSISTOR	UP04601008S0	R085	1-218-977-11	RES-CHIP	100K	5%	1/16W		
Q306	6-550-232-01	TRANSISTOR	2SA2029T2LQ/R	R086	1-218-973-11	RES-CHIP	47K	5%	1/16W		
Q401	6-550-283-01	TRANSISTOR	UNR32A600LS0	R087	1-218-977-11	RES-CHIP	100K	5%	1/16W		
Q481	8-729-047-19	TRANSISTOR	2SA1965-S-TL	R089	1-218-977-11	RES-CHIP	100K	5%	1/16W		
Q482	6-550-232-01	TRANSISTOR	2SA2029T2LQ/R	R090	1-218-977-11	RES-CHIP	100K	5%	1/16W		
Q483	8-729-054-48	TRANSISTOR	UP04601008S0	R091	1-218-969-11	RES-CHIP	22K	5%	1/16W		
Q484	6-550-234-01	TRANSISTOR	UNR32A300LS0	R092	1-218-961-11	RES-CHIP	4.7K	5%	1/16W		
Q485	6-550-240-01	TRANSISTOR	DTA114TMT2L	R093	1-218-969-11	RES-CHIP	22K	5%	1/16W		
Q701	8-729-041-43	TRANSISTOR	HN1L02FU (TE85R)	R094	1-218-969-11	RES-CHIP	22K	5%	1/16W		
< RESISTOR >											
R001	1-218-949-11	RES-CHIP	470	5%	1/16W	R095	1-218-977-11	RES-CHIP	100K	5%	1/16W
R002	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R096	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R004	1-211-977-11	METAL CHIP	22	0.5%	1/10W	R097	1-208-715-11	METAL CHIP	22K	0.5%	1/16W
R005	1-218-969-11	RES-CHIP	22K	5%	1/16W	R098	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
R005	1-218-974-11	RES-CHIP	56K	5%	1/16W	R099	1-208-707-11	METAL CHIP	10K	0.5%	1/16W
R005	1-218-977-11	RES-CHIP	100K	5%	1/16W	R100	1-208-707-11	METAL CHIP	10K	0.5%	1/16W
R006	1-218-965-11	RES-CHIP	10K	5%	1/16W	R101	1-208-943-11	METAL CHIP	220K	0.5%	1/16W
R006	1-218-973-11	RES-CHIP	47K	5%	1/16W	R102	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R006	1-218-975-11	RES-CHIP	68K	5%	1/16W	R103	1-208-721-11	METAL CHIP	39K	0.5%	1/16W
R006	1-218-977-11	RES-CHIP	100K	5%	1/16W	R104	1-208-908-11	METAL CHIP	7.5K	0.5%	1/16W
R007	1-208-683-11	METAL CHIP	1K	0.5%	1/16W	R105	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R010	1-208-707-11	METAL CHIP	10K	0.5%	1/16W	R106	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R011	1-218-953-11	RES-CHIP	1K	5%	1/16W	R107	1-218-964-11	RES-CHIP	8.2K	5%	1/16W
R014	1-218-940-11	RES-CHIP	82	5%	1/16W	R109	1-218-990-11	SHORT CHIP	0		
R018	1-218-943-11	RES-CHIP	150	5%	1/16W	R110	1-208-943-11	METAL CHIP	220K	0.5%	1/16W
R021	1-218-943-11	RES-CHIP	150	5%	1/16W	R111	1-208-931-11	METAL CHIP	68K	0.5%	1/16W
R022	1-218-953-11	RES-CHIP	1K	5%	1/16W	R114	1-216-295-91	SHORT CHIP	0		
R051	1-218-953-11	RES-CHIP	1K	5%	1/16W	R116	1-216-295-91	SHORT CHIP	0		
R052	1-220-200-81	RES-CHIP	30K	5%	1/16W	R152	1-216-864-11	SHORT CHIP	0		
R053	1-218-977-11	RES-CHIP	100K	5%	1/16W	R155	1-218-977-11	RES-CHIP	100K	5%	1/16W
R054	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R162	1-218-989-11	RES-CHIP	1M	5%	1/16W
R061	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R163	1-218-990-11	SHORT CHIP	0		
R062	1-218-989-11	RES-CHIP	1M	5%	1/16W	R164	1-218-985-11	RES-CHIP	470K	5%	1/16W
R063	1-218-973-11	RES-CHIP	47K	5%	1/16W	R203	1-208-635-11	METAL CHIP	10	0.5%	1/16W
R064	1-216-797-11	METAL CHIP	10	5%	1/10W	R204	1-218-989-11	RES-CHIP	1M	5%	1/16W
R065	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R205	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R066	1-218-970-11	RES-CHIP	27K	5%	1/16W	R206	1-218-965-11	RES-CHIP	10K	5%	1/16W
R067	1-218-954-11	RES-CHIP	1.2K	5%	1/16W	R207	1-218-981-11	RES-CHIP	220K	5%	1/16W
R068	1-218-963-11	RES-CHIP	6.8K	5%	1/16W	R208	1-218-985-11	RES-CHIP	470K	5%	1/16W
R069	1-218-964-11	RES-CHIP	8.2K	5%	1/16W	R209	1-218-985-11	RES-CHIP	470K	5%	1/16W
R070	1-218-971-11	RES-CHIP	33K	5%	1/16W	R210	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R071	1-218-965-11	RES-CHIP	10K	5%	1/16W	R211	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
R072	1-218-953-11	RES-CHIP	1K	5%	1/16W	R212	1-218-985-11	RES-CHIP	470K	5%	1/16W
R073	1-218-953-11	RES-CHIP	1K	5%	1/16W	R213	1-218-947-11	RES-CHIP	330	5%	1/16W
R074	1-208-709-11	METAL CHIP	12K	0.5%	1/16W	R214	1-218-953-11	RES-CHIP	1K	5%	1/16W
R075	1-218-953-11	RES-CHIP	1K	5%	1/16W	R215	1-218-965-11	RES-CHIP	10K	5%	1/16W
R076	1-218-990-11	SHORT CHIP	0			R216	1-218-973-11	RES-CHIP	47K	5%	1/16W
R077	1-218-978-11	RES-CHIP	120K	5%	1/16W	R271	1-218-989-11	RES-CHIP	1M	5%	1/16W
R078	1-208-715-11	METAL CHIP	22K	0.5%	1/16W	R272	1-218-965-11	RES-CHIP	10K	5%	1/16W
						R273	1-218-965-11	RES-CHIP	10K	5%	1/16W
						R274	1-218-989-11	RES-CHIP	1M	5%	1/16W
						R302	1-218-965-11	RES-CHIP	10K	5%	1/16W
						R303	1-218-954-11	RES-CHIP	1.2K	5%	1/16W


Ref. No.	Part No.	Description				Ref. No.	Part No.	Description			
R306	1-218-949-11	RES-CHIP	470	5%	1/16W	R484	1-218-970-11	RES-CHIP	27K	5%	1/16W
R307	1-218-962-11	RES-CHIP	5.6K	5%	1/16W						
R308	1-218-953-11	RES-CHIP	1K	5%	1/16W	R487	1-218-970-11	RES-CHIP	27K	5%	1/16W
R309	1-218-963-11	RES-CHIP	6.8K	5%	1/16W	R488	1-218-945-11	RES-CHIP	220	5%	1/16W
R310	1-218-959-11	RES-CHIP	3.3K	5%	1/16W	R489	1-218-945-11	RES-CHIP	220	5%	1/16W
R311	1-218-941-81	RES-CHIP	100	5%	1/16W	R490	1-218-946-11	RES-CHIP	270	5%	1/16W
R314	1-218-967-11	RES-CHIP	15K	5%	1/16W	R491	1-218-945-11	RES-CHIP	220	5%	1/16W
R315	1-218-952-11	RES-CHIP	820	5%	1/16W	R492	1-218-971-11	RES-CHIP	33K	5%	1/16W
R316	1-218-966-11	RES-CHIP	12K	5%	1/16W	R493	1-218-958-11	RES-CHIP	2.7K	5%	1/16W
R317	1-218-949-11	RES-CHIP	470	5%	1/16W	R494	1-218-958-11	RES-CHIP	2.7K	5%	1/16W
R318	1-218-945-11	RES-CHIP	220	5%	1/16W	R495	1-208-939-11	METAL CHIP	150K	0.5%	1/16W
R319	1-218-962-11	RES-CHIP	5.6K	5%	1/16W	R601	1-218-941-81	RES-CHIP	100	5%	1/16W
R320	1-218-966-11	RES-CHIP	12K	5%	1/16W	R602	1-218-965-11	RES-CHIP	10K	5%	1/16W
R321	1-218-946-11	RES-CHIP	270	5%	1/16W	R616	1-218-953-11	RES-CHIP	1K	5%	1/16W
R322	1-218-946-11	RES-CHIP	270	5%	1/16W	R619	1-218-953-11	RES-CHIP	1K	5%	1/16W
R323	1-218-966-11	RES-CHIP	12K	5%	1/16W	R636	1-218-977-11	RES-CHIP	100K	5%	1/16W
R324	1-218-966-11	RES-CHIP	12K	5%	1/16W	R704	1-218-973-11	RES-CHIP	47K	5%	1/16W
R325	1-218-946-11	RES-CHIP	270	5%	1/16W	R707	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R327	1-218-966-11	RES-CHIP	12K	5%	1/16W	R708	1-218-989-11	RES-CHIP	1M	5%	1/16W
R328	1-218-946-11	RES-CHIP	270	5%	1/16W	R709	1-219-570-11	METAL CHIP	10M	5%	1/10W
R330	1-218-972-11	RES-CHIP	39K	5%	1/16W	R710	1-218-985-11	RES-CHIP	470K	5%	1/16W
R331	1-218-989-11	RES-CHIP	1M	5%	1/16W	R711	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R332	1-218-967-11	RES-CHIP	15K	5%	1/16W	R712	1-218-965-11	RES-CHIP	10K	5%	1/16W
R333	1-218-966-11	RES-CHIP	12K	5%	1/16W	R713	1-218-990-11	SHORT CHIP	0		
R334	1-218-949-11	RES-CHIP	470	5%	1/16W	R714	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R335	1-218-953-11	RES-CHIP	1K	5%	1/16W	R715	1-218-953-11	RES-CHIP	1K	5%	1/16W
R336	1-218-965-11	RES-CHIP	10K	5%	1/16W	R716	1-218-989-11	RES-CHIP	1M	5%	1/16W
R339	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R717	1-218-949-11	RES-CHIP	470	5%	1/16W
R341	1-218-953-11	RES-CHIP	1K	5%	1/16W	R718	1-218-977-11	RES-CHIP	100K	5%	1/16W
R401	1-218-973-11	RES-CHIP	47K	5%	1/16W	R806	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R402	1-218-983-11	RES-CHIP	330K	5%	1/16W	R807	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R403	1-218-949-11	RES-CHIP	470	5%	1/16W	R810	1-218-965-11	RES-CHIP	10K	5%	1/16W
R404	1-218-946-11	RES-CHIP	270	5%	1/16W	R811	1-218-973-11	RES-CHIP	47K	5%	1/16W
R405	1-218-990-11	SHORT CHIP	0			R812	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R409	1-216-808-11	METAL CHIP	82	5%	1/10W	R815	1-218-979-11	RES-CHIP	150K	5%	1/16W
R410	1-216-789-11	METAL CHIP	2.2	5%	1/10W	R817	1-218-985-11	RES-CHIP	470K	5%	1/16W
R411	1-216-789-11	METAL CHIP	2.2	5%	1/10W	R818	1-218-990-11	SHORT CHIP	0		
R412	1-216-789-11	METAL CHIP	2.2	5%	1/10W	R819	1-218-952-11	RES-CHIP	820	5%	1/16W
R413	1-218-965-11	RES-CHIP	10K	5%	1/16W						
					(TRV228E/TRV428E)						
R413	1-218-990-11	SHORT CHIP	0			RB201	1-234-375-21	RES, NETWORK 1K x 4 (1005)			
					(TRV128/TRV228/TRV328/TRV428)	RB202	1-234-379-21	RES, NETWORK 22K x 4 (1005)			
R414	1-218-967-11	RES-CHIP	15K	5%	1/16W	RB203	1-234-380-21	RES, NETWORK 47K x 4 (1005)			
					(TRV128/TRV228/TRV328/TRV428)	RB271	1-234-379-21	RES, NETWORK 22K x 4 (1005)			
R414	1-218-973-11	RES-CHIP	47K	5%	1/16W						(TRV328/TRV428/TRV428E)
					(TRV228E/TRV428E)	RB301	1-234-378-21	RES, NETWORK 10K x 4 (1005)			
R424	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB302	1-234-376-21	RES, NETWORK 2.2K x 4 (1005)			
R426	1-218-967-11	RES-CHIP	15K	5%	1/16W	RB401	1-234-378-21	RES, NETWORK 10K x 4 (1005)			
R427	1-218-965-11	RES-CHIP	10K	5%	1/16W	RB481	1-234-379-21	RES, NETWORK 22K x 4 (1005)			
					(TRV228E/TRV428E)	RB482	1-234-383-21	RES, NETWORK 470K x 4 (1005)			
R427	1-218-990-11	SHORT CHIP	0			RB483	1-234-376-21	RES, NETWORK 2.2K x 4 (1005)			
					(TRV128/TRV228/TRV328/TRV428)	RB601	1-234-381-21	RES, NETWORK 100K x 4 (1005)			
R431	1-216-864-11	SHORT CHIP	0			RB605	1-234-375-21	RES, NETWORK 1K x 4 (1005)			
R481	1-218-936-11	RES-CHIP	39	5%	1/16W	RB606	1-234-378-21	RES, NETWORK 10K x 4 (1005)			
					(TRV228E/TRV428E)	RB608	1-234-384-11	RES, NETWORK 1M x 4 (1005)			
R481	1-218-938-11	RES-CHIP	56	5%	1/16W	RB610	1-234-377-21	RES, NETWORK 4.7K x 4 (1005)			
					(TRV128/TRV228/TRV328/TRV428)						(TRV328/TRV428/TRV428E)
R482	1-218-950-11	RES-CHIP	560	5%	1/16W	RB611	1-234-381-21	RES, NETWORK 100K x 4 (1005)			
R483	1-218-941-81	RES-CHIP	100	5%	1/16W						

CCD-TRV128/TRV228/TRV228E/TRV328/TRV428/TRV428E

VC-341

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
RB612	1-234-380-21	RES, NETWORK 47K x 4 (1005)
RB613	1-234-377-21	RES, NETWORK 4.7K x 4 (1005)
RB701	1-234-383-21	RES, NETWORK 470K x 4 (1005)
RB703	1-234-375-21	RES, NETWORK 1K x 4 (1005)
RB704	1-234-375-21	RES, NETWORK 1K x 4 (1005)
RB705	1-234-375-21	RES, NETWORK 1K x 4 (1005)
RB706	1-234-375-21	RES, NETWORK 1K x 4 (1005)
RB708	1-234-381-21	RES, NETWORK 100K x 4 (1005)
RB801	1-234-702-11	RES, NETWORK 68 x 4 (1005)
< VIBRATOR >		
X151	1-760-320-11	VIBRATOR, CRYSTAL (28.636363MHZ) (TRV128/TRV228/TRV328/TRV428)
X151	1-760-321-11	VIBRATOR, CRYSTAL (28.375MHz) (TRV228E/TRV428E)
X601	1-760-655-41	VIBRATOR, CRYSTAL (20MHz)
X701	1-795-244-11	VIBRATOR, CERAMIC (10MHz)
X702	1-760-458-21	VIBRATOR, CRYSTAL (32.768kHz)


Checking supplied accessories.

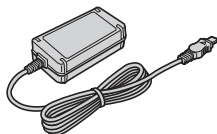


AC-L15A/L15B AC Adaptor (1)
 ▲ 1-477-533-32 (Middle East area)
 ▲ 1-477-533-51
 (EXCEPT Middle East area, BR)




Power cord (1)
 ▲ 1-690-827-12 (AEP, NE, EE)
 ▲ 1-696-819-21 (AUS)
 ▲ 1-769-608-11 (E)
 ▲ 1-775-843-52 (UK)
 ▲ 1-783-374-11 (HK)
 ▲ 1-783-952-21 (AR)
 ▲ 1-790-542-12 (US, CND)
 ▲ 1-827-160-11 (JE)

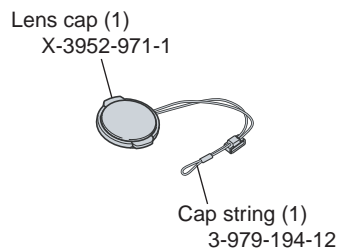

Lens cap (1)
 X-3952-971-1
 Cap string (1)
 3-979-194-12




Shoulder strap (1)
 3-987-015-01



Rechargeable battery pack
 NP-FM30 (1)
 ▲ A-7096-387-A (US, CND)
 ▲ A-7096-388-B
 (EXCEPT US, CND)



A/V connecting cable (1)
 1-783-738-91 (AEP, UK, NE, EE)
 1-824-009-31
 (EXCEPT AEP, UK, NE, EE)

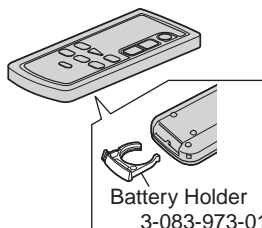


Battery Holder
 3-083-973-01
 Wireless Remote Commander
 RMT-833 (1)
 1-477-898-11 (EXCEPT TRV128/
 TRV228E: E1/TRV328/TRV428E: E1)
 1-477-898-31
 (TRV228E: E2/TRV428E: E2)


(Note) E1: No indication of country of origin.
 E2: There is indication of country of origin.



21-pin adaptor (1)
 1-770-783-21 (AEP, UK, NE, EE)



Conversion 2P adaptor (1)
 ▲ 1-569-008-12 (E, HK)



Conversion 2P adaptor (1)
 ▲ 1-569-007-12 (JE)

Other accessories


- 3-087-918-11 MANUAL, INSTRUCTION (ENGLISH)
 (TRV128: US, CND, E/TRV228/TRV328/TRV428)
- 3-087-918-21 MANUAL, INSTRUCTION (FRENCH)
 (TRV128: CND/TRV328: CND)
- 3-087-918-31 MANUAL, INSTRUCTION (SPANISH, PORTUGUESE)
 (TRV128: E, MX/TRV228/TRV328: E/TRV428)
- 3-087-918-41 MANUAL, INSTRUCTION (TRADITIONAL CHINESE)
 (TRV228)
- 3-087-918-51 MANUAL, INSTRUCTION (KOREA) (TRV428)
- 3-087-918-61 MANUAL, INSTRUCTION (ARABIC) (TRV228)
- 3-087-919-11 MANUAL, INSTRUCTION (ENGLISH)
 (TRV228E: AEP, UK, E/TRV428E: AEP, E, AUS, HK, JE)
- 3-087-919-21 MANUAL, INSTRUCTION (FRENCH)
 (TRV228E: AEP, E/TRV428E: AEP, E, JE)
- 3-087-919-31 MANUAL, INSTRUCTION (SPANISH, PORTUGUESE)
 (TRV228E: AEP/TRV428E: AEP)
- 3-087-919-41 MANUAL, INSTRUCTION (ITALIAN, GREEK)
 (TRV228E: AEP/TRV428E: AEP)
- 3-087-919-51 MANUAL, INSTRUCTION (GERMAN, DUTCH)
 (TRV228E: AEP/TRV428E: AEP)
- 3-087-919-61 MANUAL, INSTRUCTION (SWEDISH, RUSSIAN)
 (TRV228E: NE/TRV428E: NE, JE)
- 3-087-919-71 MANUAL, INSTRUCTION (DANISH, FINNISH)
 (TRV228E: NE/TRV428E: NE)
- 3-087-919-81 MANUAL, INSTRUCTION (POLISH, CZECH)
 (TRV228E: EE/TRV428E: EE)
- 3-087-919-91 MANUAL, INSTRUCTION (HUNGALIAN, SLOVAK)
 (TRV228E: EE/TRV428E: EE)
- 3-087-920-11 MANUAL, INSTRUCTION (ARABIC, PERSIAN)
 (TRV228E: E/TRV428E: E)
- 3-087-920-21 MANUAL, INSTRUCTION (TRADITIONAL CHINESE)
 (TRV428E: HK)
- 3-087-920-31 MANUAL, INSTRUCTION (SIMPLIFIED CHINESE)
 (TRV228E: E/TRV428E: E, JE)

The components identified by mark ▲ or dotted line with mark ▲ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque ▲ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Camera Operations Guide

Read this first

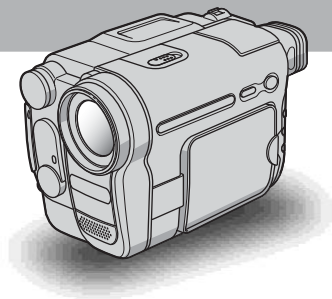

Video Camera Recorder/Digital Video Camera Recorder

HANDYCAM

video Hi8

CCD-TRV128/TRV228/TRV328/TRV428

Digital 8

DCR-TRV260/TRV265





Read this first

Before operating the unit, please read this manual thoroughly, and retain it for future reference.

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>		



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

For customers in the U.S.A. and CANADA

CAUTION

TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

RECYCLING LITHIUM-ION BATTERIES

Lithium-Ion batteries are recyclable.

You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you.

For more information regarding recycling of rechargeable batteries, call toll free 1-800-822- 8837, or visit <http://www.rbrcc.org/>



Caution: Do not handle damaged or leaking Lithium-Ion batteries.

For customers in the U.S.A.

If you have any questions about this product, you may call:

Sony Customer Information Center 1-800-222-SONY (7669)

The number below is for FCC related matters only. Regulatory Information

Declaration of Conformity

Trade Name: SONY

Model No.: DCR-TRV260

Responsible Party: Sony Electronics Inc.

Address: 680 Kinderkamack Road, Oradell, NJ 07649 U.S.A.

Telephone No.: 201-930-6972

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Owner's Record

The model and serial numbers are located on the bottom. Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. _____ -TRV _____

Serial No. _____

Model No.AC- _____

Serial No. _____

CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.




However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult a Sony dealer or an experienced radio/TV technician for help.

The interface cable supplied must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

Notes on use

Note on a cassette tape

You can use standard 8 mm  and Hi8 , Digital8  video cassettes on your camcorder. See page 82 for details.

Notes on recording

- Before starting to record, test the recording function to make sure the picture and sound are recorded without any problems.
- Compensation for the contents of recordings cannot be provided, even if recording or playback is not possible due to a malfunction of the camcorder, etc.
- TV color systems differ depending on the country/regions. To view your recordings on a TV, you need an NTSC system-based TV.
- Television programs, films, video tapes, and other materials may be copyrighted. Unauthorized

recording of such materials may be contrary to the copyright laws.







Notes on the LCD panel, viewfinder, and lens

- The LCD screen and the viewfinder are manufactured using extremely high-precision technology, so over 99.99% of the pixels are operational for effective use.
However, there may be some tiny black points and/or bright points (white, red, blue, or green in color) that appear constantly on the LCD screen and the viewfinder.
These points are normal results of the manufacturing process and do not affect the recording in any way.
- Exposing the LCD screen, the viewfinder, or the lens to direct sunlight for long periods of time may cause malfunctions. Be careful when placing the camera near a window or outdoors.
- Do not aim at the sun. Doing so might cause your camcorder to malfunction. Take pictures of the sun only in low light conditions, such as at dusk.

Note on connecting other device

Before connecting your camcorder to other device such as a VCR or a computer with a USB or i.LINK cable, be sure to insert the connector plug in the proper direction. If you insert the connector plug forcibly in the wrong direction, the terminal may be damaged. This may cause a malfunction of your camcorder.


Notes on using this manual

- The images of the LCD screen and the viewfinder used on this manual are captured using a digital still camera, and thus may appear different from what you see.
- In this instruction manual, each model is indicated as follows.
CCD-TRV128:  TRV128
CCD-TRV228:  TRV228
CCD-TRV328:  TRV328
CCD-TRV428:  TRV428
DCR-TRV260:  TRV260
DCR-TRV265:  TRV265
Instructions with no specific model names are for all models.
Instructions with specific model names are for the indicated models only.
Before you start reading this manual, check the model name of your camcorder.
- The illustrations used on this manual are based on the model DCR-TRV265.


→ *continued*

Notes on using the camcorder


- Hold your camcorder correctly.

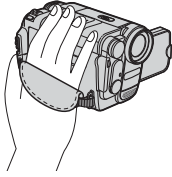

- To ensure a good grip, fasten the grip belt as shown in the following illustration.

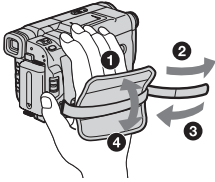


- You can change the language to be used for screen display on your camcorder (p. 19).
- Do not hold the camcorder by the following parts.

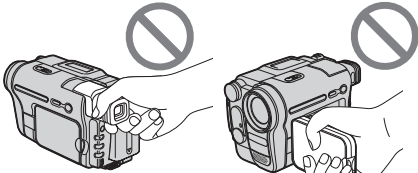

Viewfinder

LCD panel

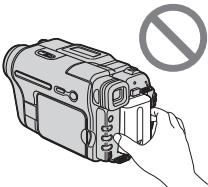

Battery pack

- Turn the SEL/PUSH EXEC dial to select desired item, then press the dial to decide.

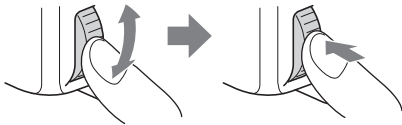


Table of Contents

CCD-TRV128: **Hi8** TRV128 CCD-TRV428: **Hi8** TRV428
CCD-TRV228: **Hi8** TRV228 DCR-TRV260: **Hi8** TRV260
CCD-TRV328: **Hi8** TRV328 DCR-TRV265: **Hi8** TRV265

Read this first 2

Quick Start Guide

Recording movies on a tape 8
Recording/Playing back with ease 10

Getting started

Step 1: Checking supplied items 11
Step 2: Charging the battery pack 12
 Using an outside power source 15
Step 3: Turning the power on 15
Step 4: Adjusting the LCD panel and viewfinder 16
 Adjusting the LCD panel 16
 Adjusting the viewfinder 16
Step 5: Setting the date and time 17
Step 6: Inserting a cassette tape 18
Step 7: Setting the screen language 19

Recording

Recording movies 21
 Recording for a longer time 23
 Using zoom 23
 Using the built-in light 23
 Recording in mirror mode 24
 Superimposing the date and time on pictures (**Hi8** TRV128/228/328/428) 25
Recording still images – Tape photo recording (**Hi8** TRV260/265) 25
Recording with ease – Easy Handycam 26
Adjusting the exposure 27
 Adjusting the exposure for backlit subjects 27
 Adjusting the exposure manually 28
Recording in dark places – NightShot plus 28
Adjusting the focus manually 29
Recording a picture using various effects 30
 Fading in and out of a scene – FADER 30

→ continued










Superimposing a title.....	31
Searching for the last scene of the most recent recording – END SEARCH	33

Playback




Viewing pictures recorded on a tape.....	34
Playing back in various modes	35
Playing back with ease – Easy Handycam	36
Various playback functions	37
Displaying the screen indicators	37
Displaying the date/time and camera settings data – Data code (▶TRV260/265)	37
Playing the picture on a TV	39
Locating a scene on a tape for playback (▶TRV265)	40
Searching quickly for a desired scene – Zero set memory	40
Searching for a scene by date of recording – Date search	41
Searching for a still image – Photo search	41
Playing back still images in sequence – Photo scan	42

Advanced operations

Customizing Your Camcorder

- Changing the menu settings43
- Using the  (MANUAL SET) menu
– PROGRAM AE/P EFFECT,
etc.44
- Using the  (CAMERA SET) menu
– 16:9 WIDE/STEADYSHOT,
etc.47
- Using the  (PLAYER SET)/ (VCR SET) menu – HiFi SOUND/EDIT,
etc.51
- Using the  (LCD SET) menu – LCD
B.L./LCD COLOR, etc.53
- Using the  (TAPE SET) menu
– FRAME REC/INT.REC, etc.54
- Using the  (SETUP MENU) – CLOCK
SET/USB STREAM/ LANGUAGE,
etc.57
- Using the  (OTHERS) menu
– WORLD TIME/VIDEO EDIT,
etc.59

Dubbing/Editing

- Connecting to a VCR61
- Dubbing to another tape63
- Dubbing a tape easily – Easy Dubbing
( TRV128/228/328/428)64
- Recording pictures from a VCR
( TRV260/265)68
- Dubbing selected scenes from a tape
– Digital program editing
( TRV260/265)69

Troubleshooting


- Troubleshooting74
- Warning indicators and messages79

Additional Information

- Using your camcorder abroad81
- Usable cassette tapes82
- About the “InfoLITHIUM” battery
pack83
- About i.LINK84
- Maintenance and precautions85
- Specification88

Quick Reference

- Identifying parts and controls91
- Index98

For  TRV260/265:
Refer also to other operating instructions
supplied with your camcorder:

- Editing images with your computer
→ Computer Applications Guide




Quick Start Guide

Recording movies


1 Attach the charged battery pack to the camcorder.

To charge the battery, see page 12.

① Lift up the viewfinder.

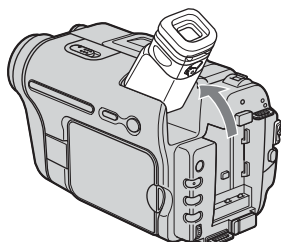


② Slide the battery pack in the direction of the arrow until it clicks.

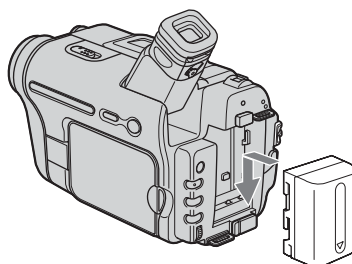


2 Insert a cassette into the camcorder.

① Slide the **OPEN/EJECT** lever in the direction of the arrow to open the lid.

The cassette compartment comes out automatically.

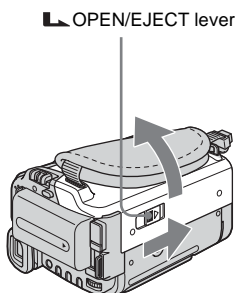


② Insert the cassette with its window-side facing up, then push the center of the back of the cassette.

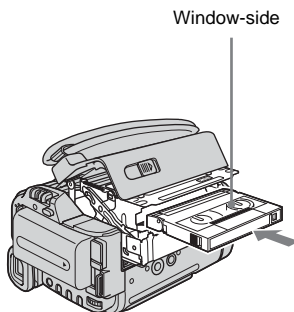

③ Press **PUSH**.

Close the cassette lid after the cassette compartment slides back in by itself.

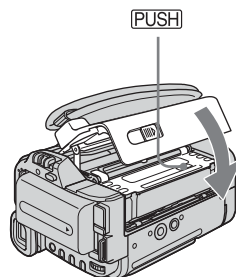

3 Start recording while checking the subject on the LCD screen.

The date and time is not set up in the default setting. To set the date and time, see page 17.

1 Remove the lens cap.

Lens cap is not attached when you purchase your camcorder (p. 91).


2 Press OPEN and open the LCD panel.

3 While pressing the green button, slide the POWER switch down to light up the CAMERA lamp.

The power turns on.

4 Press REC START/STOP.

Recording starts. To change to standby mode, press REC START/STOP again.

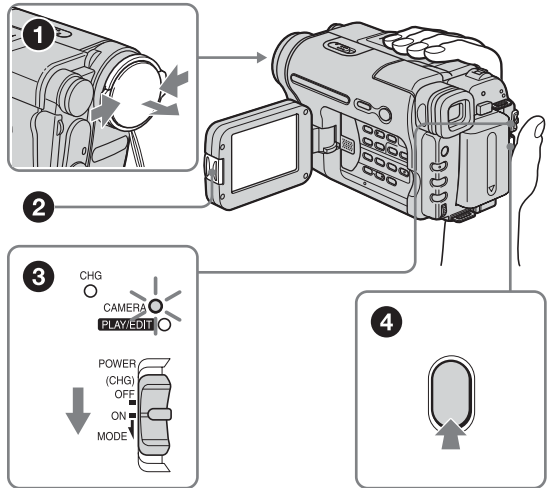

4 View the recorded picture on the LCD screen.


1 Slide the POWER switch repeatedly until the PLAY/EDIT lamp lights up.

2 Press ⏮ (rewind).

3 Press ⏪ (play) to start the playback.

To stop, press ⏹.

To turn off the power, slide the POWER switch up to (CHG) OFF.

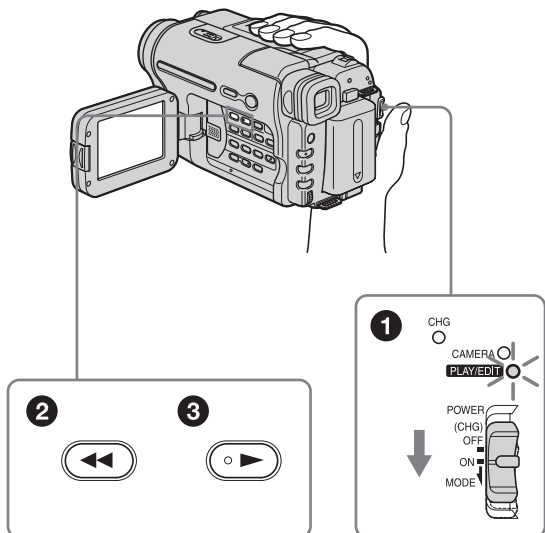






Recording/Playing back with ease

By switching to Easy Handycam operation, recording/playback operation becomes even easier.

Easy Handycam operation allows easy recording/playback for even first time users by providing only the basic functions for recording/playback.

Press EASY when recording/ playing back.

EASY lights up in blue (1) and screen font size increases (2) during Easy Handycam operation.

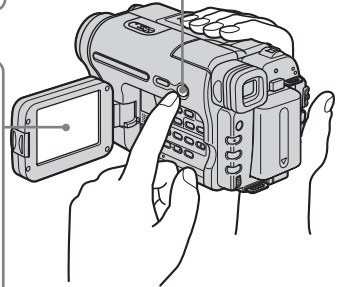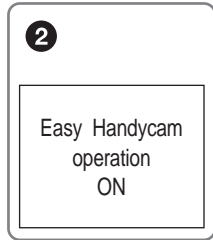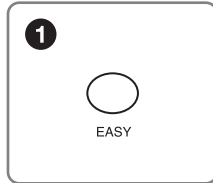


For details, see instructions for each operation.
See page 26 for recording, page 36 for playback.

Step 1: Checking supplied items


Make sure you have following items supplied with your camcorder.

The number in parentheses indicates the number of that item supplied.

AC Adaptor (1)

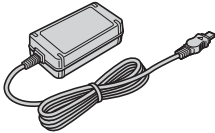


Power cord (1)




Lens cap (1)

See page 91 on how to attach the lens cap.



Shoulder strap (1)

See page 94 on how to attach the shoulder strap.



Wireless Remote Commander (1)

A button-type lithium battery is already installed.

RMT-833: (Hi8 TRV228/428)



RMT-830: (Hi8 TRV265)



A/V connecting cable (1)

Monaural: (Hi8 TRV128/228/328/428)



Stereo: (Hi8 TRV260/265)



USB cable (1)

(Hi8 TRV260/265)



Rechargeable battery pack NP-FM30 (1)

CD-ROM "SPVD-012 USB Driver" (1)

(Hi8 TRV260/265)

Camera Operations Guide (This manual) (1)

Computer Applications Guide (1)


(Hi8 TRV260/265)

Step 2: Charging the battery pack


You can charge the battery by attaching the “InfoLITHIUM” battery pack (M series) to your camcorder.

Notes


- You cannot use batteries other than the “InfoLITHIUM” battery pack (M series) (p. 83).
- Do not short-circuit the DC plug of the AC Adaptor or battery terminals with any metallic objects. This may cause a malfunction.
- Use a nearby wall outlet when using the AC Adaptor. Disconnect the AC Adaptor from the wall outlet immediately if any malfunction occurs.

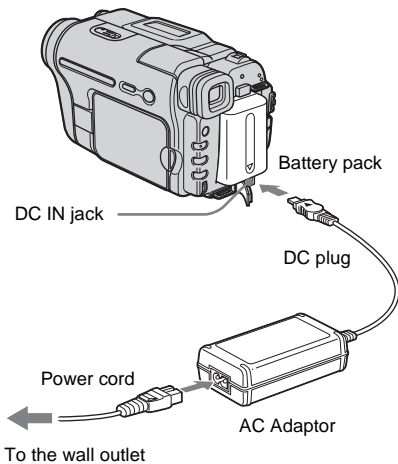


1 Lift up the viewfinder.

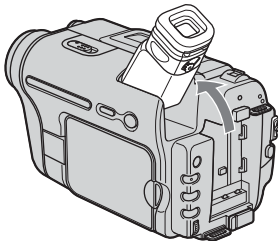

- 2 Attach the battery pack by sliding it in the direction of the arrow until it clicks.

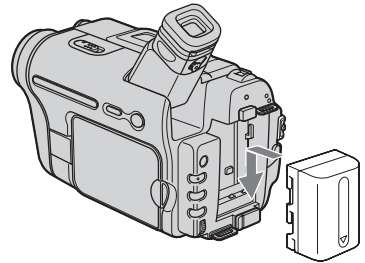

- 3 With the ▲ mark on the DC plug facing up, connect the AC Adaptor to the DC IN jack on your camcorder.

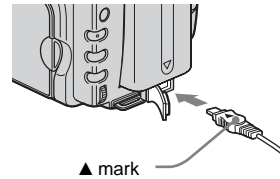

- 4 Connect the power cord to the AC Adaptor.

- 5 Connect the power cord to the wall outlet.

- 6 Slide the POWER switch up to (CHG) OFF.


The CHG (charge) lamp lights up and charging starts.



After charging the battery

The CHG (charge) lamp turns off when the battery is fully charged. Disconnect the AC Adaptor from the DC IN jack.

To remove the battery pack

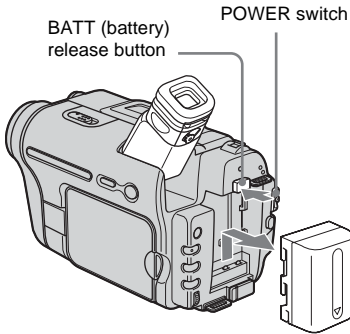


- 1 Lift up the viewfinder.
- 2 Set the POWER switch to (CHG) OFF.
- 3 Slide the battery pack out in the direction of the arrow while pressing the BATT (battery) release button down.

Note

- If you do not use the battery pack for a long time, use up the battery pack completely before storing it. See page 83 about storage of the battery pack.

To check the remaining battery – Battery Info

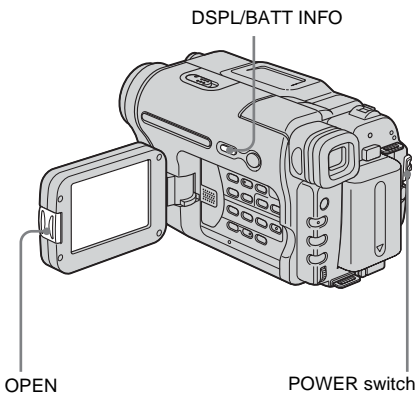


You can check the battery's current charge level and its current remaining recording time both during charging or when the power is turned off.

- 1 Set the POWER switch to (CHG) OFF.
- 2 Press OPEN and open the LCD panel.
- 3 Press DSPL/BATT INFO.

The battery information appears for about 7 seconds.

Keep the button pressed to view it for about 20 seconds.

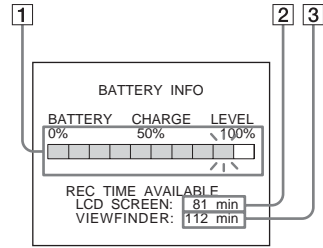

- 1 Battery charge level: Displays approximate remaining amount of power left in the battery pack.
- 2 Approximate possible recording time using the LCD panel.
- 3 Approximate possible recording time using the viewfinder.

Charging time

Approximate number of minutes required when you fully charge a fully discharged battery pack at 25°C (77°F). (10 – 30°C (50 – 86°F) recommended.)

Battery pack	
NP-FM30 (supplied)	145
NP-FM50	150
NP-QM71/QM71D	260
NP-QM91/QM91D	360

Recording time when recording with the LCD screen on

Approximate number of minutes available when you use a fully charged battery pack at 25°C (77°F).

→ continued

For **Hi8** TRV128/228/328/428:

Battery pack	Continuous recording time	Typical* recording time
NP-FM30 (supplied)	115	55
NP-FM50	185	90
NP-QM71/QM71D	445	220
NP-QM91/QM91D	670	335

For **H** TRV260/265:

Battery pack	Continuous recording time	Typical* recording time
NP-FM30 (supplied)	90	50
NP-FM50	145	80
NP-QM71/QM71D	335	220
NP-QM91/QM91D	535	300

Recording time when recording with the viewfinder

Approximate number of minutes available when you use a fully charged battery pack at 25°C (77°F).

For **Hi8** TRV128/228/328/428:

Battery pack	Continuous recording time	Typical* recording time
NP-FM30 (supplied)	175	85
NP-FM50	280	135
NP-QM71/QM71D	675	330
NP-QM91/QM91D	1010	495

For **H** TRV260/265:

Battery pack	Continuous recording time	Typical* recording time
NP-FM30 (supplied)	125	65
NP-FM50	200	105
NP-QM71/QM71D	485	255
NP-QM91/QM91D	725	385

* Approximate number of minutes when recording while you repeatedly record, start/stop, slide the POWER switch to change the power mode, and zoom. The actual battery life may be shorter.

Playing time

Approximate number of minutes available when you use a fully charged battery pack at 25°C (77°F).

For **Hi8** TRV128/228/328/428:

Battery pack	LCD panel opened	LCD panel closed
NP-FM30 (supplied)	115	185
NP-FM50	185	295
NP-QM71/QM71D	445	715
NP-QM91/QM91D	670	1070

For **H** TRV260/265:

Battery pack	LCD panel opened	LCD panel closed
NP-FM30 (supplied)	100	150
NP-FM50	160	240
NP-QM71/QM71D	390	580
NP-QM91/QM91D	585	865

Notes

- The power will not be supplied from the battery pack when the AC Adaptor is connected to the DC IN jack of your camcorder, even if its power cord is disconnected from the wall outlet.
- The recording and playback time will be shorter when you use your camcorder in low temperature.
- The CHG (charge) lamp flashes during charging, or the battery information will not be correctly displayed in following conditions.
 - The battery pack is not attached correctly.
 - The battery pack is damaged.
 - The battery pack is fully discharged. (For Battery information only.)

Using an outside power source

You can use the AC Adaptor as the power source when you do not want the battery to run out. While you are using the AC Adaptor, the battery pack will not lose its charge even when it is attached to your camcorder.

PRECAUTION

Even if your camcorder is turned off, AC power (house current) is still supplied to it while connected to the wall outlet via the AC Adaptor.

Connect your camcorder as shown in “Charging the battery pack” (p. 12).

Step 3: Turning the power on


You need to slide the POWER switch repeatedly to select the desired power mode to record or play.

When using this camcorder for the first time, the [CLOCK SET] screen appears (p. 17).

While pressing the green button, slide the POWER switch down.

The power turns on.


To enter the recording or playing mode, slide the switch repeatedly until the respective lamp for the desired power mode lights up.

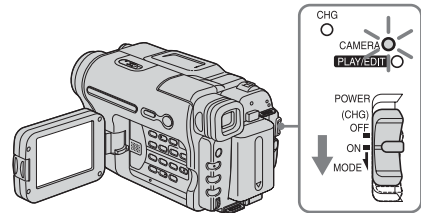

- CAMERA mode: To record on a tape.
- PLAY/EDIT mode: To play or edit pictures on a tape.

To turn off the power

Slide the POWER switch up to (CHG) OFF.




Step 4: Adjusting the LCD panel and viewfinder

Adjusting the LCD panel


You can adjust the angle and brightness of the LCD panel to meet various recording situations.

Even when there are obstructions between you and the subject, you can check the subject on the LCD screen during recording by adjusting the angle of the LCD panel.

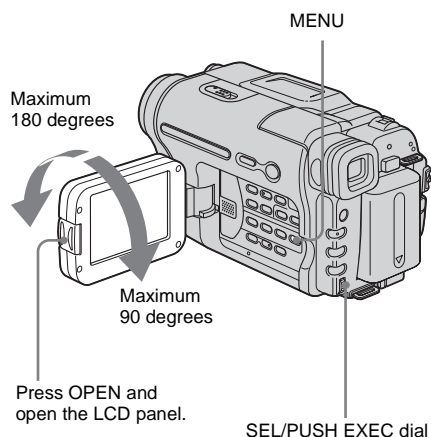



Open the LCD panel 90 degrees to the camcorder, then rotate it to the desired position.

To adjust the brightness of the LCD screen

- 1 Press **MENU**.
- 2 Turn the **SEL/PUSH EXEC** dial to select  (**LCD SET**), then press the dial.


- 3 Turn the **SEL/PUSH EXEC** dial to select [**LCD BRIGHT**], then press the dial (p. 53).
- 4 Adjust the brightness of the LCD screen with the **SEL/PUSH EXEC** dial, then press the dial.
- 5 Press **MENU**.

Tips

- If you rotate the LCD panel 180 degrees to the lens side, you can close the LCD panel with the LCD screen facing out.
- If you are using the battery pack for power source, you can adjust the brightness by selecting [**LCD B.L.**] in the  (**LCD SET**) menu (p. 53).
- The recorded picture will not be affected by this setting.
- You can turn off the operation confirmation beep by setting [**BEEP**] in the  (**OTHERS**) menu to [**OFF**] (p. 59).

Adjusting the viewfinder

You can view images using the viewfinder when you close the LCD panel. Use the viewfinder when the battery is running out, or when the screen is hard to see.

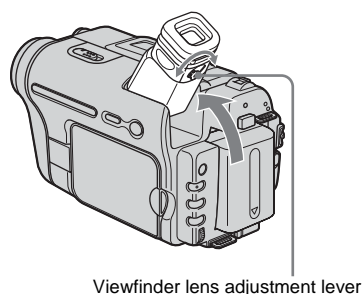


- 1 **Lift up the viewfinder.**
- 2 **Adjust the viewfinder lens adjustment lever until the picture is clear.**

Step 5: Setting the date and time

Set the date and time when using this camcorder for the first time. If you do not set the date and time, the [CLOCK SET] screen appears every time you turn on your camcorder.

Note

- If you do not use your camcorder for about **3 months**, the built-in rechargeable button-type battery gets discharged and the date and time settings may be cleared from the memory. In that case, charge the rechargeable button-type battery (p. 87) and then set the date and time again.

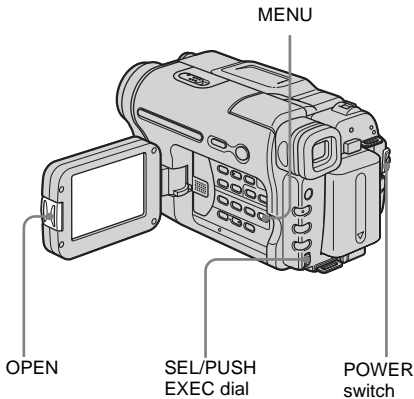


1 Turn on your camcorder (p. 15).


2 Press OPEN and open the LCD panel.

Proceed to step 6 when you set the clock for the first time.


3 Press MENU.

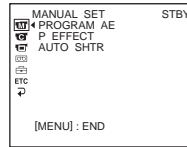


4 Turn the SEL/PUSH EXEC dial to select [SETUP MENU], then press the dial.

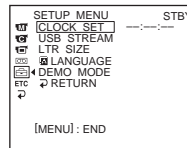

5 Turn the SEL/PUSH EXEC dial to select [CLOCK SET], then press the dial.

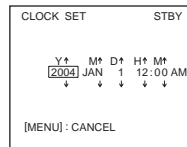

6 Turn the SEL/PUSH EXEC dial to set [Y] (year), then press the dial.

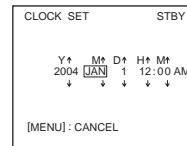

You can set any year up to the year 2079.

7 Set [M] (month), [D] (day), [H] (hour) and [M] (minute) in the same way as was done in step 6, then press the dial.

For midnight, set it to 12:00 AM.

For midday, set it to 12:00 PM.

→ continued

To check the preset date and time

For **Hi8** TRV128/228/328/428:

Press DATE to display the date indicator.

Press TIME to display the time indicator.

Press DATE (or TIME) and then press TIME (or DATE) to simultaneously display the date and time indicator.

To hide the date and/or time indicator, press DATE and/or TIME again.

Step 6: Inserting a cassette tape

You can use standard 8 mm **8** and Hi8 **Hi8**, Digital8 **D8** video cassettes on your camcorder. For details on these cassettes (such as write-protection), See page 82.


Notes

- Do not force the cassette into the compartment. This may cause a malfunction of your camcorder.

- For **D8**TRV260/265:


The recording time when you use your camcorder is half of the indicated time on Hi8 **Hi8** tape. If you select the [LP] mode in the menu settings, the recording time is 3/4 of the indicated time on Hi8 **Hi8** tape.

- 1 Slide the **OPEN/EJECT** lever in the direction of the arrow and open the lid.

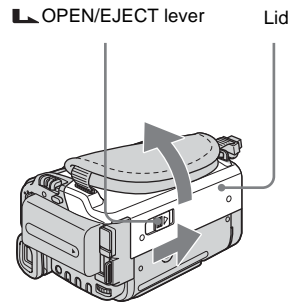


The cassette compartment automatically comes out and opens up.

- 2 Insert a cassette with its window-side facing up.

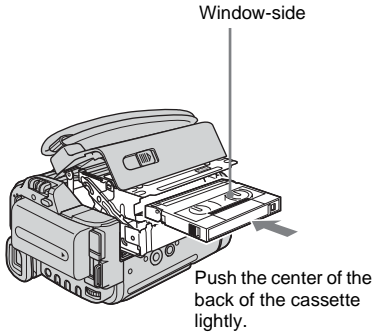

- 3 Press **PUSH**.
The cassette compartment automatically slides back in.

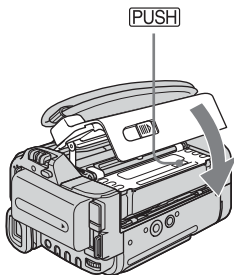


- 4 Close the lid.

To eject the cassette


- 1 Slide the **OPEN/EJECT** lever in the direction of the arrow and open the lid.
The cassette compartment automatically comes out.
- 2 Take out the cassette, then press **PUSH**.
The cassette compartment automatically slides back in.
- 3 Close the lid.

Step 7: Setting the screen language


You can select the language to be used on the LCD screen.

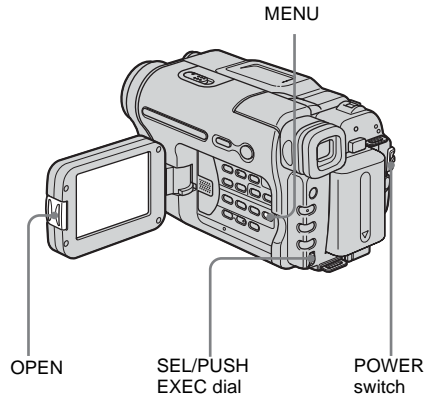


- 1 Turn on your camcorder.
- 2 Press **OPEN** to open the LCD panel.
- 3 Press **MENU**.

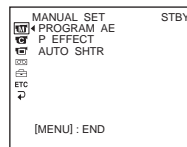


- 4 Turn the **SEL/PUSH EXEC** dial to select **LANGUAGE** (SETUP MENU), then press the dial.

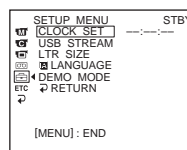

→ continued

5 Turn the SEL/PUSH EXEC dial to select [ LANGUAGE], then press the dial.

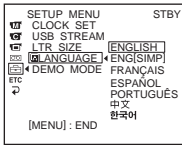

6 Turn the SEL/PUSH EXEC dial to select the desired language, then press the dial.

7 Press MENU.

 **Tip**

- Your camcorder offers [ENG [SIMP]] (simplified English) for when you cannot find your native tongue among the options.

Recording movies


Before recording, follow steps 1 to 7 in “Getting started” (p. 11 - p. 19).

For **Hi8** TRV128/228/328/428:

Movies will be recorded along with monaural sound.

For **D** TRV260/265:

Movies will be recorded along with stereo sound.

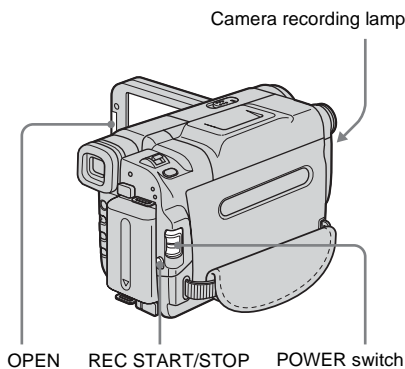


Note

- For **Hi8** TRV128/228/328/428:
The date is automatically recorded for 10 seconds after you start recording (Auto date function). This function works only once a day. See page 57 for details.

Tip

- Performing Easy Handycam operation, even first time users can record easily. For details, see page 26.


- 1 Remove the lens cap. Pull the lens cap string down and attach it to the grip belt.**

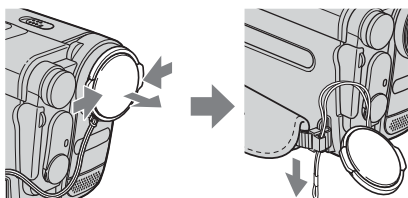

- 2 Press OPEN and open the LCD panel.**

- 3 Slide the POWER switch until the CAMERA lamp lights up.**

Your camcorder is set to the standby mode.

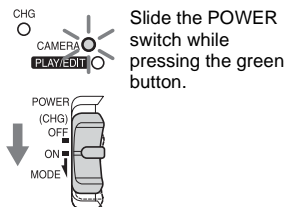

- 4 Press REC START/STOP.**

Recording starts. [REC] appears on the LCD screen and the Camera recording lamp lights up.

Press REC START/STOP again to stop recording.

To turn the power off

Slide the POWER switch up to (CHG) OFF.

Tip


- If you do not use your camcorder for a long time, remove the cassette and store it.

→ continued

Indicators displayed during recording


The indicators will not be recorded on the tape.

For **Hi8** TRV128/228/328/428:

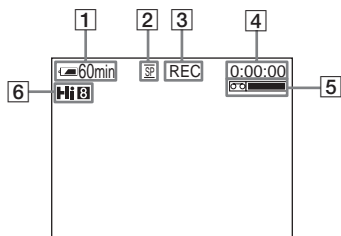

For **TRV260/265**:

Date/time and camera settings data (p. 37) will not be displayed during recording.

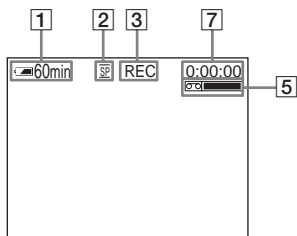

1 Remaining battery time

The indicated time may not be correct depending on the environment of use. When you opened or closed the LCD panel, it takes about 1 minute to display the correct remaining battery time.

2 Recording mode (SP or LP)

3 Recording status ([STBY] (standby) or [REC] (recording))

4 Tape counter (hour: minute: second)

To set the counter to 0:00:00, press COUNTER RESET (p. 93).

5 Recording capacity

For **Hi8** TRV128/228/328/428:

This appears after you insert a cassette and record for a while.

For **TRV260/265**:

This appears after a while when you set the POWER switch to CAMERA and insert a cassette.

6 Hi8 format

This appears while recording Hi8 format tapes.

7 Time code/Tape counter (hour: minute: second)/Tape photo recording

Notes


- Before changing the battery pack, slide the POWER switch up to (CHG) OFF.
- In the default setting, if you do not operate the camcorder for more than about 5 minutes, the power will automatically turn off to preserve battery power ([A.SHUT OFF], p. 59). To restart recording, slide the POWER switch down to select CAMERA, and then press REC START/STOP.

Tips

- To ensure smooth transition on a tape from the last recorded scene to the next, note the following.
 - Do not remove the cassette. (The picture will be recorded continuously without a break even when you turn the power off.)
 - Do not record pictures in SP mode and LP mode on the same tape.
 - Avoid stopping then recording a movie in the LP mode.
- For **TRV260/265**:
The recording time, date, and the camera settings data are recorded automatically on the tape without being displayed on the screen. You can view this information during playback by selecting [DATA CODE] on the screen (p. 59).

Recording for a longer time

To record for a longer time


In the  (TAPE SET) menu, select [REC MODE], then [LP] (p. 54).

In the LP mode, you can record longer than when recording in the SP mode (2 times longer for **Hi8** TRV128/228/328/428, 1.5 times longer for **Hi8** TRV260/265).

A tape recorded in the LP mode should be played back only on this camcorder.

Using zoom

When the CAMERA mode is selected, you can choose zoom to magnification levels greater than 20 times, and from that point activate the digital zoom ([D ZOOM], p. 47). Occasional use of the zoom is effective, but use it sparingly for best results.

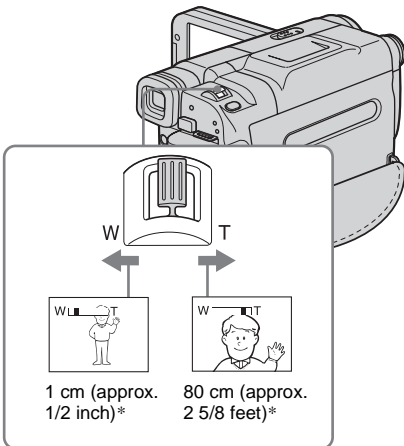

* The minimum distance required between your camcorder and the subject to get a sharp focus in that position of the lever.

Move the power zoom lever slightly for a slower zoom. Move it further for a faster zoom.

To record wider range of view


Move the power zoom lever towards W. The subject appears farther away (Wide angle).

To record closer view

Move the power zoom lever towards T. The subject appears closer (Telephoto).

Using the built-in light

You can use the built-in light to suit your shooting situation. The recommended distance between the subject and camcorder is about 1.5 m (5 feet).

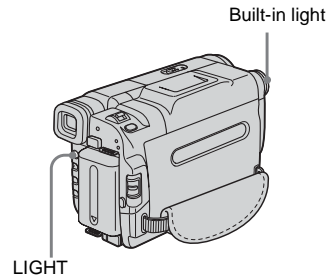


Press LIGHT repeatedly to select a setting.


The settings are displayed cyclically in the following order.

No indicator displayed: Always records without using the built-in light.



 AUTO: Automatically turns on and off according to the ambient brightness.



 ON: Always turns on.

To turn off the built-in light


Press LIGHT repeatedly until no indicator appears on the screen.

⚡ Notes

- The built-in video light emits very bright light, which is perfectly safe in normal use. However, avoid directly aiming the light at a subject's eyes from very close range.
- The battery pack discharges quickly while the built-in light is turned on.
- When you do not use your camcorder, turn the built-in light off and remove the battery pack to avoid turning on the built-in light accidentally.
- When flickering occurs while shooting in the **AE/AF LOCK** mode, press LIGHT until **ON** appears.
- The built-in light may turn on/off when you use the [PROGRAM AE] or back light function while shooting in the **AE/AF LOCK** mode.
- For **TRV260/265**:
The built-in light is turned off during the interval time of Interval recording.
- When you use the conversion lens (optional), light from the built-in light is blocked and may not illuminate the subject properly.

Recording in mirror mode

You can turn the LCD panel towards the subject so that you and your subject can share the image being recorded. You can also utilize this function when recording yourself, to keep the attention of small children attracted to the camcorder while you record them.

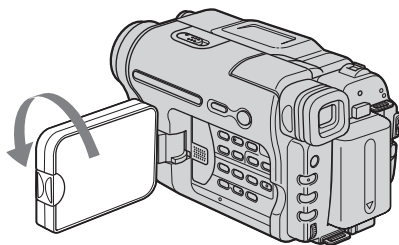




Open the LCD panel 90 degrees to the camcorder, then rotate it 180 degrees towards the subject.

A mirror-image of the subject appears on the LCD screen, but the picture will be normal when recorded.


⚡ Notes

For **TRV128/228/328/428**:

-  appears in the viewfinder and on the LCD screen.  appears in the standby mode, and  appears in the recording mode. Some of other indicators appear mirror-reversed and others are not displayed.
- During recording in the mirror mode, DATE and TIME on your camcorder do not work.

Superimposing the date and time on pictures (Hi8 TRV128/228/328 /428)

You can record the date and/or time displayed on the screen superimposed on the picture.

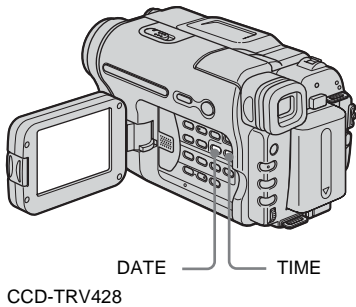

- Press **DATE** to record the date.
- Press **TIME** to record the time.
- Press **DATE (or TIME)**, then press **TIME (or DATE)** to record the date and time.

To hide the date and time, press **DATE** and/or **TIME** again.

When you purchase your camcorder, the clock is not set up yet. Set the date and time to your local time before using (p. 17).

Note

- The date and time indicators recorded manually cannot be deleted.


Tip

- If you do not record the date and time in the picture, record the date and time in the black screen as the background for about 10 seconds, then erase the date and time indicators before starting actual recording.


Recording still images

– Tape photo recording (F) TRV260/265)

You can record still images. Before recording, follow steps 1 to 7 in “Getting started” (p. 11 - p. 19).

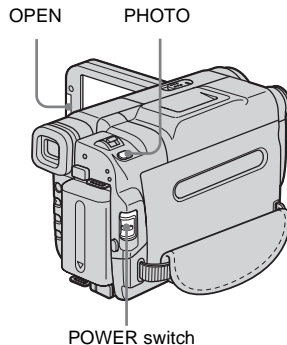


- 1 Remove the lens cap. Pull the lens cap string down and attach it to the grip belt.

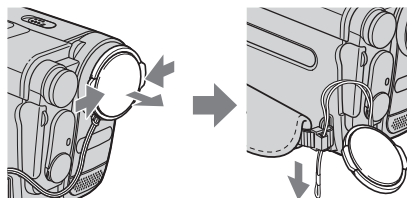

- 2 Press **OPEN** and open the LCD panel.

→ continued


-
- 3 Slide the **POWER** switch to select the **CAMERA** mode.



Slide the **POWER** switch while pressing the green button.

-
- 4 Press and hold **PHOTO** lightly.

You will hear a small beep sound, and the picture will become a still image. Recording does not start at this point.

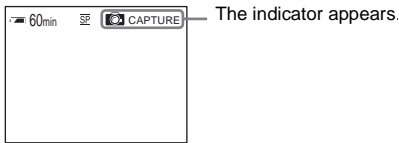



-
- 5 Press **PHOTO** fully.

A shutter sound is heard, and the image is recorded with sound for 7 seconds. The still image is displayed on the screen until recording is completed.

To turn the power off

Slide the **POWER** switch up to (CHG) OFF.

 **Note**

-   appears when the tape photo recording does not work.

 **Tip**


- You can record about 510 images in the SP mode and about 765 images in the LP mode on a tape which can record for 60 minutes in the SP mode.

Recording with ease

– Easy Handycam

With this Easy Handycam operation, most of the camera settings are set to automatic mode, only basic functions become available, and screen font size increases for easy viewing. Even first time users can enjoy easy recording. Before recording, follow steps 1 to 7 in “Getting started” (p. 11 - p. 19).

Camera recording lamp EASY POWER switch

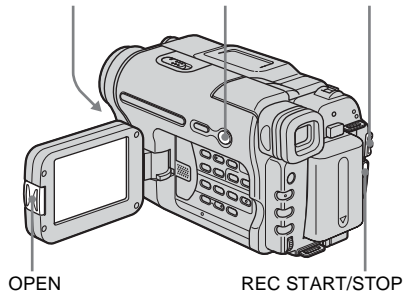

 **Tip**

- Buttons that do not work during Easy Handycam operation have a dot beside them on your camcorder. Also, only menu items that are available during Easy Handycam operation are displayed when MENU is pressed.

-
- 1 **Remove the lens cap. Pull the lens cap string down and attach it to the grip belt.**

-
- 2 **Press OPEN and open the LCD panel.**

-
- 3 **Slide the POWER switch to select the CAMERA mode.**

You can record movies only.

-
- 4 **Press EASY.**

EASY lights up in blue.

Easy Handycam
operation
ON

5 Press **REC START/STOP**.

Recording starts. [REC] appears on the LCD screen and the Camera recording lamp lights up. Press REC START/STOP again to stop recording.



To turn the power off

Slide the POWER switch up to (CHG) OFF.

To cancel Easy Handycam operation

Press EASY again.

Notes


- You cannot switch from/to Easy Handycam operation during recording.
- For  TRV260/265:
During Easy Handycam operation, you cannot connect the USB cable to your camcorder.
- For  TRV260/265:
You cannot use Easy Handycam operation together with USB Streaming.
- All the settings return to their defaults during Easy Handycam operation. Previously made settings are restored when you cancel Easy Handycam operation.

Adjusting the exposure

The exposure is adjusted automatically in the default setting.

Adjusting the exposure for backlit subjects

When your subject has its back to the sun or other light, you can adjust the exposure to prevent the subject from becoming shadowed.

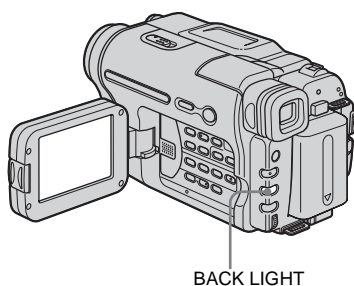

Press **BACK LIGHT** in CAMERA mode.

 appears.


To cancel the back light function, press BACK LIGHT again.

Note

- The back light function is canceled when you press EXPOSURE (p. 28).

Adjusting the exposure manually

You can fix the brightness of a picture at the best exposure. When recording indoors on a clear day, for instance, you can avoid backlight shadows on people next to the window by manually fixing the exposure to that of the wall side of the room.

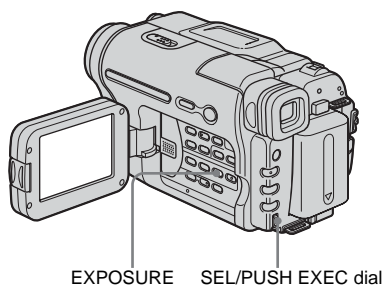

1 Press EXPOSURE in CAMERA mode.

The exposure indicator appears on the screen.

2 Turn the SEL/PUSH EXEC dial to adjust the brightness.



While exposure is set to manual mode, \pm is displayed in the left-hand corner of the screen.


To return the setting to automatic exposure

Press EXPOSURE.

Recording in dark places

– NightShot plus

You can record subjects in dark places (such as when capturing the face of your baby sleeping) with this function.

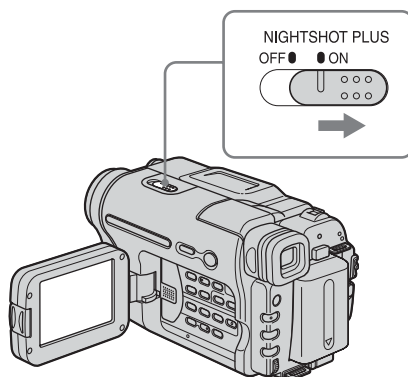

Set the NIGHTSHOT PLUS switch to ON.

\square and [“NIGHTSHOT PLUS”] appear.

To cancel NightShot plus, set the NIGHTSHOT PLUS switch to OFF.

⚡ Notes

- Do not use the NightShot plus function in bright places. This may cause a malfunction.
- You cannot use the NightShot plus function together with:
 - [PROGRAM AE]
 - Manual exposure
- Adjust the focus manually when it is hard to focus automatically.
- Do not cover the infrared port with your fingers or other objects. Remove the conversion lens (optional) if it is attached.
- Depending on the shooting conditions or circumstances, colors may not be reproduced properly.

💡 Tip

- If you record subjects in complete darkness, set [N.S. LIGHT] to [ON] in the menu settings. The maximum shooting distance using the NightShot Light is about 3 meters (10 feet). If you record subjects in dark places (such as night scene or in moonlight), set [N.S. LIGHT] to [OFF] in the menu settings. You can make image color deeper (p. 50).


Adjusting the focus manually

The focus is adjusted automatically in the default setting.


You can adjust the focus manually according to the recording conditions.

Use this function in the following cases.

- To record a subject behind a window covered with raindrops.
- To record horizontal stripes.
- To record a subject with little contrast between the subject and its background.
- When you want to focus on a subject in the background.

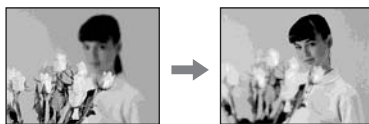

- To record a stationary subject using a tripod.

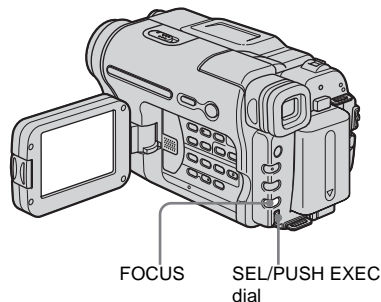

1 Press FOCUS in CAMERA mode.
☒ appears.

2 Turn the SEL/PUSH EXEC dial to sharpen focus.

☒ changes to ▲ when the focus cannot be adjusted any further. ☒ changes to 👤 when the focus cannot be adjusted any closer.

→ continued


Tips for focusing manually

- It is easier to focus on the subject when you use the zoom function. Move the power zoom lever towards T (telephoto) to adjust the focus, and then, towards W (wide angle) to adjust the zoom for recording.
- When you want to record a close-up image of a subject, move the power zoom lever towards W (wide angle) to fully magnify the image, then adjust the focus.

To adjust the focus automatically

Press FOCUS again.

Recording a picture using various effects

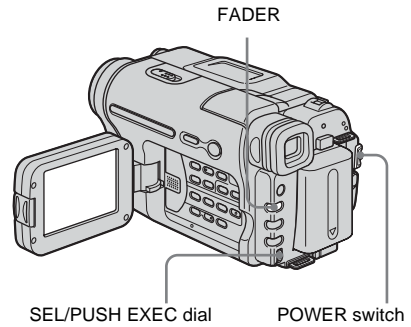

Fading in and out of a scene – FADER

You can add the following effects to currently recording pictures.



[BLACK FADER]



[WHITE FADER]



[MOSAIC FADER]



[STRIPE FADER]

This feature is for **Hi8** TRV128/228/328/428 only.




[MONOTONE FADER]

When fading in, the picture gradually changes from black-and-white to color.

When fading out, the picture gradually changes from color to black-and-white.

1 Slide the **POWER** switch to select the **CAMERA** mode.

2 Press **FADER** until the desired fader indicator flashes in the standby mode (to fade in) or during recording (to fade out).

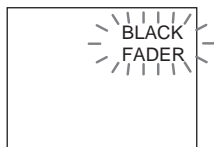

3 Press **REC START/STOP**.

The fader indicator stops flashing and disappears when the fade is complete.

To cancel the operation

In step 2, press **FADER** repeatedly until the indicator disappears.


⚡ Notes

- For **Hi8** TRV260/265:
 - You cannot use the **FADER** function together with:
 - Tape photo recording
 - [FRAME REC] (Frame recording)
 - [INT. REC] (Interval recording)
- Titles do not fade in or fade out. The date and time indicator for **Hi8** TRV128/228/328/428 also does not fade in or fade out. Erase them before operating the **FADER** function if they are not needed.

Superimposing a title

You can insert a title when recording.


You can select one of the 8 preset titles and the 2 custom titles.

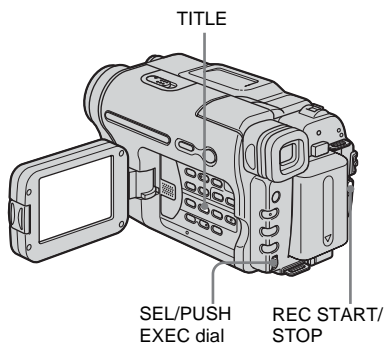

1 Slide the **POWER** switch to select the **CAMERA** mode, then press **TITLE**.

Select a desired title from the displayed titles (2 original titles that you have created before and the preset titles that have been stored in your camcorder). You can create original titles (up to 2 types of title of within 20 characters each) in the following procedure.


1 Turn the **SEL/PUSH EXEC** dial to select [CUSTOM1''] or [CUSTOM2''], then press the dial.

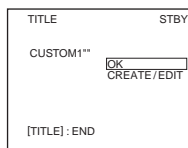

2 Turn the **SEL/PUSH EXEC** dial to select [CREATE/EDIT], then press the dial.

3 Turn the **SEL/PUSH EXEC** dial to select the column of the desired character, then press the dial.

- 4 Turn the SEL/PUSH EXEC dial to select the desired character, then press the dial.

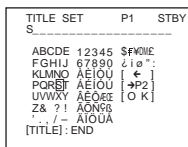

To erase a character: Select [←].

To enter a space: Select [Z& ? !], then select the blank part between & and ?.

To select alphabet and Russian characters: Select [→P2].

- 5 Turn the SEL/PUSH EXEC dial to select the next character, and enter the character in the same manner.
- 6 When you have finished entering characters, turn the SEL/PUSH EXEC dial to select [O K], then press the dial. The title is stored in memory.

2 Turn the SEL/PUSH EXEC dial to select the title you want to insert, then press the dial.

To insert an original title, turn the SEL/PUSH EXEC dial to select [CUSTOM1""], or [CUSTOM2""], and press the dial, then select [OK] and press the dial.

3 Change [COLOR], [SIZE], or [POSITION] as necessary.

- 1 Turn the SEL/PUSH EXEC dial to select [COLOR], [SIZE], or [POSITION], then press the dial. The selected item appears on the screen.
- 2 Turn the SEL/PUSH EXEC dial to select the desired item, then press the dial.
- 3 Repeat steps 1 and 2 until the title is laid out as desired.

[COLOR] (color)

[WHITE] ↔ [YELLOW] ↔
[VIOLET] ↔ [RED] ↔ [CYAN] ↔
[GREEN] ↔ [BLUE]

[SIZE] (size)

[SMALL] ↔ [LARGE]

(You can only select [SMALL] when you are entering more than 13 characters.)

[POSITION] (position)

You can select from 8 to 9 choices.

4 Turn the SEL/PUSH EXEC dial to select [OK], then press the dial.

The title appears.

5 Press REC START/STOP.

6 Press TITLE at the scene you want to erase the title off.

To superimpose the title while you are recording

Press TITLE and carry out steps 2 to 4. When you press the SEL/PUSH EXEC dial at step 4, the title is recorded.

Notes

- If you display the menu while superimposing a title, the title is not recorded while the menu is displayed.
- When you are selecting and setting the title, the title displayed on the screen is not recorded.
- When you superimpose a title while you are recording, the beep does not sound.
- When you are using your camcorder on the battery pack and do not operate it for 5 minutes, the power automatically goes off as the default setting. If you may take 5 minutes or longer to enter characters, set [A.SHUT OFF] in the [ETC] (OTHERS) menu to [NEVER] (p. 59). The power will not be turn off. Even though the power goes off, the characters you have entered remain stored in memory. Turn the power back on, then start again from step 1 to continue superimposing the title.
- For **Hi8** TRV128/228/328/428:
The date and time, or either of them, may not be displayed depending on the size or position of the title.


Tip

- To change a created title, select the title in step 1, then press the SEL/PUSH EXEC dial. Then reselect the characters again.

Searching for the last scene of the most recent recording

– END SEARCH

This function is handy when you have played back the tape, for example, but want to start recording right after the most recently recorded scene. The END SEARCH function will not work once you eject the cassette after you have recorded on the tape.

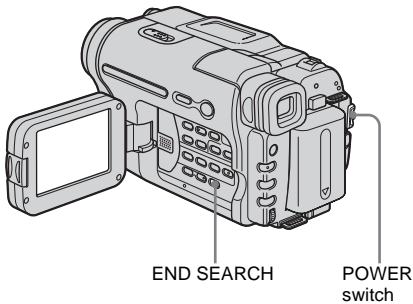

1 Slide the POWER switch to select the CAMERA mode.

2 Press END SEARCH.

The last scene of the most recent recording is played back for about 5 seconds, and the camcorder enters the standby mode at the point where the last recording has finished.

To cancel the operation

Press END SEARCH again.

Note


- The END SEARCH function will not work correctly when there is a blank section between recorded sections on the tape.

Tip

- When PLAY/EDIT mode is selected, you can do this operation by pressing END SEARCH.

Viewing pictures recorded on a tape

Make sure you have a recorded cassette inserted into your camcorder.
 When you want to play back the recorded picture on your TV, see page 39.
 For **Hi8** TRV228/428/ **D** TRV265:
 You can control playback using the Remote Commander.

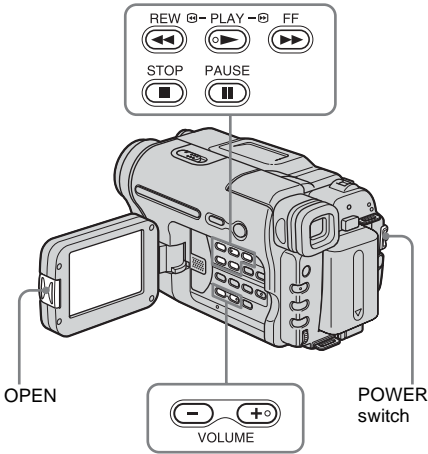


Tip

- Performing Easy Handycam operation, even first time users can play back easily. For details, see page 36.

1 Press OPEN and open the LCD panel.

2 Slide the POWER switch repeatedly to select the PLAY/EDIT mode.

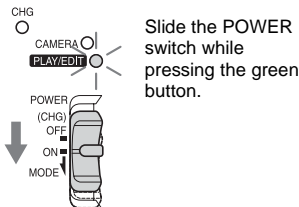

3 Press (rewind) to go to the point you want to view.

4 Press (play) to start playback.

To adjust the volume

Press either of the two buttons on VOLUME.
 When you close the LCD panel, sound is turned off.

:To turn the volume down

:To turn the volume up

To stop playback

Press (stop).

To pause

Press (pause) during playback. Press (pause) or (play) to restart the playback.

Playback stops automatically when pause mode continues for a few minutes.

To fast forward or rewind


Press (fast forward) or (rewind) in stop mode.

To review movies on the viewfinder


Close the LCD panel.

Indicators displayed during playing back

For **Hi8** TRV128/228/328/428:

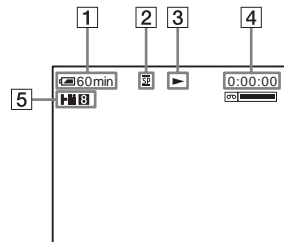

For **TRV260/265**:

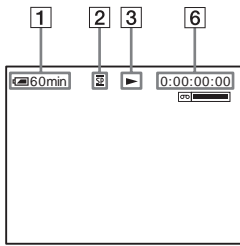

- 1 Remaining battery time**
- 2 Recording mode (SP or LP)**
- 3 Tape transport indicator**
- 4 Tape counter (hour: minute: second)**
- 5 Hi8 format**
This appears while playing back Hi8 format tapes.
- 6 Time code (hour: minute: second: frame) or tape counter (hour: minute: second)**

Note

- For **TRV260/265**:
If you use a standard 8 mm **8** tape, be sure to play back the tape on your camcorder. Mosaic noise may appear when you play back the standard 8 mm **8** tape on other camcorders (including another DCR-TRV260/TRV265).

Playing back in various modes

To fast forward or rewind during playback – Picture search

Keep on pressing **FF** (fast forward) or **REW** (rewind) during playback.

To resume normal playback, release the button.

To view the picture while fast forwarding or rewinding – Skip scan

Keep on pressing **FF** (fast forward) or **REW** (rewind) while fast forwarding or rewinding the tape.

To resume fast forwarding or rewinding, release the button.

To view pictures at slow speed (slow playback)*

For **Hi8 TRV228/428/ TRV265**:

Press **SLOW** **▶** on the Remote Commander during playback. To resume normal playback, press **PLAY**.

* For **TRV265**:

Pictures output from the **i** DV Interface cannot be played back smoothly in the slow mode.


Notes

- For **Hi8 TRV228/428**:
If slow playback lasts for about 1 minute, the camcorder automatically returns to normal speed playback.
- For **Hi8 TRV128/228/328/428**:
When you play back a tape recorded in the LP mode, noise may appear on the LCD screen in the following cases:
 - Slow playback (**Hi8 TRV228/428**)
 - Playback pause
 - Picture search

Playing back with ease

– Easy Handycam

Easy Handycam operation allows easy playback for even first time users by providing only the basic functions for playback. Also screen font size increases for easy viewing. Make sure you have a recorded cassette inserted into your camcorder.

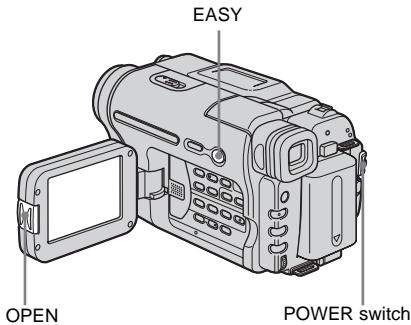

Tip

- Buttons that do not work during Easy Handycam operation have a dot beside them on your camcorder. Also, only menu items that are available during Easy Handycam operation are displayed when MENU is pressed.

1 Press OPEN and open the LCD panel.

2 Slide the POWER switch repeatedly to select the PLAY/EDIT mode.




3 Press EASY.


EASY lights up in blue.




4 Play back a tape.

The following buttons can be operated.

 (play)/ (stop)/ (pause)/

 (fast forward)/ (rewind)

For **Hi8** TRV228/428/ **Hi8** TRV265:

You can operate those operations and SLOW  on the Remote Commander.

To cancel Easy Handycam operation

Press EASY again.


Notes

For **Hi8** TRV260/265:

- During Easy Handycam operation, you cannot connect the USB cable to your camcorder.
- You cannot use Easy Handycam operation together with USB Streaming.

Various playback functions

You can display the recorded date on the screen.

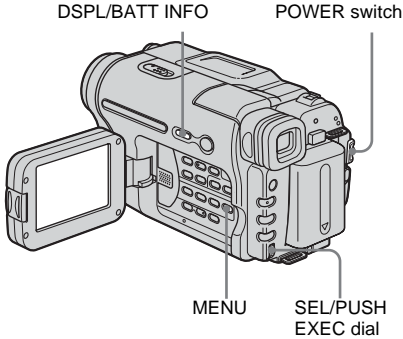

Displaying the screen indicators

You can choose to display the time code, tape counter, and other information on the screen.

Press DSPL/BATT INFO.

The indicators appear/disappear as you press the button.


Tips

- For **Hi8** TRV228/428/ **Hi8** TRV265: You can display the screen indicators by pressing DISPLAY on the Remote Commander.
- You can display the screen indicators during playback on a TV. Select the **ETC** (OTHERS) menu, [DISPLAY], then [V-OUT/LCD] (p. 60).

Displaying the date/time and camera settings data – Data code (Hi8 TRV260/265)


During playback, you can view the date/time data ([DATE/TIME]) and the camera settings data ([CAM DATA]) that are automatically recorded while recording pictures on a tape.

- 1 Slide the **POWER** switch repeatedly to select the **PLAY/EDIT** mode.
- 2 Press **MENU** during playback or playback pause.
- 3 Turn the **SEL/PUSH EXEC** dial to select **ETC** (OTHERS), then press the dial.
- 4 Turn the **SEL/PUSH EXEC** dial to select **[DATA CODE]**, then press the dial.

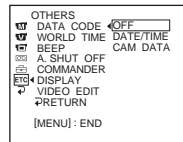

- 5 Turn the **SEL/PUSH EXEC** dial to select the **[DATE/TIME]** or **[CAM DATA]**, then press the dial.

- 6 Press **MENU**.

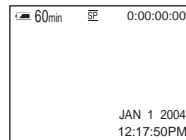


To hide the date/time or the camera settings data

Follow steps 2 to 4, and select [OFF] in step 5.

Camera settings data display

In the date/time data display, the date and time is displayed in the same area.

If you record the picture without setting the clock, [--- -- ----] and [--:--:--] will appear.

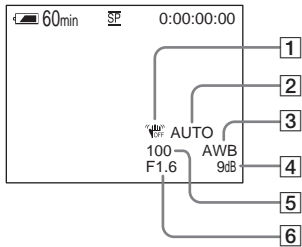


- 1 SteadyShot off
- 2 Exposure
- 3 White balance
- 4 Gain
- 5 Shutter speed
- 6 Aperture value


Playing the picture on a TV

Connect your camcorder to a TV using the supplied A/V connecting cable as shown in the following illustration. Connect the supplied AC Adaptor to the wall outlet for the power supply (p. 12). Refer also to the instruction manuals supplied with the devices to be connected. To copy to another tape, see page 63.

For **Hi8** TRV128/228/328/428:

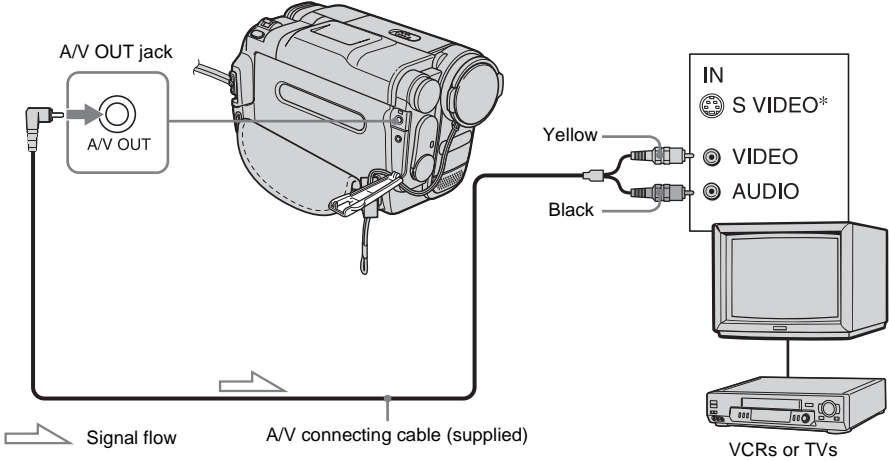

For **D** TRV260/265:

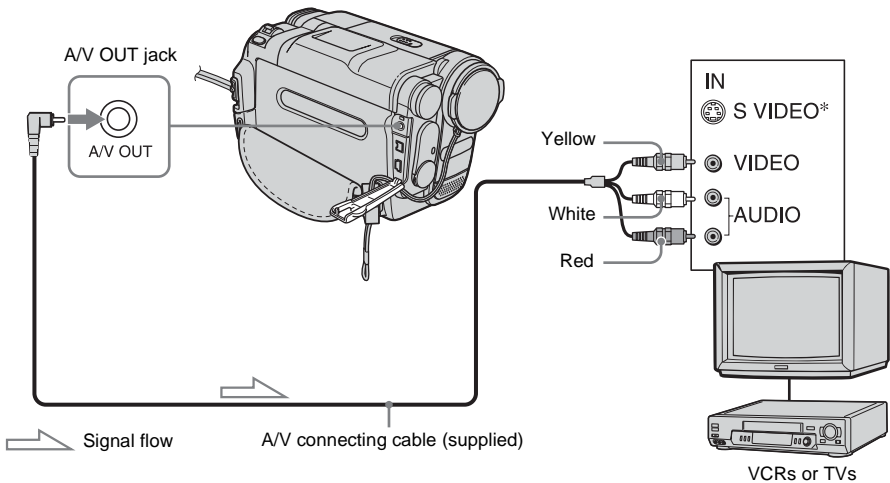

Playback

→ continued

* When there is an S video jack on the device to be connected, connect the S video plug to that jack instead of using the yellow video plug. The audio will not be output when you connect with the S video plug alone.
Pictures can be reproduced more faithfully with this connection.

When your TV is connected to a VCR

Connect your camcorder to the LINE IN input on the VCR using the A/V connecting cable. Set the input selector on the VCR to LINE.

To connect to a TV without audio/video input jacks

For **Hi8** TRV128/228/328/428:
Use a NTSC system RFU adaptor (optional). Refer to the operating instructions of your TV and the RFU adaptor.

When your TV is stereo

For **Hi8** TRV128/228/328/428:
Connect the audio plug of the A/V connecting cable to the left (white) input jack of your TV.


When your TV is monaural (When your TV has only one audio input jack)

For **TRV260/265**:
Connect the yellow plug of the A/V connecting cable to the video input jack and connect the white or the red plug to the audio input jack of your TV or VCR.
When you want to play the sound in monaural mode, use a connecting cable (optional) for that purpose.

Locating a scene on a tape for playback

(**F**) TRV265)

Searching quickly for a desired scene – Zero set memory

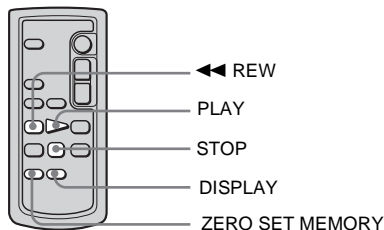

- 1 During playback, press ZERO SET MEMORY on the Remote Commander at the point you want to locate later on.**
The tape counter is reset to “0:00:00” and **→0←** appears on the screen.
If the tape counter is not displayed, press DISPLAY on the Remote Commander.
- 2 Press STOP when you want to stop playback.**
- 3 Press **◀◀** REW.**
The tape stops automatically when the tape counter reaches “0:00:00.”
- 4 Press PLAY.**
The playback starts from the point designated “0:00:00” on the tape counter.

To cancel the operation


Press ZERO SET MEMORY on the Remote Commander again.

⚡ Notes

- There may be a discrepancy of several seconds between the time code and the tape counter.
- Zero set memory will not function correctly if there is a blank section between recorded sections on the tape.

Searching for a scene by date of recording – Date search

You can locate the point where the recording date changes.

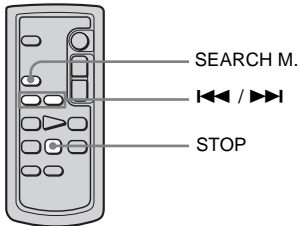

1 Slide the **POWER** switch repeatedly to select the **PLAY/EDIT** mode.

2 Press **SEARCH M.** on the Remote Commander repeatedly to select **[DATE SEARCH]**.

3 Press **◀ (previous)/▶ (next)** on the Remote Commander to select a recording date.

Playback starts automatically from the point where the date changes.

Each time you press the button, the previous or the next date will be searched for and displayed.

To cancel the operation

Press **STOP** on the Remote Commander.


⚡ Notes

- If one day's recording is less than 2 minutes, your camcorder may not accurately find the point where the recording date changes.

- The Date search will not function correctly when there is a blank section between recorded sections on the tape.

Searching for a still image – Photo search

You can locate the still image you have recorded on a tape.

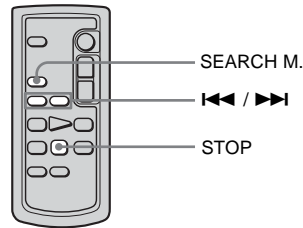

1 Slide the **POWER** switch repeatedly to select the **PLAY/EDIT** mode.

2 Press **SEARCH M.** on the Remote Commander repeatedly to select **[PHOTO SEARCH]**.

3 Press **◀ (previous)/▶ (next)** on the Remote Commander to select the photo for playback.

Playback of the photo starts automatically. Each time you press the button, the previous or the next photo will be searched for and displayed.

To cancel the operation


Press **STOP** on the Remote Commander.

⚡ Note

- If a tape has a blank section between recorded sections, the Photo search function may not work correctly.

Playing back still images in sequence – Photo scan

You can also locate still images one after another and display each image for 5 seconds automatically.

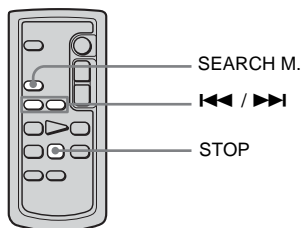

1 Slide the POWER switch repeatedly to select the PLAY/EDIT mode.

2 Press SEARCH M. on the Remote Commander repeatedly to select [PHOTO SCAN].

3 Press ◀◀ (previous)/▶▶ (next) on the Remote Commander.
Each photo will be played back for about 5 seconds.

To cancel the operation

Press STOP on the Remote Commander.



Note

- If a tape has a blank section between recorded sections, the Photo scan function may not work correctly.

Customizing Your Camcorder


Changing the menu settings

You can change various settings or make detailed adjustments using the menu items displayed on the screen.

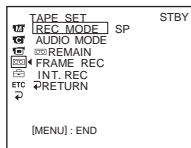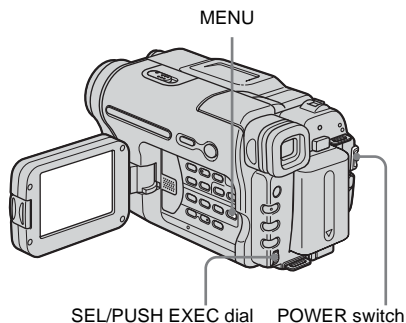


- 4 Turn the SEL/PUSH EXEC dial to select the desired item, then press the dial.

The available menu items vary depending on the position of the POWER switch. Unavailable items will be grayed out.

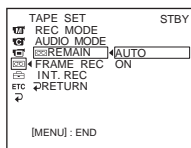


- 5 Turn the SEL/PUSH EXEC dial to select the desired mode, then press the dial.

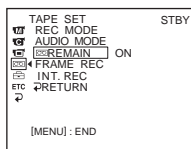

- 1 Turn on the power (p. 15).

- 2 Press MENU.

The menu screen appears.

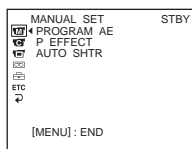

- 3 Turn the SEL/PUSH EXEC dial to select desired menu, then press the dial.

- MANUAL SET (p. 44)
- CAMERA SET (p. 47)
- PLAYER SET (p. 51) (Hi8 TRV128/228/328/428)
- VCR SET (p. 51) (TRV260/265)
- LCD SET (p. 53)
- TAPE SET (p. 54)
- SETUP MENU (p. 57)

- 6 Press MENU to hide the menu screen.


If you want to change other items, select [RETURN] and press the dial, then repeat steps from 3 to 5.

Using the (MANUAL SET) menu

– PROGRAM AE/P EFFECT, etc.





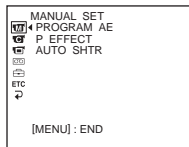







You can select items listed below in the MANUAL SET menu. To select these items, see “Changing the menu settings” (p. 43).

The default settings are marked with ▷. The settings you can adjust vary depending on the power mode of your camcorder. The screen shows the items you can operate at the moment. Unavailable items will be grayed out.



PROGRAM AE

You can record pictures easily in a situation that requires various techniques by selecting the following settings.

▷ AUTO	Select this when not using PROGRAM AE.	
SPOTLIGHT* (spotlight) ()	Select to prevent people's faces from appearing excessively white when subjects are lit by strong light, such as in a theater or at a wedding.	
PORTRAIT (soft portrait) ()	Select to bring out the subject such as people or flowers while creating a soft background.	
SPORTS* (sports lesson) ()	Select to minimize shake when shooting fast-moving subjects such as in tennis or golf.	
BEACH&SKI* (beach & ski) ()	Select to prevent people's faces from appearing dark in strong light or reflected light, such as at a beach in midsummer or on a ski slope.	
SUNSETMOON** (sunset & moon) ()	Select to maintain the atmosphere of situations such as sunsets, general night views, fireworks, and neon signs.	
LANDSCAPE** (landscape) ()	Select when shooting distant subjects such as mountains. This setting also prevents your camcorder from focusing on glass or metal mesh in windows that comes in between the camcorder and the subject.	

* Your camcorder is adjusted to focus only on subjects in the middle to far distance.

**Your camcorder is adjusted to focus only on distant subjects.

Note

- When you set the NIGHTSHOT PLUS switch to ON, [PROGRAM AE] does not work. (The indicator flashes.)

P EFFECT

For **Hi8** TRV128/228/328/428:







You can add special effects (such as films) to a picture before recording.

P+ appears when each effect is selected.

For **D** TRV260/265:

You can add special effects (such as films) to a picture before or after recording.

P+ appears when each effect is selected.

▷OFF	Select when not using the Picture effect setting.	
NEG.ART	Select to record/play the picture with the color and brightness of the picture reversed.	
SEPIA	Select to record/play the picture appearing in sepia.	
B&W	Select to record/play the picture appearing in monochrome (black-and-white).	
SOLARIZE	Select to record/play the picture looking like an illustration with strong contrast.	
SLIM	Select to record the picture appearing vertically expanded. (This effect is not available during playback.)	
STRETCH	Select to record the picture appearing horizontally expanded. (This effect is not available during playback.)	
PASTEL	Select to record the picture looking like a pale pastel drawing. (This effect is not available during playback.)	
MOSAIC	Select to record the picture appearing mosaic-patterned. (This effect is not available during playback.)	

Note

- For **D** TRV260/265:
You cannot add effects to externally input pictures. Also, you cannot output pictures edited with Picture effects via the **i** DV Interface.

→ continued

 **Tip**

- You can copy pictures edited using picture effects to another tape (p. 63).

AUTO SHTR


▷ON	Select to automatically activate the electronic shutter to adjust the shutter speed when recording in bright conditions.
OFF	Select when recording without using the electronic shutter.

Using the (CAMERA SET) menu

– 16:9 WIDE/STEADYSHOT, etc.

You can select items listed below in the CAMERA SET menu. To select these items, see “Changing the menu settings” (p. 43).

The default settings are marked with ▷. The settings you can adjust vary depending on the power mode of your camcorder. The screen shows the items you can operate at the moment. Unavailable items will be grayed out.

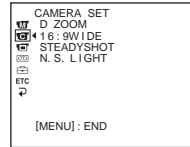

D ZOOM

You can select the maximum zoom level in case you want to zoom to a level greater than 20 times while recording on a tape. Note that the image quality decreases when you are using the digital zoom. This function is useful when recording enlarged pictures of a distant subject, such as a bird.



The right side of the bar shows the digital zooming zone. The zooming zone appears when you select the zooming level.

▷OFF	Select to deactivate the digital zoom. Up to 20 times zoom is performed optically.
40 ×	Select to activate the digital zoom. 20 times through 40 times zoom is performed digitally.
990 ×	Select to activate the digital zoom. 20 times through 990 times zoom is performed digitally.

→ continued

16:9 WIDE


For **Hi8** TRV128/228/328/428:

You can record a cinema-like picture ([CINEMA] mode) or a 16:9 wide picture ([16:9 FULL] mode) to watch on the 16:9 wide-screen TV.

Refer also to the manuals supplied with your TV.


In [CINEMA] mode

When viewed on the LCD screen/viewfinder

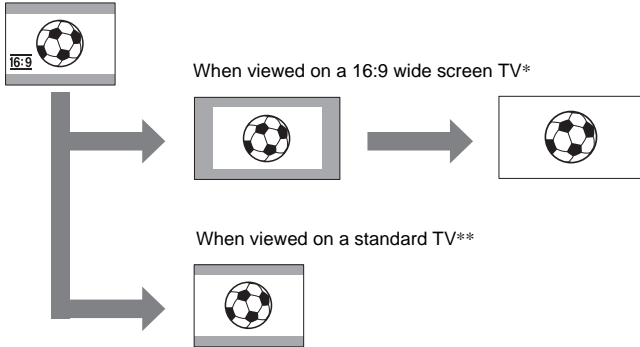

In [16:9 FULL] mode

When viewed on the LCD screen/viewfinder

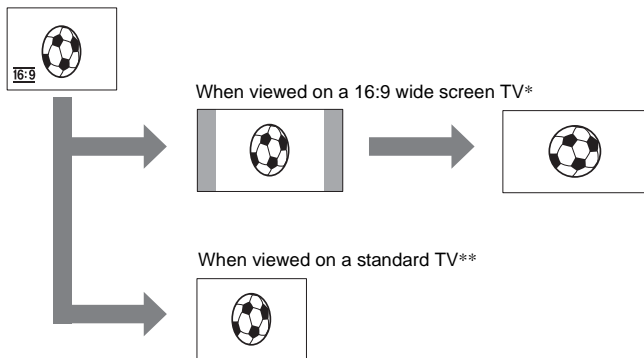

* Picture appears in full screen when the wide-screen TV switches to full mode.


**Played in 4:3 mode. When you play a picture in the wide mode, it appears as you have seen on the LCD screen or in the viewfinder.

▷OFF Standard setting (to record pictures to play back on a 4:3 TV). The recorded picture will not be wide.

CINEMA (16:9) Select to record a picture to be played back in CINEMA mode.

16:9 FULL (16:9) Select to record a picture to be played back on a 16:9 wide TV.

💡 Tips

- The ID-1 system sends aspect ratio information (16:9, 4:3, or letter box) by inserting signals between video signals.
- When you record in the [16:9 FULL], the date or time indicator will be widened on wide-screen TVs.
- For **TRV328/428**:
The SteadyShot does not work. If you set [16:9 FULL] in the menu settings when the SteadyShot is working,  flashes and the SteadyShot does not function.

For **TRV260/265**:


You can record a 16:9 wide picture on the tape to watch on a 16:9 wide-screen TV ([16:9 WIDE] mode).

With this function [ON], your camcorder offers even wider angles when you move the power zoom lever to the “W” side than recording in [OFF].

When you connect your camcorder to the S video input jack of a TV compatible with the ID-1/ID-2 system and play the tape, the TV switches to full mode automatically.

Refer also to the manuals supplied with your TV.

When viewed on the LCD screen

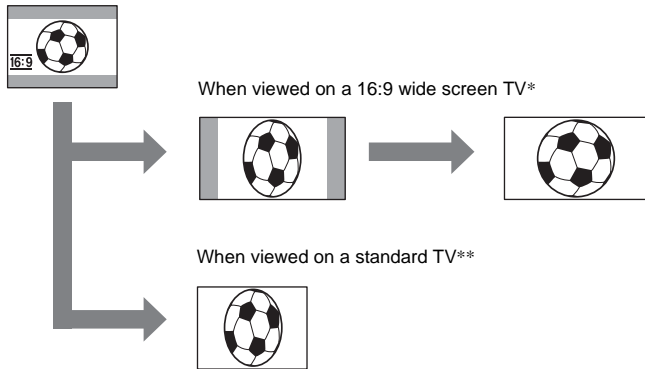


* Picture appears in full screen when the wide-screen TV switches to full mode.

**In 4:3 mode. When you play a picture in the wide mode, it appears as you have seen on the LCD screen.

▷OFF	Standard setting (to record pictures to play back on a 4:3 TV). The recorded picture will not be wide.
ON (16:9)	Select to record a picture to be played back on a 16:9 wide TV. The recorded picture will be played in full mode when you connect to your TV using an S (S1) video input jack compatible with ID-1/ID-2 systems.

💡 Tips



- The ID-1 system sends aspect ratio information (16:9, 4:3, or letter box) by inserting signals between video signals.
- The ID-2 system sends a copyright protection signal with the ID-1 signals inserted between video signals in an analog connection.
- S1 video sends information with the standard S video signal to select wide mode automatically.
- The SteadyShot does not work. If you set [16:9 WIDE] to [ON] in the menu settings when the SteadyShot is working,  flashes and the SteadyShot does not function.

→ continued

STEADYSHOT

For **Hi8** TRV328/428/ **Hi8** TRV260/265:

You can select this function to compensate for camera-shake.

▷ON	Standard setting (enable the SteadyShot function). If you select a function that STEADYSHOT cannot work with,  appears.
OFF ()	Select to deactivate the SteadyShot function. Select to shoot a stationary subject with a tripod, or when using a conversion lens (optional). Natural pictures are produced.

Note

- For **Hi8** TRV260/265:
 - Camera-shake cannot be completely compensated for in the following cases:
 - When recording in a dark place
 - When recording a subject with little contrast to the background
 - When recording horizontal stripes
 - When using the zoom
 - When recording a fast moving subject
 - When the zoom position is set to the W-end side

N.S. LIGHT


When using the NightShot plus function to record, you can record clearer pictures by using the NightShot Light to emit infrared rays (invisible).

▷ON	Select to use the NightShot Light. (p. 28)
OFF	Select to disable the NightShot Light. (p. 28)

Using the (PLAYER SET)/ (VCR SET) menu – HiFi SOUND/EDIT, etc.

You can select the items listed below in the menu (the PLAYER SET menu for **Hi8** TRV128/228/328/428, the VCR SET menu for **Hi8** TRV260/265.) To select these

items, see “Changing the menu settings” (p. 43).
The default settings are marked with ▷. The settings you can adjust vary depending on the power mode of your camcorder. The screen shows the items you can operate at the moment. Unavailable items will be grayed out.

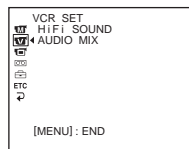

HiFi SOUND

For **Hi8** TRV260/265:

You can select how to play back audio recorded on a tape in stereo mode.

▷STEREO	Select to play back a stereo tape or dual sound track tape with main and sub sound.
1	Select to play back a stereo tape with the left channel sound or a dual sound track tape with main sound.
2	Select to play back a stereo tape with the right channel sound or a dual sound track tape with sub sound.

Notes

- You can playback a dual sound track cassette on this camcorder. However, you cannot record a dual sound track on this camcorder.
- The setting returns to [STEREO] when you disconnect the power source from your camcorder for more than 5 minutes.

EDIT

For **Hi8** TRV128/228/328/428:

Picture degradation is minimized when you dub or edit a tape using the camcorder as the playback device.


▷OFF	Select this for no compensation.
ON	Select to minimize picture degradation.

Note

- The setting returns to [OFF] when you disconnect the power source from your camcorder for more than 5 minutes.


→ continued

TBC

For  TRV128/228/328/428:

▷ON	Select to correct jitter (horizontal picture shake during playback).
OFF	Select to not compensate picture distortion when playing back a tape on which you have dubbed repeatedly or recorded TV game signals.

DNR

For  TRV128/228/328/428:

▷ON	Select to eliminate color noise in the picture.
OFF	Select to minimize picture artifacts in a picture containing lots of movement.

AUDIO MIX

For  TRV260/265:

You can adjust the audio balance between ST1 (the originally recorded sound) and ST2.

Notes

- You cannot adjust sound recorded in 16 bit audio mode.
- Only the originally recorded sound will be heard when you disconnect the power source from your camcorder for more than 5 minutes.

Using the (LCD SET) menu – LCD B.L./LCD COLOR, etc.

The default settings are marked with ▷. The settings you can adjust vary depending on the power mode of your camcorder. The screen shows the items you can operate at the moment. Unavailable items will be grayed out.

You can select the items listed below in the LCD SET menu. To select these items, see “Changing the menu settings” (p. 43).



LCD BRIGHT

See page 16 for details.

LCD B.L.

You can adjust the brightness of the LCD screen’s backlight. The recorded picture will not be affected by this setting.


▷BRT NORMAL	Standard brightness.
BRIGHT	Select to brighten the LCD screen.

⚙ Notes

- When you connect your camcorder to outside power sources, [BRIGHT] is automatically selected for the setting.
- When you select [BRIGHT], battery life is reduced by about 10 percent during recording.

LCD COLOR

Turn the SEL/PUSH EXEC dial to adjust the color on the LCD screen. The recorded picture will not be affected by this setting.




Using the (TAPE SET) menu – FRAME REC/INT.REC, etc.

You can select items listed below in the TAPE SET menu. To select items, see “Changing the menu settings” (p. 43).

The default settings are marked with ▷. The settings you can adjust vary depending on the

power mode of your camcorder. The screen shows the items you can operate at the moment. Unavailable items will be grayed out.

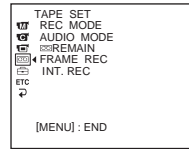

REC MODE

▷SP (<u>SP</u>)	Select to record in the SP (Standard Play) mode on a cassette.
LP (<u>LP</u>)	Select to increase the recording time from that of the SP mode (2 times longer for Hi8 TRV128/228/328/428, 1.5 times longer for Hi8 TRV260/265) (Long Play). The use of Sony cassettes is recommended to get the most out of your camcorder.

Notes

- If you record in the LP mode, a mosaic-like noise may appear or sound may be interrupted when you play back the tape on other camcorders or VCRs.
- For **Hi8** TRV128/228/328/428:
When you record a tape in the LP mode on your camcorder, recording is carried out in the standard 8 mm **8** system.
- For **Hi8** TRV260/265:
When you mix recordings in the SP mode and in the LP mode on one tape, the playback picture may be distorted or the time code may not be written properly between the scenes.

AUDIO MODE

For **Hi8** TRV260/265:

▷12BIT	Select to record in the 12-bit mode (2 stereo sounds).
16BIT (<u>16b</u>)	Select to record in the 16-bit mode (1 stereo sound with high quality).

ORC TO SET

For **Hi8** TRV128/228/328/428:

You can automatically adjust the recording condition to get the best possible recording.


When you select [ORC TO SET] in the menu settings, [START/STOP KEY] appears. Press REC START/STOP. [ORC] appears on the screen and adjustment starts. Your camcorder returns to the standby mode when adjustment is complete. It takes about 10 seconds for adjustment.

Notes

- Each time you eject a cassette, this setting will be canceled.

- When you set [ORC TO SET], a non-recorded section of about 0.1 second appears on the tape. However, note that this non-recorded section disappears from the tape when you continue recording from this section.
- To check if you have already set this setting, select [ORC TO SET] in the menu settings. [ORC ON] is displayed if it is already set.


REMAIN

▷AUTO	Select to display the remaining tape bar: <ul style="list-style-type: none"> • For about 8 seconds after you turn on your camcorder with the cassette inserted, and your camcorder calculates the remaining amount of tape. • For about 8 seconds after  (play) is pressed. • For about 8 seconds after DSPL/BATT INFO is pressed to display the screen indicators. • For the period of tape rewinding, forwarding or picture search.
ON	Select to always display the remaining tape indicator.


FRAME REC

For  TRV260/265:

You can record pictures with a stop-motion animated effect by alternately frame recording and then moving the subject a little.

For  TRV265:

Operate your camcorder using the Remote Commander to prevent camera shake.

▷OFF	Select to record in the standard recording mode.
ON	Select to record pictures using the frame recording function. <ol style="list-style-type: none"> 1 Turn the SEL/PUSH EXEC dial to select [ON], then press the dial. 2 Press MENU to hide the menu settings.  lights up. 3 Press REC START/STOP. A picture (approximately 6 frames) is recorded, and your camcorder enters the standby mode. 4 Move the subject and repeat step 3.


Notes

- When you use frame recording continuously, the remaining tape time will not be indicated correctly.
- The last scene will be longer than other scenes.

→ *continued*

For **TRV260/265**:

You can achieve excellent recordings of flowers blooming, etc., with this function. Connect your camcorder to the wall outlet using the supplied AC Adaptor during the operation.



a. [REC TIME]

b. [INTERVAL]

- 1** Turn the SEL/PUSH EXEC dial to select [SET], then press the dial.
- 2** Turn the SEL/PUSH EXEC dial to select [INTERVAL], then press the dial.
- 3** Turn the SEL/PUSH EXEC dial to select the desired interval time (30 seconds, 1, 5, 10 minutes), then press the dial.
- 4** Turn the SEL/PUSH EXEC dial to select [REC TIME], then press the dial.
- 5** Turn the SEL/PUSH EXEC dial to select the desired recording time (0.5, 1, 1.5, 2 seconds), then press the dial.
- 6** Turn the SEL/PUSH EXEC dial to select [\Rightarrow RETURN], then press the dial.
- 7** Turn the SEL/PUSH EXEC dial to select [ON], then press the dial.
- 8** Press MENU to hide the menu settings.
 \Rightarrow flashes.
- 9** Press REC START/STOP.
 The interval recording starts.
 \Rightarrow lights up during interval recording.
 To cancel recording, set to [OFF] in the menu settings.

Note

- There may be a discrepancy in recording time of up to ± 6 frames from the selected time.

Tips


- If you adjust the focus manually, you may be able to record clear pictures even if the light changes (p. 29).
- You can silence the beeps during recording (p. 59).

Using the (SETUP MENU) – CLOCK SET/USB STREAM/L

 LANGUAGE, etc.

You can select items listed below in the SETUP MENU. To select items, see “Changing the menu settings” (p. 43).


The default settings are marked with ▷. The settings you can adjust vary depending on the power mode of your camcorder. The screen shows the items you can operate at the moment. Unavailable items will be grayed out.

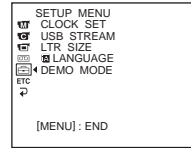

CLOCK SET

You can set the date and time (p. 17).

AUTO DATE

For  TRV128/228/328/428:

You can automatically record the date once a day for 10 seconds after you start recording.

▷ON	Select to record the date for 10 seconds after recording has started.
OFF	Select to cancel the auto date function.

Tip

- The auto date function automatically displays the date once a day. However, the date may automatically appear more than once a day if:
 - you set the date and time.
 - you eject and insert the tape again.
 - you stop recording within 10 seconds.
 - you set [AUTO DATE] to [OFF] once and set it back to [ON] in the menu settings.

USB STREAM

For  TRV260/265:

You can connect a USB cable (supplied) to your camcorder, and view the picture displayed on the screen of your camcorder on your computer (USB Streaming). For details, refer to the “Computer Applications Guide.”

▷OFF	Select to deactivate the USB Streaming function.
ON	Select to activate the USB Streaming function.

LTR SIZE

▷NORMAL	Select to display selected menu items in normal size.
2x	Select to display selected menu items at twice the normal height.

→ continued

LANGUAGE

You can select or change the language used for the on-screen display (p. 19). You can select from English, Simplified English, Canadian-French, Latin American Spanish, Brazilian-Portuguese, Traditional-Chinese, or Korean.

DEMO MODE

When you remove a cassette from your camcorder, and select the CAMERA mode, you can view the demonstration in about 10 minutes.

▷ON	Select to see an overview of the functions available such as when you are using this camcorder for the first time.
OFF	Select when you do not intend to use the [DEMO MODE].

Note


- You can view the demonstration only when the NIGHTSHOT PLUS switch is set to OFF.

Tips

- The demonstration will be suspended in situations such as those described below.
 - When a cassette is inserted.
 - When a mode other than CAMERA is selected.
- If [A.SHUT OFF] is set to [5 min] when the camcorder is used on the battery pack, the power will be turned off after approximately 5 minutes (p. 59).

Using the ETC (OTHERS) menu – WORLD TIME/VIDEO EDIT, etc.

power mode of your camcorder. The screen shows the items you can operate at the moment. Unavailable items will be grayed out.

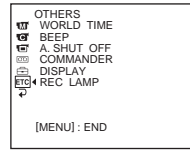

You can select items listed below in the OTHERS menu. To select items, see “Changing the menu settings” (p. 43). The default settings are marked with ▷. The settings you can adjust vary depending on the

DATA CODE

For **TRV260/265**:

▷OFF	Select not to display date, time and the camera settings data during playback.
DATE/TIME	Select to display the date and time during playback. (p. 37)
CAM DATA	Select to display the camera setting data during playback. (p. 37)

WORLD TIME

You can adjust the time difference when using your camcorder abroad. Set the time difference by turning the SEL/PUSH EXEC dial, the clock will be adjusted in accordance with the time difference. If you set the time difference to 0, the clock returns to the originally set time.

BEEP

▷MELODY	Select to play a melody when you start/stop recording, operate your camcorder with the SEL/PUSH EXEC dial, or when an unusual condition occurs on your camcorder.
NORMAL	Select to sound a beep instead of the melody.
OFF	Select to cancel the melody, beep sound, shutter sound and operation confirmation beep.

A.SHUT OFF

▷5 min	Select to activate the Auto shut off. When approximately 5 minutes have elapsed while you do not operate your camcorder, the camcorder is automatically turned off to prevent the battery from becoming consumed.
NEVER	Select to deactivate the Auto shut off.

→ continued

Note

- When you connect your camcorder to the wall outlet, [A.SHUT OFF] is automatically set to [NEVER].

COMMANDER

For **Hi8** TRV228/428/ **Hi8** TRV265:

▷ON	Select when using the Remote Commander supplied with your camcorder.
OFF	Select to deactivate the Remote Commander to prevent your camcorder from responding to a command sent by another VCR remote control unit.

Note

- The setting returns to [ON] when you have the power source disconnected from your camcorder for more than 5 minutes.

DISPLAY

▷LCD	Select to show the displays such as the time code on the LCD screen and in the viewfinder.
V-OUT/LCD	Select to show the displays such as the time code on the TV screen, LCD screen, and in the viewfinder.

REC LAMP

▷ON	Select to turn on the camera recording lamp on the front of your camcorder during recording.
OFF	Select this setting in the following recording situations. The camera recording lamp will not light up during recording. <ul style="list-style-type: none">• When you do not want the subject to be nervous about being recorded.• When you are recording close to the subject.• When the subject reflects the recording lamp.

VIDEO EDIT


For **Hi8** TRV260/265:

You can select up to 20 scenes (programs) and record them in the desired order to another recording device such as VCR (p. 69).

Connecting to a VCR


You can create a copy of the picture recorded on your camcorder on other recording devices (p. 63).
For TRV260/265, you can also record the picture from a VCR to a tape on your camcorder (p. 68).
Connect your camcorder to a VCR as shown in the following illustration.

For Hi8 TRV128/228/328/428:

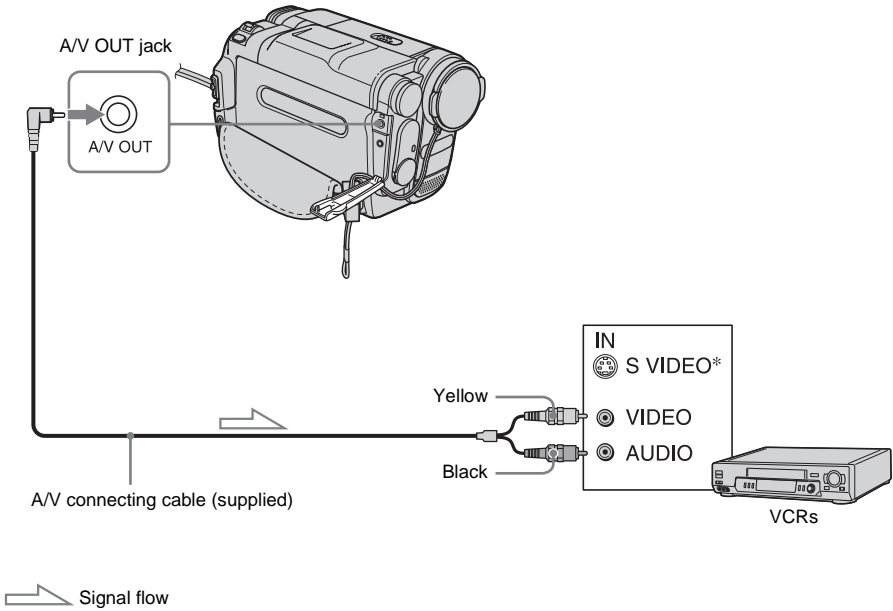

→ *continued*

For **TRV260/265:**

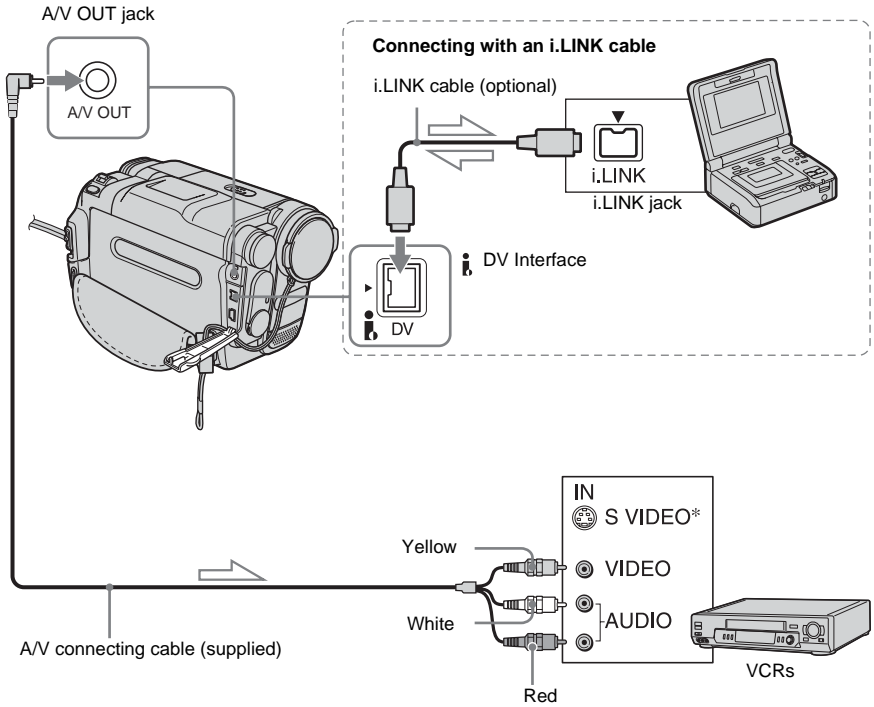

Signal flow

* When there is an S video jack on the device to be connected, connect the S video plug to that jack instead of using the yellow video plug. The audio will not be output when you connect with the S video plug alone. Pictures can be reproduced more faithfully with this connection.

Notes on the A/V connecting cable

- Use the A/V connecting cable to connect your camcorder to other devices. Before connecting, make sure the [DISPLAY] setting in the **ETC** (OTHERS) menu is set to [LCD] (the default setting) (p. 60).
- For **TRV128/228/328/428:** When you are connecting your camcorder to stereo device, connect the audio plug of the A/V connecting cable to the left (white) jack on the VCR.
- For **TRV260/265:** When you are connecting your camcorder to monaural device, connect the yellow plug of the A/V connecting cable to the video jack, and the red or the white plug to the audio jack on the VCR.

To use an i.LINK cable for connection

For **TRV260/265:**

Use an i.LINK cable (optional) to connect your camcorder to other device via the DV Interface. The video and sound signals are transmitted digitally, producing high quality pictures. Note that you cannot record the picture and sound separately. For details, see page 84.

Dubbing to another tape

You can copy and edit the picture played back on your camcorder to other recording devices (such as VCRs).

1 Connect your VCR to your camcorder as a recording device (p. 61, 62).

2 Prepare your VCR for recording.

- Insert a cassette for recording.
- If your VCR has an input selector, set it to the input mode.

3 Prepare your camcorder for playback.


- Insert the recorded cassette.
- Slide the POWER switch to select the PLAY/EDIT mode.






4 Start the playback on your camcorder, and record it on the VCR.

Refer to the operating instructions supplied with your VCR for details.



5 When the dubbing is finished, stop your camcorder and the VCR.

🔊 Notes

- When dubbing using the A/V connecting cable, press DSPL/BATT INFO to hide indicators such as time code (p. 37). Otherwise, they will be recorded on the tape.
- For  TRV260/265:
When connected using the A/V connecting cable, to record the date/time and camera settings data, have it displayed on screen (p. 37).

- For  TRV260/265:
When your camcorder is connected to the VCR via the  DV Interface, you cannot record the title or indicators.
- For  TRV260/265:
Pictures edited with Picture effect ([P EFFECT] p. 45) cannot be output via the  DV Interface.
- For  TRV260/265:
When connected using the i.LINK cable, the recorded picture becomes rough when a picture is paused on your camcorder while recording to a VCR.

💡 Tip

- For  TRV128/228/328/428:
To prevent deterioration of pictures, set [EDIT] to [ON] in the  (PLAYER SET) menu before dubbing (p. 51).

Dubbing a tape easily

– Easy Dubbing

(Hi-Fi TRV128/228/328/428)

You can control VCR for dubbing with your camcorder easily with the VCR connected to the camcorder.

Step 1: Preparing your camcorder and VCR for operation

Follow the steps below when you are performing the Easy Dubbing for the first time. You can skip this setting if you have set up the VCR by the following procedure before.

📌 Note

- You cannot perform the Easy Dubbing on a VCR that does not support [IR SETUP] codes.

1 **Connect your VCR to your camcorder as a recording device (p. 62).**


2 **Prepare your VCR for recording.**

- Insert a cassette for recording.
- Set the input selector to input mode, if your VCR has one.


3 **Prepare your camcorder for playback.**

- Insert a cassette for editing.
- Slide the POWER switch repeatedly to select the PLAY/EDIT mode.

4 **Press EASY DUB.**

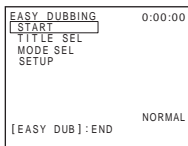

5 **Turn the SEL/PUSH EXEC dial to select [SETUP], then press the dial.**

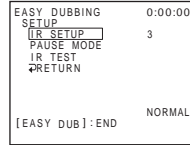


6 **Turn the SEL/PUSH EXEC dial to select [IR SETUP], then press the dial.**

When you connect with an A/V connecting cable, you need to check the [IR SETUP] code signal to see if your VCR can be operated by your camcorder (infrared ray emitter).

7 **Turn the SEL/PUSH EXEC dial to select the [IR SETUP] code of your VCR, then press the dial.**

For the [IR SETUP] code of your VCR, refer to “[IR SETUP] code list” (p. 65). When there is more than one code listed for the manufacturer of your VCR, try each code and find the most appropriate one.


8 **Turn the SEL/PUSH EXEC dial to select [PAUSE MODE], then press the dial.**

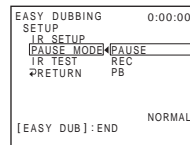

9 **Turn the SEL/PUSH EXEC dial to select the mode to cancel recording pause on the VCR, then press the dial.**

Refer to the operating instructions supplied with your VCR for details on operation.

- 10** Point the infrared ray emitter of your camcorder towards the remote sensor on your VCR, from about 30 cm (12 in.) away, with no obstructions.

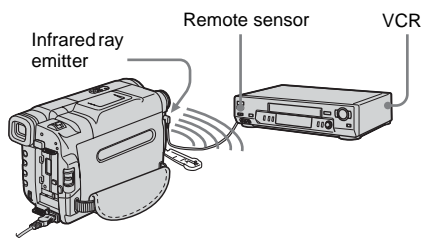

- 11** Set the VCR to recording pause.

- 12** Turn the SEL/PUSH EXEC dial to select [IR TEST], then press the dial.

- 13** Turn the SEL/PUSH EXEC dial to select [EXECUTE], then press the dial.

Recording starts on your VCR when the setting is correct. [COMPLETE] appears when the [IR SETUP] code test is finished. Go on to the next step.

When recording fails to start, select another [IR SETUP] code and try again.

- 14** Turn the SEL/PUSH EXEC dial to select [↩ RETURN], then press the dial.

[IR SETUP] code list

The following [IR SETUP] codes are recorded on your camcorder by default. (It is set at "3" as the default setting.)

Manufacturing company	[IR SETUP] code
Sony	1, 2, 3, 4, 5, 6
Admiral (M. Wards)	89
Aiwa	47, 54, 80
Akai	49, 51
Audio Dynamic	21, 35
Bell&Howell (M. Wards)	36
Broksonic	21, 70, 82
Canon	77, 78
Citizen	47
Craig	47, 73
Curtis Mathis	8, 77, 80
Daewoo	26, 40, 77
DBX	21, 33, 35
Dimensia	8
Emerson	26, 48, 59, 70, 80, 81, 82
Fisher	36, 37, 44, 45
Funai	80
General Electric	8, 32*, 77, 94*, 101
Goldstar/LG	47
GO VIDEO	71
Hitachi	8, 42, 78
HQ	40
Instant Replay	77, 78
JC Penny	8, 21, 33, 35, 36, 42, 77
JVC	12, 13, 14, 21, 33, 35
Kenwood	21, 33, 35, 47
LXI (Sears)	36, 37, 42, 44, 45, 47, 49, 80
Magnavox	17, 77, 78, 83
Marantz	21, 33, 35
Marta	47
Memorex	37, 77
Minolta	8, 42
Mitsubishi/MGA	22, 23, 24, 28, 29

→ continued

Manufacturing company	[IR SETUP] code
Multitech	23, 32, 80
NEC	21, 33, 35
Olympic	77, 78
Optimus	22
Orion	60
Panasonic	16, 17, 77, 78
Pentax	8, 42
Philco	26, 70, 77, 78
Philips	47, 77, 78, 83
Pioneer	78
Quasar	6, 16, 17, 77, 78
RCA/PROSCAN	7, 8, 16, 40, 41, 42, 77, 78, 78*, 83, 101
Realistic	22, 36, 37, 77, 80, 88
Sansui	21
Singer	73
Samsung	24, 24*, 32, 32*, 41, 94, 94*
Sanyo	26, 36, 37, 47
Scott	22, 23, 24, 28, 32, 37, 40, 41
Sharp	88, 89
Shintom	73
Signature 2000	80, 89
Sylvania	77, 78, 80, 83
Symphonic	80
Tashiro	47
Tatung	21, 33, 35
Teac	21, 33, 35, 80
Technics	77, 78
Toshiba	7, 40, 49
Wards	37, 47, 88, 89, 95
Yamaha	21, 33, 35, 36
Zenith	95


* TV/VCR component

Step 2: Selecting the title

You can insert a title.


You can select one of the 8 preset titles and the 2 custom titles. See steps 1 to 4 on page 31 to create original titles.

- 1 Turn the SEL/PUSH EXEC dial to select [TITLE SEL], then press the dial.

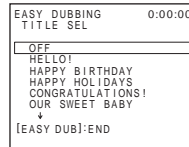

- 2 Turn the SEL/PUSH EXEC dial to select the desired title, then press the dial.

The title flashes.

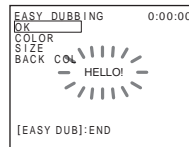


- 3 Change [COLOR] (color), [SIZE] (size), or [BACK COL.] (back ground color) as necessary.

If you do not need to change them, go to Step 3 (p. 67).

- 1 Turn the SEL/PUSH EXEC dial to select [COLOR], [SIZE], or [BACK COL.], then press the dial. The selected item appears on the screen.
- 2 Turn the SEL/PUSH EXEC dial to select the desired item, then press the dial.
- 3 Repeat steps 1 and 2 until the title is laid out as desired.

4 Turn the SEL/PUSH EXEC dial to select [OK], then press the dial.

The title lights up.

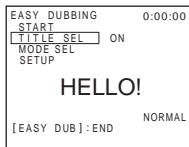

Notes

- You can put a title only into the tape of the VCR.
- If you set the background color to [FADE], the picture may not appear properly, depending on the connected VCR.


Tips

- The title color changes as follows:
[WHITE] ↔ [YELLOW] ↔ [VIOLET] ↔ [RED] ↔ [CYAN] ↔ [GREEN] ↔ [BLUE]
- The title size changes as follows:
[SMALL] ↔ [LARGE]
- The background color changes as follows:
[FADE] ↔ [WHITE] ↔ [YELLOW] ↔ [VIOLET] ↔ [RED] ↔ [CYAN] ↔ [GREEN] ↔ [BLUE] ↔ [BLACK]

Step 3: Selecting the dubbing mode

You can choose either normal recording ([NORMAL]) or interval recording ([PREVIEW]).

1 Turn the SEL/PUSH EXEC dial to select [MODE SEL], then press the dial.

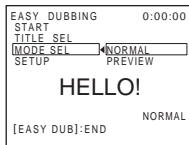


2 Turn the SEL/PUSH EXEC dial to select [NORMAL] or [PREVIEW], then press the dial.

When you select [NORMAL]

You can record into the VCR normally.

When you select [PREVIEW]

You can make a time-lapse dubbing by setting the VCR to automatically repeat 5 seconds' recording and 25 seconds' standby.

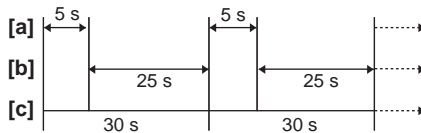


- Recording time (VCR)
- Waiting time (VCR)
- Playback time (camcorder)

Step 4: Performing Easy Dubbing

Make sure that your camcorder and VCR are connected, and that the VCR is set to recording pause.

1 Turn the SEL/PUSH EXEC dial to select [START], then press the dial.

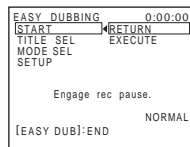


→ continued

-
- 2 Turn the SEL/PUSH EXEC dial to select [EXECUTE], then press the dial.

When dubbing ends, your camcorder and VCR stop automatically.
Then the display returns to the Easy Dubbing initial screen.

To stop dubbing during editing

Press  (stop) on your camcorder.

To quit Easy Dubbing

Press EASY DUB.

Note

- [NOT READY] appears on the screen when [START] is not carried out.

Recording pictures from a VCR (E) TRV260/265

You can record and edit pictures from a VCR on a tape inserted in your camcorder. Insert a cassette for recording in your camcorder.



Note

- Your camcorder can only record from an NTSC source. For example, European video or TV programs (PAL/SECAM) cannot be recorded correctly. See page 81 for details on TV color systems.

-
- 1 **Connect your VCR to your camcorder (p. 62).**


Use an i.LINK cable (optional) for connection.

-
- 2 **Slide the POWER switch repeatedly to select the PLAY/EDIT mode.**

-
- 3 **Press  (rec) and the button on its right simultaneously on your camcorder, then immediately press  (pause) on your camcorder.**

-
- 4 **Start playing the cassette on your VCR.**

The picture played on the connected device appears on the LCD screen of your camcorder.

-
- 5 **Press  (pause) at the point you want to start recording.**

-
- 6 **Press  (stop) to stop recording.**
-

Tip


- DV IN appears when you connect your camcorder and other devices via an i.LINK cable. (This indicator may also appear on your TV.)

Dubbing selected scenes from a tape

– Digital program editing

(F) TRV260/265

You can select up to 20 scenes (programs) and record them in the desired order to other recording device such as VCR.

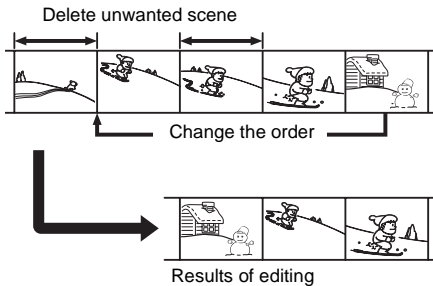

Step 1: Preparing your camcorder and VCR for operation

Follow the steps below when you are performing digital program editing for the first time to a tape in a VCR. You can skip this setting if you have set up the VCR by the following procedure before.

⚡ Notes

- You cannot perform the Digital program editing on a VCR that does not support [IR SETUP] codes.
- When your camcorder is connected to the VCR via the DV Interface, you cannot record the title or indicators.

1 Connect your VCR to the camcorder as a recording device (p. 62).

You can use either the A/V connecting cable or the i.LINK cable to make the connection. The dubbing procedure is easier with the i.LINK connection.

2 Prepare your VCR.

- Insert a cassette for recording.
- Set the input selector to input mode, if your VCR has one.


3 Prepare your camcorder (playing device).

- Insert a cassette for editing.
- Slide the POWER switch repeatedly to select the PLAY/EDIT mode.


4 Press MENU.

5 Turn the SEL/PUSH EXEC dial to select [ETC] (OTHERS), then press the dial.


6 Turn the SEL/PUSH EXEC dial to select [VIDEO EDIT], then press the dial.

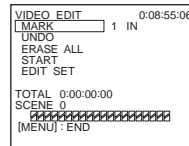

7 Turn the SEL/PUSH EXEC dial to select [EDIT SET], then press the dial.

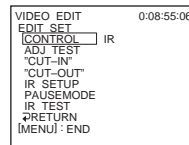

8 Turn the SEL/PUSH EXEC dial to select [CONTROL], then press the dial.

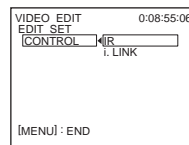

→ continued

-
- 9 Turn the SEL/PUSH EXEC dial to select [i.LINK] or [IR], then press the dial.

When connecting with an i.LINK cable


After selecting [i.LINK], go on to “Step 2: Adjusting the synchronization of the VCR” (p. 70).

When connecting with an A/V connecting cable

After selecting [IR], follow the procedure described in “To set the [IR SETUP] code” (p. 70).

To set the [IR SETUP] code

When you connect with an A/V connecting cable, you need to check the [IR SETUP] code signal to see if your VCR can be operated by your camcorder (infrared ray emitter).

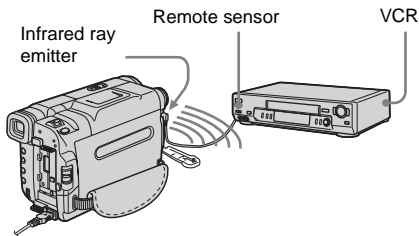

- 1 Turn the SEL/PUSH EXEC dial to select [IR SETUP], then press the dial.

- 2 Turn the SEL/PUSH EXEC dial to select the [IR SETUP] code of your VCR, then press the dial.

For the [IR SETUP] code of your VCR, refer to “[IR SETUP] code list” (p. 65). When there is more than one code listed for the manufacturer of your VCR, try each code and find the most appropriate one.

- 3 Turn the SEL/PUSH EXEC dial to select [PAUSEMODE], then press the dial.

- 4 Turn the SEL/PUSH EXEC dial to select the mode to cancel recording pause on the VCR, then press the dial.

Refer to the operating instructions supplied with your VCR for details on operation.

- 5 Point the infrared ray emitter of your camcorder towards the remote sensor on your VCR, from about 30 cm (12 in.) away, with no obstructions.

- 6 Insert a cassette into your VCR, and set the VCR to recording pause.

- 7 Turn the SEL/PUSH EXEC dial to select [IR TEST], then press the dial.

- 8 Turn the SEL/PUSH EXEC dial to select [EXECUTE], then press the dial.

The recording starts on your VCR when the setting is correct. [COMPLETE] appears when the [IR SETUP] code test is finished. Go on to “Step 2: Adjusting the synchronization of the VCR” (p. 70).

When recording fails to start, select another IR code and try again.

Step 2: Adjusting the synchronization of the VCR

Follow the steps below when you are performing digital program editing for the first time to a tape in a VCR. You can skip this setting if you have set up your VCR before using the following procedure. You can adjust the synchronization of your camcorder and the VCR to avoid not recording the starting scene.


-
- 1 Remove the cassette from your camcorder. Prepare a pen and paper to take notes.

-
- 2 Set the VCR to recording pause mode. Skip this step if you have selected [i.LINK] in step 9 on p. 70.


Note

- Run the tape for about 10 seconds before pausing. The starting scenes may not get recorded when you start recording from the beginning of the tape.

- 3 Turn the SEL/PUSH EXEC dial to select [ADJ TEST], then press the dial.

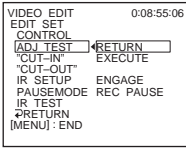


- 4 Turn the SEL/PUSH EXEC dial to select [EXECUTE], then press the dial. [EXECUTING] flashes and a picture (about 50 seconds long) with 5 [IN] and [OUT] indicators each for adjusting synchronization is recorded. [COMPLETE] appears when the recording is finished.

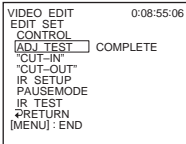

- 5 Rewind the tape on your VCR, then play back in slow mode. 5 opening numbers for each [IN] and closing numbers for each [OUT] appear.

- 6 Take a note of the opening numerical value of each [IN] and the closing number value of each [OUT], then calculate the average numerical value for each [IN] and [OUT].


- 7 Turn the SEL/PUSH EXEC dial to select [CUT-IN], then press the dial.

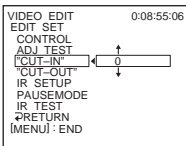

- 8 Turn the SEL/PUSH EXEC dial to select the average numerical value of [IN], then press the dial.

The calculated start position for recording is set.

- 9 Turn the SEL/PUSH EXEC dial to select [CUT-OUT], then press the dial.

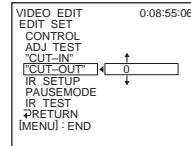

- 10 Turn the SEL/PUSH EXEC dial to select the average numerical value of [OUT], then press the dial.

The calculated stop position for recording is set.

- 11 Turn the SEL/PUSH EXEC dial to select [RETURN], then press the dial.

Recording the selected scenes as programs

When you are performing digital program editing for the first time to a tape in a VCR, go through the procedures described in Steps 1 and 2 (p. 69 to p. 70) beforehand.

- 1 Prepare a cassette.

Insert a tape to be played back into the camcorder.


Insert a cassette for recording into your VCR.

→ continued

2 Press MENU.

3 Turn the SEL/PUSH EXEC dial to select [ETC] (OTHERS), then press the dial.


4 Turn the SEL/PUSH EXEC dial to select [VIDEO EDIT], then press the dial.

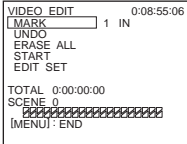

5 Search for the beginning of the first scene that you want to record on your camcorder, then pause playback.

6 Turn the SEL/PUSH EXEC dial to select [MARK], then press the dial.


The starting point of the first program is set, and the upper part of the program mark changes to light blue.

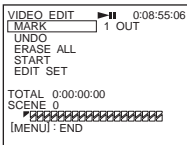

7 Search for the end of the first scene that you want to record on your camcorder, then pause playback.

8 Press the SEL/PUSH EXEC dial.

The ending point of the first program is set, and the lower part of the program mark changes to light blue.

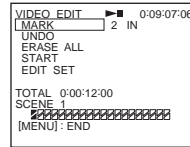


9 Repeat steps 5 to 8 and create programs.

10 Set your VCR to the recording pause.


Skip this step if your camcorder is connected via an i.LINK cable.

11 Turn the SEL/PUSH EXEC dial to select [START], then press the dial.

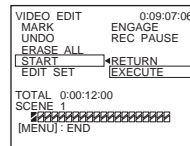

12 Turn the SEL/PUSH EXEC dial to select [EXECUTE], then press the dial.

A search for the beginning of the first program starts, then the recording starts. [SEARCH] appears during search and [EDITING] appears during editing.

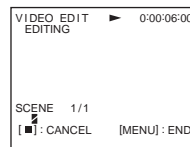

When a program is recorded, the program mark stops flashing and remains lit. When all programs have been recorded, the program editing operation stops automatically.

To cancel recording, press (stop).

To end Digital program editing

Press MENU.

To save a program without using it to record

Press MENU in step 11.

The program is stored in memory until the cassette is ejected.

To erase programs

- 1 Follow steps 1 to 4 in “Recording the selected scenes as programs” (p. 71).**
- 2 Turn the SEL/PUSH EXEC dial to select [UNDO] or [ERASE ALL], then press the dial.**

When you select [UNDO]

You can erase the last set program.

When you select [ERASE ALL]

You can erase all the programs.

- 3 Turn the SEL/PUSH EXEC dial to select [EXECUTE], then press the dial.**
The programs are deleted. To cancel this operation, select [RETURN], and then press the dial.

⚡ Notes

- You cannot set starting point or ending point on a blank section of the tape. If there is a blank section, the total time may not appear correctly.
- When you cannot operate the device correctly using an i.LINK cable connection, select [IR] in step 9 on p. 70, and set the [IR SETUP] code.

Troubleshooting

If you run into any problem using your camcorder, use the following table to troubleshoot the problem. If the problem

persists, remove the power source and contact your Sony dealer.


If “C:□□:□□” is displayed on the LCD screen or the viewfinder, the self-diagnosis display function is activated. See page 79 for details.

Overall operations



Symptom	Cause and/or Corrective Actions
The power does not turn on.	<ul style="list-style-type: none"> The battery pack is discharged, running low, or not attached to the camcorder. <ul style="list-style-type: none"> → Attach a charged battery pack to the camcorder. (p. 12) → Use the AC Adaptor to connect to the wall outlet. (p. 15)
The camcorder does not operate even when the power is set to on.	→ Disconnect the AC Adaptor from the wall outlet or remove the battery pack, then reconnect it after about 1 minute. If the functions still do not work, press the RESET button using a sharp-pointed object. (If you press the RESET button, all settings including the clock setting are reset.)
For Hi8 TRV228/428/ Hi8 TRV265: The supplied Remote Commander does not function.	<ul style="list-style-type: none"> → Set [COMMANDER] in the [ETC] (OTHERS) menu to [ON]. (p. 60) → Insert a battery into the battery holder with the + – polarities correctly matching the + – marks. If this still does not solve the problem, insert a new battery since the battery is dead. (p. 95) → Remove any obstructions between the Remote Commander and the remote sensor.

Batteries/Power sources

Symptom	Cause and/or Corrective Actions
The CHG (charge) lamp does not light while the battery pack is being charged.	<ul style="list-style-type: none"> → Attach the battery pack to the camcorder correctly. If the lamp still does not light up, then it indicates that no power is supplied from the wall outlet. The battery charge is completed. (p. 12)
The CHG (charge) lamp flashes while the battery pack is being charged.	→ Attach the battery pack to the camcorder correctly. If the problem persists, disconnect the AC Adaptor from the wall outlet and contact your Sony dealer. The battery pack may be damaged. (p. 12)
The battery pack is quickly discharged.	<ul style="list-style-type: none"> The temperature of the environment is too low, or the battery pack has not been charged enough. This is not a malfunction. <ul style="list-style-type: none"> → Fully charge the battery again. If the problem persists, replace the battery pack with a new one. It may be damaged. (p. 12, 83)

Symptom	Cause and/or Corrective Actions
The remaining battery time indicator does not indicate the correct time.	<ul style="list-style-type: none"> The temperature of the environment is too high or too low, or the battery pack has not been charged enough. This is not a malfunction. →Fully charge the battery again. If the problem persists, replace the battery pack with a new one. It may be damaged. (p. 12, 83)
The power turns off frequently although the remaining battery indicator indicates that the battery pack has enough power to operate.	<ul style="list-style-type: none"> A problem has occurred in the remaining battery time indicator, or the battery pack has not been charged enough. →Fully charge the battery again to correct the indication. (p. 12)
The power abruptly turns off.	<ul style="list-style-type: none"> [A.SHUT OFF] in the  (OTHERS) menu is set to [5 min]. (p. 59) →When approximately 5 minutes have elapsed while you do not operate your camcorder, the camcorder is automatically turned off. Slide the POWER switch down to turn the power on again. (p. 15) Or use the AC adaptor.
A problem occurs when the camcorder is connected to the AC Adaptor.	→Turn off the power, and disconnect the AC Adaptor from the wall outlet. Then, connect it again.

Cassette tapes

Symptom	Cause and/or Corrective Actions
Cassette cannot be ejected from the compartment.	<ul style="list-style-type: none"> →Make sure the power source (battery pack or AC Adaptor) is connected correctly. (p. 12) →Remove the battery pack from the camcorder, then attach it again. (p. 12) →Attach a charged battery pack to the camcorder. (p. 12)
Cassette is not ejected even when the cassette lid is open.	→Moisture condensation is starting in your camcorder. (p. 86)
The remaining tape indicator is not displayed.	→Set  [REMAIN] to [ON] in the  (TAPE SET) menu to always display the remaining tape indicator. (p. 55)

LCD screen/viewfinder

Symptom	Cause and/or Corrective Actions
An unknown language appears on the screen.	→See page 19.
An unknown picture appears on the screen.	→The camcorder is in [DEMO MODE]. (The [DEMO MODE] is automatically displayed when you leave the camcorder for 10 minutes after selecting CAMERA without inserting a cassette.) Insert a cassette to cancel [DEMO MODE]. You can also set [DEMO MODE] to [OFF] in the menu. (p. 58)
An unknown indicator appears on the screen.	→Refer to the indicator list. (p. 97)

→continued

Symptom	Cause and/or Corrective Actions
The picture in the viewfinder is not clear.	→Use the viewfinder lens adjustment lever to adjust the lens. (p. 16)
The picture in the viewfinder has disappeared.	→Close the LCD panel. The picture is not displayed in the viewfinder when the LCD panel is open. (p. 16)

Recording

Symptom	Cause and/or Corrective Actions
The tape does not start when you press REC START/STOP.	<ul style="list-style-type: none"> →Slide the POWER switch to turn on the CAMERA lamp. (p. 15) →The tape has reached the end. Rewind it, or insert a new cassette. →Set the write-protect tab to REC or insert a new cassette. (p. 82) →The tape is stuck to the drum due to moisture condensation. Remove the cassette and leave your camcorder for at least 1 hour, then re-insert the cassette. (p. 86)
The power abruptly turns off.	<ul style="list-style-type: none"> • [A.SHUT OFF] in the [ETC] (OTHERS) menu is set to [5 min]. (p. 59) <ul style="list-style-type: none"> →When approximately 5 minutes have elapsed while you do not operate your camcorder, the camcorder is automatically turned off. Slide the POWER switch down to turn the power on again (p. 15). Or use the AC Adaptor. • The battery pack is discharged. (p. 12)
For Hi8 TRV328/428/ Hi8 TRV260/265: The SteadyShot does not function.	<ul style="list-style-type: none"> →Set [STEADYSHOT] to [ON] in the [C] (CAMERA SET) menu. (p. 50) →Set [16:9 WIDE] to [OFF] in the [C] (CAMERA SET) menu. (p. 48)
The auto focus does not function.	<ul style="list-style-type: none"> →Press FOCUS to enable auto focus. (p. 29) →The recording conditions are not suitable for auto focus. Adjust the focus manually. (p. 29)
A vertical band appears when recording candlelight or electric light in the dark.	<ul style="list-style-type: none"> • This occurs when the contrast between the subject and the background is too high. This is not a malfunction.
A vertical band appears when recording a bright subject.	<ul style="list-style-type: none"> • This phenomenon is called the smear effect. This is not a malfunction.
The color of the picture is not correctly displayed.	→Deactivate the NightShot plus function. (p. 28)
Picture appears too bright on the screen, and the subject does not appear on the screen.	<ul style="list-style-type: none"> →Deactivate the NightShot plus function in bright places. (p. 28) →Cancel the back light function. (p. 27)
The shutter sound is not heard.	→Set [BEEP] to [MELODY] or [NORMAL] in the [ETC] (OTHERS) menu. (p. 59)
For Hi8 TRV328/428/ Hi8 TRV260/265: Black bands appear when you record a TV screen or computer screen.	→Set [STEADYSHOT] to [OFF] in the [C] (CAMERA SET) menu. (p. 50)

Symptom	Cause and/or Corrective Actions
Flickering or changes in color occurs.	→ This occurs when recording pictures under a fluorescent lamp, sodium lamp, or mercury lamp in the soft portrait or sports lesson mode. Cancel [PROGRAM AE] in this case. (p. 44)
END SEARCH does not work.	<ul style="list-style-type: none"> • The cassette was ejected after recording. • The cassette is new and has nothing recorded.
END SEARCH does not work correctly.	<ul style="list-style-type: none"> • There is a blank section in the beginning or middle of the tape. This is not a malfunction.
The built-in light does not function.	→ Press LIGHT repeatedly to select ECOON . → If the problem persists, contact your Sony dealer or local authorized Sony service facility.

Playback

Symptom	Cause and/or Corrective Actions
Cannot play back.	→ If the tape has reached the end, rewind the tape. (p. 34)
Horizontal lines appear on the picture. The displayed pictures are not clear or do not appear.	→ Clean the head using the cleaning cassette (optional). (p. 86) <ul style="list-style-type: none"> • For Hi8 TRV128/228/328/428: The television's video channel is not adjusted correctly. → Adjust it. (p. 39) • For Hi8 TRV128/228/328/428: Set [EDIT] to [OFF] in the ▶ (PLAYER SET) menu. (p. 51)
No sound or only a low sound is heard.	→ For ▶ TRV260/265: Set [HiFi SOUND] to [STEREO] in the ▶ (VCR SET) menu. (p. 51) → Turn up the volume. (p. 34) → For ▶ TRV260/265: In the ▶ (VCR SET) menu, adjust [AUDIO MIX] from the [ST2] side until the sound is heard appropriately. (p. 52) → When you are using an S VIDEO plug, make sure the black plug for Hi8 TRV128/228/328/428, or the red and white plugs for ▶ TRV260/265 of the A/V connecting cable are connected as well. (p. 39)
The sound breaks off.	→ Clean the head using the cleaning cassette (optional). (p. 86)
For ▶ TRV265: Cannot perform the Date search with the recording date displayed on the screen.	<ul style="list-style-type: none"> • There is a blank section in the beginning or middle of the tape. This is not a malfunction.
For ▶ TRV260/265: “---” is displayed on the screen.	<ul style="list-style-type: none"> • The tape you are playing was recorded without setting the date and time. • A blank section on the tape is being played. • The data code on a tape with a scratch or noise cannot be read.
END SEARCH does not work.	<ul style="list-style-type: none"> • The cassette was ejected after recording. • The cassette is new and has nothing recorded.
END SEARCH does not work correctly.	<ul style="list-style-type: none"> • There is a blank section in the beginning or middle of the tape. This is not a malfunction.

→ continued

Symptom	Cause and/or Corrective Actions
For Hi8 TRV260/265: The picture does not appear on the screen when playing back a tape.	<ul style="list-style-type: none"> The tape is recorded in the Hi8 Hi8/standard 8 mm 8 system.
Noises appear on the screen.	<ul style="list-style-type: none"> The tape was recorded in a TV color system other than that of your camcorder. (p. 81)





Dubbing/Editing

Symptom	Cause and/or Corrective Actions
Cannot dub correctly using the A/V connecting cable.	→Set [DISPLAY] to [LCD] in the [Etc] (OTHERS) menu. (p. 60)
For Hi8 TRV260/265: Pictures from connected devices are not displayed correctly.	<ul style="list-style-type: none"> The input signal is not NTSC. (p. 68)
For Hi8 TRV260/265: Digital program editing does not function.	<ul style="list-style-type: none"> →Set the input selector on the VCR correctly, then check the connection between your camcorder and the VCR. (p. 62) →When your camcorder is connected to a DV device that is not a Sony product via an i.LINK cable, select [IR] in step 9 of "Step 1: Preparing your camcorder and VCR for operation." (p. 69) →Adjust the synchronization of the VCR. (p. 70) →Enter a correct [IR SETUP] code. (p. 65) →Select the mode used to cancel recording pause again. (p. 70) →Set your camcorder and the VCR more than 30 cm (12 in.) apart. (p. 70) The program may not be set to a blank section on the tape.
For Hi8 TRV260/265: The VCR is not responding properly during Digital program editing when it is connected via an i.LINK cable.	→While connecting via an i.LINK cable, select [IR] in step 9 of "Step 1: Preparing your camcorder and VCR for operation." (p. 69)
For Hi8 TRV128/228/328/428: Easy Dubbing does not function.	<ul style="list-style-type: none"> Your VCR and/or video camera recorder is not set correctly. <ul style="list-style-type: none"> →Make sure the input selector of the VCR is set to LINE. Also, make sure the power switch of the video camera recorder is set to VCR. (p. 64) The [IR SETUP] code or [PAUSE MODE] is not set correctly. <ul style="list-style-type: none"> → Select the correct [IR SETUP] code and [PAUSE MODE], according to your VCR. Then confirm VCR operation with the [IR TEST] function. (p. 64)

Warning indicators and messages

Self-diagnosis display/Warning indicators

If indicators appear on the screen, check the following. See the page in parentheses for details.

Indication	Cause and/or Corrective Actions
C:□□ : □□/E:□□ : □□ (Self-diagnosis display)	<p>Some symptoms can be fixed by yourself. If the problem persists even after you tried a couple of times, contact your Sony dealer or local authorized Sony service facility.</p> <p>C:04:□□ → A battery pack that is not an “InfoLITHIUM” battery pack is being used. Use an “InfoLITHIUM” battery pack. (p. 83)</p> <p>C:21:□□ → Moisture condensation has occurred. Remove the cassette and leave your camcorder for at least 1 hour, then re-insert the cassette. (p. 86)</p> <p>C:22:□□ → Clean the head using a cleaning cassette (optional). (p. 86)</p> <p>C:31□□ / C:32□□ → Symptoms that are not described above have occurred. Remove and insert the cassette, then operate your camcorder again. Do not perform this procedure if moisture starts to condense. (p. 85)</p> <p>→ Remove the power source. Reconnect it again and operate your camcorder again. → Change the tape. → Press the RESET button and operate your camcorder again.</p> <p>E:61:□□ / E:62:□□ → Contact your Sony dealer or local authorized Sony service facility. Inform them of the 5-digit code, which starts from “E.”</p>
 (Battery level warning)	<ul style="list-style-type: none"> • The battery pack is nearly used up. • Depending on the operating, environmental, or battery conditions, the  indicator may flash, even if there are approximately 5 to 10 minutes remaining.
 (Moisture condensation warning)*	<p>→ Eject the cassette, set the POWER switch to (CHG) OFF, and leave it for about 1 hour with the cassette lid open. (p. 86)</p>
 (Warning indicator pertaining to the tape)	<p>Slow flashing:</p> <ul style="list-style-type: none"> • There is less than 5 minutes remaining on the tape. • No cassette is inserted.* • The write-protect tab on the cassette is set to lock. (p. 82)* <p>Fast flashing:</p> <ul style="list-style-type: none"> • The tape has run out.*

→ continued

Indication	Cause and/or Corrective Actions
▲ (Eject cassette warning)*	<p>Slow flashing:</p> <ul style="list-style-type: none"> • The write-protect tab on the cassette is set to lock. (p. 82) <p>Fast flashing:</p> <ul style="list-style-type: none"> • Moisture condensation has occurred. (p. 86) • The tape has run out. • The self-diagnosis display code is displayed. (p. 79)

* You hear a melody or beep sound when the warning indicators appear on the screen.

Warning messages

The following messages will appear to prompt you to correct the situation.

Subjects	Indications	Corrective Actions/References
Battery	Use the "InfoLITHIUM" battery pack.	→See page 83.
	Battery level is low.	→Charge the battery. (p. 12)
	Old battery. Use a new one.	→See page 83
	▲ Re-attach the power source.	–
Moisture condensation	☒ ▲ Moisture condensation. Eject the cassette	→See page 86.
	☒ Moisture condensation. Turn off for 1H.	→See page 86.
Cassette/tape	☒ Insert a cassette.	→See page 18.
	▲ Reinsert the cassette.	→The cassette might be damaged, etc.
	☒ ▲ The tape is locked - check the tab.	→See page 82.
	☒ The tape has reached the end.	–
Others	Cannot record due to copyright protection.	–
	☒ Dirty video head. Use a cleaning cassette.	→See page 86.
	Cannot start Easy Handycam	→See page 26 and 36.
	Cannot cancel Easy Handycam	→See page 26 and 36.
	Cannot start Easy Handycam with USB connected	–
	Invalid button with Easy Handycam operation	→See page 26 and 36.
USB invalid during Easy Handycam	→Press SEL/PUSH EXEC dial.	

Using your camcorder abroad

Power supply

You can use your camcorder in any country/regions using the AC Adaptor supplied with your camcorder within AC 100 V to 240 V, 50/60 Hz.

Use a commercially available AC plug adaptor [a], if necessary, depending on the design of the wall outlet [b].



Simple setting of clock by time difference

You can easily set the clock to the local time by setting a time difference when using your camcorder abroad. Select [WORLD TIME] in the [ETC] (OTHERS) menu, then set the time difference (p. 59).

On TV color systems

Your camcorder is an NTSC system-based camcorder. If you want to view the playback picture on a TV, it must be an NTSC system-based TV (see following list) with the AUDIO/VIDEO input jack.

System	Used in
NTSC	Bahama Islands, Bolivia, Canada, Central America, Chile, Colombia, Ecuador, Guyana, Jamaica, Japan, Korea, Mexico, Peru, Surinam, Taiwan, the Philippines, the U.S.A., Venezuela, etc.
PAL	Australia, Austria, Belgium, China, Czech Republic, Denmark, Finland, Germany, Holland, Hong Kong, Hungary, Italy, Kuwait, Malaysia, New Zealand, Norway, Poland, Portugal, Singapore, Slovak Republic, Spain, Sweden, Switzerland, Thailand, United Kingdom, etc.
PAL - M	Brazil
PAL - N	Argentina, Paraguay, Uruguay
SECAM	Bulgaria, France, Guiana, Iran, Iraq, Monaco, Russia, Ukraine, etc.

Usable cassette tapes

You can use standard 8 mm **8** and Hi8 **Hi8**, Digital8 **8** video cassettes on your camcorder.

Hi8 **Hi8** system

This Hi8 **Hi8** system is an extension of the standard 8 mm **8** system, and was developed to produce higher quality pictures.

You cannot play back a tape recorded in the Hi8 **Hi8** system correctly on video recorders/players other than a Hi8 video recorder/player.

Digital8 **8** system

This video system has been developed to enable digital recording to Hi8 **Hi8**/Digital8 **8** video cassette.

The recording time when you use your Digital8 **8** system camcorder on Hi8 **Hi8**/standard 8 mm **8** tape is half the recording time when using the conventional Hi8 **Hi8**/standard 8 mm **8** system camcorder. (120 minutes of recording time becomes 60 minutes in the SP mode.)

To prevent a blank section from being made on the tape

Press END SEARCH to go to the end of the recorded section before you begin the next recording in the following cases:

- You have ejected the cassette during recording.
- You have played back the tape.

If there is a blank section or discontinuous signals on your tape, re-record from the beginning to the end of the tape as described above.

Copyright signal

When you play back

If the cassette you play back on your camcorder contains copyright signals, you cannot copy it to a tape in another video camera connected to your camcorder.

For **TRV260/265**:

When you record

You cannot record software on your camcorder that contains copyright control signals for copyright protection of software.


[Cannot record due to copyright protection.] appears on the LCD screen, or on the TV screen if you try to record such software.

Your camcorder does not record copyright control signals on the tape when it records.

Notes on use

To prevent accidental erasure

Slide the write-protect tab on the cassette to set to SAVE.

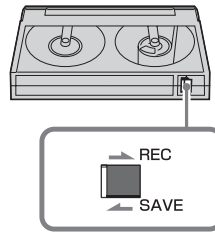


REC: The cassette can be recorded.

SAVE: The cassette cannot be recorded (write-protected).

When labeling the cassette

Be sure to place the label only on the locations as shown in the following illustration so as not to cause malfunction of your camcorder.

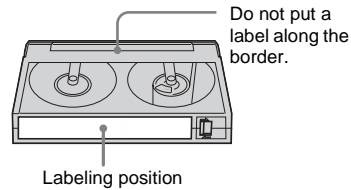


After using the cassette

Rewind the tape to the beginning to avoid distortion of the picture or the sound. The cassette should then be put in its case, and stored in an upright position.

video**Hi8**, Digital**8**, **8**, **Hi8** and **8** are trademarks.

About the “InfoLITHIUM” battery pack

This unit is compatible with the “InfoLITHIUM” battery pack (M series). Your camcorder operates only with the “InfoLITHIUM” battery pack. “InfoLITHIUM” M series battery packs have the  mark.

What is the “InfoLITHIUM” battery pack?

The “InfoLITHIUM” battery pack is a lithium-ion battery pack that has functions for communicating information related to operating conditions between your camcorder and an optional AC Adaptor/charger.

The “InfoLITHIUM” battery pack calculates the power consumption according to the operating conditions of your camcorder, and displays the remaining battery time in minutes. With an AC Adaptor/charger (optional), the remaining battery time and charging time appear.

To charge the battery pack


- Be sure to charge the battery pack before you start using your camcorder.
- We recommend charging the battery pack in an ambient temperature of between 10°C to 30°C (50°F to 86°F) until the CHG (charge) lamp turns off. If you charge the battery pack outside of this temperature range, you may not be able to charge it efficiently.
- After charging is complete, either disconnect the cable from the DC IN jack on your camcorder or remove the battery pack.

To use the battery pack effectively

- Battery pack performance decreases when the surrounding temperature is 10°C (50°F) or below, and the length of time you can use the battery pack becomes shorter. In that case, do one of the following to use the battery pack for a longer time.

- Put the battery pack in a pocket to warm it up, and insert it in your camcorder right before you start taking shots.
- Use a large capacity battery pack: NP-QM71/QM71D/QM91/QM91D (optional).
- Frequent use of the LCD screen or a frequent playback, fast forward or rewind operation wears out the battery pack faster. We recommend using a large capacity battery pack: NP-QM71/QM71D/QM91/QM91D (optional).
- Be sure to set the POWER switch to (CHG) OFF when not recording or playing back on your camcorder. The battery pack is also consumed when your camcorder is in recording standby or playback pause.
- Have spare battery packs ready for two or three times the expected recording time, and make trial recordings before making the actual recording.
- Do not expose the battery pack to water. The battery pack is not water resistant.

About remaining battery time indicator

- When the power goes off even though the remaining battery time indicator indicates that the battery pack has enough power to operate, charge the battery pack fully again. The indication on the remaining battery time will be indicated correctly. Note, however, that the battery indication will not be restored if it is used in high temperatures for a long time, or if left in a fully charged state, or when the battery pack is frequently used. Use the remaining battery time indication as a guide to the approximate shooting time.
- The  mark that indicates low battery flashes even if there are still 5 to 10 minutes of battery time remaining, depending on the operating conditions or ambient temperature and environment.

About storage of the battery pack

- If the battery pack is not used for a long time, fully charge the battery pack and use it on your camcorder once a year to maintain the proper function. To store the battery pack, remove it from your camcorder and put it in a dry, cool place.
- To completely use up the battery pack on your camcorder, leave your camcorder in tape

→ *continued*

recording standby until the power goes off without a cassette inserted.

About battery life

- The battery life is limited. Battery capacity drops little by little as you use it more and more, and as time passes. When the available battery time is shortened considerably, a probable cause is that the battery pack has reached the end of its life. Please buy a new battery pack.
- The battery life varies depending on how it is stored and the operating conditions and environment for each battery pack.

“InfoLITHIUM” is a trademark of Sony Corporation.

About i.LINK

The DV Interface on this unit is an i.LINK-compliant DV Interface. This section describes the i.LINK standard and its features.

What is i.LINK?

i.LINK is a digital serial interface for transferring digital video, digital audio, and other data to other i.LINK-compatible device. You can also control other device using the i.LINK.

i.LINK-compatible device can be connected using an i.LINK cable. Possible applications are operations and data transactions with various digital AV devices.

When two or more i.LINK-compatible device are connected to this unit in a daisy chain, operations and data transactions are possible with not only the device that this unit is connected to but also with other devices via the directly connected device.

Note, however, that the method of operation sometimes varies according to the characteristics and specifications of the device to be connected. Also, operations and data transactions may not be possible on some connected device.

Note

- Normally, only one device can be connected to this unit with the i.LINK cable. When connecting this unit to i.LINK-compatible device having two or more DV Interfaces, refer to the operating instructions of the device to be connected.

Tips

- i.LINK is a more familiar term for the IEEE 1394 data transport bus proposed by Sony, and is a trademark approved by many corporations.
- IEEE 1394 is an international standard standardized by the Institute of Electrical and Electronics Engineers.

About i.LINK Baud rate

i.LINK's maximum baud rate varies according to the device. There are three types.

S100 (approx. 100Mbps*)

S200 (approx. 200Mbps)

S400 (approx. 400Mbps)

The baud rate is listed under “Specifications” in the operating instructions of each piece of

device. It is also indicated near the i.LINK interface on some device.
The maximum baud rate for device that does not have any indication (such as this unit) is “S100.”

The baud rate may differ from the indicated value when the unit is connected to device with a different maximum baud rate.

* What is Mbps?

Mbps stands for “megabits per second,” or the amount of data that can be sent or received in one second. For example, a baud rate of 100 Mbps means that 100 megabits of data can be sent in one second.

To use i.LINK functions on this unit

For details on how to dub when this unit is connected to other video device having a DV Interface, see page 62, 63.


This unit can also be connected to other i.LINK (DV Interface) compatible device made by Sony (e.g. a VAIO series personal computer) as well as to video device.

Before connecting this unit to your computer, make sure that application software supported by this unit is already installed on your computer.

Some i.LINK compatible video device such as Digital Televisions, DVD recorders/players, and MICROMV recorders/players are not compatible with DV device. Before connecting to other device, be sure to confirm whether the device is compatible with DV device or not. For details on precautions and compatible application software, refer also to the operating instructions for the device to be connected.

About the required i.LINK cable

Use the Sony i.LINK 4-pin-to-4-pin cable (during DV dubbing).

i.LINK and  are trademarks of Sony Corporation.

Maintenance and precautions

On use and care

- Do not use or store the camcorder and accessories in the following locations.
 - Anywhere extremely hot or cold. Never leave them exposed to temperatures above 60°C (140°F), such as under direct sunlight, near heaters or in a car parked in the sun. They may malfunction or become deformed.
 - Near strong magnetic fields or mechanical vibration. The camcorder may malfunction.
 - Near strong radio waves or radiation. The camcorder may not be able to record properly.
 - Near AM receivers and video equipment. Noise may occur.
 - Sandy beach or anywhere dusty. If sand or dust gets in your camcorder, it may malfunction. Sometimes this malfunction cannot be repaired.
 - Near windows or outdoors, where the LCD screen, the viewfinder, or the lens may be exposed to direct sunlight. This damages the inside of the viewfinder or the LCD screen.
 - Anywhere very humid.
- Operate your camcorder on DC 7.2 V (battery pack) or DC 8.4 V (AC Adaptor).
- For DC or AC operation, use the accessories recommended in these operating instructions.
- Do not let your camcorder get wet, for example, from rain or sea water. If your camcorder gets wet, it may malfunction. Sometimes this malfunction cannot be repaired.
- If any solid object or liquid get inside the casing, unplug your camcorder and have it checked by a Sony dealer before operating it any further.
- Avoid rough handling, disassembling, modifying, or mechanical shock. Be particularly careful of the lens.
- Keep the POWER switch setting to (CHG) OFF when you are not using your camcorder.

- Do not wrap your camcorder with a towel, for example, and operate it. Doing so might cause heat to build up inside.
- When disconnecting the power cord, pull by the plug and not the cord.
- Do not damage the power cord such as by placing anything heavy on it.
- Keep metal contacts clean.
- Keep the Remote Commander and button-type battery out of children's reach. If the battery is accidentally swallowed, consult a doctor immediately.
- If the battery electrolytic liquid has leaked,
 - consult your local authorized Sony service facility.
 - wash off any liquid that may have contacted your skin.
 - if any liquid gets in your eyes, wash with plenty of water and consult a doctor.

When not using your camcorder for a long time

Occasionally turn it on and let it run such as by playing back tapes for about 3 minutes. Otherwise, unplug it from the wall outlet.

Moisture condensation

If your camcorder is brought directly from a cold place to a warm place, moisture may condense inside your camcorder, on the surface of the tape, or on the lens. In this state, the tape may stick to the head drum and be damaged or your camcorder may not operate correctly. If there is moisture inside your camcorder, [☒▲ Moisture condensation. Eject the cassette] or [☒ Moisture condensation. Turn off for 1H.] appears. The indicator will not appear when the moisture condenses on the lens.

If moisture condensation has occurred

None of the functions except cassette ejection will work. Eject the cassette, turn off your camcorder, and leave it for about one hour with the cassette lid open. Your camcorder can be used again if the ☒ or ▲ does not appear when the power is turned on again.

If moisture starts to condense, your camcorder sometimes cannot detect condensation. If this happens, the cassette is sometimes not ejected for 10 seconds after the cassette lid is opened. This is not a malfunction. Do not close the cassette lid until the cassette is ejected.

Notes on moisture condensation

Moisture may condense when you bring your camcorder from a cold place into a warm place (or vice versa) or when you use your camcorder in a humid place as shown below.


- When you bring your camcorder from a ski slope into a place warmed up by a heating device.
- When you bring your camcorder from an air-conditioned car or room into a hot place outside.
- When you use your camcorder after a squall or a shower.
- When you use your camcorder in a hot and humid place.

How to prevent moisture condensation

When you bring your camcorder from a cold place into a warm place, put your camcorder in a plastic bag and seal it tightly. Remove the bag when the air temperature inside the plastic bag has reached the surrounding temperature (after about one hour).

Video head

- When the video head becomes dirty, you cannot record pictures normally, or distorted picture or sound is played back.
- The video head suffers from wear after long use. If you cannot obtain a clear image even after using a cleaning cassette, it might be because the video head is worn. Please contact your Sony dealer or local authorized Sony service facility to have the video head replaced.
- For Hi8 TRV128/228/328/428:
 - If the following problem occurs, clean the video heads for 10 seconds with the Sony V8-25CLD cleaning cassette (optional).
 - Playback pictures contains noise or the screen is displayed in blue.
 - Playback pictures are hardly visible.




- Playback pictures do not appear.
- [☒▲ Dirty video head. Use a cleaning cassette.] appears on the screen during recording.

- For **TRV260/265**:

If the following problem occurs, clean the video heads for 10 seconds with the Sony V8-25CLD cleaning cassette (optional).

- Mosaic-pattern noise appears on the playback picture or the screen is displayed in blue.



- Playback pictures do not move.
- Playback pictures do not appear or the sound breaks off.
- [ Dirty video head. Use a cleaning cassette.] appears on the screen during recording.

LCD screen

- Do not add excessive pressure on the LCD screen, as it may cause damage.
- If your camcorder is used in a cold place, a residual image may appear on the LCD screen. This is not a malfunction.
- While using your camcorder, the back of the LCD screen may heat up. This is not a malfunction.

To clean the LCD screen

- If fingerprints or dust make the LCD screen dirty, it is recommended you using the cleaning cloth (supplied) to clean it. When you use the LCD Cleaning Kit (optional), do not apply the cleaning liquid directly to the LCD screen. Use cleaning paper moistened with the liquid.

On handling the casing

- If the casing is soiled, clean the camcorder body with a soft cloth lightly moistened with water, and then wipe the casing with a dry soft cloth.
- Avoid the following to avoid damage to the finish.
 - Using chemicals such as thinner, benzine, alcohol, chemical cloths, repellent and insecticide.
 - Handling with above substances on your hands.

- Leaving the casing in contact with rubber or vinyl objects for a long period of time.

About care and storage of the lens

- Wipe the surface of the lens clean with a soft cloth in the following instances:
 - When there are fingerprints on the lens surface.
 - In hot or humid locations
 - When the lens is exposed to salty air such as at the seaside.
- Store in a well-ventilated location subject to little dirt or dust.
- To prevent molds periodically clean the lens as described above.

It is recommended you operate your camcorder about once a month to keep it in an optimum state for a long time.

To charge the pre-installed button-type battery

Your camcorder has a pre-installed button-type battery to retain the date, time, and other settings even when the POWER switch is set to (CHG) OFF. The pre-installed button-type battery is always charged while you are using your camcorder but it will get discharged gradually if you do not use your camcorder. The button-type battery will be fully discharged in about 3 months if you do not use your camcorder at all. However, even if the pre-installed button-type battery is not charged, the camcorder operation will not be affected as long as you are not recording the date.

Procedures

Connect your camcorder to a wall outlet using the supplied AC Adaptor, and leave it with the POWER switch set to (CHG) OFF for more than 24 hours.

Specification

Video camera recorder

System

Video recording system

- For **Hi8** TRV128/228/328/428:
2 rotary heads, Helical scanning FM system
- For **Hi8** TRV260/265:
2 rotary heads, Helical scanning system

Audio recording system

- For **Hi8** TRV128/228/328/428:
Rotary heads, FM system
- For **Hi8** TRV260/265:
Rotary heads, PCM system
- Quantization: 12 bits (Fs 32 kHz, stereo 1, stereo 2), 16 bits (Fs 48 kHz, stereo)

Video signal

- NTSC color, EIA standards

Usable cassette

- 8 mm video format cassette

Tape speed

- For **Hi8** TRV128/228/328/428:
SP: Approx. 14.35 mm/s
LP: Approx. 7.19 mm/s
- For **Hi8** TRV260/265:
SP: Approx. 28.67 mm/s
LP: Approx. 19.11 mm/s

Recording/playback time (using 120 min. Hi8/

Digital8 video cassette)

- For **Hi8** TRV128/228/328/428:
SP: 2 h
LP: 4 h
- For **Hi8** TRV260/265:
SP: 1 h
LP: 1 h 30 min

Fast forward/rewind time (using 120 min. Hi8/

Digital8 video cassette)

- Approx. 5 min

Viewfinder

- Electric viewfinder (monochrome)

Image device

- For **Hi8** TRV128/228/328/428:
3.0 mm (1/6 type) CCD (Charge Coupled Device)
- Gross: Approx. 320 000 pixels
- Effective: Approx. 200 000 pixels

- For **Hi8** TRV260/265:
3.0 mm (1/6 type) CCD (Charge Coupled Device)

- Gross: Approx. 460 000 pixels
- Effective: Approx. 290 000 pixels

Lens

- Combined power zoom lens
- Filter diameter: 37 mm (1 1/2 in.)
- 20 × (Optical), 990 × (Digital)
- F=1.6 - 2.4

Focal length

- 2.5 - 50 mm (1/8 - 2 in.)
- When converted to a 35 mm still camera
42 - 840 mm (1 11/16 - 33 1/8 in.)

Color temperature

- Auto

Minimum illumination

- For **Hi8** TRV128/228/328/428:
1 lx (lux) (F 1.6)
- For **Hi8** TRV260/265:
4 lx (lux) (F 1.6)
- 0 lx (lux) (in the NightShot plus mode)*
- * Objects unable to be seen due to the dark can be shot with infrared lighting.

Input/Output connectors

S video output

- 4-pin mini DIN
- Luminance signal: 1 Vp-p, 75 Ω (ohms), unbalanced
- Chrominance signal: 0.286 Vp-p, 75 Ω (ohms), unbalanced

Audio/Video output

- AV MINIJACK
- Video signal: 1 Vp-p, 75 Ω (ohms), unbalanced, sync negative
- Audio signal: 327 mV (at output impedance more than 47 kΩ (kilohms)), Output impedance with less than 2.2 kΩ (kilohms)
- For **Hi8** TRV128/228/328/428:
Monaural minijack (ø 3.5 mm)
- For **Hi8** TRV260/265:
Stereo minijack (ø 3.5 mm)

RFU DC OUT

- For **Hi8** TRV128/228/328/428:
Mini-minijack (ø 2.5 mm), DC5V

DV input/output

- For **Hi8** TRV260/265:
4-pin connector

USB jack

- For **Hi8** TRV260/265:
mini-B

LCD screen

Picture

6.2 cm (2.5 type)

Total dot number

123 200 (560 × 220)

General

Power requirements

DC 7.2 V (battery pack)

DC 8.4 V (AC Adaptor)

Average power consumption (when using the battery pack)

For **Hi8** TRV128/228/328/428:

During camera recording using the viewfinder

1.8 W

During camera recording using the LCD

2.7 W

For **F**TRV260/265:

During camera recording using viewfinder

2.5 W

During camera recording using LCD

3.4 W

Operating temperature

0°C to 40°C (32°F to 104°F)

Storage temperature

-20°C to + 60°C (-4°F to + 140°F)

Dimensions (approx.)

85 × 98 × 151 mm (3 3/8 × 3 7/8 × 6 in.) (w/h/d)

Mass (Approx.)

780 g (1 lb 11 oz) main unit only

890 g (1 lb 15 oz) including the NP-FM30

rechargeable battery pack, Hi8/Digital8 cassette, lens cap, and shoulder strap

Supplied accessories

See page 11.

AC Adaptor AC-L15A/L15B

Power requirements

AC 100 - 240 V, 50/60 Hz

Current consumption

0.35 - 0.18 A

Power consumption

18 W

Output voltage

DC 8.4 V, 1.5 A

Operating temperature

0°C to 40°C (32°F to 104°F)

Storage temperature

-20°C to + 60°C (-4°F to + 140°F)

Dimensions (approx.)

56 × 31 × 100 mm (2 1/4 × 1 1/4 × 4 in.) (w/h/d) excluding the projecting parts

Mass (approx.)

190 g (6.7 oz) excluding the power cord

Rechargeable battery pack (NP-FM30)

Maximum output voltage

DC 8.4 V

Output voltage

DC 7.2 V

Capacity

5.0 Wh (700 mAh)

Dimensions (approx.)

38.2 × 20.5 × 55.6 mm

(1 9/16 × 13/16 × 2 1/4 in.) (w/h/d)

Mass (approx.)

65 g (2.3 oz)

Operating temperature

0°C to 40°C (32°F to 104°F)

Type

Lithium ion

Design and specifications are subject to change without notice.

Types of differences


Model	video Hi8				Digital 8	
	CCD-				DCR-	
	TRV128	TRV228	TRV328	TRV428	TRV260	TRV265
Recording system	Hi8	Hi8	Hi8	Hi8	Digital8	Digital8
Playback system	Hi8/8	Hi8/8	Hi8/8	Hi8/8	Digital8	Digital8
Audio recording	Monaural	Monaural	Monaural	Monaural	Stereo	Stereo
AUDIO/VIDEO jack	OUT	OUT	OUT	OUT	OUT	OUT
S VIDEO jack	OUT	OUT	OUT	OUT	OUT	OUT
DV Interface	—	—	—	—	IN/OUT	IN/OUT
USB jack	—	—	—	—	●	●
SteadyShot	—	—	●	●	●	●
Remote sensor	—	●	—	●	—	●
RFU jack	●	●	●	●	—	—

● Provided

— Not provided

Identifying parts and controls


Camcorder

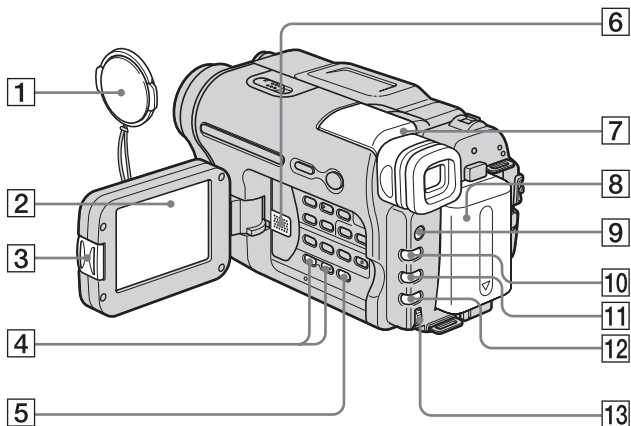


- 1 Lens cap (p. 21, 25)
- 2 LCD screen (p. 3, 16)
- 3 OPEN button (p. 16)
- 4 VOLUME +/-* button (p. 34)
- 5 END SEARCH button (p. 33)
- 6 Speaker
- 7 Viewfinder (p. 3, 16)
- 8 Battery pack
- 9 LIGHT button (p. 23)
- 10 FADER button (p. 30)
- 11 BACK LIGHT button (p. 27)
- 12 FOCUS button (p. 29)
- 13 SEL/PUSH EXEC dial (p. 43)

* This button has a tactile dot.


To attach the lens cap

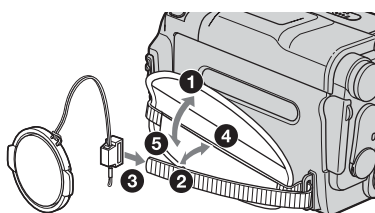


→ continued

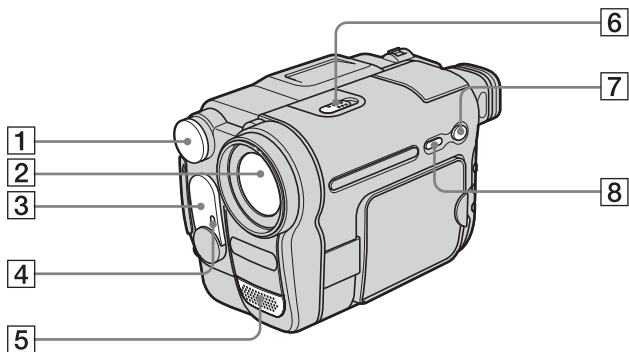

- | | |
|---|---|
| <ul style="list-style-type: none"> 1 Built-in light (p. 23) 2 Lens 3 Infrared ray emitter (p. 64, 70)/
For Hi8 TRV228/428/ Hi8V TRV265:
Remote sensor 4 Camera recording lamp (p. 21, 26) | <ul style="list-style-type: none"> 5 Microphone 6 NIGHTSHOT PLUS switch (p. 28) 7 EASY button (p. 26, 36) 8 DSPL/BATT INFO button (p. 13, 37) |
|---|---|

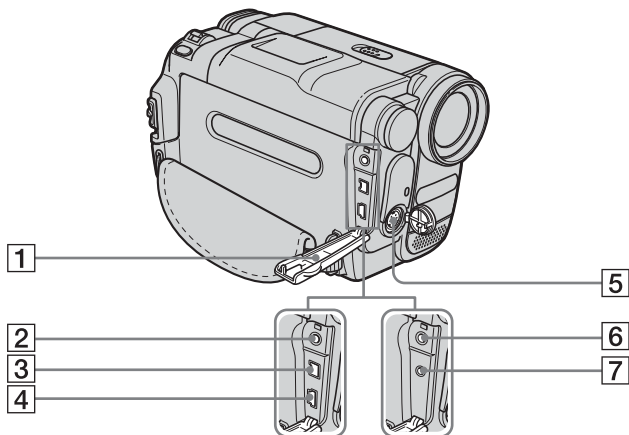


- | | |
|---|---|
| <ul style="list-style-type: none"> 1 Jack cover 2 For Hi8V TRV260/265:
A/V OUT jack (p. 39, 62) 3 For Hi8V TRV260/265:
DV Interface (p. 62) 4 For Hi8V TRV260/265:
USB (USB) jack | <ul style="list-style-type: none"> 5 S VIDEO OUT jack (p. 39, 62) 6 For Hi8 TRV128/228/328/428:
A/V OUT jack (p. 39, 61) 7 For Hi8 TRV128/228/328/428:
RFU DC OUT jack (p. 40) |
|---|---|

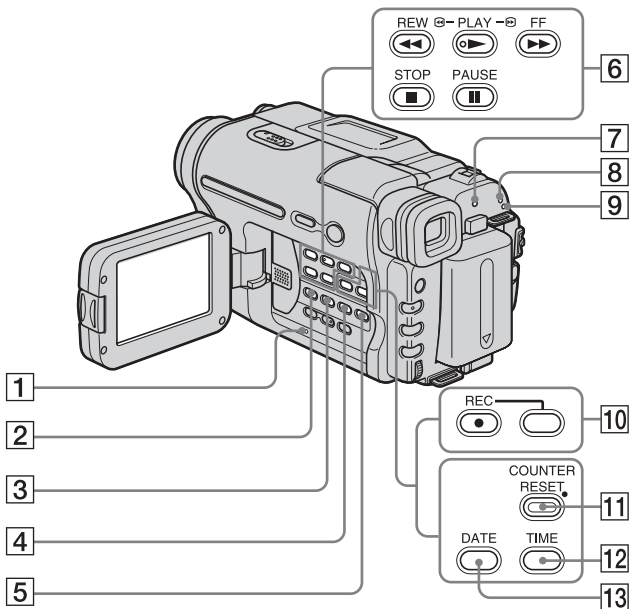

- 1 RESET button (p. 74)**
- 2 For Hi8 TRV260/265:
BURN DVD/VCD**
You can easily take a picture recorded on the tape and burn it onto a DVD or CD-R. See the supplied "Computer Applications Guide" for details.
- 3 For Hi8 TRV128/228/328/428:
EASY DUB (Easy Dubbing) button (p. 64)**
- 3 TITLE button (p. 31)**
- 4 EXPOSURE button (p. 28)**
- 5 MENU button* (p. 43)**
- 6 Video control buttons (p. 34)**
 - STOP (stop)
 - REW (rewind)
 - PLAY (playback)*
 - FF (fast-forward)
 - PAUSE (pause)
- 7 CHG (charge) lamp (p. 12)**
- 8 CAMERA mode lamps (p. 15)**
- 9 PLAY/EDIT mode lamp (p. 15)**
- 10 For Hi8 TRV260/265:
Rec buttons (p. 68)**
 - REC (rec)
- 11 For Hi8 TRV128/228/328/428:
COUNTER RESET button (p. 22)**
- 12 For Hi8 TRV128/228/328/428:
TIME button (p. 18, 25)**
- 13 For Hi8 TRV128/228/328/428:
DATE button (p. 18, 25)**
 - * This button has a tactile dot.

→ continued

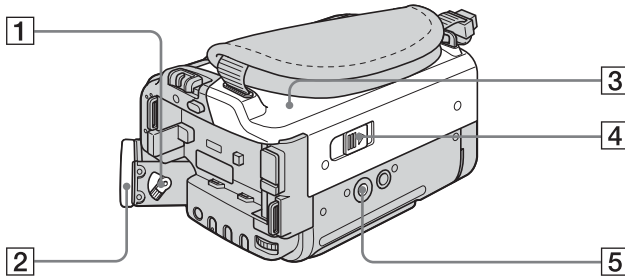

1 Viewfinder lens adjustment lever (p. 16)


2 Eyecup

3 Cassette lid

4 OPEN/EJECT lever (p. 18)

5 Tripod receptacle

Make sure that the length of the tripod screw is less than 5.5 mm (7/32 inch). Otherwise, you cannot attach the tripod securely, and the screw may damage your camcorder.

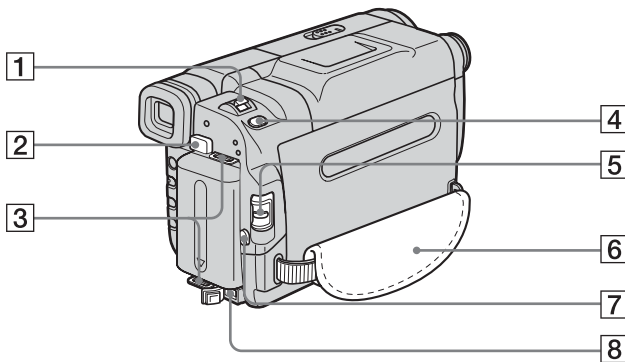

1 Power zoom lever (p. 23)

2 BATT (battery) release button (p. 12)

3 Hooks for shoulder strap

**4 For Ⓜ TRV260/265:
PHOTO button (p. 25)**

5 POWER switch (p. 15)


6 Grip belt (p. 4)

7 REC START/STOP button (p. 21)

8 DC IN jack (p. 12)

To attaching the shoulder strap


Attach the shoulder strap supplied with your camcorder to the hooks for the shoulder strap.

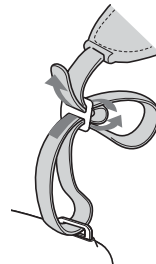


Remote Commander

Remove the insulation sheet before using the Remote Commander.

For **Hi8** TRV228/428:

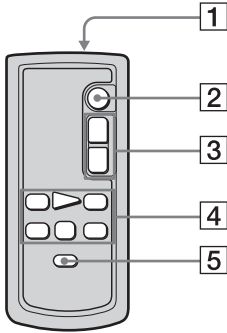

For **D**TRV265:

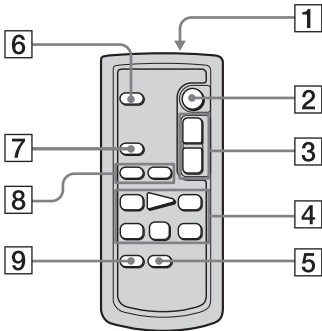

1 Transmitter

After turning on your camcorder, point towards the remote sensor to control your camcorder.

2 REC START/STOP button (p. 21)

3 Power zoom button (p. 23)

4 Video control buttons (Rewind, Playback, Fast-forward, Pause, Stop, Slow) (p. 34)

5 DISPLAY button (p. 37, 40)


6 PHOTO button (p. 25)

7 SEARCH M. button (p. 41, 42)

8 buttons (p. 41, 42)


9 ZERO SET MEMORY button (p. 40)

To remove the insulation sheet

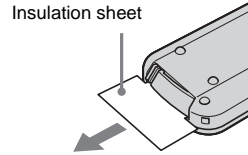


To change the button-type battery


- 1 While pressing on the tab, inset your fingernail into the slit to pull out the battery case.

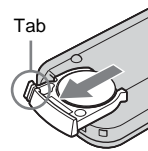

- 2 Remove the button-type lithium battery.

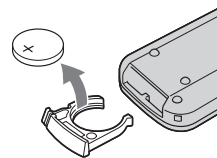

- 3 Place a new button-type lithium battery with the + side facing up.

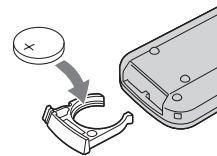

- 4 Insert the battery case back into the Remote Commander until it clicks.

→ continued

WARNING

Battery may explode if mistreated. Do not recharge, disassemble or dispose of in fire.

CAUTION

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type recommended by the manufacturer.

Discard used batteries according to the manufacturer's instructions.

Notes on the Remote Commander

- A button-type lithium battery (CR2025) is used in the Remote Commander. Do not use batteries other than CR2025.
- Point the remote sensor away from strong light sources such as direct sunlight or overhead lighting. Otherwise, the Remote Commander may not function properly.
- When you are operating with the Remote Commander supplied with your camcorder, your VCR may also operate. In that case, select a commander mode other than VTR 2 for your VCR, or cover the sensor of your VCR with black paper.


Indicators for the LCD screen and viewfinder

Following indicators will appear on the LCD screen and viewfinder to indicate the state of your camcorder.

Indicators and their on-screen/viewfinder positions vary depending on your camcorder model.

Example: Indicators in the CAMERA mode

Time code (p. 22)/Tape counter (p. 22)/Self-diagnosis (p. 79)/Tape photo recording (p. 25)

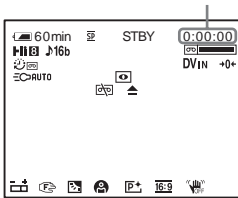

Indicators	Meanings
	Warning (p. 79)
	Manual exposure (p. 28)
	Manual focus (p. 29)
	Back light (p. 27)
	PROGRAM AE (p. 44)
	Picture effect (p. 45)
	16:9 WIDE/CINEMA/16:9 FULL (p. 48)
	SteadyShot off (p. 50)

Indicators	Meanings
	Remaining battery time (p. 22)
	Recording mode (p. 22)
STBY REC	Recording standby/ recording mode
	Mirror mode (p. 24)
	Tape photo recording (p. 25)
Hi8	Format indicator
16b	Audio mode (p. 54)
	Remaining tape (p. 22)
	Interval recording (p. 56)
	Frame recording (p. 55)
DV IN	DV input (p. 68)
+0+	Zero set memory (p. 40)
	Built-light (p. 23)
	NightShot plus (p. 28)

Index

Numerics

16:9 WIDE mode 47, 49

A

A/V connecting cable
..... 39, 61, 62
AC Adaptor 15
Adjusting the viewfinder... 16
AUDIO MIX 52
AUDIO MODE 54
AUTO DATE 57
AUTO SHTR 46
Auto shut off function
(A.SHUT OFF)..... 59

B

BACK LIGHT 27
Battery
 Battery Info..... 13
 Battery pack 12
 Remaining battery time
 22, 83
BEEP 59
BLACK FADER 30
Built-in light 23
BURN DVD/VCD 93
Button-type battery
 Commander 87
 Remote Commander... 95

C

Camera settings data display
..... 37
Cassette 18, 82
Charging the battery
 Battery Pack..... 12
 Pre-installed button-type
 battery 87
Cleaning cassette..... 87
Clock set (CLOCK SET)
..... 17, 57
COMMANDER 60

D

Data code (DATA CODE)
..... 37, 59
Date search..... 41
Date/time..... 37
DEMO MODE..... 58
Digital program editing
(VIDEO EDIT)..... 69
Digital zoom (D ZOOM) ... 47
Digital8 system 82
Display
 DISPLAY 60
 Display indicator 97
DNR 52
Dual sound track tape 51
Dubbing 61

E

Easy Dubbing..... 64
Easy Handycam 26, 36
EDIT 51
END SEARCH 33
Exposure 27

F

FADER 30
Focus 29
Frame recording
(FRAME REC) 55
Full charge 12

G

Grip belt 4

H

Hi8/standard 8 mm system
..... 82
HiFi SOUND 51

I

i.LINK..... 84
i.LINK cable 62, 69
ID-1/ID-2 system 49
"InfoLITHIUM" battery pack
..... 83
Infrared ray emitter 64, 70
Interval recording
(INT. REC)..... 56

L

Language
(LANGUAGE)
..... 19, 58
LCD back light (LCD B.L.)
..... 53
LCD brightness
(LCD BRIGHT)..... 16
LCD COLOR 53
LCD screen..... 3
LP (Long Play)
 See Recording mode
 (REC MODE)
LTR SIZE..... 57

M

Main sound
 See HiFi SOUND
Menu..... 43
 CAMERA SET 47
 LCD SET 53
 MANUAL SET..... 44
 OTHERS..... 59
 PLAYER SET..... 51
 SETUP MENU 57
 TAPE SET 54
 VCR SET 51
Mirror mode 24
Moisture condensation 86
Monaural 21, 40
MONOTONE FADER..... 31
MOSAIC FADER 30

N

NightShot Light
(N.S. LIGHT) 29, 50
NightShot plus 28
NTSC..... 81

O

Operation confirmation beep
 See BEEP
ORC..... 54

P

PAL81

Photo scan42

Photo search41

Picture effect
 (P EFFECT)45

Picture search35

Playing time14

Power mode15

PROGRAM AE44

R

Recording capacity
 Display22

 REMAIN55

Recording lamp
 (REC LAMP)60

Recording mode
 (REC MODE).....22, 54

Recording time13

Remote Commander95

Remote sensor92

RESET93

S

S video40, 62

Self-diagnosis display79

Setting the date and time17

Skip scan35

SP (Standard Play)
 See Recording mode
 (REC MODE)

STEADYSHOT50

Stereo21, 40

STRIPE FADER31

Sub sound
 See HiFi SOUND

T

Tape counter22

Tape photo recording25

TBC52

Telephoto
 See Zoom

Time code22

Title31

TV color systems81

U

USB jack92

USB Streaming
 (USB STEAM)57

Using abroad81

V

Video head86

Viewfinder16

Volume34

W

Warning indicators79

Warning messages80

WHITE FADER30

Wide angle
 See Zoom

WORLD TIME59

Write-protect tab82

Z

Zero set memory40

Zoom23

<http://www.sony.net/>



Printed on 100% recycled paper using
VOC (Volatile Organic Compound)-free
vegetable oil based ink.

Printed in Japan



3087918110

SONY®

SERVICE MANUAL

Ver 1.1 2005.06

US Model
 Canadian Model
 CCD-TRV128/TRV328
 AEP Model
 East European Model
 North European Model
 CCD-TRV228E/TRV428E
 UK Model
 CCD-TRV228E
 E Model
 CCD-TRV128/TRV228/TRV228E/TRV328/TRV428E
 Australian Model
 Hong Kong Model
 CCD-TRV428E
 Argentine Model
 Brazilian Model
 CCD-TRV128
 Tourist Model
 CCD-TRV428/TRV428E

SUPPLEMENT-1


File this supplement with the service manual.
 (PV05-004)





- Addition of repair parts

5-1. EXPLODED VIEWS


5-1-5. CABINET R BLOCK

(See original service manual page 5-6.)

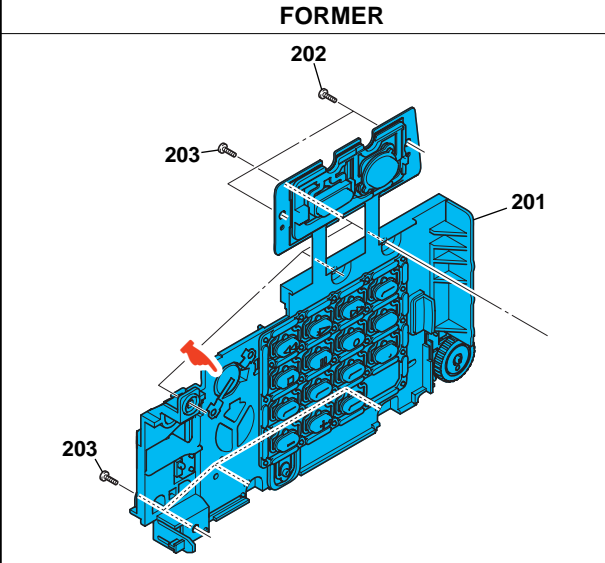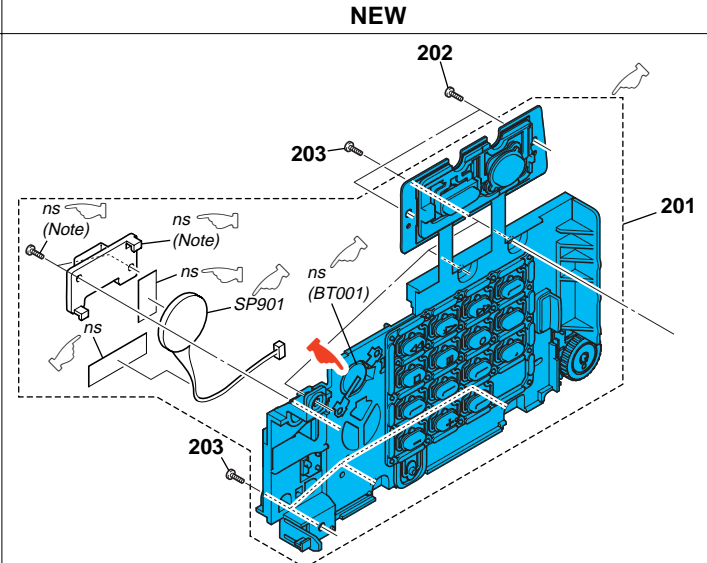 : Points changed portion.


FORMER	NEW															
																
<p> : BT001 (BATTERY, LITHIUM SECONDARY) Included in the control switch block (CF-5100).</p>	<p> : BT001 (BATTERY, LITHIUM SECONDARY) Included in the control switch block (CF-5100).</p>															
<p>Note : Screw and speaker retainer plate in the Ref. No.201 (Control key block (CF-5100)) are not available as service parts. So be careful not to lose and break when change the SP901 (Loud speaker (1.6cm)).</p>																
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 15%;">Ref. No.</th> <th style="width: 15%;">Part No.</th> <th style="width: 70%;">Description</th> </tr> </thead> <tbody> <tr> <td> </td> <td> </td> <td> </td> </tr> </tbody> </table>	Ref. No.	Part No.	Description				<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 15%;">Ref. No.</th> <th style="width: 15%;">Part No.</th> <th style="width: 70%;">Description</th> </tr> </thead> <tbody> <tr> <td> </td> <td> </td> <td> </td> </tr> <tr> <td>SP901</td> <td>1-825-262-31</td> <td>LOUD SPEAKER (1.6cm)</td> </tr> </tbody> </table>	Ref. No.	Part No.	Description				SP901	1-825-262-31	LOUD SPEAKER (1.6cm)
Ref. No.	Part No.	Description														
Ref. No.	Part No.	Description														
SP901	1-825-262-31	LOUD SPEAKER (1.6cm)														

[Description of main button functions on toolbar of the Adobe Acrobat Reader Ver5.0 (for Windows)]

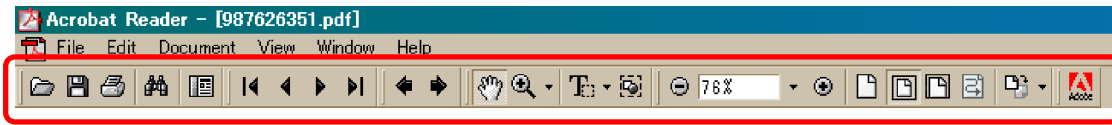


Toolbar



Printing a text

1. Click the Print button .
2. Specify a printer, print range, number of copies, and other options, and then click [OK].

Application of printing:

To set a range to be printed within a page, select the graphic selection tool  and drag on the page to enclose a range to be printed, and then click the Print button.


Reversing the screens displayed once

- To reverse the previous screens (operation) one by one, click the .
- To advance the reversed screens (operation) one by one, click the .

Application to the Service Manual:


This function allows you to go and back between circuit diagram and printed circuit board diagram, and accordingly it will be convenient for the voltage check.

Finding a text

1. Click the Find button .
2. Enter a character string to be found into a text box, and click the [Find]. (Specify the find options as necessary)

Application to the Service Manual:

To execute “find” from current page toward the previous pages, select the check box “Find Backwards” and then click the “Find”.

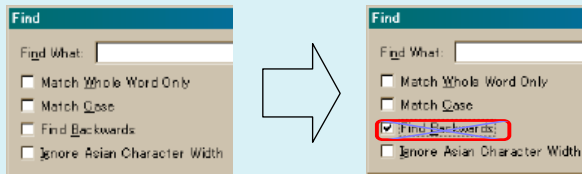






3. Open the find dialog box again, and click the [Find Again] and you can find the matched character strings displayed next. (Character strings entered previously are displayed as they are in the text box.)

Application to the Service Manual:


The parts on the drawing pages (block diagrams, circuit diagrams, printed circuit boards) and parts list pages in a text can be found using this find function. For example, find a Ref. No. of IC on the block diagram, and click the [Find Again] continuously, so that you can move to the Ref. No. of IC on the circuit diagram or printed circuit board diagram successively.


Note: The find function may not be applied to the Service Manual depending on the date of issue.


Moving with link

1. Select either palm tool , zoom tool , text selection tool , or graphic selection tool .
2. Place the pointer in the position in a text where the link exists (such as a button on cover and the table of contents page, or blue characters on the removal flowchart page or drawing page), and the pointer will change to the forefinger form .
3. Then, click the link. (You will go to the link destination.)

Moving with bookmark:



Click an item (text) on the bookmark pallet. and you can move to the link destination. Also, clicking  can display the hidden items.

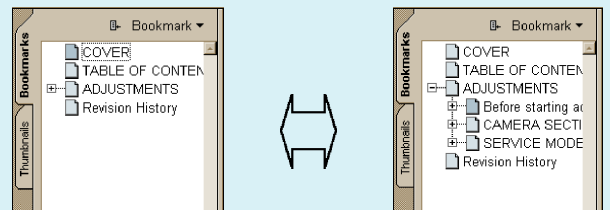
(To go back to original state, click )




Zooming or rotating the screen display

“Zoom in/out”

- Click the triangle button in the zoom control box to select the display magnification. Or, you may click  or  for zooming in or out.







“Rotate”

- Click rotate tool , and the page then rotates 90 degrees each.

Application to the Service Manual:

The printed circuit board diagram you see now can be changed to the same direction as the set.

Switching a page

- To move to the first page, click the .
- To move to the last page, click the .
- To move to the previous page, click the .
- To move to the next page, click the .

Revision History

Ver.	Date	History	Contents	S.M. Rev. issued
1.0	2003.11	Official Release	—	—
1.1	2005.06	Supplement-1 (S1 PV05-004)	• Addition of repair parts	No